


mbtlighting.com

LEDWPAR64PRO User Manual

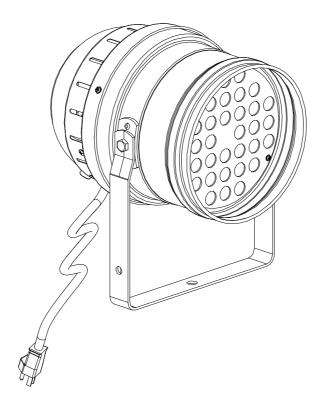

Introduction

Thank you for using high power PAR light. This light has 4 working modes: DMX, Auto, Sound, Master-slave and uses operating panel of dial switch. For the easy operation and good figuration, it is applicable to all kinds of amenities and housing party.



Please read manual carefully before using the fixture and keep it in your hand for your reference in future.

NOTE

Caustic or deliquescent chemical can cause damage to the housing.

The operation temperature must be below $+40^{\circ}$ C and humidity is $0\sim95\%$, it will shorten life of fixture if beyond the range.



Indoor Use only

Warning

Please not connect fixture to the power when it is in the package box, except presentation.

Please not connect high power before installation and make sure it is grounded.

Don't dismantle the fixture and please contact technician to repair if having any problem.

Input Power should be matched with fixture requested.

Specification

1. Voltage: AC120V

2. Power: 45W

3、light resource: 36 pcs 1w white LED

4、Function: DMX, Auto, Sound, Master-slave


5、DMX Channel: 2

6、Fuse: Φ5X20MM 2A/125V7、Dimensions: 277x258x319mm


8 Net weight: 2.8 KG

Panel Instruction

1、Sensitivity 2、DMX Intput 3、DIP SWITCH 4、DMX Output 5、MIC

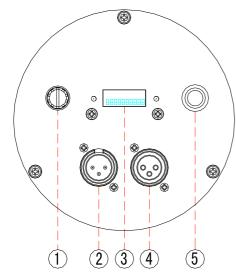

Multi-fixtures connection

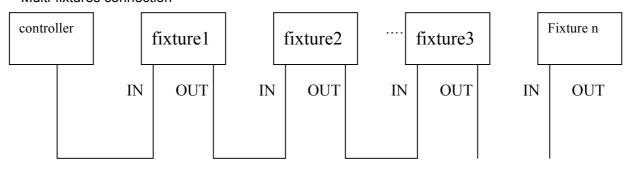


The definition of Pin for DMX connector: Pin1 = Gnd Pin2 = Dmx- Pin3 = Dmx+

Function Introduction

- 1. DMX Mode;
- 2. Master- slave mode
- 3. Auto mode:
- 4. Sound mode;

Operation Instruction:

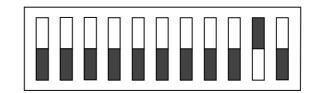



1 2 3 4 5 6 7 8 9 10 OFF ON

Dipswitch instruction

As above figure of dipswitch showed, 1 is "on"and other is "OFF". "#1" \sim "#10"stand for "dipswitch1" \sim "dipswitch10". "1"means "on"and "0"means "off"and "*"means "on"or "off" is ok(there is no function for dipswitch). X means it can set to 1 or 0 according to designing needs.

Brief function chart


Mode	#1	#2	#3	#4	#5	#6	#7	#8	#9	#10	Description
DMX				Set D	МХ а	ddres	S			0	Enter DMX mode
Auto	S0	S0	S0	S0	S0	S0	S0	0	0	1	Strobe
7.533	S0	S0	S0	S0	S0	S0	S0	1	1	1	Gradation
Manual	С	С	С	С	S1	S1	S1	1	0	1	"S1" select speed of strobe "C" select color brightness
Sound	*	*	*	*	*	*	М	0	1	1	"M=0" mode 1 "M=1" mode 2

NOTE! Important

1. Sound:

①no FADE; ②run to sound;

- 2. Connect DMX controller with the fixture through 3-pin XLR signal cord.
- 3. In master/slave mode, one of them was set to Auto mode or sound mode and others was set to submachine, so fixtures can run at same time.
- 4. DMX address settings:

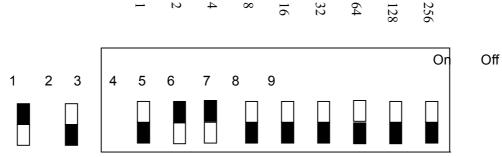

Switch #1 =0;Switch #2 =2;Switch #3 =4;Switch #4 = 0; Switch #5 =0;Switch #6 = 0;Switch #7 = 0;Switch #8 = 0; Switch #9 = 0;so value for address:0+2+4+0+0+0+0+0=6, so address is 6.

5 Auto mode:

	S0 speed selection												
#1	#2	#3	#4	#5	#6	#7	Des						
1	0	0	0	0	0	0	slow						
0	1	0	0	0	0	0							
0	0	1	0	0	0	0							
0	0	0	1	0	0	0							
0	0	0	0	1	0	0							
0	0	0	0	0	1	0	\downarrow						
0	0	0 0 0 0 1											
			other	s			on						

6. Manuel mode:

	C cc	olor se	electi	on	value	S	spe	ed se	lection
#1	#2	#3	#4	Des	Value	#5	#6	#7	Des
0	0	0	0	off	0	0	0	0	on
1	0	0	0		1	1	0	0	slow
0	1	0	0	dark	2	0	1	0	1
1	1	0	0	ı	3	1	1	0	
0	0	1	1		4	0	0	1	
1	0	1	0		5	1	0	1	\downarrow
0	1	1	0		6	0	1	1	fast
1	1	1	0		7	1	1	1	
0	0	0	1		8				
1	0	0	1		9				
0	1	0	1		10				
1	1	0	1		11				
0	0	1	1	▼	12				
1	0	1	1	light	13				
0	1	1	1		14				
1	1	1	1		15				

DMX channel setting:

NO.	DMX value	function
CH1	000~255	LED brightness dimmer
	000~015	Dimmer mode ,LED no strobe
CH2	016~130	strobe, CH1>15 adjust brightness, CH2 adjust speed
	131~240	dimmer, CH1>15 dimmer, CH2 adjust speed
		240 <ch2<250 1<="" mode="" sound="" td=""></ch2<250>
	241~255	250 <ch2<255 2<="" mode="" sound="" td=""></ch2<255>

Master/slave mode

The fixtures can run at M/S mode when there are more than one par lights, which can work simultaneously

The way of setting dipswitch is as follow:

1.Master: Dipswitch 1 is ON

2.slave: Dipswitch 1 is OFF

NOTE: In M/S mode, only one was set to master and other should be set to slave, or they can't work normally.

Sound mode

In this mode, the fixture run as same as in Auto mode, just activated by sound you can adjust sensibility by potentiometer on panel.

Trouble Shooting

Troubles	Reason	Trouble shooting					
	No power	Check if power switch is on and cable is					
One or more fixtures can work	Fuse is burned	connected well Change new fuse when power is off. If it is burnt again, circuits maybe have some problem, please contact technician					
Fixture is no problem, but can't work when it is	Data cables can't be connected correctly	Check, repair or change the data cable and make sure good connection. While please connect the first fixture					
connected to controller or		and controller.					
other fixtures.	Set a wrong address code	Check if address code is set correctly(Pleas note that it can't set Master when connect DMX controller)					
	Some trouble in signal connector of one fixture	Please connect signal IN and OUT directly for one fixture and check if it can work normally. As per this way, please find trouble fixture and let technician repair					

Address code chart

														4dd	ress	s se	tting	g fo	r dip	oswi	itch
DM	X DIF	swi	тсн	SET	#9	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1
0= OFF					#8	0	0	0	0	1	1	1	1	0	0	0	0	1	1	1	1
1=0 N					#7	0	0	1	1	0	0	1	1	0	0	1	1	0	0	1	1
X= OFF or ON					#6	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1
#1	#2	#3	#4	#5	- 3			E.S.					8 8			ii ii					
0	0	0	0	0			32	64	96	128	160	192	224	256	288	320	352	384	4 16	448	480
1	0	0	0	0		1	33	65	97	129	161	193	225	257	289	321	3 5 3	385	4 17	449	481
0	1	0	0	0		2	34	66	98	130	162	194	226	258	290	322	3 5 4	386	4 18	4 50	482
1	1	0	0	0		3	35	67	99	131	163	195	227	259	291	3 2 3	355	387	4 19	451	483
0	0	1	0	0		4	36	68	100	132	164	196	228	260	292	324	356	388	420	4 5 2	484
1	0	1	0	0		5	37	69	101	133	165	197	229	261	293	325	3 5 7	389	421	4 5 3	485
0	1	1	0	0		6	38	70	102	134	166	198	230	262	294	326	3 58	390	422	4 5 4	486
1	1	1	0	0		7	39	71	103	135	167	199	231	263	295	327	3 5 9	391	4 23	455	487
0	0	0	1	0		8	40	72	104	136	168	200	232	264	296	328	360	392	424	456	488
1	0	0	1	0		9	41	73	105	137	169	201	233	265	297	329	361	393	425	4 5 7	489
0	1	0	1	0		10	42	74	106	138	170	202	234	266	298	330	362	394	426	4 58	490
1	1	0	1	0		11	43	75	107	139	171	203	235	267	299	331	363	395	4 2 7	4 59	491
0	0	1	1	0		12	44	76	108	140	172	204	236	268	300	332	364	396	428	460	492
1	0	1	1	0		13	45	77	109	141	173	205	237	269	301	333	365	397	4 2 9	461	493
0	1	1	1	0	, ,	14	46	78	110	142	174	206	238	270	302	334	366	398	430	462	494
1	1	1	1	0		15	47	79	111	143	175	207	239	271	303	335	367	399	431	463	495
0	0	0	0	1		16	48	80	112	144	176	208	240	272	304	336	368	400	432	464	496
1	0	0	0	1		17	49	81	113	145	177	209	241	273	305	337	369	401	433	465	497
0	1	0	0	1		18	50	82	114	146	178	210	242	274	306	338	370	402	434	466	498
1	1	0	0	1		19	51	83	115	147	179	211	243	275	307	339	371	403	435	467	499
0	0	1	0	1		20	52	84	116	148	180	212	244	276	308	340	372	404	436	468	500
1	0	1	0	1		21	53	85	117	149	181	213	245	277	309	341	373	405	437	469	501
0	1	1	0	1		22	54	86	118	150	182	214	246	278	3 10	342	374	406	438	470	502
1	1	1	0	1		23	55	87	119	151	183	215	247	279	311	343	375	407	439	471	503
0	0	0	1	1		24	56	88	120	152	184	216	248	280	3 12	344	376	408	440	472	504
1	0	0	1	1		25	57	89	121	153	185	217	249	281	3 13	345	377	409	441	473	505
0	1	0	1	1		26	58	90	122	154	186	218	250	282	3 14	346	378	4 10	442	474	506
1	1	0	1	1		27	59	91	123	155	187	219	251	283	3 1 5	347	379	411	443	475	507
0	0	1	1	1		28	60	92	124	156	188	220	252	284	316	348	380	4 12	444	476	508
1	0	1	1	1		29	61	93	125	157	189	221	253	285	3 17	349	381	4 13	445	477	509
0	1	1	1	1		30	62	94	126	158	190	222	254	286	3 18	350	382	4 14	446	478	5 10
1	1	1	1	1		31	63	95	127	159	191	223	255	287	3 19	351	383	4 1 5	447	479	511
Ado	ires	S SE	ettin	g fo	r di	psw	ritch	1			Ac	ldre	SS (ode	;				3		