

## Wireless Waterproof Bluetooth Speaker




Model WS-507B

## Instruction manual

### Quick Start Guide

#### Speaker overview

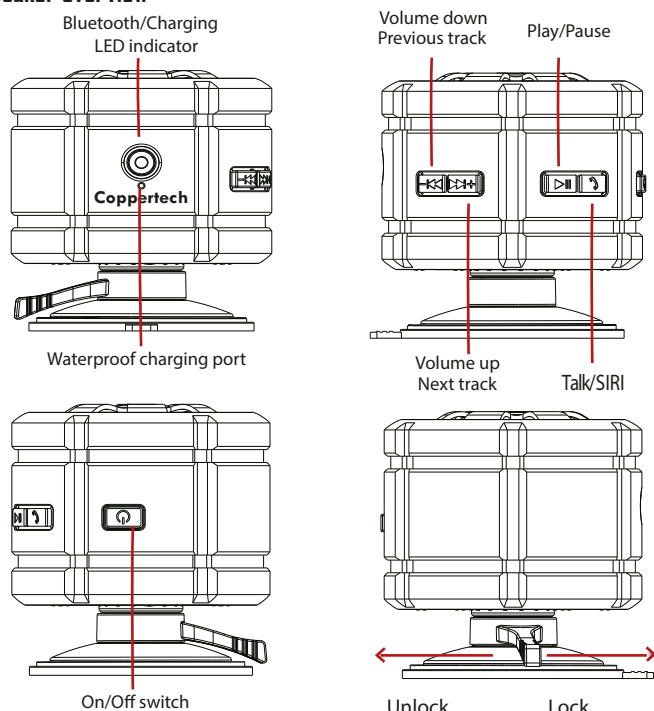

#### Charging your speaker

To obtain optimum power capacity, the speaker should be charged using the provided speaker with the 3.5mm charging cable included in the package. The cable looks like an audio cable, but it is a charging cable and it does not have audio function. To charge the unit plug the cable to the charging port of the speaker. The LED indicator light will turn red when it is being charged. When it is fully charged, the LED indicator light will go off. A full charge takes about 3.5 hours

#### Connecting with a Bluetooth device

Press the Power button for 2-3 seconds to turn on your WS-507. (Press the same button again for 2-3 seconds to turn the WS-507 speaker off.) If the speaker is already connected to other devices, press and hold the PLAY/ PAUSE button on your WS-507 speaker until the LED lights alternate between shining red and blue. And you can hear "pairing" sound. Perform the pairing procedure on the Bluetooth device to detect this speaker. Go to your phone or other devices Bluetooth settings and select WS-507 from the list.

#### Connecting with a smartphone by Onetouch (NFC)

If using a device that is NFC (Near Field Communication) enabled, turn on NFC, then simply touch the speaker on the right side where the NFC chip lies to make a connection.

#### Listening to music

Start playback on the Bluetooth device, and adjust the volume. Set the volume at an appropriate level on the connected device, and adjust the volume with the VOL -/+ buttons on the unit. To switch to the previous or next song simply press the Previous and Next button on the speaker. This will switch to the previous/next song in the playlist of the Bluetooth device. Press the Play/Pause button on the speaker to start or pause songs.

#### Making a call/Receiving a call

You can use the WS-707 as a portable speakerphone for incoming calls when connected wirelessly via Bluetooth. To answer a call, press the TALK button and talk as you would with your device if it was on "speakerphone". The built in microphone will pick up your voice just like a phone. To end a call, press the TALK button again. To refuse a call, double press the TALK button. You can re-dial the last number called by double pressing the TALK button.

#### Using SIRI


When the speaker is connected to an iPhone/iPad via Bluetooth, press and hold the TALK button for 3 seconds to activate the Siri function on iPhone/iPad. Then talk to the speaker after hearing the "Siri" sound. Please note that iPhone/iPad may not be able to recognize human speech when the speaker is being used in a noisy environment. Siri may not work if iPhone/iPad is not connected to the internet. When the Siri conversation is finished, the speaker will continue playing audio.

#### Battery status on iPhone et iPad

When the speaker is connected to iPhone/iPad via Bluetooth, the battery status of the speaker can be displayed on the top of the iPhone/iPad screen, after the Bluetooth symbol. Please note that the battery status icon can be vertical or horizontal, depending on the Bluetooth device and its operation system.

#### Using suction cup

The WS-507 speaker can be fixed on glass, smooth wall, or other subjects with a smooth surface. Before using the vacuum suction cup, please clean the suction cup and the surface to which the speaker is going to be fixed. Make sure both surface is clean and dry.

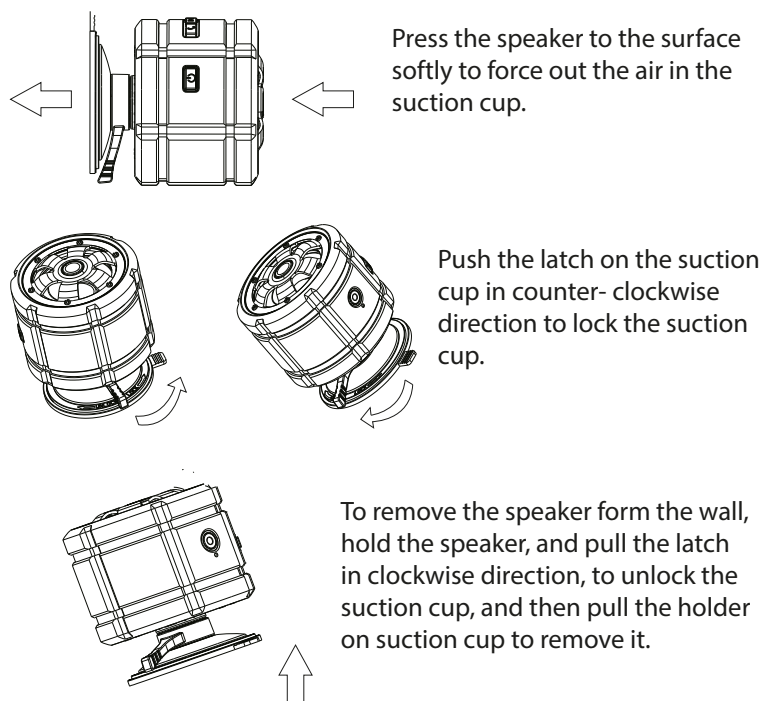

## Important safety information

Please read these instructions and follow these instructions. Heed all warnings.

### WARNINGS:

- Do not place any naked flame sources, such as lighted candles, on or near the apparatus.
- The apparatus not be exposed to excessive heat such as sunshine, fire or the like.
- Do not dismantle, open or shred the apparatus.
- Do not subject battery pack to mechanical shock.
- In the event of a leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- The speaker gives its best performance when it is operated at normal room temperature (20°C +/- 5°C).
- The speaker needs to be charged before use. Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.
- Keep battery pack out of the reach of children.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Do not clean the speaker when it is being charged. Always unplug the charger first before cleaning the speaker.
- Do not leave your speaker in direct sunlight for extended periods of time.
- Do not use abrasive cleaners to clean your speaker because this could cause scratches or damage.
- Do not bring your speaker in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your speaker unless otherwise specified in this User Manual. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your speaker yourself.
- Do not attempt to replace the battery of the speaker. It is built-in, and not changeable by users.
- Use only the USB charging cable supplied in the accessories package to charge the speaker, from the USB port of computer.
- Observe all signs and displays that require an electrical device or RF radio products to be switched off in designated areas.

## Specifications

|                                      |                                                                                              |
|--------------------------------------|----------------------------------------------------------------------------------------------|
| Bluetooth compliant.....             | Bluetooth 3.0                                                                                |
| Dimensions.....                      | 8 cm x 8,3 cm                                                                                |
| Weight.....                          | 0,223 kg                                                                                     |
| Speaker driver.....                  | mono, 50MM, 30Ohm, water<br>resistante                                                       |
| Speaker output.....                  | 3W                                                                                           |
| Operating Frequency Range.....       | 2.4GHz-2.48GHz                                                                               |
| Battery capacity.....                | 550mAh                                                                                       |
| Battery life .....                   | Up to 5-60hours(depending<br>on the volume and audio content)                                |
| Battery charging time.....           | 2 hours                                                                                      |
| Operating temperatures.....          | 0°C to 45°C                                                                                  |
| Bluetooth transmission distance..... | Up to 10 meters, measured<br>in open space. Walls and structures may affect range of device. |
| Battery Charging voltage.....        | 5V(1A)                                                                                       |
| Working voltage.....                 | 3.3--5V                                                                                      |
| Interface.....                       | Bluetooth, 3.5MM charging<br>port                                                            |

### Water resistant features

- 1.The WS-507 is IPX5 Water resistant. This speaker is not intended to be submerged in water, but it's resistant to rainfall, water jets and water splashing.
- 2.IMPORTANT- To ensure your WS-507 speaker is prepared for using in a wet environment, remove all cable connections.

## Warranty

- 12 month from the date of purchase.
- Covers manufacturing defects.
- For warranty service contact: [contact@coppertech.fr](mailto:contact@coppertech.fr)

## The package includes:

- Coppertech® Bluetooth speaker WS507B
- 3.5 mm charging cable

 This product is in compliance with essential requirements and other relevant provisions of Directive 1999/5. The complete Declaration of Conformity is available at [contact@coppertech.fr](mailto:contact@coppertech.fr)

### FCC NOTICE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions;  
1.This device may not cause harmful interference, and  
2.This device must accept any inference received, including interference that may cause undesired operation.

### FCC CAUTION

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.