

# User Manual

Mobile Eyewear Recorder  
with MP3 Player



## Specifications

- 1.3 M COMS Sensor / 2.8mm Lens
- Video resolution : 640 \* 480 VGA
- Video compression : AVI
- 25fps
- Photo resolution : 1280 \* 960
- Photo compression : JPG
- MP3 play with stereo
- MP3 music format support MP3 / WMA / WAV
- Video + Audio recording and Photograph
- Flash Memory : 2G ~ 8G , TF ( Micro SD ) Max. 8G
- Recording Mode: Continuous recording, when the memory is full, the system will save the file and turn off the system
- Battery : 400mAH
- Charge : USB cable from PC USB Port or Power adapter
- Charge Voltage : DC 5V
- USB Type : USB2.0 standard port
- Support System : Support Windows 98/98SE/ME/2000/XP


## Charging the Battery

The battery can be charged by plugging the device into your computer using the USB cable, or using the provided adapter.

- For the initial 3 charges, it is recommended that the battery be charged for at least 12 hours. After the first three charges, it should take only 3 to 4 hours to fully charge the battery.

**Note: Please do not charge the battery for more than 24 hours at a time.**

- The LED display will blink in BLUE while the unit is charging.
- Please do not use any other AC adapter other than the one provided for you.
- If you haven't used the device for a long time, it is suggested that you recharge the battery before using.
- For a faster charge and product protection, it is best to charge the battery in OFF mode.

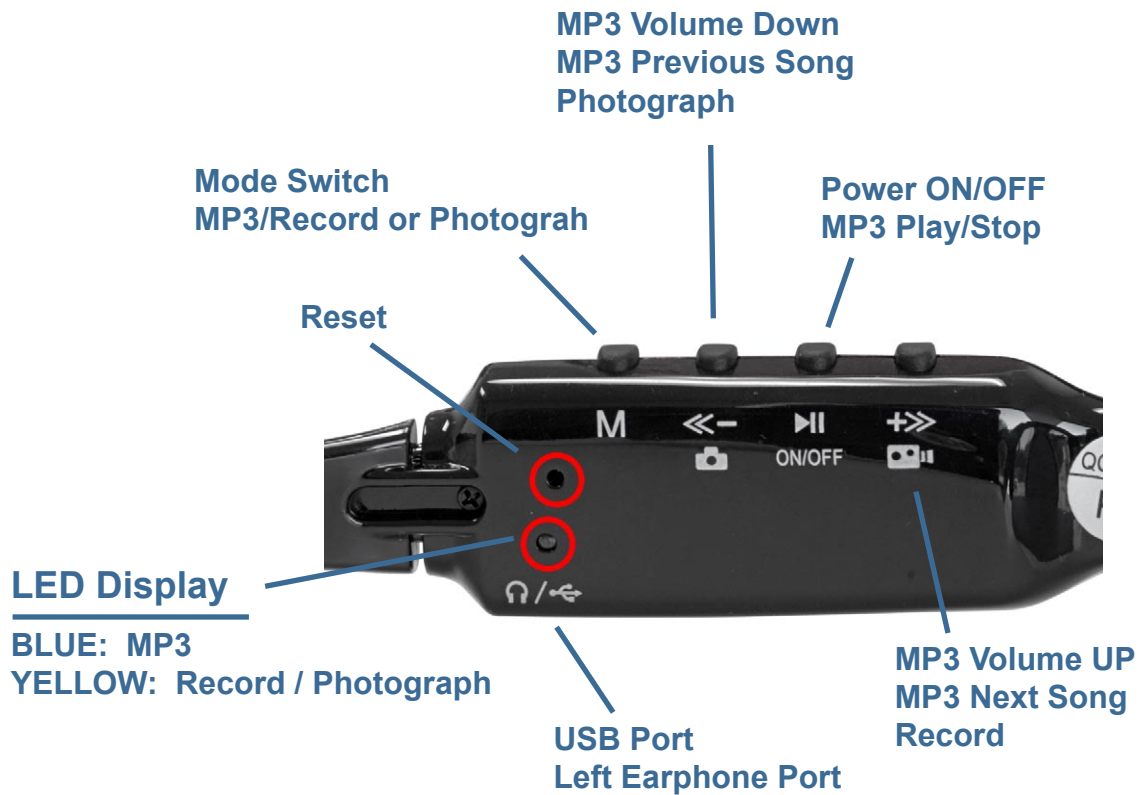

## MP3 Operation

1. Turn the POWER ON by pressing the ►|| button for 4 to 5 seconds. The LED display will turn BLUE indicating the device is in MP3 mode.
2. VOLUME UP --- Hold down the +>> button.
3. VOLUME DOWN --- Hold down the <<- button.
3. NEXT SONG --- Press the +>> button for 1 to 2 seconds.
5. PREVIOUS SONG --- Press the <<- button for 1 to 2 seconds.
4. MP3 PLAYER OFF --- Press the ►|| button for 1 to 2 seconds.
5. POWER OFF --- Press the ►|| button for 4 to 5 seconds.

## Take a Photograph

1. Turn the POWER ON by pressing the ►|| button for 4 to 5 seconds. The LED display will turn BLUE indicating the device is in MP3 mode.
2. Switch to Photograph mode by pressing the **M** button for 1 to 2 seconds. The LED display will turn from BLUE to YELLOW.
3. Press the 📷 button to take a Photograph. The LED display will blink once while the photograph is being taken.

## Record a Video

1. Turn the POWER ON by pressing the ►|| button for 4 to 5 seconds. The LED display will turn BLUE indicating the device is in MP3 mode.
2. Switch to Record mode by pressing the 📹 button for 1 to 2 seconds. The LED display will turn from BLUE to YELLOW (continuous blinking) and begin to record.
3. To stop recording, press the 📹 button again for 1 to 2 seconds. The video will save and the LED display will stop blinking.

## Reset

Should the device not work properly, for example it will not turn off or on, a reset may need to be performed. Stick the end of a paper clip in the reset hole and press gently until a small click is felt. The unit should now be reset and work properly.

## Notes

- Avoid using in extreme hot, cold, dusty, or damp environment.
- Do not rub or bump against hard objects. Doing so may cause scratches, battery failure, or damage to internal hardware.
- Avoid static electricity.
- When formatting device or copying files, do not stop the connection suddenly. Doing so may cause program failure.
- When using as a movable hard drive, please store and extract files according to the computers operating system. We will not be responsible for any lost files caused by improper use.

TF Card Slot  
Support Max. 8G

USB Port  
Earphone Port



Camera

