

Introduction

Thank you for purchasing the Joyride™ infotainment system. This system makes the most of your driving experience by combining many features into a system that fits into the same space normally occupied by your car stereo. The Joyride system is an information and entertainment system for people on the go, and integrates a compelling graphic user interface with voice commands that enable you to keep your hands on the wheel and eyes on the road.

This Quick Reference Guide is to introduce you to the basics of the Joyride system and to act as a refresher when you need to be reminded of how to operate the system. It is not intended to be a substitute for reading the Owner's Manual and it is recommended that you read and understand the safety instructions and precautions as well as the operating instructions for the various features of the Joyride system.

Read and Follow Instructions: Before using your Joyride system, read and follow all instructions and safety information provided in this Quick Reference guide. Not following precautions found in this Quick Reference guide can lead to an accident or other serious consequences.

The Quick Reference guide and any examples contained herein are provided "as is" and are subject to change without notice. Clarion Co. Ltd. makes no warranty of any kind with regard to this Quick Reference guide, and shall not be liable for any claims for incidental or consequential damages in connection with the furnishing, performance, or use of this Quick Reference guide or the examples herein.

Basics

Turning on Joyride:

Turn on your car engine, or turn ignition ACC position, and then press the Power key on the Joyride faceplate.

Main Keys:



The main Joyride faceplate keys are:

POWER Key	Push to turn on/off the Joyride system
ARROW Keys	Push to navigate through options, graphics, etc.
ENT Key	Push to accept/confirm entry
BACK Key	Push to go back to previous screen
START Key	Push to return to Joyride main shell screen
MENU Button	Push to view menu options for each application
HELP Button	Push to view help document on current screen
DVD Button	Push to launch DVD Player application
NAV Button	Push to launch Navigation application (Optional)
ANGLE Button	Push to adjust angle of faceplate
NUMERIC Keypad	Push 0-9, # and * to input data
EJECT Button	Push to eject CD/DVD



CAUTION! Do not access any function requiring a prolonged view of the screen while you are driving. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even occasional short scans to the screen may be hazardous if your attention has been diverted away from your driving task at a critical time.

Basics

Launching application:

1. Press the **START** key.
2. Press  (large screen) /  (small screen) to select application, then press **ENT**.

Changing to a different application:

1. Press **BACK** or **START** key to get back to the Main Shell screen, then  (large screen) /  (small screen) to select an application.
2. Press **ENT** to go to that application.

Using speech:

1. Wake up Joyride by saying AUTOPC or pressing the Push To Talk (PTT) key.
2. Wait for Joyride listen tone.
3. Say the name of an application to go to that application or

Say **WHAT CAN I SAY?** to hear what commands are currently active.



Voice Command Control. Many of the functions of the Joyride system can be accomplished using only voice commands.

CAUTION! Operating certain parts of this system while driving can distract your attention away from the road, and possibly cause an accident or other serious consequences. Do not change system settings or enter data non-verbally (using your hands) while driving. Stop the vehicle in a safe and legal manner before attempting these operations. This is important since while setting up or changing some functions you might be required to distract your attention away from the road and remove your hands from the wheel.

TIP: For easy navigation, look for the active arrow key symbols that can be used for each particular application on the bottom of each screen.

DVD Player




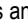
Launching DVD Player:

1. Press the **START** key.
2. Using  (large screen) /  (small screen) select **DVD Player** and press **ENT**.

Inserting a DVD:

1. Lower the Joyride faceplate by pressing **EJECT**.
2. Insert the DVD into the slot, making sure the label is facing up.

Playing a DVD:

1. Press **ENT** to play or pause a DVD.
2. Press  or  to go to previous or next scene.
3. Press and hold  or  for more than 2 seconds to fast forward or fast reverse through a scene. A longer press will increase the fast forward or fast reverse speed. Press the same key again or press **ENT** to stop and return to normal playing speed.

CAUTION! DO NOT attempt these functions manually while driving. Stop the vehicle in a safe and legal manner before attempting these operations.

IMPORTANT: "DVD Player" must first be voice trained before being recognized. See "Setup" in the User's Manual for training a voice command.

TIP: Pressing the DVD button from the faceplate will launch DVD Player. Pressing it again will toggle between the currently running application and DVD Player.

NOTE: DVD Player will automatically launch after insertion.

DVD Player

Using Speech:

1. Wake up Joyride by saying AUTOPC or pressing the PTT.
2. Wait for Joyride listen tone.
3. Say DVD PLAYER to open DVD Player, wait for the listen tone.
4. Say PLAY, PAUSE, or STOP to control DVD Player or say NEXT or PREVIOUS to select desired chapter.

CAUTION! The playing of television broadcasts, movies or videos so as to be visible from the driver's seat is prohibited by law in North America. The DVD player is intended for viewing by passengers seated behind the driver's seat. Therefore, **DO NOT VIEW THE DVD CONTENTS OR ANY OTHER PROGRAM WHILE DRIVING.**

Compact Flash

Launching the CF Player:

1. Press the **START** key.
2. Using **⏮** (large screen) / **⏭** (small screen) select **CF Player** and press **ENT**.

Inserting a CF card:

1. Making sure the lip of the card is facing outward (away from the unit), gently guide the card into the Compact Flash slot.

Playing MP3 from your Compact Flash card:

1. Insert a Compact Flash card containing one or more MP3 files.
2. The first MP3 file on the file will automatically start running.
3. Press **⏮** or **⏭** to go to previous or next MP3 file
4. Press and hold **⏮** or **⏭** to fast forward or fast reverse through a song.

Using Speech:

1. Wake up Joyride by saying AUTOPC or pressing the PTT.
2. Wait for Joyride listen tone.
3. Say CF PLAYER to open CF Player, wait for the listen tone.
4. Say PLAY, PAUSE, or STOP to control CF Player or say NEXT or PREVIOUS to select desired song.

CAUTION! DO NOT attempt these functions manually while driving. Stop the vehicle in a safe and legal manner before attempting these operations.



WARNING: Do not force the CF card into the slot. Doing so will cause damage to the pins on the CF card slot.

NOTE: If the CF card contains other non-MP3 files such as a Joyride application Auto-Run file, by default, an installation screen will be displayed. Press **BACK** to ignore the Auto-Run installation screen and return to the CF Player application.

IMPORTANT: "CF Player" must first be voice trained before being recognized. See "Setup" in the User's Manual for training a voice command.

CD Player





Launching CD Player:

1. Press the **START** key.
2. Using  (large screen) /  (small screen) select **CD Player** and press **ENT**.

Inserting a CD:

1. Lower the Joyride faceplate by pressing **EJECT**.
2. Insert the CD into the slot, making sure the label is facing up.
3. CD Player will automatically launch and start playing track one.

Playing a CD:

1. Press **ENT** to play or pause a CD.
2. Press  or  to go to next or previous track.
3. Press and hold  or  to fast forward or fast reverse through a track

Using Speech:

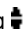

1. Wake up Joyride by saying AUTOPC or pressing the PTT.
2. Wait for Joyride listen tone.
3. Say CD PLAYER to open CD Player, wait for the listen tone.
4. Say PLAY, PAUSE, or STOP to control CD Player or say NEXT or PREVIOUS to select desired track.

CAUTION! DO NOT attempt these functions manually while driving. Stop the vehicle in a safe and legal manner before attempting these operations.



TIP: To go directly to a track, press the corresponding number on the numeric keypad of the faceplate.

Radio

Launching Radio:

1. Press the **START** key.
2. Using  (large screen) /  (small screen) select **RADIO** and press **ENT**.

Tuning to a station:

1. Press **ENT** to change between FM and AM.
2. Press  to seek for a station
3. Press  to fine tune a station.

Setting a preset:

1. Tune to a desired station.
2. Press and hold the number key (0-9) corresponding to the desired preset number.

Using speech to go to a preset:

1. Wake up Joyride by saying AUTOPC or pressing the PTT.
2. Wait for Joyride listen tone.
3. Say RADIO to open the Radio, wait for the listen tone.
4. Say PRESET, wait for the listen tone.
5. Say the present number (0-9)



CAUTION! DO NOT enter data manually or change settings while driving.

VOLUME SETTING: Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.


TIP: Go directly to a station by pressing the # key and then using number keys to enter the radio station frequency. Example: #1067 to go to 106.7.

Address Book





Launching Address Book:

1. Press the **START** key.
2. Using  (large screen) /  (small screen) select **Address Book** and press **ENT**.

Entering a contact:

1. Press **MENU**.
2. Press  to select **NEW ENTRY** and press **ENT**.
3. You will be prompted to enter the contact's name using the edit control. Follow other prompts to complete and save your information.

Finding a contact:

1. Press  or  to move from letter to letter.
2. Press  or  to move through contact names.

Using speech to dial a contact's phone number:

1. Wake up Joyride by saying AUTOPC or pressing the PTT.
2. Wait for Joyride listen tone.
3. Say ADDRESS BOOK and wait for the listen tone.
4. Say NEXT or PREVIOUS to find the desired contact name, then say SELECT.
5. Say DIAL, then OK to call the contact.

CAUTION! DO NOT enter data manually or change settings while driving.

NOTE: You can easily transfer contact information from your PDA into Joyride's Address Book. For more information, refer to the User's Manual.



TIP: When finding a contact, you can skip directly to a desired letter by saying AUTOPC, then LETTER, followed by the letter (A-Z).

TIP: If you have already made a custom recording for your contacts, you can instantly locate their record by saying LOCATE followed by the contact's recorded name.

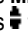


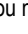
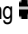
NOTE: Dialing a phone number requires optional hardware.

Navigation (Optional)

Launching Navigation:

1. Press the **START** key.
2. Using  (large screen) /  (small screen) select **Navigation** and press **ENT**. You may also press the **NAV** key to launch Navigation.



Entering a destination:

1. Press **MENU**.
2. Press  to select **ENTER DESTINATION** and press **ENT**.
3. Press  to select **STREET ADDRESS** and press **ENT**.
4. If using the large screen, you will be asked to make a selection between City Name and Street Name, using  select **CITY NAME** and press **ENT**. If using the small screen, you will be asked if you know the name of the city, to which you must select **YES** using  and then press **ENT**.
5. At the *Enter City Name* screen, enter the first one or two letter in the city name and press **ENT**. This will automatically generate a list of matching entries.
6. From the list of city names, using  select the desired city and press **ENT**.
7. At the *Enter Street Name* screen, enter the first one or two letters of the street name and press **ENT**. This will automatically generate a list of matching entries.

CAUTION! The Navigation application requires manual (non-verbal) setup. Attempting to perform setup and inputting data while you are driving can distract your attention from driving and could cause an accident and serious injury. Stop the vehicle in a safe and legal manner before attempting these operations.

WARNING: Do not follow the route suggestions if you are instructed to perform an unsafe or illegal maneuver, if you are placed in an unsafe situation, or if you are directed into an area which you consider unsafe. The driver is ultimately responsible for the safe operation of the vehicle and therefore, must evaluate whether it is safe to follow the suggested direction.

Navigation (Optional)

8. From the list of street names, using  select the desired street name and press **ENT**.
9. Finally, from the *Enter Building Number* screen, enter the building number and press **ENT**.
10. A dialog box showing the complete address will display. Using  select **CALCULATE** and press **ENT**.

Using speech to get directions:

1. Wake up Joyride by saying AUTOPC or pressing the PTT.
2. Wait for Joyride listen tone.
3. Say NAVIGATION and wait for listen tone.
4. To hear turn by turn directions, say NEXT or PREVIOUS.

NAVIGATION SHORTCUT KEYS

# Zoom Out	4 Day / Night Mode
* Zoom In	5 Return to Current Car Position
0 Change Map Mode	6 Traffic Detail*
1 Previous Destination	7 Repeat Voice Guidance
2 Address Book	8 Traffic Information*
3 Recalculate	9 POI On/Off



* Feature available when optional CUE AutoFM is installed.

CAUTION! The navigation system is only an aid. Make your driving decisions based on your observations of local conditions and existing traffic regulations. This feature is not a substitute for your personal judgement. Any route suggestions made by the system should never override any local traffic regulations or your personal judgement or knowledge of safe driving practices.

WARNING: Do not rely on the navigation system to route you to emergency services. Ask local authorities or call 911 operator for these locations. Not all emergency services such as police, fire station, hospitals and clinics are likely to be contained in the navigation system's database.

Cell Phone (Optional)

Launching Cell Phone:

1. Press the **START** key.
2. Using  (large screen) /  (small screen) select **Cell Phone** and press **ENT**.

Dialing a number:

1. Start dialing the number using the faceplate keypad keys (0-9).
2. When done, press **ENT** to dial.

Using Speech:

1. Wake up Joyride by saying AUTOPC or pressing the PTT.
2. Wait for Joyride listen tone.
3. Say CELL PHONE to open Cell Phone, wait for the listen tone.
4. Say NUMBER, followed by the telephone number, making sure to pause between each digit.
5. When done, say DIAL to have Joyride dial the number for you.

Answering a call:

1. Press **ENT** when you hear the phone ringing.

Hanging up:

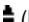

1. Using , select the **HANG UP** button and press **ENT**.

CAUTION! This cell phone application requires manual (non-verbal) configuration and data entry that requires your attention. Attempting to perform these tasks while driving can distract you from driving and cause an accident and serious injury. Stop the vehicle in a safe and legal manner before attempting these operations.

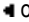



NOTE: You can dial numbers stored in the Address Book and Phone Book directly from the ClariPhone™ Cell Phone application. See the User's Manual for information about storing, retrieving and dialing contact phone numbers.

Messages***

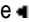
Launching Messages:

1. Press the **START** key.
2. Using  (large screen) /  (small screen) select **Messages** and press **ENT**.

Reading a message:

1. Press  or  to select a message box.
2. Press  or  to select a particular message.
3. Press **ENT** to read the message.

Using speech to read back messages:

1. Wake up Joyride by saying AUTOPC or pressing the PTT.
2. Wait for Joyride listen tone.
3. Say MESSAGES to open Messages, wait for the listen tone.
4. Manually, using the  keys, select **INBOX**, **OUTBOX**, **SENTBOX**, **NEWS***, or **TRAFFIC***.
5. Say NEXT or PREVIOUS to go through the messages in that box.
6. Press **ENT** to read a particular message.

* Feature available when optional CUE AutoFM is installed.




*** ClariPhone™ and CUE AutoFM must be installed for full functionality.

CAUTION! DO NOT attempt these functions manually while driving.




WARNING: The Messages application requires manual (non-verbal) data entry that requires your concentration. Attempting to perform such a task while driving can seriously distract your attention and could cause an accident. Stop the vehicle in a safe and legal manner before attempting these operations.

Messages***

Composing a message**:

1. Press the **MENU** key.
2. Press  to select **New Message** and press **ENT**.
3. Press  to select **With My Text** and press **ENT**.
4. Enter the desired message and press **ENT** when done.5. Enter the phone number to which the message is to be delivered and press **ENT**.
6. At the confirmation screen, press **ENT** again.
7. Using , select **Send Now** and press **ENT**.
8. You will be asked if you want to send the message using the default SMSC. Select **Yes** and press **ENT**.

Replying to a message**:



1. When viewing a message that you wish to reply to, press **MENU**.
2. Using , select **Reply** and press **ENT**.
3. Using , select **With Canned Text** and press **ENT**. You may also type in your own reply by selecting **With My Text**.
4. Using , select the message that best suits your reply. See the User's Manual about customizing your own set of canned messages.
5. Press **ENT** to send the message.

** Requires optional ClariPhone cell phone application to be installed.

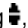
*** ClariPhone™ and CUE AutoFM must be installed for full functionality.

Voice Memo

Launching Voice Memo:

1. Press the **START** key.
2. Using  (large screen) /  (small screen) select **Voice Memo** and press **ENT**.

Recording a voice memo:

1. Press **MENU**.
2. Using , select **Record** and press **ENT**.
3. Start recording your message and when done, press **ENT** again.

Playing back a voice memo:

1. Press **ENT** to start playing.
2. Press **ENT** to stop playing.



Using speech to record a voice memo:

1. Wake up Joyride by saying AUTOPC or pressing the PTT.
2. Wait for Joyride listen tone.
3. Say VOICE MEMO to open Voice Memo, wait for the listen tone.
4. Say RECORD and start recording your message.
5. To stop recording, press the **ENT** key.





CAUTION! DO NOT attempt these functions manually while driving.

Setup





Launching Setup:

1. Press the **START** key.
2. Using  (large screen) /  (small screen) select **Setup** and press **ENT**.

Setting up date and time:

1. Press  to select **Clock** and press **ENT**.
2. Press  to select **Set Date** or **Set Time** and press **ENT**.
3. Press  to change the value of each field, then press  to move to the next field.
4. When done, press **BACK**.

Setting speech commands:

1. Press  to select **Speech Commands** and press **ENT**.
2. Press  to select **Global Commands** and press **ENT**.
3. Press  to select the command you wish to customize.
4. Press  to customize an individual command.
5. When done, press **BACK**.

CAUTION! This setup application requires manual (non-verbal) configuration and data entry that requires your attention. Attempting to perform these tasks while driving can distract you from driving and cause an accident and serious injury. Stop the vehicle in a safe and legal manner before attempting these operations.

Setup

Default Global Commands are:

You can replace them with:

CD Player

End

Radio

Mute

Address Book

Setup

Voice Memo

Clock

What time is it?

Audio

What can I say?

None

Volume

DVD Player

Messages

CF Player

Setup



Cell Phone

Help



Navigation

Auxiliary



Launching Auxiliary:

1. Press the **START** key.
2. Using  (large screen) /  (small screen) select **Auxiliary** and press **ENT**.

To enable auxiliary input:

1. Using , select **AUXILIARY INPUT**.
2. Using , select **ON**.

Adjusting gain:

1. Use the   keys to increase or decrease gain.
2. When done, press the **BACK** button.

CAUTION! DO NOT attempt these functions manually while driving.

NOTE: The Auxiliary application should be used only when a cell phone or an external device, such as a VCR, video game, or cassette tape player, has been plugged in. The Auxiliary application will then allow you to adjust and fine-tune the volume of that device.

NOTE: Only one auxiliary device can be used at a time.

Help

To Find...	Look here...
Joyride Basics	This Quick Reference Guide
Complete overview of the applications and features of your Joyride system.	Joyride Owner's Manual
The latest information on the Joyride system, including new software, hardware, services and upgrades.	Contact your Authorized Clarion dealer
Troubleshooting and customer support.	Contact your Authorized Clarion dealer

Keep this Quick Reference Guide in your vehicle at all times. When kept in the vehicle, the Quick Reference Guide will be a ready reference for you and other users unfamiliar with the Joyride system. Please make certain that before using the system for the first time, all persons have access to the Quick Reference Guide and read it's instructions and safety information. This guide is intended to only provide a quick and basic guidance to some of Joyride's features. For more information and complete instructions, please refer to the User's Manual.



© Copyright Clarion Co., Ltd 2000-2001

Reproduction, adaption or translation without prior written authorization
is prohibited, except as allowed under applicable copyright laws.

Microsoft and Windows are either registered trademarks or trademarks of
Microsoft Corporation in the United States and/or other countries.

Clarion Joyride™ Quick Reference Guide
Part No. YX-X01-D011