



Tablet PC

User Manual

Table of Contents

• Copyright	3	• Video Play	16
• Statement	3	• Music Play	17
• Trademark	3	• Camera	18
• Main Functions Overview	4	• Photos Mode	18
• Basic Operation	5	• Video Recording Mode	19
• Turning On	6	• System Settings	20
• Standby	6	• System Settings Options	21
• Turning Off	6	• Wireless & Networks	21
• Home Screen	7	• Sound	21
• Back Button	7	• Display	21
• Recent Tasks	7	• Storage	21
• Menu	7	• Battery	21
• Applications	7	• Applications	21
• Home Screen	8	• Accounts & Synchronization	21
• Add Apps & Widgets to Home Screen	8	• Location Services	21
• Wallpaper	8	• Security	21
• Notifications Bar	9	• Language & Input	22
• Search	10	• Backup & Reset	22
• Connecting to Networks	11	• Date & Time	22
• Connecting to Wi-Fi	11	• Accessibility	22
• Network Access via 3G	12	• Developer Options	22
• Other Networks	12	• About Tablet	22
• USB Connection	13	• HDMI Out	22
• Applications	14	• FAQ	23
• Install New Applications	14	• Reset & Recharging	24
• Tips	14	• Reset	24
• Applications Uninstall	15	• Recharging	24
• Applications Management	15	• About Firmware	25

Copyright

The copyright of this manual is reserved. Without written permission from the manufacturer, any part of this manual is not allowed to be revised, copied or transmitted in any way.

Statement

This manual does not provide any warranty or related declaration. We will not be responsible for any direct or indirect data loss caused by this manual and the products it mentioned. All information in this manual including the products specification, pictures and literatures are just for reference. We reserve the rights to update contents of this manual without further information.

 
Trademark

- No striking by any hard object.
- Stop using in thunderstorm weather.
- Keep away from electric or magnetic field.
- Don't load any unsecured application.
- Keep away from water and high humidity.
- Don't stain the device by chemicals.
- Do not disassemble the device.
- Keep away from high temperature, freezing, dusty or moist environment.
- Lower sound suggested, to keep away from hurting your ears and making noise.
- Do not flash firmware privately without original manufacturer's guidance. The manufacturer is not responsible for the breakdown of the device caused by user's private firmware flashing.

Main Functions Overview

- Wireless network exploring via WIFI, etc.
- Google Android Jelly Bean 4.1 OS.
- All-directional G-Sensor games supported.
- Immense amounts of applications supported.
- Various of audios supported.
- HD videos supported.
- Pictures browsing with zooming and slide-show.
- E-book reading with bookmark function.
- Photographing and Video recording
- Built-in voice recorder.
- Built-in multiple languages.
- USB 2.0 high-speed connection with PC.
- External Micro-SD card supported.
- HDMI out.

Basic Operation

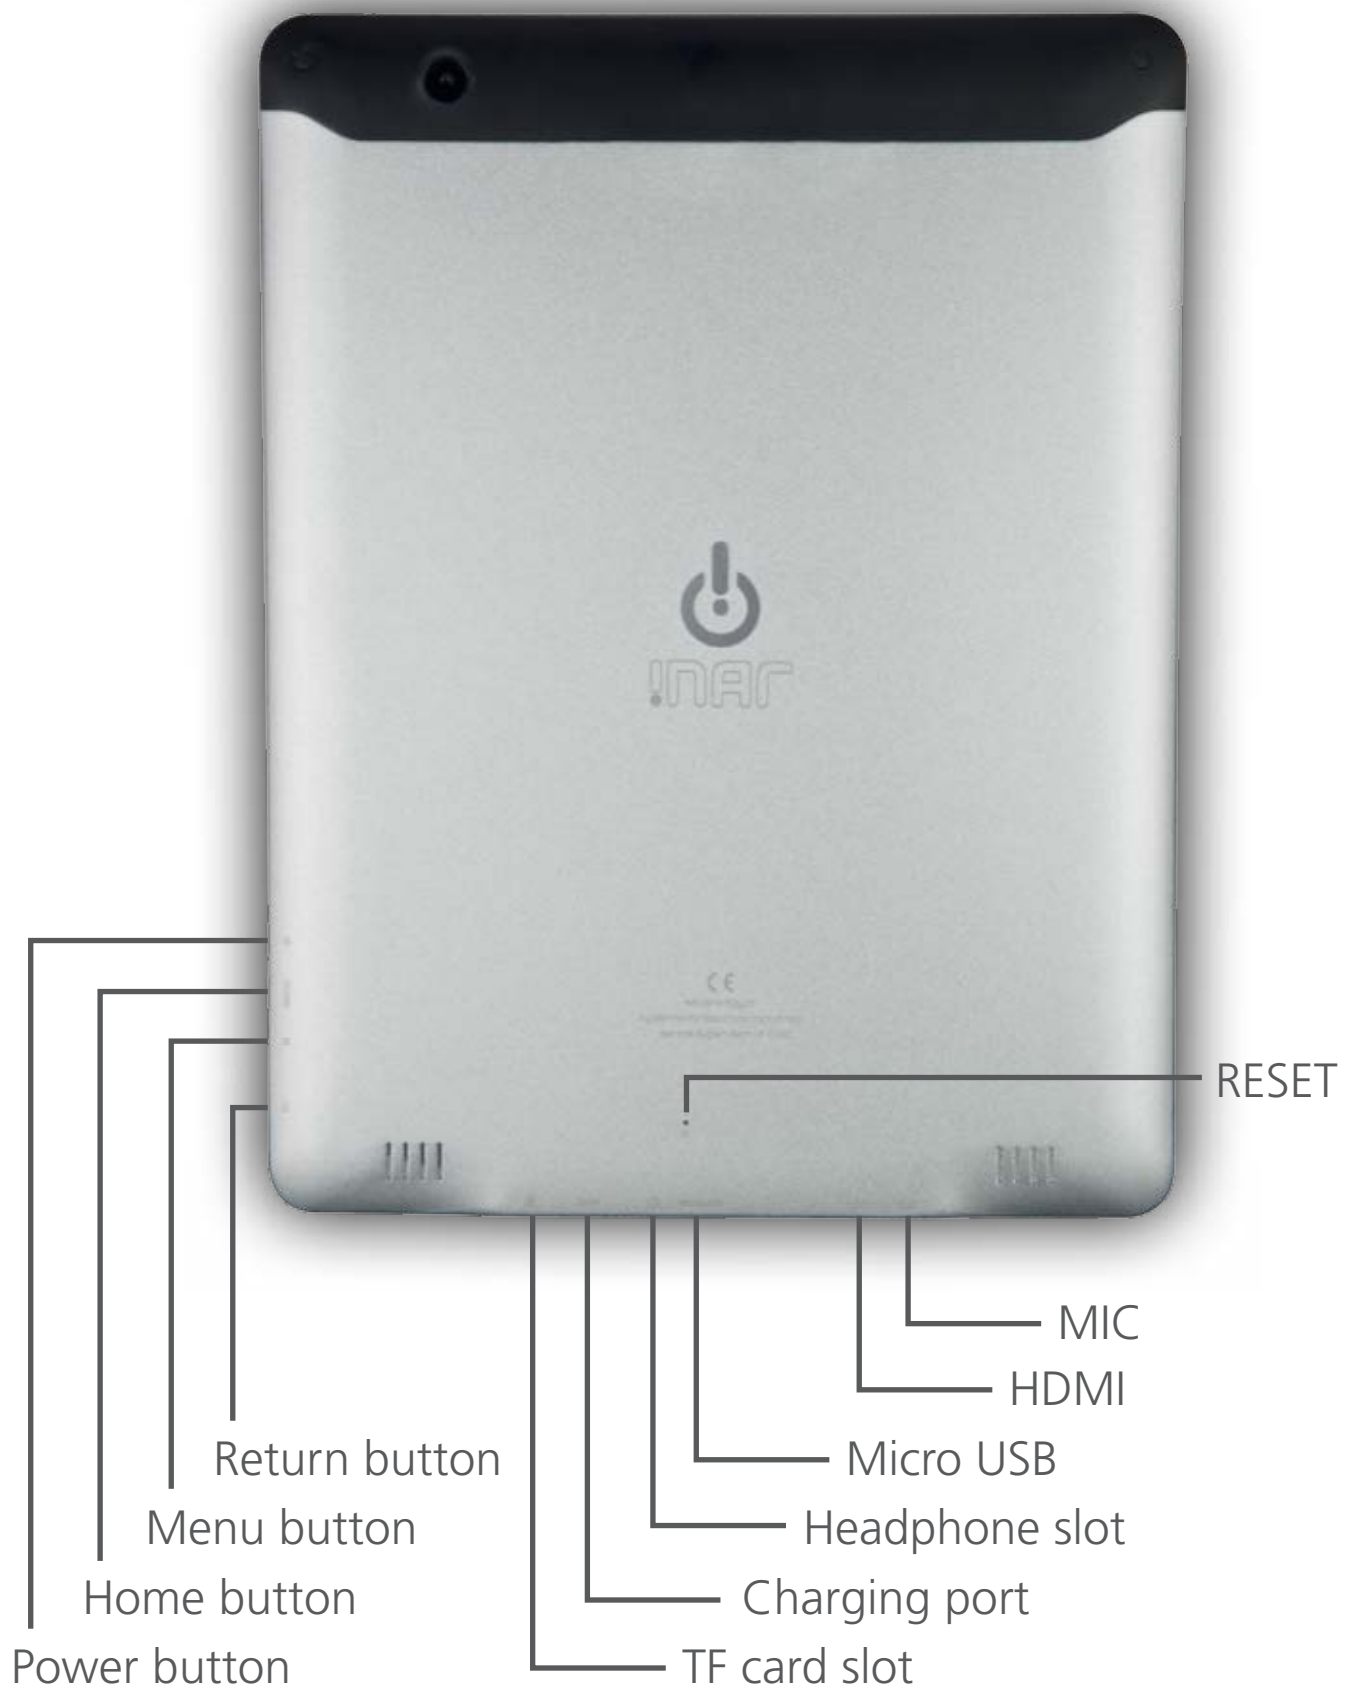

Turning ON

Press POWER button for around 3 seconds and the device will start up and display the lock screen. Slide the lock to unlock Home Screen.



Standby

 
When the device is working, press POWER button shortly to shut the display and it goes into standby mode, then press POWER button again to awake the device, and slide the lock to continue.

Turning OFF

Press POWER button for around 3 seconds and choose OK in the popup.

Home Screen


Tap



to go to Home Screen.

Back Button

 
Tap



to go to the previous page.

Recent Tasks

 Tap



to view recent tasks. Tap the task frame to open it, or slide to close it.

Menu

Tap



to view options.

Applications

Tap



to launch apps list. Slide to view all applications and widgets.

Home Screen

There are several pages, slide to view more.



Add Apps & Widgets to Home Screen

Launch applications list, press icons and drag it to Home Screen. At Home Screen, press icons to drag leftward or rightward to move it to other pages. Drag upwards to remove it from Home Screen.

Wallpaper

Long press blank of Home Screen, choose different wallpapers in the popup.

Notification Bar

Tap the bottom right corner of your screen to view the notification bar, informing you Wi-Fi status, battery, updates, downloads, etc.

 


Search

Tap



to search information at local or internet.
Voice Search is supported.

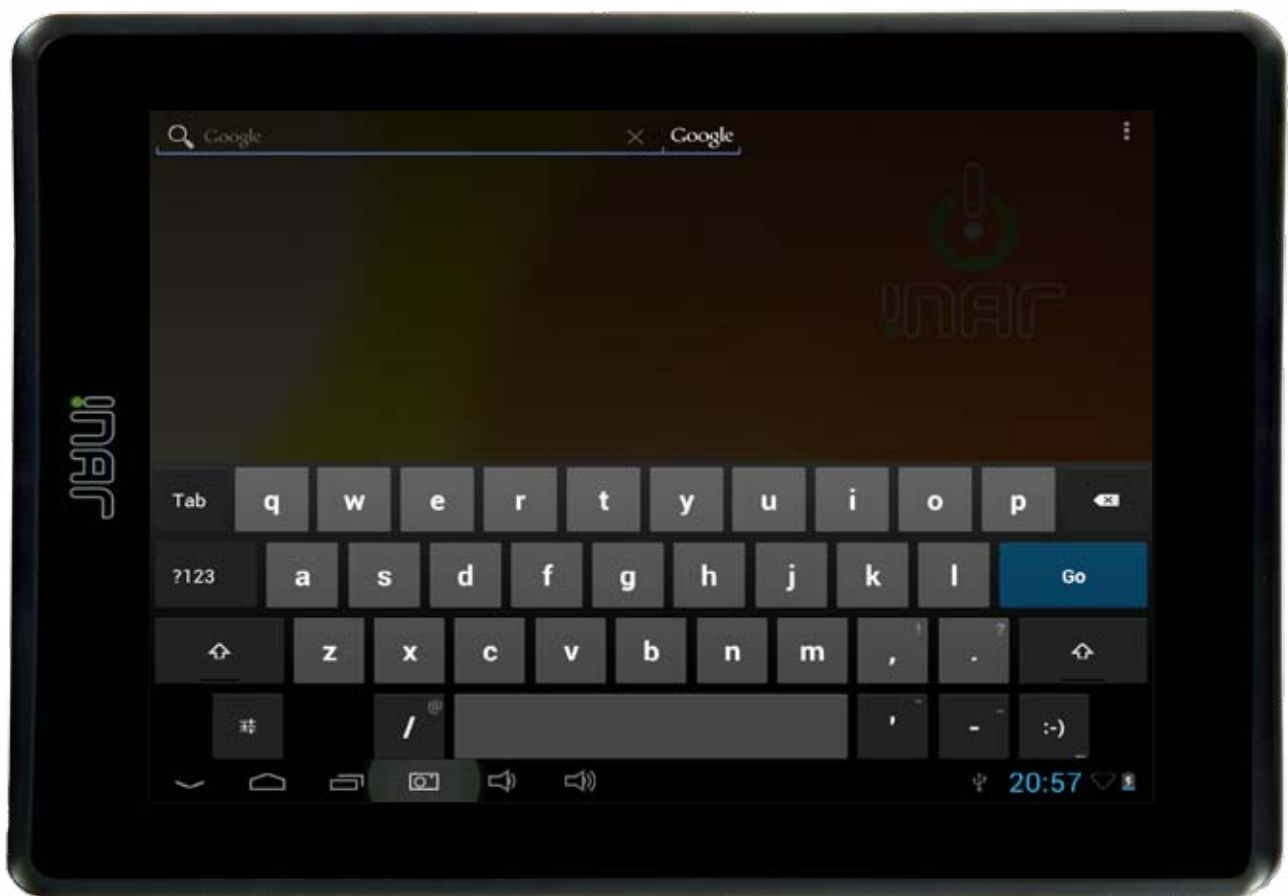

Connecting to Networks

Connecting to Wi-Fi

- Tap the Settings icon.



- Slide Wi-Fi icon  to the right (ON) to turn

on Wi-Fi, the tablet will scan and offer a list of available Wi-Fi networks around. Tap the name of Wi-Fi to connect to it.

- If the Wi-Fi network doesn't have a password, the tablet will connect to it automatically. If the Wi-Fi network has a password, input it and tap connect.



- Slide Wi-Fi icon  to the left to turn off Wi-Fi.

Network access via 3G

- Turn off Wi-Fi, and access More –Mobile networks.
- Make sure “Data enabled” is ON.
- Connect 3G Dongle.
- Tap Network operators, and search networks.
- You can select mobile networks automatically.

 
Other Networks

- VPN
- Portable hotspot
- Wi-Fi direct
- Please notice: Availability and network speed depend on the User’s network, and 3G network fees apply.

USB Connection

The tablet can be connected to PC to make data exchange (Files copy & delete) via USB cable. Please do not disconnect the device from PC when data exchanging.

- Use a USB cable to connect the tablet with PC.
- Tap Turn on USB storage to read storage of the tablet from PC.
- Tap Turn off USB storage to disconnect from PC, and remove the USB cable.

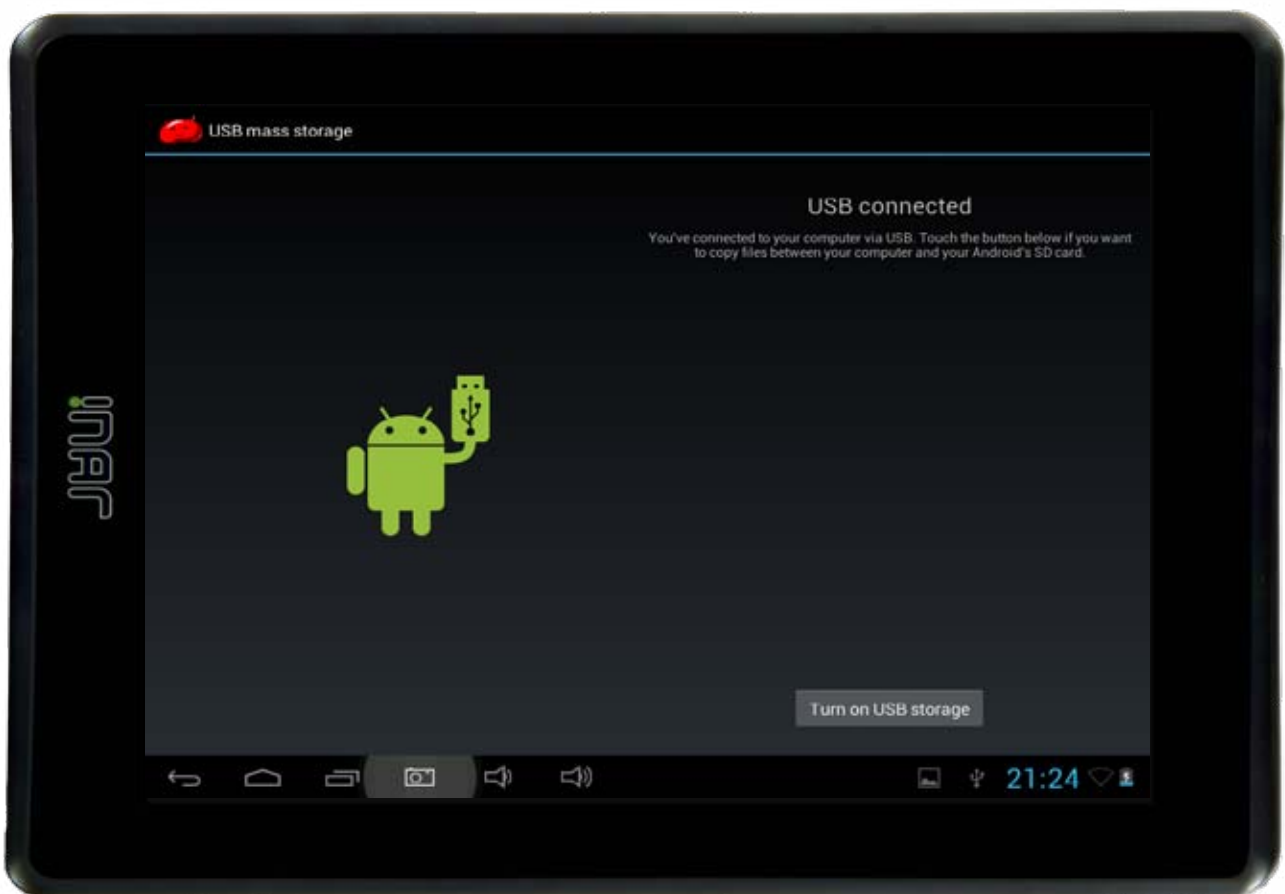


If above interface does not pop up, tap the icon at bottom right of screen and choose USB connected in the popup.



Applications

 Install New Applications

- To download & install applications from Playstore, just follow the instructions by system. 
- To install applications APK (application has to be secured) packages in tablet's storage.
 - Run APK Installer, tap Install—Internal memory, find the location of applications packages, and tap its name.
 - Run Explorer and tap Internal memory, find the location of applications packages, and tap its name to install.

Tips

- To install applications which are not from Playstore, make sure unknown source is ON:
(Setting – Security – DEVICE ADMINISTRATION) (caution read the trademark paragraph).
- If the application already exists in the tablet, choose OK to replace it by latest version of package.

Applications Uninstall

 
- Run APK Installer, tap Manage, then tap applications title and choose Uninstall.
- Tap Setting – applications – All. Tap the application you want to remove. Tap Uninstall.



Applications Management

- Run Apk Installer, tap Manage, then tap applications name and choose Launch, Export, Uninstall or Cancel.
- Tap Setting – applications – All. Tap the application and choose Force stop, Uninstall, Clear data or Move to SD.

Video Play

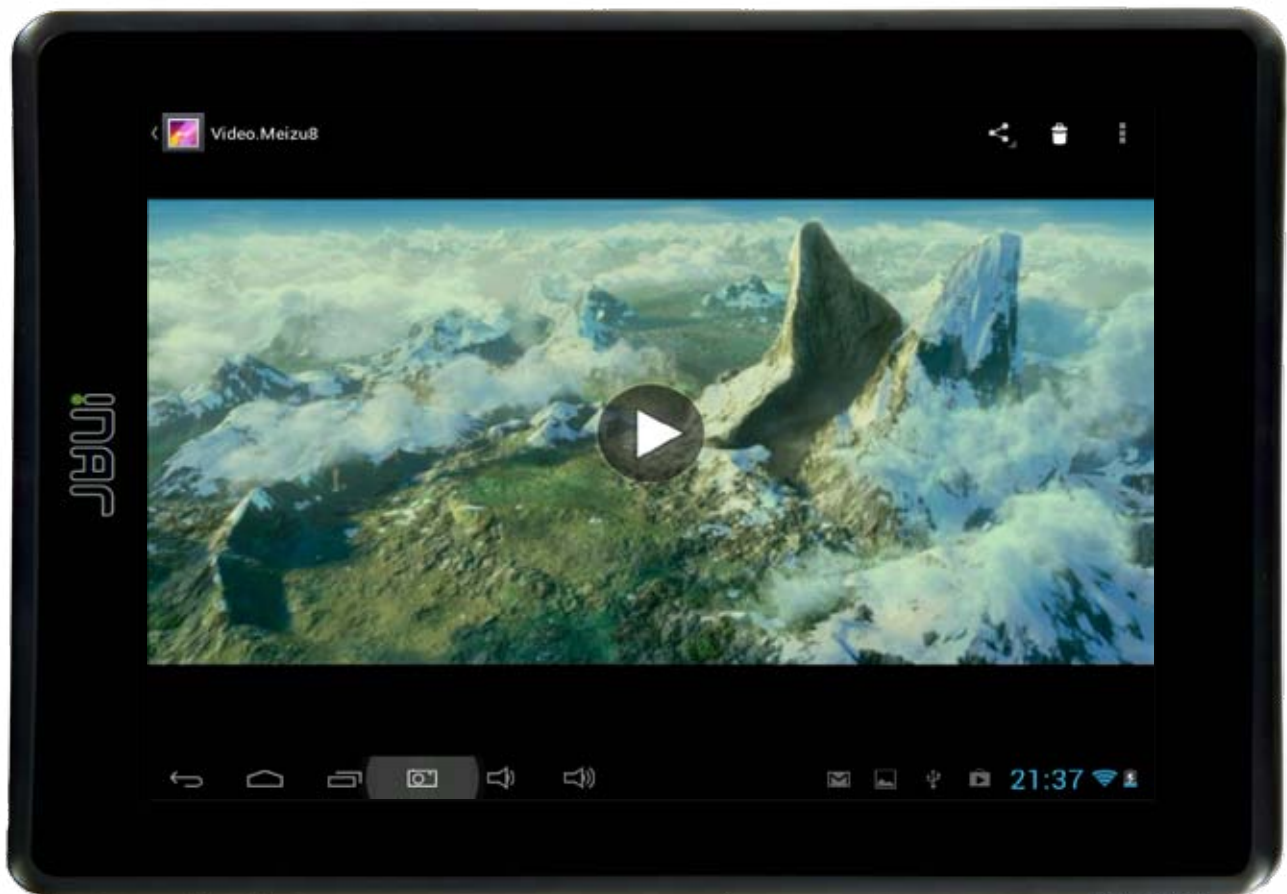
You can use the tablet's pre-installed Video Player to enjoy movies & videos, or install other video applications to enrich your video play.





- Tap  to enter the video player interface, or open the video files from  Explorer directly.
- The tablet supports many formats of video files including RM, RMVB, MP4, AVI, 3GP, MKV, MOV, VOB, DAT, FLV and more.
- Tap progress bar to go fast-forward or fast-rewind.

 Music Play

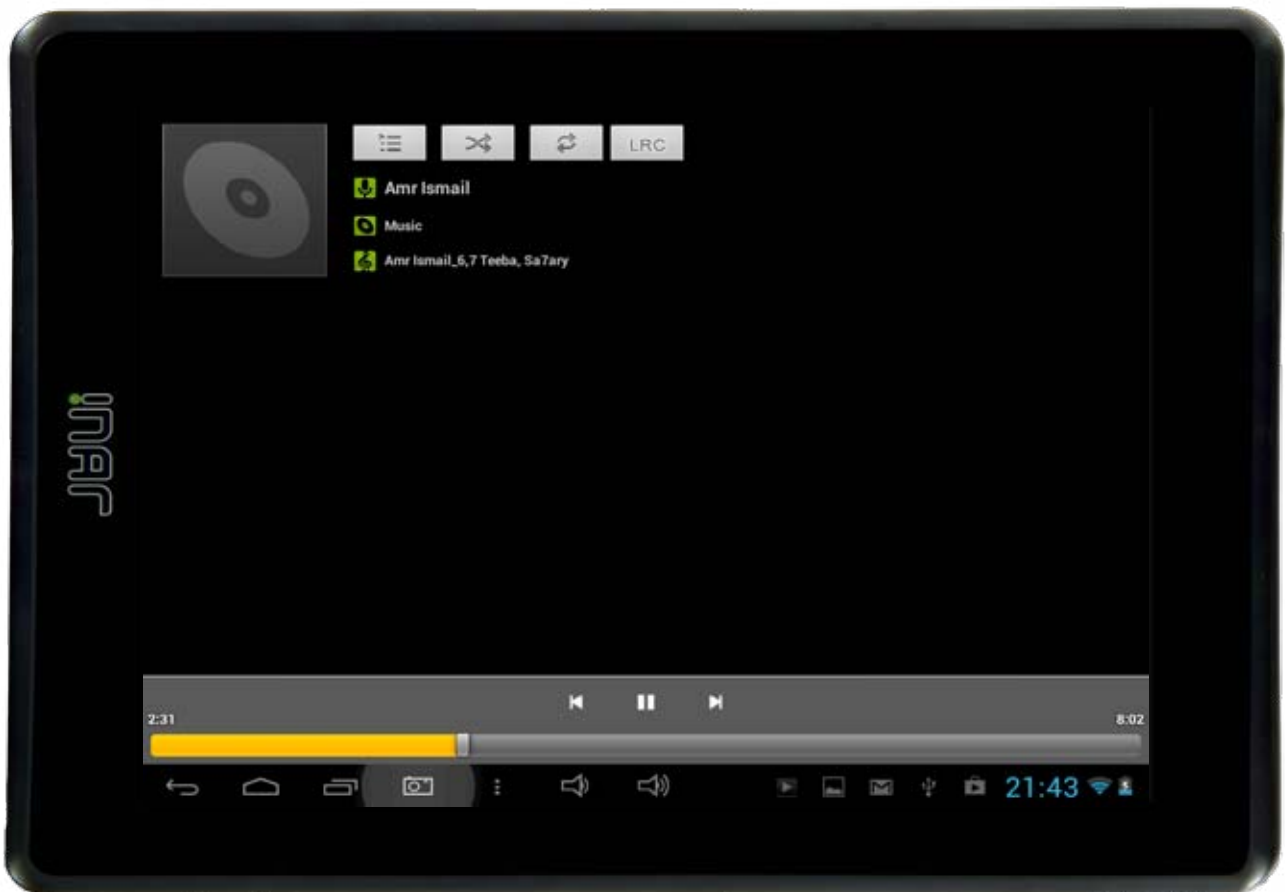You can use the tablet's pre-installed Music Player to enjoy music, or install other audio applications.



- Tap  the Music player icon to enter the music player interface, or open the music files from  Explorer directly.
- The device supports the following formats of audio files: MP3, WMA, MP2, OGG, AAC, FLAC, APE, 3GP, WAV, and more.
- Tap the progress bar to go fast-forward, fast-rewind.
- If there is no audio in the playlist, system will automatically load the audio files from the storage of tablet.

Camera




Tap the icon






to access camera function.



Photos Mode

- Click Blue Circle  to take pictures.
- Click  to access photographing options.
- Click the thumbnail picture to view saved pictures.
- Click  to switch to video recording mode.

Video Recording Mode

 
- Click Red Circle  to start video recording, click it again to stop and save the video.
- Click  to access video recording options.
- Click the thumbnail picture to view saved videos.
- Click  to switch to photos mode.

System Settings

Tap Setting icon



to enter system settings, including Wireless & Networks, Sound, Display, Storage, Battery, Apps, Accounts & sync, Location services, Security, Language/input, Backup/reset, Date/time, Accessibility, Developer options and About tablet.

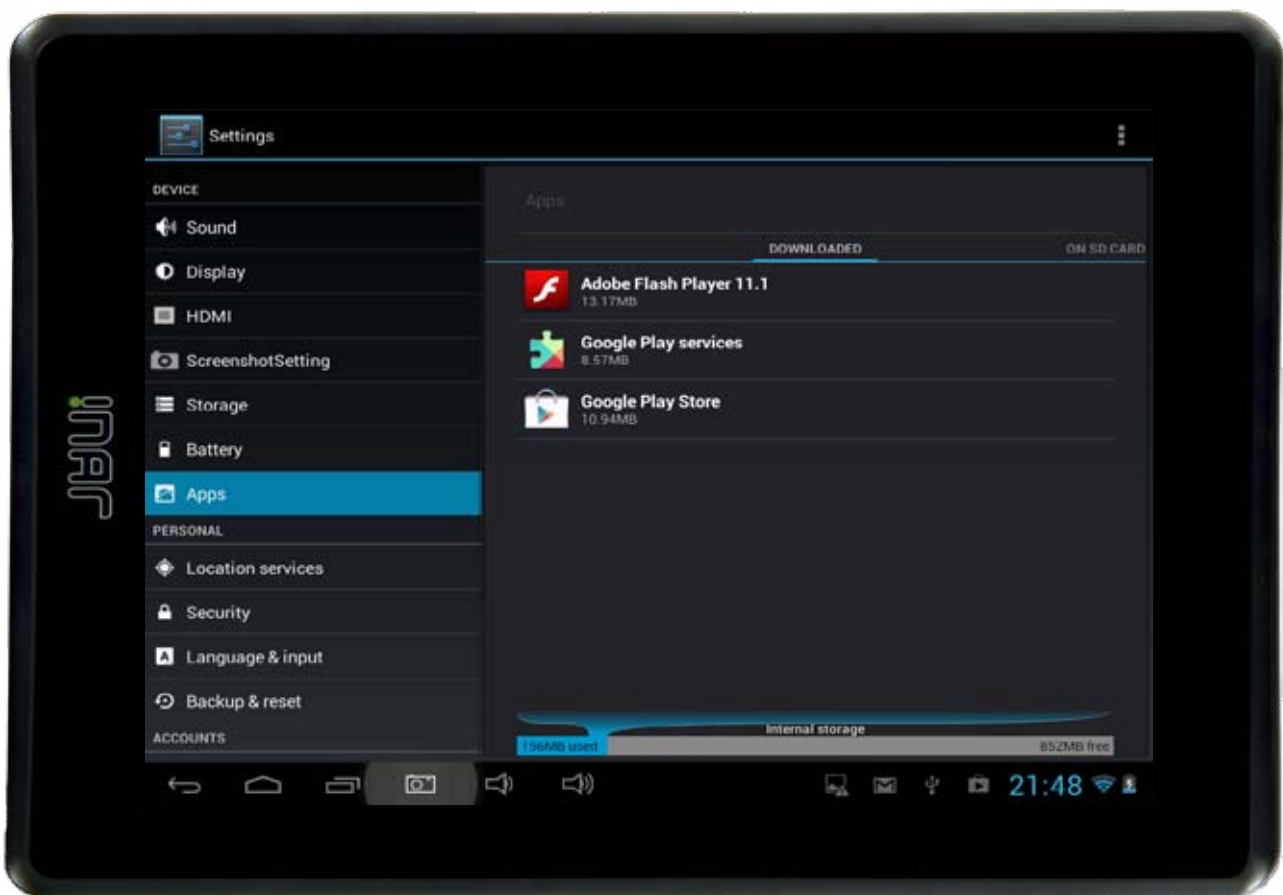

System Settings Options

- **Wireless & Networks:**
See Page 11 Connecting to Networks.
- **Sound:**
You can set volumes, ringtone & notification and system sounds.
- **Display:**
Brightness, Wallpaper, Auto-rotate screen, Auto sleep time, Font size, Accelerometer coordinate system and G-Sensor Calibration.
- **Storage:**
A general view of internal storage and external SD card.
- **Battery:**
A general view of battery information.
- **Apps:**
See Page 14 Applications.
- **Accounts & Synchronization:**
You can manage all accounts recorded in the tablet.
- **Location Services.**
- **Security:**
Screen security, Encryption, Passwords, Device administration and Credential storage.
Tip: If you want to install applications beyond Playstore, please turn on Unknown sources.

- **Language & Input:**

You can change the language of system, and choose keyboard inputs by default.

Tip: If you have installed an input, remember to turn on it in this setting.

- **Backup & Reset:**

Backup & Restore, Factory data reset and Recovery Mode.

- **Date & Time:**

Time & Date setting, time zone and format setting.

- **Accessibility :**

Large text, Auto-rotate screen, Speak passwords, Touch & hold delay and Install web scripts.

- **Developer Options:**

USB debugging, Stay awake, Allow mock locations, Desktop backup password, Strict mode enabled and Pointer location.


 
- **About Tablet:**

A view of tablet information
(model, system, firmware version, etc).

- **HDMI Out:**

For tablet with mini HDMI port, just connect it by HDMI cable directly. Make sure HDMI is ON (Setting--HDMI--Turn on HDMI).

Q: How can I change languages if I mistakenly choose an unknown language?

- Find setting icon  and access Settings.
- Choose icon  to enter language & input setting, the first option is language setting.

Q: How can I change input?

- Access Setting – Language & input, and set default input.

Q: I have already installed some applications, but I can not find them now, why does it happen?

- Some applications may be installed in external TF card, if you fetch out the TF card from the tablet, you will not see these apps.

Q: There are many popups of system error, what can I do?

- Restart the tablet by POWER button, or by RESET. Use a thin stick to prick the RESET and restart the tablet.
- If you have restarted the tablet and there are still error popups, you can check active applications to see if there is any unknown application, remove it if any.
- There may be virus in the device, please install security apps and protect your tablet.

Reset & Recharging

Reset

- If the device is halted or crashed, and can not be turned off by POWER button, users can launch the RESET function.

Recharging

- When the device can not be turned on normally or shut down automatically, it may need to be recharged.
- Please use the correct charger as the manufacturer guides.

About Firmware

Firmware contained in the tablets provides the control program for the device, and it is offered by the original manufacturer. Flashing firmware (refer to rebuilding firmware into the device) is the final solution to serious system problems. For common breakdown you can just restart the device, or run factory reset. If system crashes appear continuously even you have run factory reset, you can flash firmware under professional guidance. The firmware preloaded in the device is a stable version for the tablet, please do not flash it with other versions of firmware unless there is absolute necessity. We do not suggest any private firmware flashing without guidance of the original manufacturer, who is not responsible for any possible breakdown of the tablet caused by user's private firmware flashing.



Tablet PC
User Manual