

PC-HELPER

PCI Bus Expansion Chassis

Short x 4Slots

ECH-PCI-BE2-H4A

Short x 7Slots

ECH-PCI-BE2-H7A

Long x 7Slots

ECH-PCI-BE2-F7A

User's Manual

CONTEC CO.,LTD.

Check Your Package

 
Thank you for purchasing the CONTEC product.

The product consists of the items listed below.


Check, with the following list, that your package is complete. If you discover damaged or missing items, contact your retailer

Product Configuration List

- Expansion chassis(One of the following) ...1
[ECH-PCI-BE2-H4A, ECH-PCI-BE2-H7A, ECH-PCI-BE2-F7A]
- Power cable ...1
- Slot cover(One of the following)
ECH-PCI-BE2-H4A ...4,
ECH-PCI-BE2-H7A/F7A ...7
- Board fixed screw(One of the following)
ECH-PCI-BE2-H4A ...4,
ECH-PCI-BE2-H7A/F7A ...7
- Bracket fixed screw for rack-mounted
ECH-PCI-BE2-H4A/H7A ...4,
ECH-PCI-BE2-F7A ...6
- Bracket for rack-mounted ...2
- Rubber feet ...4
- First step guide ...1
- Product Registration Card &
Warranty Certificate...1
- Serial No. Label...1



 Expansion chassis(one of the following)
[ECH-PCI-BE2-H4A,
ECH-PCI-BE2-H7A/F7A,ECH-PCI-BE2-H13A/F13A]



Power cable



Slot cover(one of the following)
ECH-PCI-BE2-H4A x 4,
ECH-PCI-BE2-H7A/F7A x 7,
ECH-PCI-BE2-H13A/F13A x 13



Board fixed screw(one of the following)
ECH-PCI-BE2-H4A x 4,
ECH-PCI-BE2-H7A/F7A x 7,
ECH-PCI-BE2-H13A/F13A x 13



Rubber feet x 4



Bracket fixed screw for rack-mounted
(one of the following)
ECH-PCI-BE2-H4A x 4,
ECH-PCI-BE2-H7A/F7A/H13A/F13A x 6



Bracket for rack-mounted x 2



First step guide



Product Registration Card &
Warranty Certificate



Serial No. Label

Copyright

Copyright 2014 CONTEC CO., LTD. ALL RIGHTS RESERVED.

No part of this document may be copied or reproduced in any form by any means without prior written consent of CONTEC CO., LTD.

CONTEC CO., LTD. makes no commitment to update or keep current the information contained in this document. The information in this document is subject to change without notice.

All relevant issues have been considered in the preparation of this document. Should you notice an omission or any questionable item in this document, please feel free to notify CONTEC CO., LTD.

Regardless of the foregoing statement, CONTEC assumes no responsibility for any errors that may appear in this document or for results obtained by the user as a result of using this product.

Trademarks

MS, Microsoft, Windows and Windows NT are trademarks of Microsoft Corporation. Other brand and product names are trademarks of their respective holder.

Table of Contents

Check Your Package	i
Copyright	ii
Trademarks	ii
Table of Contents	iii

1. BEFORE USING THE PRODUCT	1
------------------------------------	----------

About the Chassis	1
Features.....	1
Expansion adapter (Option).....	1
Combinations of Expansion Adapters and Expansion Chassis	2
Restrictions.....	3
Customer Support	4
Web Site	4
Limited One-Year Warranty.....	4
How to Obtain Service	4
Liability.....	4
Safety Precautions.....	5
Safety Information.....	5
Handling Precautions	5
Environment	7
Inspection	7
Storage	7
Disposal	7

2. SETUP	9
-----------------	----------

What is Setup?.....	9
Step 1 Preparation	9
Items to be prepared.....	10
Names of major parts	11
Step 2 Installing the Expansion Board	13
Step 3 Connecting the Connection Cable.....	14
Connecting the connection cable to the Expansion Adapter	14
Connecting the connection cable to this product	14
Plugging the Power Cable	14
Attaching the FG	15
Step 4 Installing the expansion adapter board.....	16
Step 5 Setup and Check.....	16
Starting the system	16
Setting up the hardware in Windows	17

Checking the hardware in Windows	17
Attaching Rack Mount Brackets	18
Setup Troubleshooting	19
Symptoms and Actions	19
If your problem cannot be resolved.....	19

3.	ABOUT HARDWARE	21
-----------	-----------------------	-----------

Hardware specification.....	21
Physical Dimensions	23
Difference from ECH(PCI)BE-H4A/H7A/F7A	26

1. Before Using the Product

This chapter provides information you should know before using the product.

About the Chassis

This product is an expansion chassis that adds PCI bus expansion slots to a PC by being connected to the PC via an optional expansion adapter [EAD-BE-LPE, EAD(PCI)BE, EAD(LPCI)BE or EAD(CB)BE].

Features

- PCI (5V/32bit 33MHz) bus slots can be added to your PC.

PCI (5V/32bit 33MHz) bus slots can be added to your PC.

ECH-PCI-BE2-H4A : PCI bus slots (x 4) can be added.

ECH-PCI-BE2-H7A/F7A : PCI bus slots (x 7) can be added.

This expansion chassis is connected to a PC using an optional expansion adapter.

- PCI bus boards can be connected..

You can connect short-type [176.5 (L) x 107 (H) mm] PCI bus boards.

You can connect long-type [313.8(L)×107(H) mm] PCI bus boards.

ECH-PCI-BE2-H4A : Accepting short-size PCI bus boards (x 4).

ECH-PCI-BE2-H7A : Accepting short-size PCI bus boards (x7).

ECH-PCI-BE2-F7A : Accepting long-size PCI bus boards (x 7).

- ON/OFF control of the chassis can be linked to that of your PC.

You can link the ON/OFF control of the expansion chassis to that of your PC.

- Steel chassis with cooling fan

Steel chassis with cooling fan suitable for use in fields

- Rack-mountable

Rack-mountable with supplied brackets

Expansion adapter (Option)

PCI Bus Expansion Adapter for CardBus PC-Slot : EAD(CB)BE

PCI Bus Expansion Adapter for PCI Bus PC-Slot : EAD(PCI)BE

PCI Bus Expansion Adapter for Low Profile PCI PC-Slot : EAD(LPCI)BE

PCI Bus Expansion Adapter for Low Profile PCI Express PC-Slot : EAD-BE-LPE

Check the CONTEC's Web site for more information on these expansion adapters.

Combinations of Expansion Adapters and Expansion Chassis

The expansion adapters and expansion chassis can be used in the following combinations:

Expansion adapter	Expansion chassis ECH(PC)BE						Expansion chassis ECH-PCI-BE2		
	-H2B	-F2B	-H4B	-F4B	-H13A	-F13A	-H4A	-H7A	-F7A
EAD(CB)BE	O	O	O	O	×	×	O	×	×
EAD(PC)BE	O	O	O	O	O	O	O	O	O
EAD(LPC)BE	O	O	O	O	O	O	O	O	O
EAD-BE-LPE	O	O	O	O	O	O	O	O	O

Expansion chassis



ECH(PC)BE-H2B ECH(PC)BE-F2B ECH(PC)BE-H4B ECH(PC)BE-F4B



ECH(PC)BE-H13A ECH(PC)BE-F13A



ECH-PCI-BE2-H4A ECH-PCI-BE2-H7A ECH-PCI-BE2-F7A

Expansion adapter



EAD(CB)BE EAD(PC)BE EAD(LPC)BE EAD-BE-LPE

Restrictions

This product is used in a combination with the optional expansion adapter. The following restrictions apply to the situation when the expansion adapter is connected to the expansion chassis.

This product has restrictions on the types of PCs and boards that can be used.

Be sure to check the following restrictions before use.

< Restrictions of PC >

This product use the PCI-to-PCI Bridge to extend the bus.

The PCI boards plugged in PCI slots in this product is recognized if the PCI-to-PCI bridge is recognized by the BIOS in the PC used. Ask the PC vendor for whether the BIOS recognizes the PCI-to-PCI bridge.

< Restrictions on transfer rate >

When the expansion chassis accommodates a board that performs high-speed transfer such as bus mastering, the overall transfer rate may be lower than that of PCI bus slots in the main unit of a desktop PC.

This is caused by bus extension by the PCI-to-PCI Bridge.

The transfer rate may vary with the system configuration and the type of the PC.

< Restrictions of PCI board >

None of the following boards can be plugged into any expansion slot in this product.

- Video display board (VGA board)
- Board to connect a PCI bus expansion chassis
- Board explicitly stated not to be used with the PCI-to-PCI Bridge

Some boards, even PCI-compliant ones, may not work depending on their specifications

Customer Support

CONTEC provides the following support services for you to use CONTEC products more efficiently and comfortably.

Web Site

Japanese <http://www.contec.co.jp/>
English <http://www.contec.com/>
Chinese <http://www.contec.com.cn/>

Latest product information

CONTEC provides up-to-date information on products.

CONTEC also provides product manuals and various technical documents in the PDF.

Free download

You can download updated driver software and differential files as well as sample programs available in several languages.

Note! For product information

Contact your retailer if you have any technical question about a CONTEC product or need its price, delivery time, or estimate information.

Limited One-Year Warranty

CONTEC products are warranted by CONTEC CO., LTD. to be free from defects in material and workmanship for up to one year from the date of purchase by the original purchaser.

Repair will be free of charge only when this device is returned freight prepaid with a copy of the original invoice and a Return Merchandise Authorization to the distributor or the CONTEC group office, from which it was purchased.

This warranty is not applicable for scratches or normal wear, but only for the electronic circuitry and original products. The warranty is not applicable if the device has been tampered with or damaged through abuse, mistreatment, neglect, or unreasonable use, or if the original invoice is not included, in which case repairs will be considered beyond the warranty policy.

How to Obtain Service

For replacement or repair, return the device freight prepaid, with a copy of the original invoice. Please obtain a Return Merchandise Authorization number (RMA) from the CONTEC group office where you purchased before returning any product.

* No product will be accepted by CONTEC group without the RMA number.

Liability

The obligation of the warrantor is solely to repair or replace the product. In no event will the warrantor be liable for any incidental or consequential damages due to such defect or consequences that arise from Safety Precautions.




Understand the following definitions and precautions to use the product safely.

Safety Precautions

Understand the following definitions and precautions to use the product safely.

Safety Information

This document provides safety information using the following symbols to prevent accidents resulting in injury or death and the destruction of equipment and resources. Understand the meanings of these labels to operate the equipment safely.

 DANGER	DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or in property damage.

Handling Precautions

DANGER

Do not use the product where it is exposed to flammable or corrosive gas. Doing so may result in an explosion, fire, electric shock, or failure.

CAUTION

- If you use this product, FG terminal of this product ground to the earth.
- Do not plug or unplug any board into or from an expansion slot with the PC or ECH-PCI-BE2-H4A/H7A/F7A powered.
Doing so may result in a malfunction, overheating, or fault.
Be sure to turn off the PC and ECH-PCI-BE2-H4A/H7A/F7A and unplug their power cables before plugging or unplugging any expansion board.
- Do not plug or unplug the cable interconnecting the PC and the expansion chassis with the PC or ECH-PCI-BE2-H4A/H7A/F7A powered.
- Do not turn on or off the power switch of the ECH-PCI-BE2-H4A/H7A/F7A with the PC powered.
Doing so may result in a malfunction.
- The total current consumption by the boards installed in the expansion slots in the ECH-PCI-BE2-H4A/H7A/F7A must not exceed the maximum power capacity of its power supply.
Failure to supply ample power to expansion boards could result in a malfunction, overheating, or fault.
- The external supply voltage or drive current must not exceed the rating.
- Do not connect any signal other than specified to the on-board connector.
Doing so may result in a malfunction, overheating, fault, or damage.
- If a specific expansion slot is recommended for a board, plug the board into that slot. Failure to do so may result in a malfunction, overheating, fault, or damage.
- When plugging or unplugging the power cable, be sure to hold it by the plug itself.

1. Before Using the Product

- Since the I/O expansion chassis is a precision device, do not store or use it where it is subject to shock or vibration. Also avoid any place where the chassis is exposed to direct sunlight, extremely high humidity, or much dust.
 - Do not use or store the chassis where it is exposed to any chemical either directly or as vapor in the air.
 - The chassis has ventilating slits to prevent it from overheating. Avoid using the chassis with the ventilating slits blocked or in an ill-ventilated place.
 - Do not use the chassis near equipment generating a strong magnetic field or noise. Doing so may result in a malfunction, overheating, fault, or damage in the chassis, your PC, or both.
 - It is very dangerous to use the chassis with water, liquid, or metal (conductive) chips left inside. Be careful not to let such foreign matters in the chassis.
 - Do not use a UPS (uninterruptible power supply) with square-wave output, as connecting it may damage this product.
 - The specifications of this product are subject to change without notice for enhancement or quality improvement.
Even when using the product continuously, be sure to read the manual and understand the contents.
 - Do not modify this product.
CONTEC will bear no responsibility for any problems, etc., resulting from modifying the product.
 - Regardless of the foregoing statements, CONTEC is not liable for any damages whatsoever (including damages for loss of business profits) arising out of the use of or inability to use this CONTEC product or the information contained herein.
-

Environment

Use this product in the following environment. If used in an unauthorized environment, the chassis may overheat, malfunction, or cause a failure.

Operating temperature

0 - 50°C

Humidity

20 - 80%RH (No condensation)

Corrosive gases

None


Floating dust particles

Not to be excessive

Inspection

Inspect the product periodically as follows to use it safely.

- Ventilating slits must neither be blocked nor have dust or foreign matters adhering.

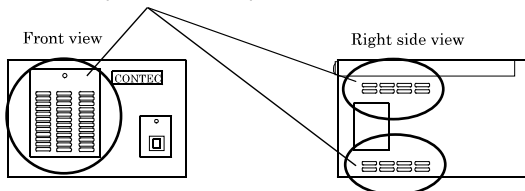

The illustration above is of the ECH-PCI-BE2-H4A but the check points are the same as with the ECH-PCI-BE2-H7A/F7A.

Storage

When storing this product, keep it in its original packing form.

- (1) Wrap it in the packing material, then put it in the box.
- (2) Store the package at room temperature at a place free from direct sunlight, moisture, shock, vibration, magnetism, and static electricity.

Disposal

When disposing of the product, follow the disposal procedures stipulated under the relevant laws and municipal ordinances.

2. Setup

This chapter explains how to set up the chassis.

Refer to the user's manual for the expansion adapter EAD(PCI)BE, EAD(LPCI)BE or EAD(CB)BE as required.

What is Setup?

Setup means a series of steps to take before the product can be used.

Taking the following steps in this chapter sets up the ECH-PCI-BE2-H4A/H7A/F7A.

Step 1 Preparation

Step 2 Installing the Expansion Board

Step 3 Connecting the Connection Cable

Step 4 Installing the expansion adapter board

Step 5 Setup and Check

If setup fails to be performed correctly, refer to "Setup Troubleshooting".

Step 1 Preparation

Configuration image




The photo is of the EAD(PCI)BE + ECH-PCI-BE2-H4A.

Figure 2.1. Configuration image

Items to be prepared

- PC
- Expansion adapter [EAD(CB)BE, EAD(PCI)BE, EAD(LPCI)BE, EAD-BE-LPE]
Expansion adapter board ... (a),
Connection Cable... (b)
- Expansion chassis
Chassis [ECH-PCI-BE2-H4A/H7A/F7A] ... (c), Power cable
- PCI board to be installed

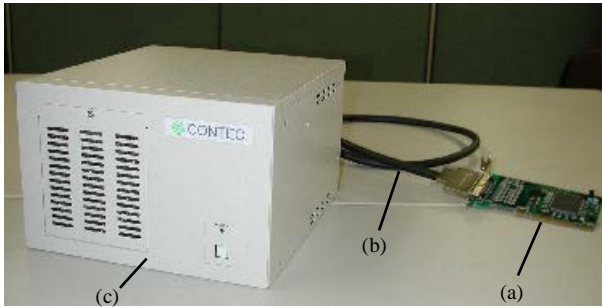


The photo is of the EAD(LPCD)BE + ECH-PCI-BE2-H4A but the check points are the same as with the ECH-PCI-BE2-H7A/F7A.

Names of major parts

ECH-PCI-BE2-H4A

Front view

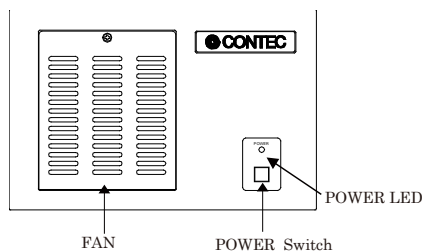

Back view


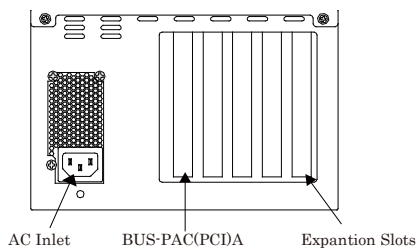


Figure 2.2. Names of major parts <ECH-PCI-BE2-H4A >

ECH-PCI-BE2-H7A/F7A

Front view

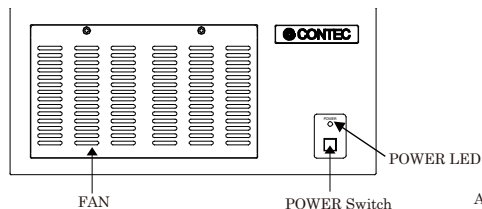

Back view

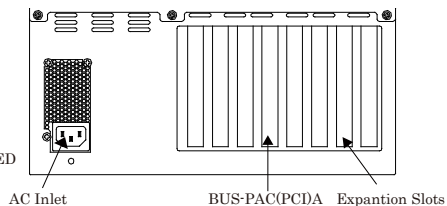


Figure 2.3. Names of major parts <ECH-PCI-BE2-H7A/F7A>

⚠ CAUTION

Do not remove BUS-PAC(PCI)A or change its position.
It may result in malfunction, heat generation, failure, or breakage.

BUS-PAC(PCI)A

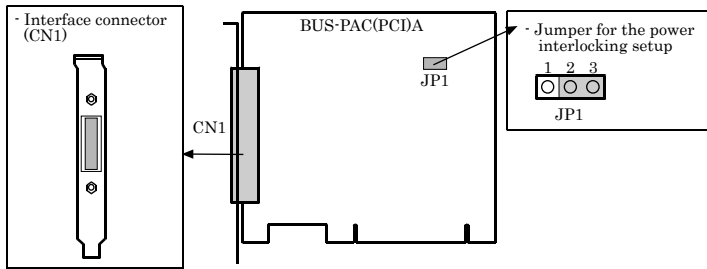


Figure 2.4. Names of major parts < BUS-PAC(PCI)A >

Power interlocking of the expansion chassis

Power supply controllable in response to the turning on/off of the PC's power supply. In the case of no power interlocking, move the JP1's jumper plug from the 2-3 position to the 1-2 position.

Power interlocking	No power interlocking
<p>JP1 (Factory setting)</p>	<p>JP1</p>

Figure 2.5. Setup for the expansion chassis power interlocking

Step 2 Installing the Expansion Board

⚠ CAUTION

Before installing an expansion board on this product, be sure to turn off your PC and this product and unplug the power cables from wall outlets.

Follow the procedure below to install the expansion board on this product.

- (1) Unplug the power cable and connection cable from this product.
- (2) Remove screws (ECH-PCI-BE2-H4A:two, ECH-PCI-BE2-F7A/F13A:three) from the top of the rear panel, then remove the chassis cover by sliding it to the rear side (in the order of arrows 1 and 2).

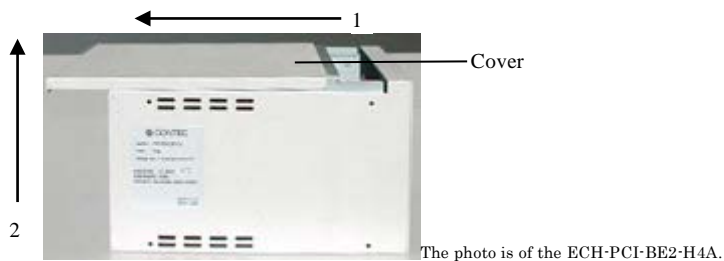


Figure 2.6. Installing the Expansion Board

- (3) Plug the expansion board into a PCI slot and fasten the bracket with the attached screw. Apply slot covers to unused slots and fasten them with screws.
- (4) Put the chassis cover back in place and fasten it with the removed screws.

Step 3 Connecting the Connection Cable

Connecting the connection cable to the Expansion Adapter

Refer to the user's manual for the expansion adapter EAD-BE-LPE, EAD(PCI)BE, EAD(LPCI)BE, or EAD(CB)BE to connect its connection cable to the expansion adapter.

Connecting the connection cable to this product

Connect the 96-pin connector at the other end of the connection cable to the interface connector of this product.

See “Names of Major Parts” in this chapter to confirm the location of the interface connector.

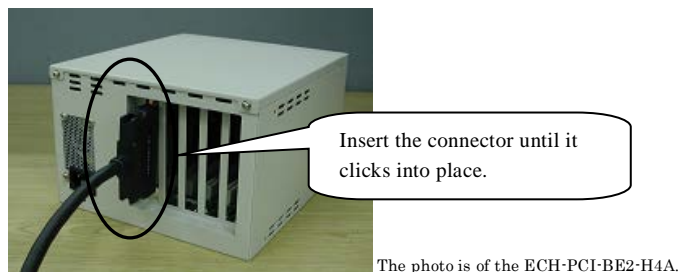


Figure 2.7. Connecting the connection cable to the ECH-PCI-BE2-H4A

CAUTION

Do not plug the connection cable into any other connector as doing so can cause a fault.

Plugging the Power Cable


(1) Plug the power cable into this product.



Figure 2.8. Plugging the power cable into the ECH-PCI-BE2-H4A

(2) Plug the power cable into a wall outlet.

Attaching the FG

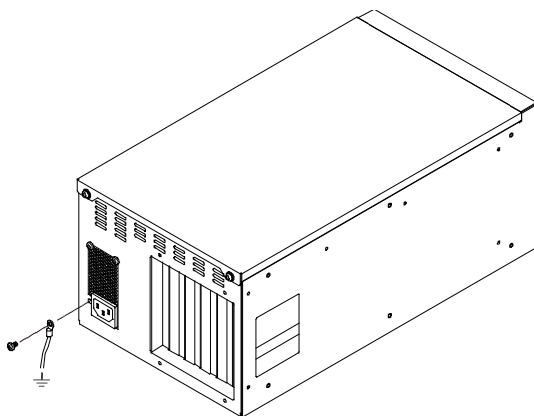

The photo is of the ECH-PE-CE-F4A but the check points are the same as with the ECH-PCI-BE2-H4A/H7A/F7A.

Figure 2.9. Attaching the FG



CAUTION

If you use this product, FG terminal of this product ground to the earth.

Step 4 Installing the expansion adapter board

Refer to the user's manual for the expansion adapter to install the expansion bus adapter on the PC.

Step 5 Setup and Check

Starting the system

This product is turned on and off in sync with the PC's power supply. When the PC detects the expansion adapter, this product is turned on.

Turning on the system

- (1) Plug the power plug of this product into a wall outlet.
You do not need to press the POWER switch on the front panel (*1).
- (2) The power supply of a PC is turned ON.
- (3) As soon as the expansion adapter is recognized by the PC, this product is turned on automatically.
- (4) Make sure that the POWER LED on this product is on.

Turning off the system

- (1) The power supply of a PC is turned OFF.
- (2) This product is turned off in synchronization with the PC's power supply.

*1 Pressing the POWER switch on the front panel of this product turns on this product or puts it to sleep. Use the switch, for example, to turn on only this product.



CAUTION

- Do not turn on or off this product with the PC main unit powered.
Doing so cancels the detection of the bus adapter. When turning the ECH-PCI-BE2-H4A/H7A/F7A on back, restart the PC main unit.
 - If you turn on the PC after turning it off, keep a time interval of at least 10 seconds in between. If the power OFF-to-ON interval is too short, the expansion chassis may fail to be turned on.
-

Setting up the hardware in Windows

At startup of Windows, the PCI-to-PCI Bridge used by this product is detected in sequence and identified automatically by the Windows standard driver.

After that, the PCI boards installed on this product is detected in sequence.

For setting up and checking the boards used on the expansion chassis, refer to their respective manuals.

Checking the hardware in Windows

You can use Device Manager to check whether this product has been identified in Windows. Device Manager shows “PCI standard PCI-to-PCI bridge” under “System devices”.

You can check the ECH-PCI-BE2-H4A/H7A/F7A currently being used by the number of entries of “PCI standard PCI-to-PCI bridge”.

Two entries: ECH-PCI-BE2-H4A

Three entries: ECH-PCI-BE2-H7A/F7A


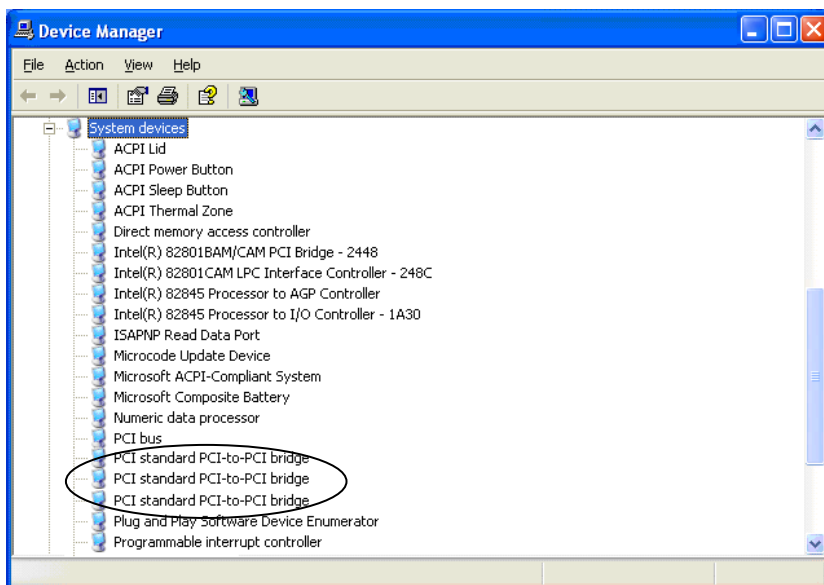


Figure 2.10. Sample screen shot of Device Manager(ECH-PCI-BE2-H7A)

Attaching Rack Mount Brackets

This product can be rack mounted using the attached brackets. The brackets can be used in two ways as illustrated below. Rack-mount this product using the brackets by the appropriate method suitable for the operating environment.

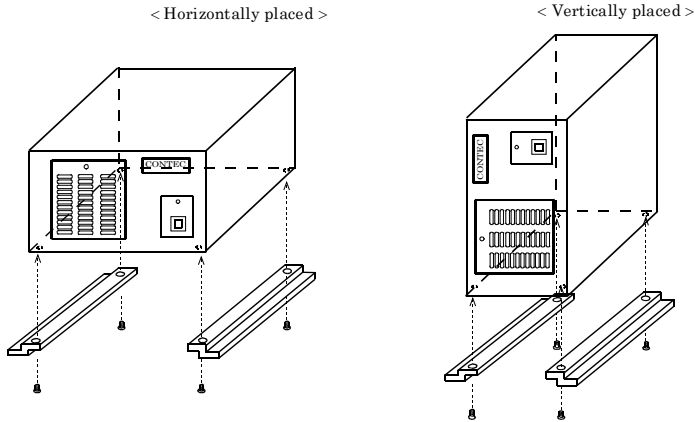

The photo is of the ECH-PCI-BE2-H4A but the check points are the same as with the ECH-PCI-BE2-H7A/F7A.

Figure 2.11. Attaching the Rack Mount Brackets

Setup Troubleshooting

Please confirm followings when this product does not work.

Symptoms and Actions

The chassis won't be turned on.

- a. Make sure that the power cable has been connected correctly.
- b. Make sure that the power supplies of the PC and this product is on.
- c. Make sure that you have followed the procedure in Chapter 2.
- d. When there is no problem in all of a ~ c, check whether it is turned on with no board installed. If the chassis is turned on with no board installed, check the total current consumption by the installed boards. The total current consumption must not exceed the power capacity of this product.

No PCI board on this product is detected.

- e. Make sure that the expansion adapter board has been installed correctly.
- f. Make sure that the JP1 of expansion adapter board has been installed correctly.
- g. Make sure that the connection cable has been installed correctly. When connecting the connection cable to the main chassis, insert the connector until it clicks into place.
- h. Make sure that the POWER LED on this product is turned on.
- i. When there is no problem in all of e ~ h, turn ON the power supply of a PC after setting to "not link" and turning ON the power supply of this product first, refer to "Chapter2 Step1 - Power interlocking of the expansion chassis".



The photo is of the EAD(LPC)BE + ECH-PCI-BE2-H4A but the check points are the same as with the ECH-PCI-BE2-H7A/F7A.

If your problem cannot be resolved

Contact your retailer.

3. About Hardware

Hardware specification


Table 3.1. Specification < ECH-PCI-BE2-H4A/F7A/F7A >

Item	ECH-PCI-BE2-H4A	ECH-PCI-BE2-H7A	ECH-PCI-BE2-F7A
Compatible bus	PCI Local Bus Specification Rev2.3 (+5V type)		
Address space	32-bit memory address, I/O address		
Interrupt level	INTA - INTD		
Bus operating clock	33MHz (Max.)		
Number of user-available slots	4 slots (short size)	7 slots (short size)	7 slots (long size)
Acceptable board sizes (mm)	176.5(L) x 107(H)	176.5(L) x 107(H)	313.8(L) x 107(H)
Power supply			
Expansion slot supplied power (The output current must not exceed the value on the right.)	+5VDC 11.3A (Max.) +3.3VDC 6A (Max.) +12VDC 3A (Max.) -12VDC 0.5A (Max.)		
Maximum total power capacity	130W		
AC input line voltage *1	100-240VAC		
AC line frequency	50/60Hz		
AC power input current	3A(100VAC)/1.5A(240VAC)		
Physical dimensions (mm)	210.0(W) x 138.0(H) x 235.0(L) (No fittings)	300.0(W) x 138.0(H) x 255.0(L) (No fittings)	300.0(W) x 138.0(H) x 373.2(L) (No fittings)
Weight	3.5 kg	5.0 kg	6.0 kg
AC cable	2.5m 3P		

*1: AC input line voltage range: 90 - 264VAC

Physical dimensions of acceptable board (Max.)

< ECH-PCI-BE2-H4A/H7A >

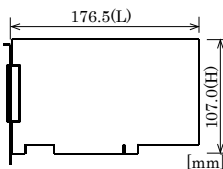

< ECH-PCI-BE2-F7A >

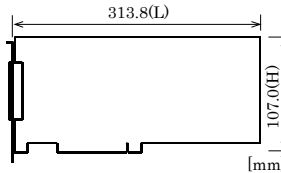


Table 3.2. Environmental specification

Item	Specification
Operating temperature	0 - 50°C
Operating humidity	20 - 80%RH (No condensation)
Storage temperature	0 - 60°C
Storage humidity	10 - 90%RH (No condensation)
Floating dust particles	Not to be excessive
Corrosive gases	None

⚠ CAUTION

The power supply and cooling fan in the ECH-PCI-BE2-H4A/H7A/F7A are consumables, requiring replacement after use for a certain period of time. Although each of the parts should be replaced after use for the following period of time in principle, the life may be shortened depending on the operating environment. Keep in mind that the lives of the parts may be extremely shortened if they are used where it is either exposed to must dirt, metal chips or particles, or dust or affected by oil or corrosive gas.

- Power supply : About 5 years
(in an office environment kept at a temperature of 25°C and a humidity of 60%)
 - Fan : About 5 years
(in an office environment kept at a temperature of 25°C and a humidity of 60%)
 - Fan Filter : About 1 year
(in an office environment kept at a temperature of 25°C and a humidity of 60%)
-

Physical Dimensions

⚠ CAUTION

- When using this chassis, keep it at least 20mm away from any object such as the wall for cooling purposes.
- Attaching rubber feet to the chassis makes it 3.6mm taller.

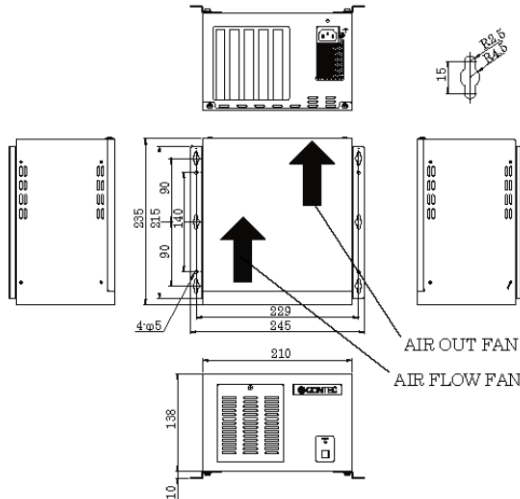


Figure 3.1. Physical Dimensions < ECH-PCI-BE2-H4A, Horizontally placed >

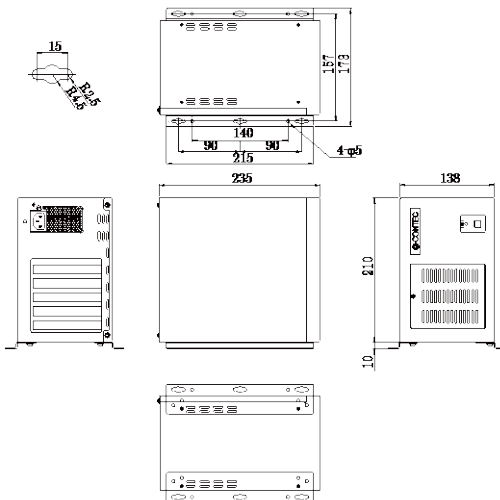


Figure 3.2. Physical Dimensions < ECH-PCI-BE2-H4A, Vertically placed >

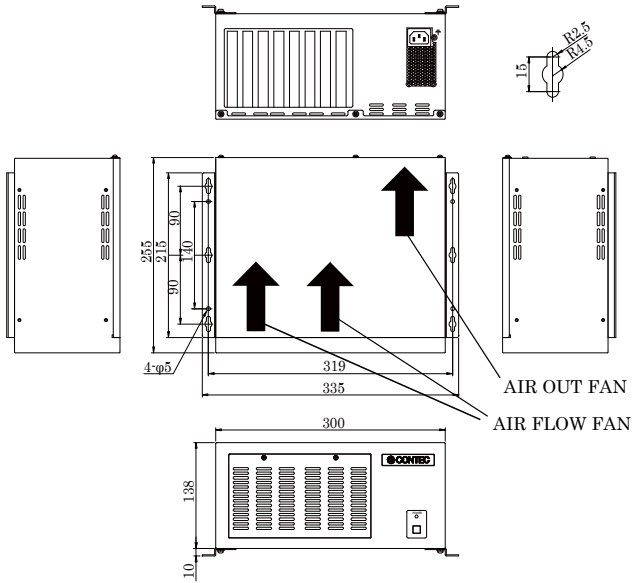


Figure 3.3. Physical Dimensions < ECH-PCI-BE2-H7A, Horizontally placed >

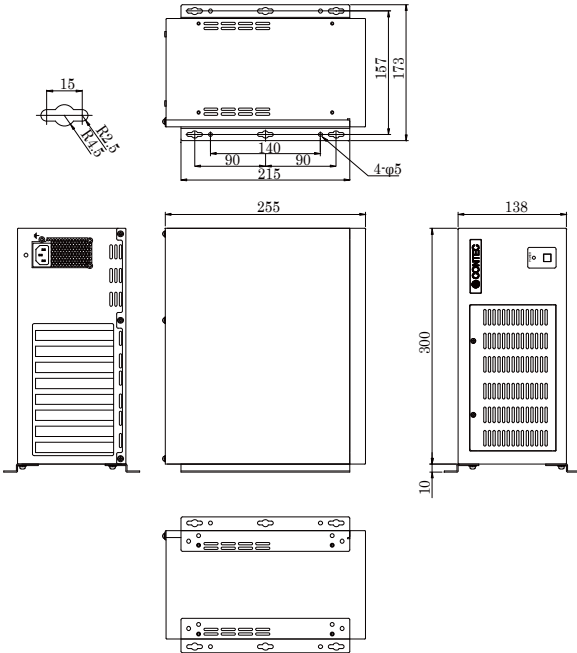


Figure 3.4. Physical Dimensions < ECH-PCI-BE2-H7A, Vertically placed >

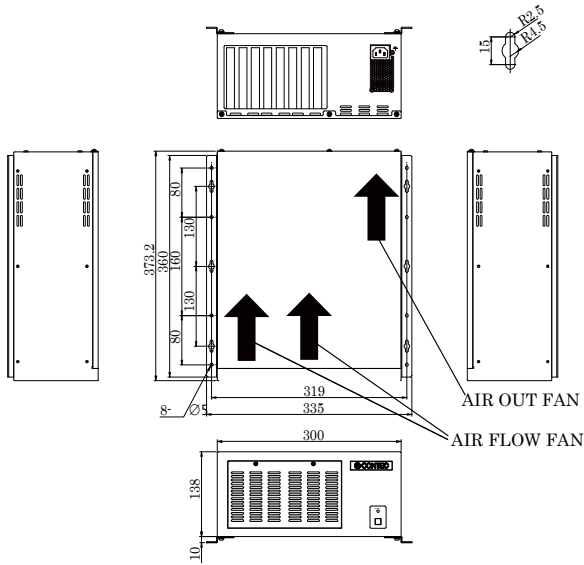


Figure 3.5. Physical Dimensions < ECH-PCI-BE2-F7A, Horizontally placed >

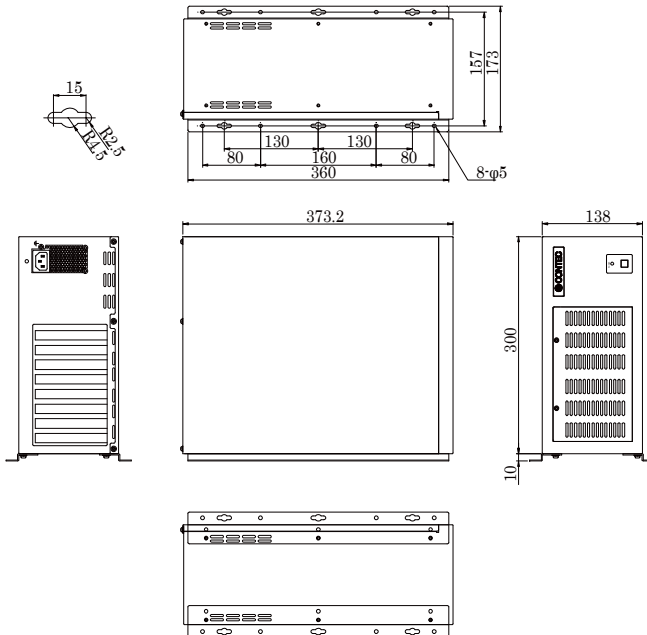
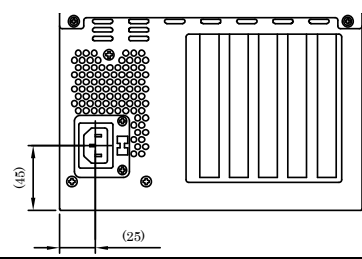
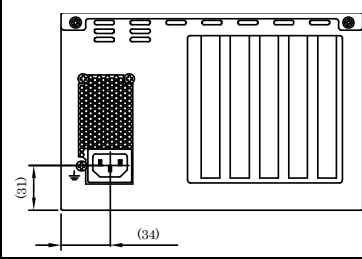


Figure 3.6. Physical Dimensions < ECH-PCI-BE2-F7A, Vertically placed >

Difference from ECH(PCI)BE-H4A/H7A/F7A

This product is a successor of the previous model ECH(PCI)BE-H4A/H7A/F7A.

So you can use the same operating procedures as ECH(PCI)BE-H4A/H7A/F7A.

	ECH(PCD)BE-H4A, ECH(PCD)BE-H7A, ECH(PCD)BE-F7A	ECH-PCI-BE2-H4A, ECH-PCI-BE2-H7A, ECH-PCI-BE2-F7A
Expansion slot supplied power	-12VDC 0.7A (Max.)	-12VDC 0.5A (Max.)
AC inlet location		

ECH-PCI-BE2-H4A
ECH-PCI-BE2-H7A
ECH-PCI-BE2-F7A
User's Manual

CONTEC CO., LTD.

December 2014 Edition

3-9-31, Himesato, Nishiyodogawa-ku, Osaka 555-0025, Japan

Japanese <http://www.contec.co.jp/>

English <http://www.contec.com/>

Chinese <http://www.contec.com.cn/>

No part of this document may be copied or reproduced in any form by any means without prior written consent of CONTEC CO., LTD. [12222014]

[12222014]

Management No. NA03721

Parts No. LYRZ431