 


# 3 IN 1 ROWER / RECUMBENT BIKE & STRENGTH TRAINER

## OWNER'S MANUAL

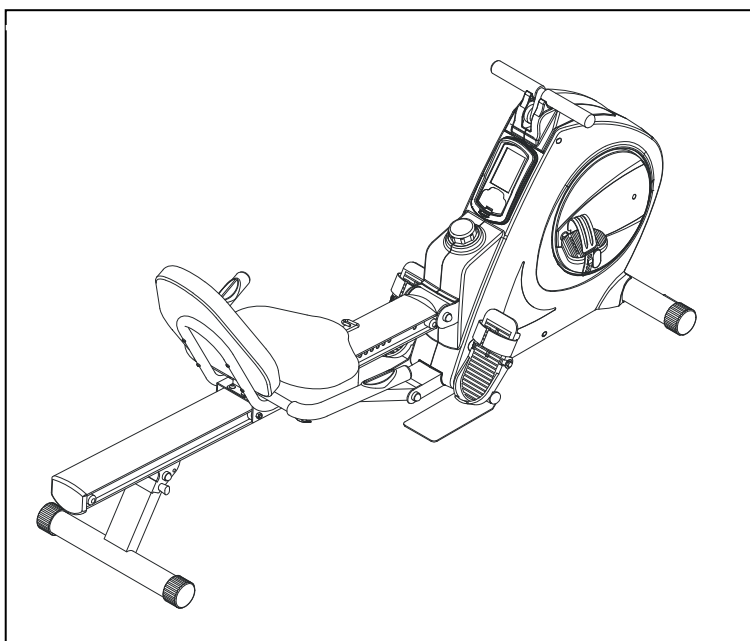

### WARNING



Exercise can present a health risk. Consult a physician before beginning any exercise program with this equipment. If you feel faint or dizzy, immediately discontinue use of this equipment. Serious bodily injury can occur if this equipment is not assembled and used correctly. Serious bodily injury can also occur if all instructions are not followed. Keep others and pets away from equipment when in use. Always make sure all bolts and nuts are tightened prior to each use. Follow all safety instructions in this manual.

**MADE IN TAIWAN**

### **CAUTION:**

**Max user weight on this product should not exceed 125kgs.**

Product May Vary Slightly From Pictured.

---

## SAFETY INSTRUCTIONS

**WARNING:** To reduce the risk of serious injury, read the following Safety Instructions before using the 3 IN 1 Rower / Recumbent Bike & Strength Trainer.

1. Read all warnings posted on this product.
2. Read this Owner's Manual and follow it carefully before using this machine. Make sure that it is properly assembled and tightened before use.

Keep children away from the 3 IN 1 Rower / Recumbent Bike & Strength Trainer. Do not allow children to use or play on the 3 IN 1 Rower / Recumbent Bike & Strength Trainer. Keep children and pets away from the 3 IN 1 Rower / Recumbent Bike & Strength Trainer when it is in use.

4. Set up and operate the 3 IN 1 Rower / Recumbent Bike & Strength Trainer on a solid level surface. Do not position on loose rugs or uneven surfaces.
5. Inspect the 3 IN 1 Rower / Recumbent Bike & Strength Trainer for worn or loose components prior to use.
6. Tighten / replace any loose or worn components prior to using this machine.

 
Make sure the **Rear Support (62)** is locked properly with the **Pull Pin (63)** before using 3 IN 1 Rower / Recumbent Bike & Strength Trainer.

8. Make sure the **Rail (52)** is locked properly by the **Release Knob (59)** located on the **Support Tube(56)** when in storage.
9. Keep fingers clear of all pinch points when folding and unfolding the 3 IN 1 Rower / Recumbent Bike & Strength Trainer.
10. Lock seat in position with at least **one adjustment hole** visible in front of the seat before lifting rail to storage position. This will prevent the seat from damaging the covers.
11. Consult a physician prior to commencing an exercise program. If, at any time during exercise, you feel faint, dizzy, or experience pain, stop and consult your physician.
12. Follow your physician's recommendations in developing your own personal fitness program.
13. Always choose the workout which best fits your physical strength and flexibility level. Know your limits and train within them. Always use common sense when exercise.
14. Do not wear loose or dangling clothing while using this 3 IN 1 Rower / Recumbent Bike & Strength Trainer.
15. Never exercise in bare feet or socks; always wear correct footwear, such as running, walking, or cross-training shoes. Be sure that they fit well, provide foot support and feature non-skid rubber soles.
16. Be careful to maintain your balance while using, mounting, dismounting, or assembling the 3 IN 1 Rower / Recumbent Bike & Strength Trainer, loss of balance may result in a fall and serious bodily injury.
17. The 3 IN 1 Rower / Recumbent Bike & Strength Trainer should not be used by persons weighing over 125kgs.
18. The 3 IN 1 Rower / Recumbent Bike & Strength Trainer should be used by only one person at a time.
19. The 3 IN 1 Rower / Recumbent Bike & Strength Trainer is for domestic consumer use only. It is not for use in public or semipublic facilities.


**WARNING:** Before starting any exercise or conditioning program you should consult with your personal physician to see if you require a complete physical exam. This is especially important if you are over the age of 35, have never exercised before, are pregnant, or suffer from any illness. **READ AND FOLLOW THE SAFETY PRECAUTIONS. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN SERIOUS BODILY INJURY.**

# HAREWARE INDETIFICATION CHART





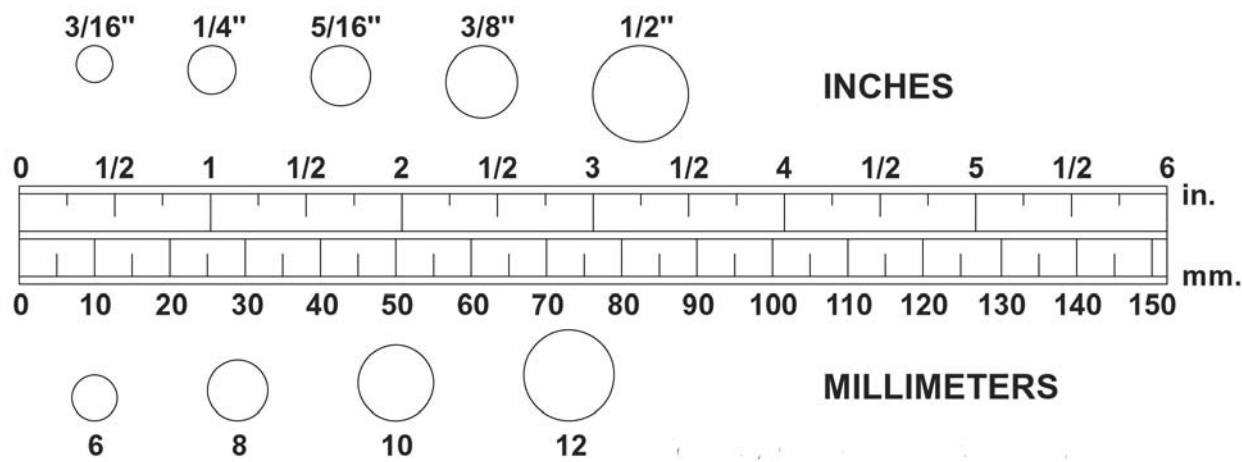


 This chart is provided to help identify the hardware used in the assembly process. Place the washers, the end of the bolts, or screws on the circles to check the correct diameter. Use the small scale to check the length of the bolts and screws.









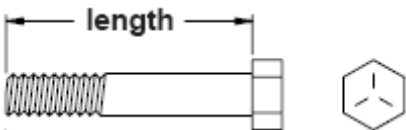


   
**NOTICE:** The length of all bolts and screws except those with flat heads is measured from below the head to the end of the bolt or screw. Flat head bolts and screws are measured from the top of the head to the end of the bolt or screw.

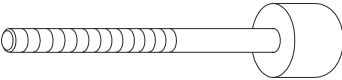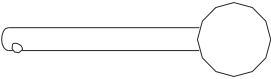


After unpacking the unit, open the hardware bag and make sure that you have all the following items. Some hardware may be already attached to the part.

|                                                                                    | Part No. and Description            | Qty |
|------------------------------------------------------------------------------------|-------------------------------------|-----|
|  | 53 Stopper                          | 1   |
|  | 54 Stopper Bolt                     | 1   |
|  | 63 Pull Pin                         | 1   |
|  | 78 Round Plug 25mm                  | 2   |
|  | 79 Nut Cap (M10)                    | 8   |
|  | 81 Bolt, Socket Head (M8x1.25x70mm) | 2   |
|  | 89 spring washer                    | 2   |
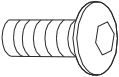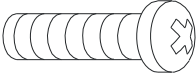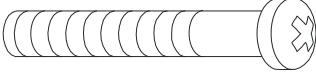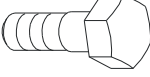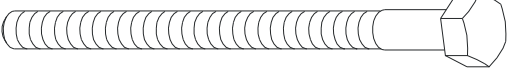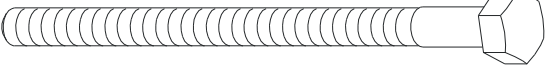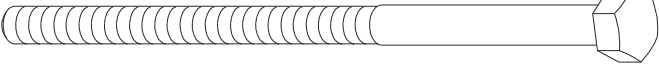
## HAREWARE INDETIFICATION CHART
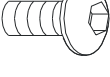
|                                                                                    | Part No. and Description              | Qty |
|------------------------------------------------------------------------------------|---------------------------------------|-----|
|    | 94 Bolt, Button Head (M8x 1.25x 15mm) | 3   |
|    | 95 Bolt, Hex Head (M6x 1 x 15mm)      | 4   |
|    | 96 Bolt, Hex Head (M6x1x30mm)         | 4   |
|    | 97 Bolt, Hex Head (M8x1.25x16mm)      | 4   |
|    | 101 Bolt, Hex Head (M10x1.5x85mm)     | 1   |
|    | 102 Bolt, Hex Head (M10x1.5x95mm)     | 1   |
|   | 103 Bolt, Hex Head (M10x1.5x125mm)    | 1   |
|  | 105 Nylock Nut (M10x1.5)              | 3   |
|  | 109 Large Washer (M8x $\varphi$ 23)   | 2   |
|  | 114 Bolt, Button Head (M8x1.25x12mm)  | 4   |

 Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials from your area and place them back into the box. Do not dispose of the packing materials until assembly is completed.

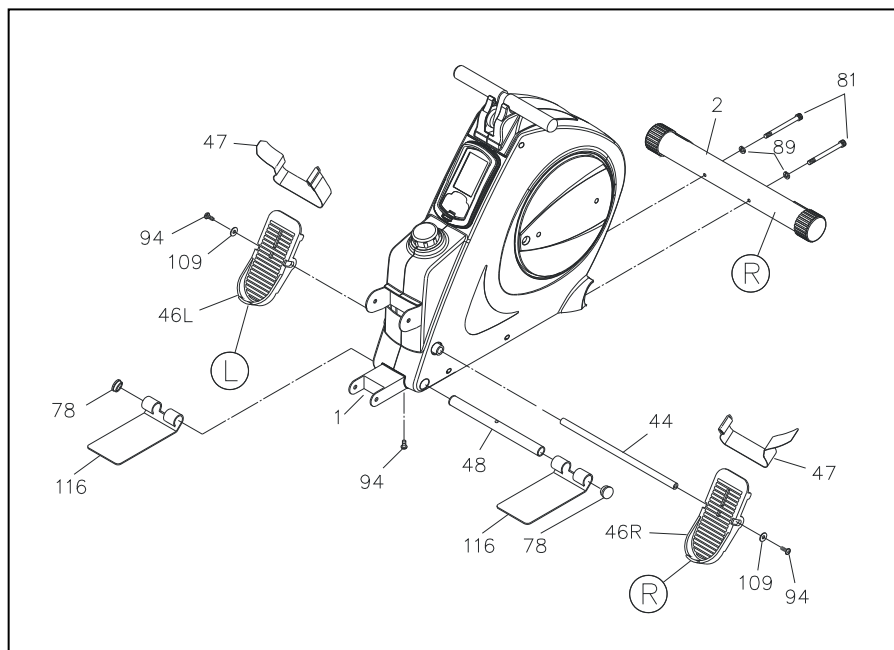


**STEP 2: Insert the STOPPER TUBE (48) through the MAIN FRAME (1) and secure with the BOLT, BUTTON HEAD (M8x15mm) (94).**

**NOTE:** The **PEDAL STRAPS (47)** are pre-assembled to the **FOOT PEDALS (46)**. The pedal and strap assembly for the left side has an “L” decal. The pedal and strap assembly for the right side has an “R” decal.


**NOTE:** You need to use two **Allen Wrenches** to tighten the **BUTTON HEAD BOLTS (M8x15mm)(94)** at both ends of the **PEDAL SHAFT(44)** at the same time.
 
## ASSEMBLY INSTRUCTIONS

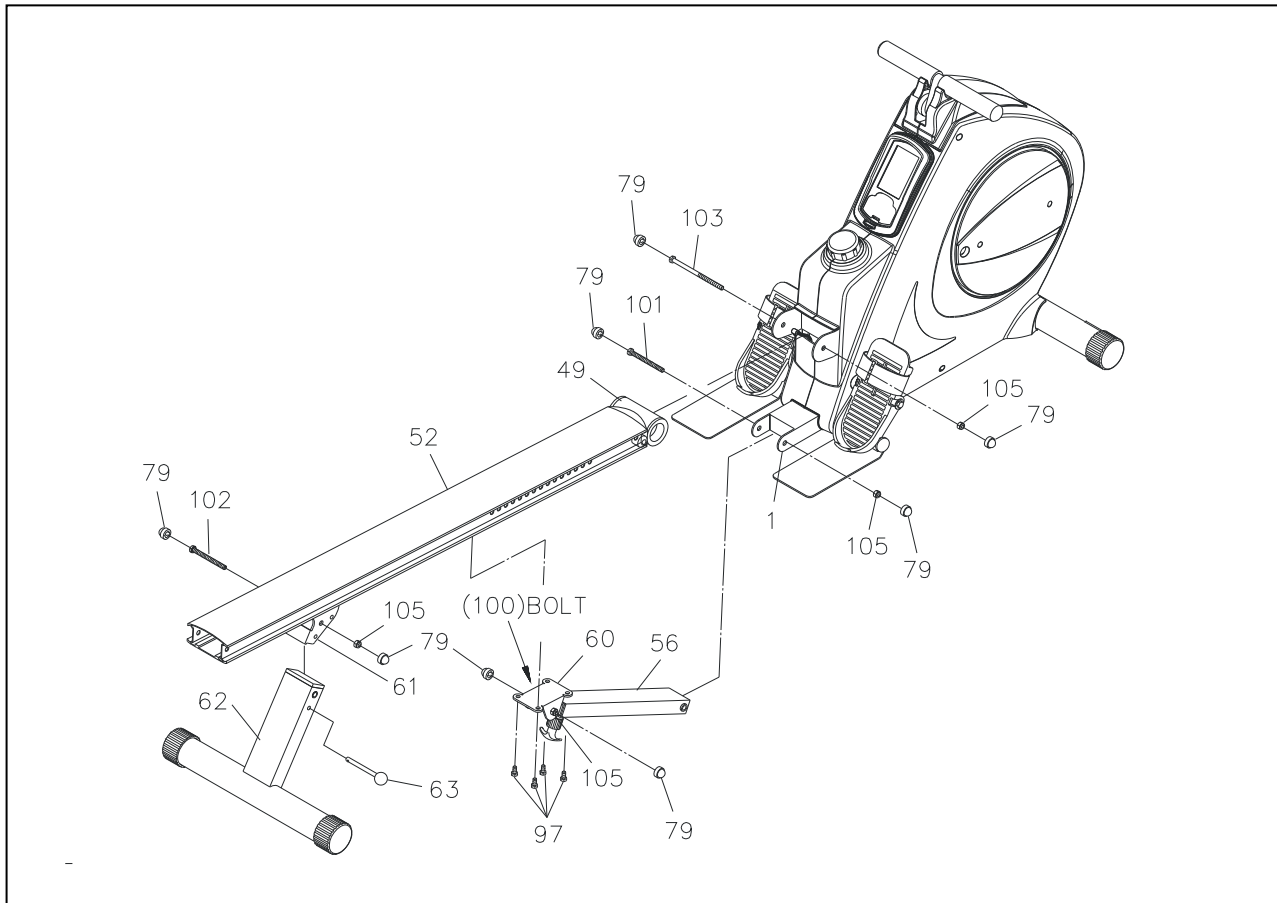

- STEP 5: Attach the **SUPPORT BRACKET (60)** onto the **RAIL (52)** with **HEX BOLTS (M8x16mm) (97)**. Press the **NUT CAPS (79)** onto the **NYLOCK NUT (M10) (105)** and the **HEX BOLT (M10x75mm) (100)**.
- STEP 6: Attach the **RAIL (52)** onto the **MAIN FRAME (1)** by sliding the **RAIL PIVOT (49)** into the bracket on the **MAIN FRAME (1)** and securing with the **HEX BOLT (M10x125mm) (103)** and the **NYLOCK NUT (M10) (105)**. Press the **NUT CAPS (79)** onto the **HEX BOLT (M10x125mm) (103)** and **NYLOCK NUT (M10) (105)**.
- STEP 7: Connect the lower end of the **SUPPORT TUBE (56)** to the **MAIN FRAME (1)** with **HEX BOLT (M10x85mm)(101)** and **NYLOCK NUT(M10)(105)**. Press the **NUT CAPS (79)** onto the **HEX BOLT (M10x85mm) (101)** and the **NYLOCK NUT (M10)(105)**.
- STEP 8: Attach the **REAR SUPPORT (62)** into the **REAR SUPPORT BRACKET (61)** located on the **RAIL(52)** with the **BOLT, HEX HEAD (M10x95mm) (102)** and the **NYLOCK NUT (M10) (105)**. Lock the **REAR SUPPORT (62)** in position with the **PULL PIN (63)**. Press the **NUT CAPS (79)** onto the **BOLT, HEX HEAD (M10x95mm) (102)** and the **NULOCK NUT (M10) (105)**.

## ASSEMBLY INSTRUCTIONS

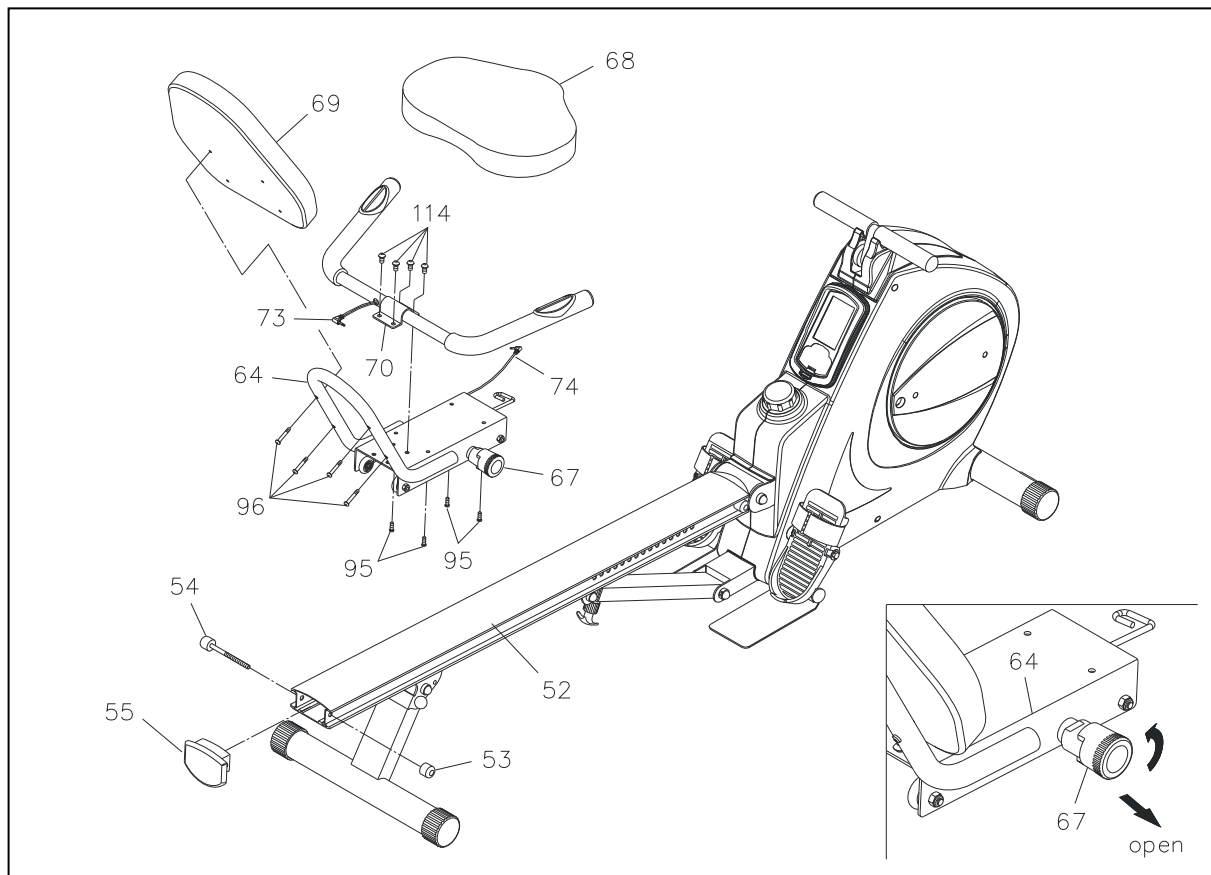 


**NOTE:** Be careful not to damage the **PULSE SENSOR WIRES (73,74)** while doing assembly STEP 8 to STEP 10.

STEP 9: Attach the **HANDRAIL (70)** onto the **SEAT CARRIAGE (64)** with **BUTTON HEAD BOLTS (M8x12mm) (114)**.

STEP 10: Attach the **SEAT (68)** onto the **SEAT CARRIAGE (64)** with the **BOLT, HEX HEAD (M6x1x15mm) (95)**. Attach the **BACK CUSHION (69)** onto the **SEAT CARRIAGE (64)** with **HEX HEAD BOLTS (M6x1x30mm) (96)**.

STEP 11: Turn the knob of the **SPRING PIN (67)** counter-clockwise and lock the knob in the release position, refer to the inset drawing. Slide the **SEAT CARRIAGE ASSEMBLY (64)** onto the **RAIL (52)**. Press the **RAIL CAP (55)** into the back end of the **RAIL (52)**. Insert the **STOPPER BOLT (54)** through the **RAIL (52)** and **RAIL CAP (55)** to bolt them together with the **STOPPER (53)**. Please verify that the other **STOPPER BOLT (54)** at the front end of **RAIL (52)** was assembled at the factory.

## ASSEMBLY INSTRUCTIONS

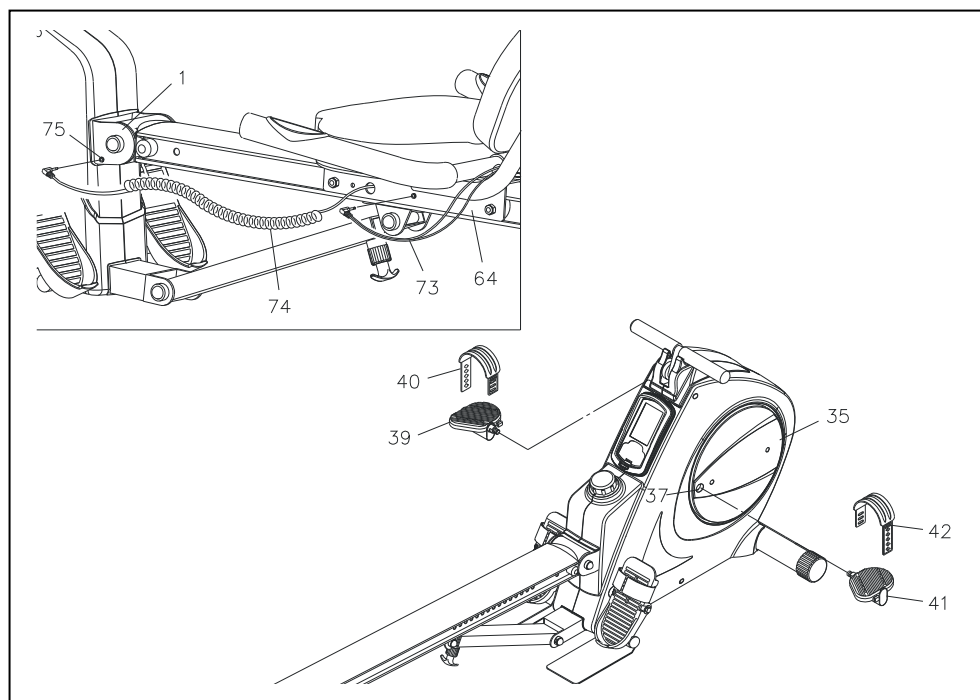 

### NOTE:

The **RIGHT PEDAL (41)** has **R** decal stamped on the end of the right pedal shaft. The **RIGHT PEDAL (41)** has right hand threads and is tightened by turning clockwise. The **LEFT PEDAL (39)** has **L** decal stamped on the end of the left pedal shaft. The **LEFT PEDAL (39)** has left hand threads and is tightened by turning counter-clockwise.

STEP 12: Thread the **RIGHT PEDAL (41)** onto the **RIGHT CRANK (37)** located at inside of the **CRANK COVER (35)** as the photo shown. Tighten the pedal securely. Select the **RIGHT PEDAL STRAP (42)** which has **R** decal marked on the bottom side of the strap. Snap the three hole end onto the inside edge of the **RIGHT PEDAL (41)**. Snap the other end onto the outside edge of the **RIGHT PEDAL (41)** with the **R** decal mark on the bottom of the **RIGHT PEDAL STRAP (42)**. Select adjustment holes which allow your foot to be easily removed from the pedals. Do the same way on the left side.

 
STEP 13: Refer to the inset drawing. Plug the **PULSE SENSOR WIRE (73)** into the preset socket of the **PULSE COIL WIRE (74)** located on the **SEAT CARRIAGE (64)**. Plug the **PULSE COIL WIRE (74)** into the preset socket of **PULSE CONNECTION WIRE (75)** located on the bracket on the **MAIN FRAME (1)**.

STEP 14:

- A bottle of silicone is packed together with user's manual.
- Gently apply the silicone to the rollers sliding path (inner upper side and inner bottom side) on the aluminum rail.

**Note: Apply liberally but be cautious not to spill the lubricant as applied surfaces will become very slippery. To clean spills use warm soapy water, repeat if necessary.**


- Then slowly slide the Seat forward and backward for a few seconds allowing the lubricant spread evenly on the rollers sliding path on aluminum rail.

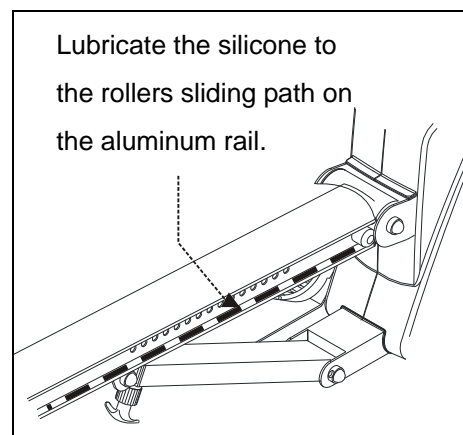



## USING THE ELCETRONIC METER- 81338
 
### USING THE ELECTRONIC METER

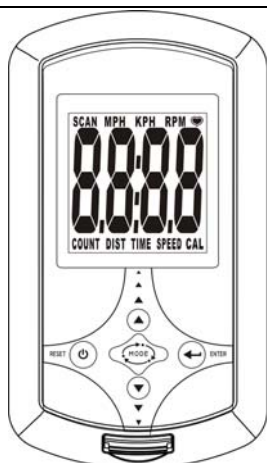

#### KEY GUIDE:

##### **MODE:**

1. Select function to be preset. DIST, TIME, SPEED, CAL, PULSE.
2. Select function to display on the screen. TIME-SPEED-CAL-PULSE-DIST.

##### **RESET:**

1. Hold two seconds to reset all of the values to zero.
2. During the setting mode, press this button to clear the setting values to zero.
3. During the stop mode, press this button to clear the values on the display to zero.

##### **ENTER:**

Press this button to enter setting mode.

##### **UP**

Increase the setting value of the following functions: TIME-CAL-PULSE-DIST.

##### **DOWN**

 
Decrease the setting value of the following functions: TIME-CAL-PULSE-DIST.

##### **HOW TO INSTALL BATTERIES:**

1. Take off the top cover of meter.
2. Place two pieces of SIZE-AA or UM-3 batteries into the battery housing.
3. Insure batteries are correctly positioned and battery springs are in proper contact with batteries.
4. If the batteries power is insufficient, please change batteries immediately.
5. If the display is illegible or only partial segments appear, please remove the batteries and wait for 15 seconds before reinstalling.
6. Removing the batteries will erase monitor's memory.

##### **NOTE:**

1. Do not mix a new battery with an old battery.
2. Use the same type of battery. Do not mix an alkaline battery with another type of battery.
3. Rechargeable batteries are not recommended.

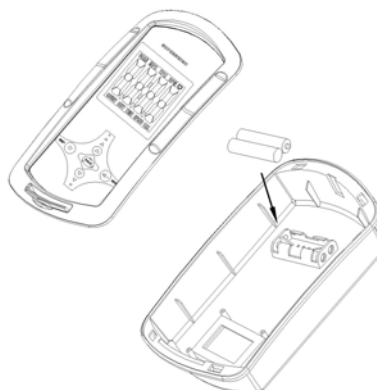

---

## USING THE ELCETRONIC METER- 81338

### FUNCTION AND OPERATION:

#### **AUTO ON/OFF**

The monitor will start up automatically if the exercise machine is in motion. If stop exercising for over 4 minutes, monitor will turn off and reset all function values to zero.

#### **KPH**

The unit for the speed is kilometer per hour. The unit for distance is kilometer.

#### **MPH**

The unit for the speed is mile per hour. The unit for distance is mile.

#### **SCAN**

Press the MODE button until SCAN display on the screen. Automatically scans TIME-SPEED-CAL-PULSE-DIST in sequence with a change every six seconds.

#### **TIME**

Press the MODE button until TIME display on the screen. Monitor will display the time values on the screen.

Count up: Counts upward to 99:59 in one second increments once the meter is turned on.

Count down: Setting the exercise time from 0:00-99:00, the monitor will count down from preset values. Once reach setting value, monitor will alarm.

#### **SPEED**

Press the **MODE** button until **SPEED** displays on the screen. Monitor will display the current speed values from 0.0 to 99.9 km or mile on the screen.

#### **CALORIE**

Press MODE button until CAL display on the screen. Monitor will display the calorie consumption values on the screen.

Count up: Without setting the calorie value, the monitor will count up the values from 0.0 to 999.9 kcal.

Count down: Setting the calorie value from 0.0 to 999.0 kcal, the monitor will count down from preset values, Once reach setting value, monitor will alarm.

The calorie readout is an estimate for an average user. It should be used only as a comparison between workouts on this unit.

#### **DISTANCE**

Press MODE button until DIST display on the screen. Monitor will display the distance values on the screen.

Count up: Without setting the distance value, the monitor will count up the values from 0.0 to 999.9 km or mile.

Count down: Setting the distance values from 0.0 to 999.9 km or mile, the monitor will count down from preset values. Once reach setting value, monitor will alarm.

#### **PULSE**

Press MODE button until display on the screen.

The monitor will display your current pulse rate in beats per minute.

---

## USING THE ELCETRONIC METER- 81338

To display pulse, select the **PULSE MODE** and grasp the pulse sensors on the handrail, one in each hand. The heart icon will flash when the meter senses your pulse. Your pulse will be displayed approximately five seconds after the heart icon is displayed. If the heart icon does not appear, relax your grip or change your grip on the pulse sensors.

If you preset the PULSE value, the meter will warn you with an audible alarm when your pulse exceeds the set value. Stop exercising until your pulse comes down.

## OPERATIONAL INSTRUCTIONS

### RECUMBENT BIKE MODE AND ROWER MODE

Your 3 IN 1 Rower/Recumbent Bike & Strength Trainer can be used in the Recumbent Bike mode or the Rower mode. When the **SPRING PIN (67)** locks the SEAT ASSEMBLY to the **RAIL (52)**, the Rower, Recumbent Bike & Strength Trainer is in the Recumbent Bike mode. When the **SPRING PIN (67)** is in the Release position, the SEAT ASSEMBLY is not locked to the **RAIL (52)** and the Rower, Recumbent Bike & Strength Trainer is in the Rower mode.

**RECUMBENT BIKE MODE:** Pull the knob on the **SPRING PIN (67)**, turn it clockwise and release the knob to allow it to lock the seat in position. Sit on the seat and pedal with the **PEDALS (39,41)**.

**ROWER MODE:** Pull the knob on the **SPRING PIN (67)** and turn it counter-clockwise to lock it in the release position. Refer to the inset drawing. This will allow the SEAT ASSEMBLY to slide freely on the **RAIL (52)**. To workout, sit on the seat, place your feet on the fixed **FOOT PEDALS (46)** and pull on the **HANDLEBAR (25)**.

**NOTE:** If the **FRONT STABILIZER(2)** raises off the floor during use, adjust the **STAND(43)** to a higher position.

 
 
**CAUTION:** Always verify that the **SPRING PIN (67)** is in the correct position before you begin your workout.

### SEAT ADJUSTMENT

Proper seat adjustment is important for Recumbent Bike mode.


1. Pull the knob on the **SPRING PIN (67)** and slide the SEAT ASSEMBLY forward or backward to adjust the seat. Release the knob on the **SPRING PIN (67)** and make sure it is inserted into one of the adjustment holes in the **RAIL (52)**.
2. Sit on the seat and place your feet on the pedals. You should be able to move through a complete pedal stroke without locking your knees or shifting your hips on the seat. The seat is too close to the pedals if you have more than a slight bend in your knees at the bottom of the pedal stroke. The seat is too far from the pedals if you have to completely straighten your knees at the bottom of the pedal stroke. Refer to the illustrations below.

**WARNING:** Do not attempt to adjust the seat while you are on the 3 IN 1 Rower/Recumbent Bike & Strength Trainer.

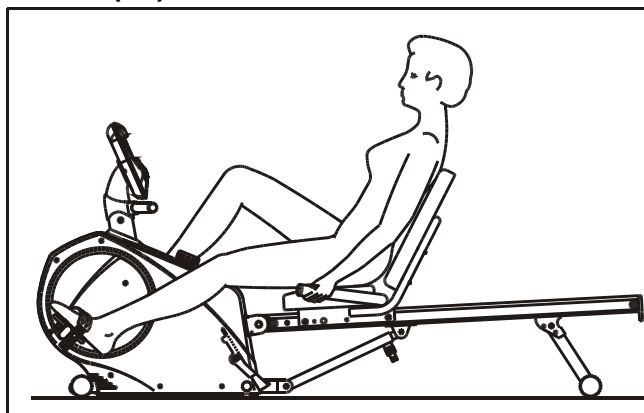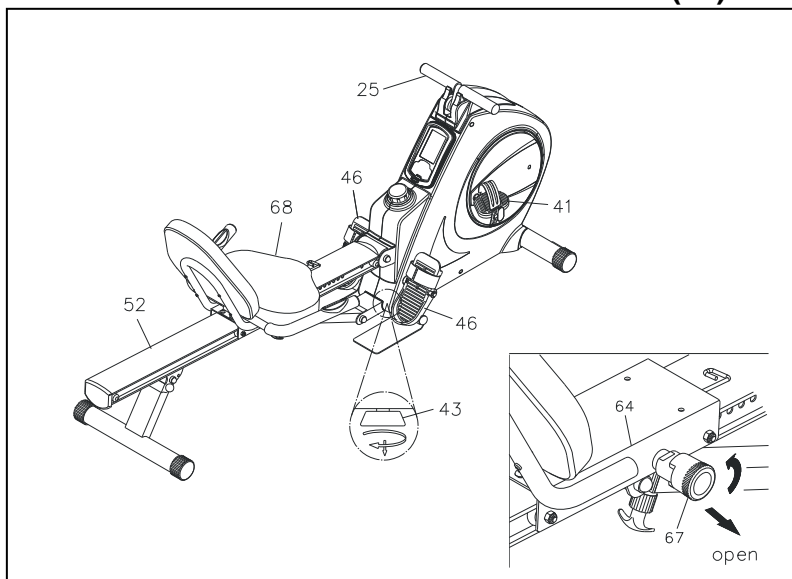


## BODY MOVEMENT EXERCISE
 
### RECUMBENT EXERCISE

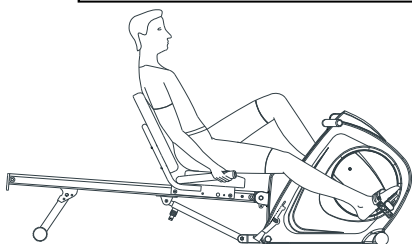


### BUTTOCKS EXERCISE

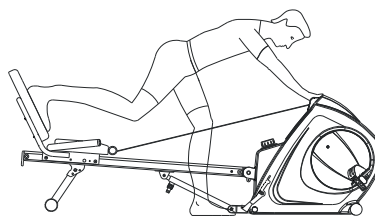 


Be sure to step on the Steel **PEDAL**

### LEG EXTENSION EXERCISE

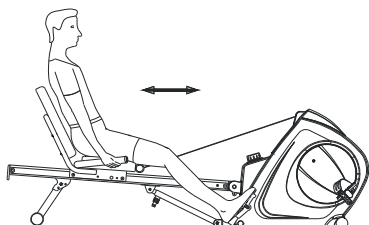 


### LEG STRETCH EXERCISE

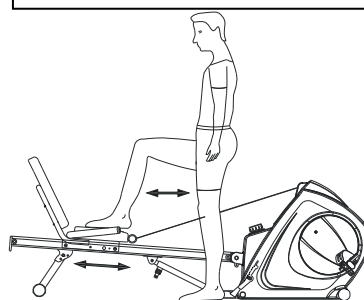 


Be sure to step on the Steel **PEDAL**

### ROWER EXERCISE

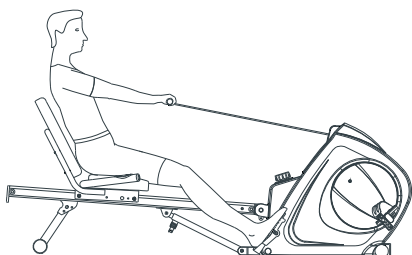 


### BICEPS CURL EXERCISE

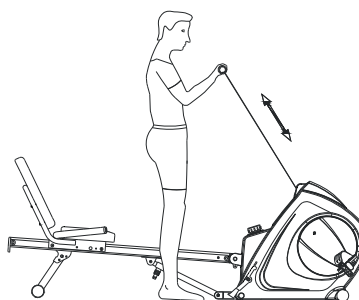 


Be sure to step on the Steel **PEDAL**

### SINGLE ARM BICEP CURL

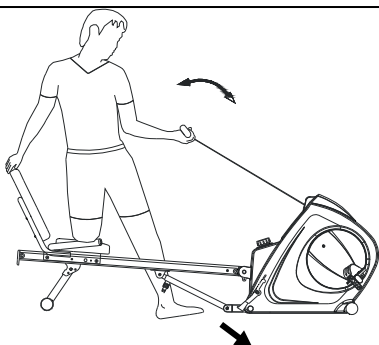 

Be sure to step on the Steel **PEDAL**

### ABDOMINAL EXERCISE

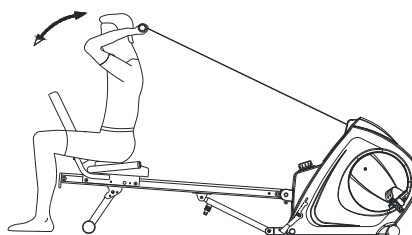 


---

## OPERATIONAL INSTRUCTIONS
 
### LOAD ADJUSTMENT

To increase the load, turn the **TENSION KNOB (27)** clockwise.

To decrease the load, turn the **TENSION KNOB (27)** counterclockwise. There are eight levels for the load adjustment.

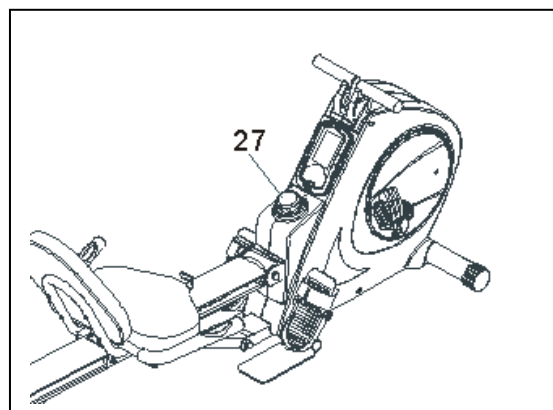


### MAINTENANCE

The safety and integrity designed into the 3 IN 1 Rower / Recumbent Bike & Strength Trainer can only be maintained when the 3 IN 1 Rower / Recumbent Bike & Strength Trainer is regularly examined for damage and wear. Special attention should be given to the following:

1. Adjust the **TENSION KNOB (27)** and verify that the Magnetic System provides tension. The Magnetic System should provide many years of use.
2. Clean the roller tracks in the **RAIL (52)** with an absorbent cloth.
3. It is the sole responsibility of the user / owner to ensure that regular maintenance is performed.
4. Verify that all nuts and bolts are present and properly tightened. Replace missing nuts and bolts. Tighten loose nuts and bolts.
5. Worn or damaged components shall be replaced immediately or the 3 IN 1 Rower / Recumbent Bike & Strength Trainer should be removed from service until repair is made.
6. Keep your 3 IN 1 Rower / Recumbent Bike & Strength Trainer clean by wiping with an absorbent cloth after use.


## STORAGE

 1. To store the 3 IN 1 Rower/Recumbent Bike & Strength Trainer simply keep it in a clean dry place.
2. To avoid damage to the electronics meter, remove the batteries before storing the 3 IN 1 Rower/ Recumbent Bike & Strength Trainer for one year or more.
3. Move the 3 IN 1 Rower/Recumbent Bike & Strength Trainer with the moving wheels on the Front Stand. Grasp the Rail Cap to move the 3 IN 1 Rower/Recumbent Bike & Strength Trainer. Do not use the Seat to move the 3 IN 1 Rower/Recumbent Bike & Strength Trainer. The Seat will move and the Seat Carriage may pinch your hand or fingers.
4. Follow the following process to fold the 3 IN 1 Rower/Recumbent Bike & Strength Trainer as illustrated for easy storage.
  - a. Adjust and lock the seat in position with at least one adjustment hole visible in front of the seat.  
**NOTE:** This will prevent the seat from damaging the covers.
  - b. Remove the **PULL PIN (63)** and swing the **REAR SUPPORT (62)** toward the front.  
**NOTE: This will allow you to pull out the RELEASE KNOB (59) easily.**
  - c. Pull out the **RELEASE KNOB (59)** and fold up the **RAIL (52)**. Make sure the **RAIL (52)** is locked securely in folded position by using **RELEASE KNOB (59)**.
  - d. Lock the **REAR SUPPORT (62)** in folded position with the **PULL PIN (63)**.

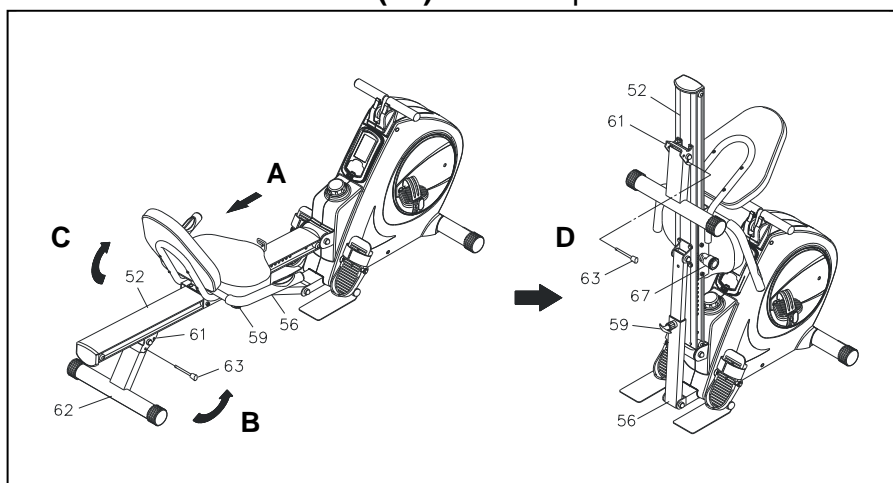

## **UNFOLD THE ROWER, RECUMBENT BIKE & STRENGTH TRAINER**

 - a. Pull out the **RELEASE KNOB(59)** and unfold the **RAIL(52)**. Make sure the **RAIL (52)** is locked securely in the unfolded position by using **RELEASE KNOB (59)**.
- b. Remove the **PULL PIN (63)** and swing the **REAR SUPPORT (62)** backward, then lock the **REAR SUPPORT(62)** in position with the **PULL PIN (63)**.

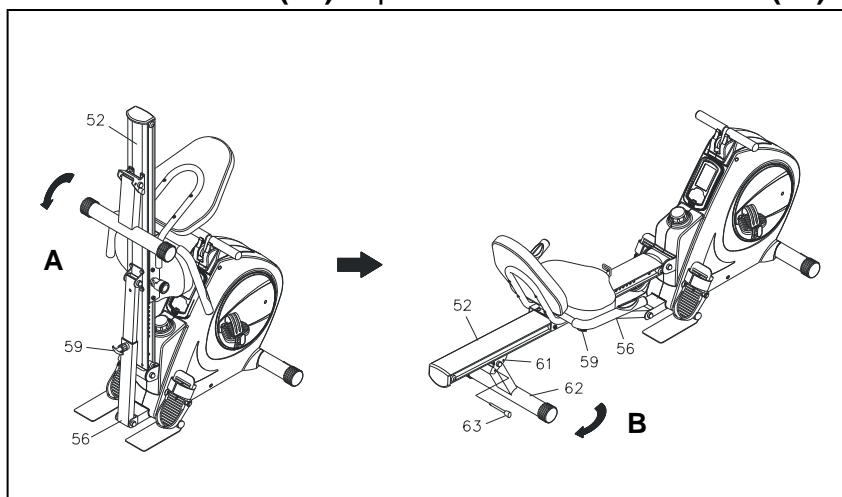

## TROUBLE SHOOTING

| Symptom                                   | Possible Cause                                                                                                                                                                                                                  | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The LCD Screen does NOT Display anything. | You have the wrong Adaptor or the wrong Batteries?                                                                                                                                                                              | Check that the Batteries or the Adaptor Specifications coincide With Instruction Manual Specifications.                                                                                                                                                                                                                                                                                                                                                                  |
|                                           | The Mains Power switch is turned off?                                                                                                                                                                                           | Check that the Mains Power is switched on and is indeed supplying Power.                                                                                                                                                                                                                                                                                                                                                                                                 |
|                                           | The Adaptor is not plugged in?                                                                                                                                                                                                  | Check that the Adaptor is correctly connected to the Mains Power Socket and is correctly connected to the Computer.                                                                                                                                                                                                                                                                                                                                                      |
|                                           | The Batteries are missing?                                                                                                                                                                                                      | Check to make sure there and Batteries installed.                                                                                                                                                                                                                                                                                                                                                                                                                        |
|                                           | The Batteries are inserted the wrong way around?                                                                                                                                                                                | Check that the Batteries are inserted the correct way around and that they are in the correct series (i.e.-+)                                                                                                                                                                                                                                                                                                                                                            |
|                                           | The Computer is faulty.                                                                                                                                                                                                         | Replace the Computer by contacting your dealer.                                                                                                                                                                                                                                                                                                                                                                                                                          |
| The Speed Display shows 0.                | The Screen is faulty.<br>The Computer is faulty.                                                                                                                                                                                | 1)Check that the Sensor Magnet is correctly fitted and passes in front of the Sensor.                                                                                                                                                                                                                                                                                                                                                                                    |
|                                           |                                                                                                                                                                                                                                 | 2)Check the gap between Speed Sensor and the Magnet is correct 5mm or less.                                                                                                                                                                                                                                                                                                                                                                                              |
|                                           |                                                                                                                                                                                                                                 | 3)Check that all the Computer Plugs and Sockets are FIRMLY and correctly connected.                                                                                                                                                                                                                                                                                                                                                                                      |
|                                           |                                                                                                                                                                                                                                 | 4)Check that the Computer Wires are not damaged.                                                                                                                                                                                                                                                                                                                                                                                                                         |
|                                           | The Computer isn't receiving a signal from the Speed Sensor?                                                                                                                                                                    | If all these Checks fail, then replace the Sensor.<br>Replace the Computer by contacting your dealer.                                                                                                                                                                                                                                                                                                                                                                    |
| The LCD Screen Partially Displays.        | The connection between the Circuit Board and the LCD Screen Membrane is loose, gently press down on the LCD Screen, if the LCD Screen Partial Display disappears then it is a connection problem.                               | Check that the Circuit Board is securely fastened to the Computer Case, retighten the Screw. Take care NOT to over tighten them as this may destroy the Circuit Board. Firm is good when you meet resistance STOP.                                                                                                                                                                                                                                                       |
|                                           | The connection between the Circuit Board and the LCD Screen Membrane is misaligned. If this is the problem you might be able to see that the LCD Screen is on a slight angle and NOT inline or parallel with the Computer Case. | Open the Computer Case, remove the Circuit Board Screws, gently remove the Circuit Board, realign the LCD Screen and/or the Membrane, reassemble the LCD Screen and/or the Membrane taking care not to bump or knock the Membrane out of alignment before the Circuit Board Screws are tight. Reinsert the Circuit Board Screws and tighten them taking care NOT to over tighten them as this may destroy the Circuit Board. Firm is good when you meet resistance STOP. |
|                                           | The Computer is faulty                                                                                                                                                                                                          | Replace the Computer by contacting your dealer.                                                                                                                                                                                                                                                                                                                                                                                                                          |



## TROUBLE SHOOTING

| Symptom                                              | Possible Cause                                                  | Solution                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------------------------|-----------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No Ear Pulse Signal or incorrect Ear Pulse Signal.   | The Computer is NOT receiving a Pulse Signal.                   | Check that the Ear Clip Plug is FIRMLY inserted into the Computer.                                                                                                                                                                                                                                                                                                                                |
|                                                      | The Computer is receiving a faint Pulse Signal.                 | 1) The Ear Clip Pulse Sensors will NOT operate correctly if your skin is extremely dry, dab a little water onto your earlobe and try again                                                                                                                                                                                                                                                        |
|                                                      |                                                                 | 2) Check that the Ear Clip is firmly connected to your earlobe.                                                                                                                                                                                                                                                                                                                                   |
|                                                      |                                                                 | 3) Clean the Ear Clip Sensor Pads to ensure a good contact between your body and the Sensor Pads.                                                                                                                                                                                                                                                                                                 |
|                                                      | The Ear Clip is faulty.                                         | After completing all of the above Checks, if the problem still exists then replace the Ear Clip by contacting your dealer.                                                                                                                                                                                                                                                                        |
|                                                      | The Computer is faulty.                                         | Replace the Computer by contacting your dealer.                                                                                                                                                                                                                                                                                                                                                   |
| No Hand Pulse Signal or Incorrect Hand Pulse Signal. | The Computer is NOT receiving a Pulse Signal.                   | Check that the Hand Pulse Plugs are FIRMLY inserted into the Sockets.                                                                                                                                                                                                                                                                                                                             |
|                                                      | The Computer is receiving a faint of Intermittent Pulse Signal. | (1)The Hand Pulse Sensors will NOT operate correctly if your skin is extremely dry moisten your hands with a little water and try again.                                                                                                                                                                                                                                                          |
|                                                      |                                                                 | 2) The Hand Pulse Sensors are designed to be held firmly, if you move your hands while exercising then the Computer may receive an intermittent Pulse Signal. Avoid moving your hands while exercising and hold the Hand Pulse Sensors firmly while exercising. If you do move your hands while exercising give the Computer a few seconds to resample and display your correct Pulse Heart Rate. |
|                                                      |                                                                 | 3)Clean the Hand Pulse Sensors to ensure a good contact between your body and the Pulse Sensors.                                                                                                                                                                                                                                                                                                  |
|                                                      |                                                                 | 4)Remove the Hand Pulse Sensors in order to check that the Spade Terminals are correctly attached.                                                                                                                                                                                                                                                                                                |
|                                                      | The Computer is faulty.                                         | After completing all of the above Checks, if the problem still exists then please contact your dealer.                                                                                                                                                                                                                                                                                            |
|                                                      |                                                                 | Replace the Computer by contacting your dealer.                                                                                                                                                                                                                                                                                                                                                   |

---

## CONDITIONING GUIDELINES

How you begin your exercise program depends on your physical condition. If you have been inactive for several years, or are severely overweight, you must slowly and increase your time on the 3 IN 1 Rower/Recumbent Bike & Strength Trainer gradually: a few minutes per workout.

Initially, you may be able to exercise only for a few minutes in your target zone, however, your aerobic fitness will improve over the next six to eight weeks. Don't be discouraged if it takes longer. It's important to work at your own pace. Ultimately, you'll be able to exercise continuously for 30 minutes. The better your aerobic fitness, the harder you will have to work to stay in your target zone. Please remember these essentials:

- Have your doctor review your training and diet programs to advise you of a workout routine you should adopt.
- Begin your training program slowly with realistic goals that have been set by you and your doctor.
- Monitor your pulse frequently. Establish your target heart rate base on your age and condition.
- Set up your 3 IN 1 Rower/Recumbent Bike & Strength Trainer on a flat, even surface at least 3 feet from walls and furniture.

 
## EXERCISE INTENSITY

To maximize the benefits of exercising, it is important to exercise with the proper intensity. The proper intensity level can be found by using your heart rate as a guide. For effective aerobic exercise, your heart rate should be maintained at a level between 70% and 85% of your maximum heart rate as you exercise. This is known as your target zone. You can find your target zone in the table below. Target zones are listed for both unconditioned and conditioned persons according to age.

| AGE | UNCONDITIONED<br>TARGET ZONE<br>(BEATS/MIN.) | CONDITIONED<br>TARGET ZONE<br>(BEATS/MIN.) |
|-----|----------------------------------------------|--------------------------------------------|
| 20  | 138~167                                      | 153~162                                    |
| 25  | 136~166                                      | 132~160                                    |
| 30  | 135~164                                      | 130~158                                    |
| 35  | 134~162                                      | 129~156                                    |
| 40  | 132~161                                      | 127~155                                    |
| 45  | 131~159                                      | 125~153                                    |
| 50  | 129~156                                      | 124~150                                    |
| 55  | 127~155                                      | 122~149                                    |
| 60  | 126~153                                      | 121~147                                    |
| 65  | 125~151                                      | 119~145                                    |
| 70  | 123~150                                      | 118~144                                    |
| 75  | 122~147                                      | 117~142                                    |
| 80  | 120~146                                      | 115~140                                    |
| 85  | 118~144                                      | 114~139                                    |

During the first few months of your exercise program, keep your heart rate near the low end of your target zone as you exercise. After a few months, your heart rate can be increased gradually until it is near the middle of your target zone as you exercise.

To measure your heart rate manually, stop exercising but continue moving your legs or walking around and place two fingers on your wrist. Take a six-second heartbeat count and multiply the results by 10 to find your heart rate. For example, if your six-second heartbeat count is 14, your heart rate is 140 beats per minute. (A six-second count is used because your heart rate will drop rapidly when you stop exercising.) Adjust the intensity of your exercise until your heart rate is at the proper level.

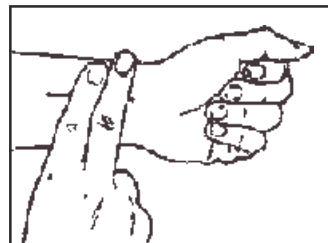


---

## WARM-UP and COOL-DOWN

 **Warm-up** The purpose of warming up is to prepare your body for exercise and to minimize injuries. Warm up for two to five minutes before strength-training or aerobic exercising. Perform activities that raise your heart rate and warm the working muscles. Activities may include brisk walking, jogging, jumping jacks, jump rope, and running in place.

**Stretching** Stretching while your muscles are warm after a proper warm-up and again after your strength or aerobic training session is very important. Muscles stretch more easily at these times because of their elevated temperature, which greatly reduces the risk of injury. Stretches should be held for 15 to 30 seconds. Do not bounce.

### Suggested Stretching Exercises

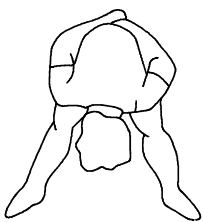

#### Lower Body Stretch

Place feet shoulder-width apart and lean forward. Keep this position for 30 seconds using the body as a natural weight to stretch the backs of the legs.

**DO NOT BOUNCE!**

When the pull on the back of the legs lessen, try a lower position gradually.



 
#### Floor Stretch

While sitting on the floor, open the legs as wide as possible. Stretch the upper body toward the knee on the right leg by using your arms to pull your chest to your thighs. Hold this stretch 10 to 30 seconds.

**DO NOT BOUNCE!**



Do this stretch 10 times.

Repeat the stretch with the left leg.

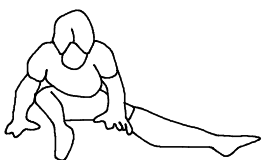

#### Bent Torso Pulls

  While sitting on the floor, have legs apart one leg straight and one knee bent. Pull the chest down to touch the thigh on the leg that is bent and twist at the waist. Hold this position at least 10 seconds. Repeat 10 times on each side.

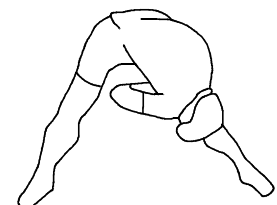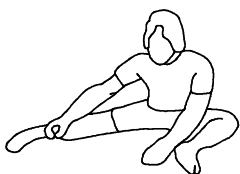


#### Bent Over Leg Stretch

Stand with feet shoulder-width apart and lean forward as illustrated. Using the arms, gently pull the upper body towards the right leg. Let the head hang down. **DO NOT BOUNCE!** Hold the position a minimum of 10 seconds. Repeat pulling the upper body to the left leg. Do this stretch several times slowly.

**Remember always to check with your physician before starting any exercise program.**

 **Cool-Down** The purpose of cooling down is to return the body to its normal, or near normal, resting state at the end of each exercise session. A proper cool-down lowers your heart rate and allows blood to return to the heart. Your cool-down should include the stretches listed above and should be completed after each strength-training session.

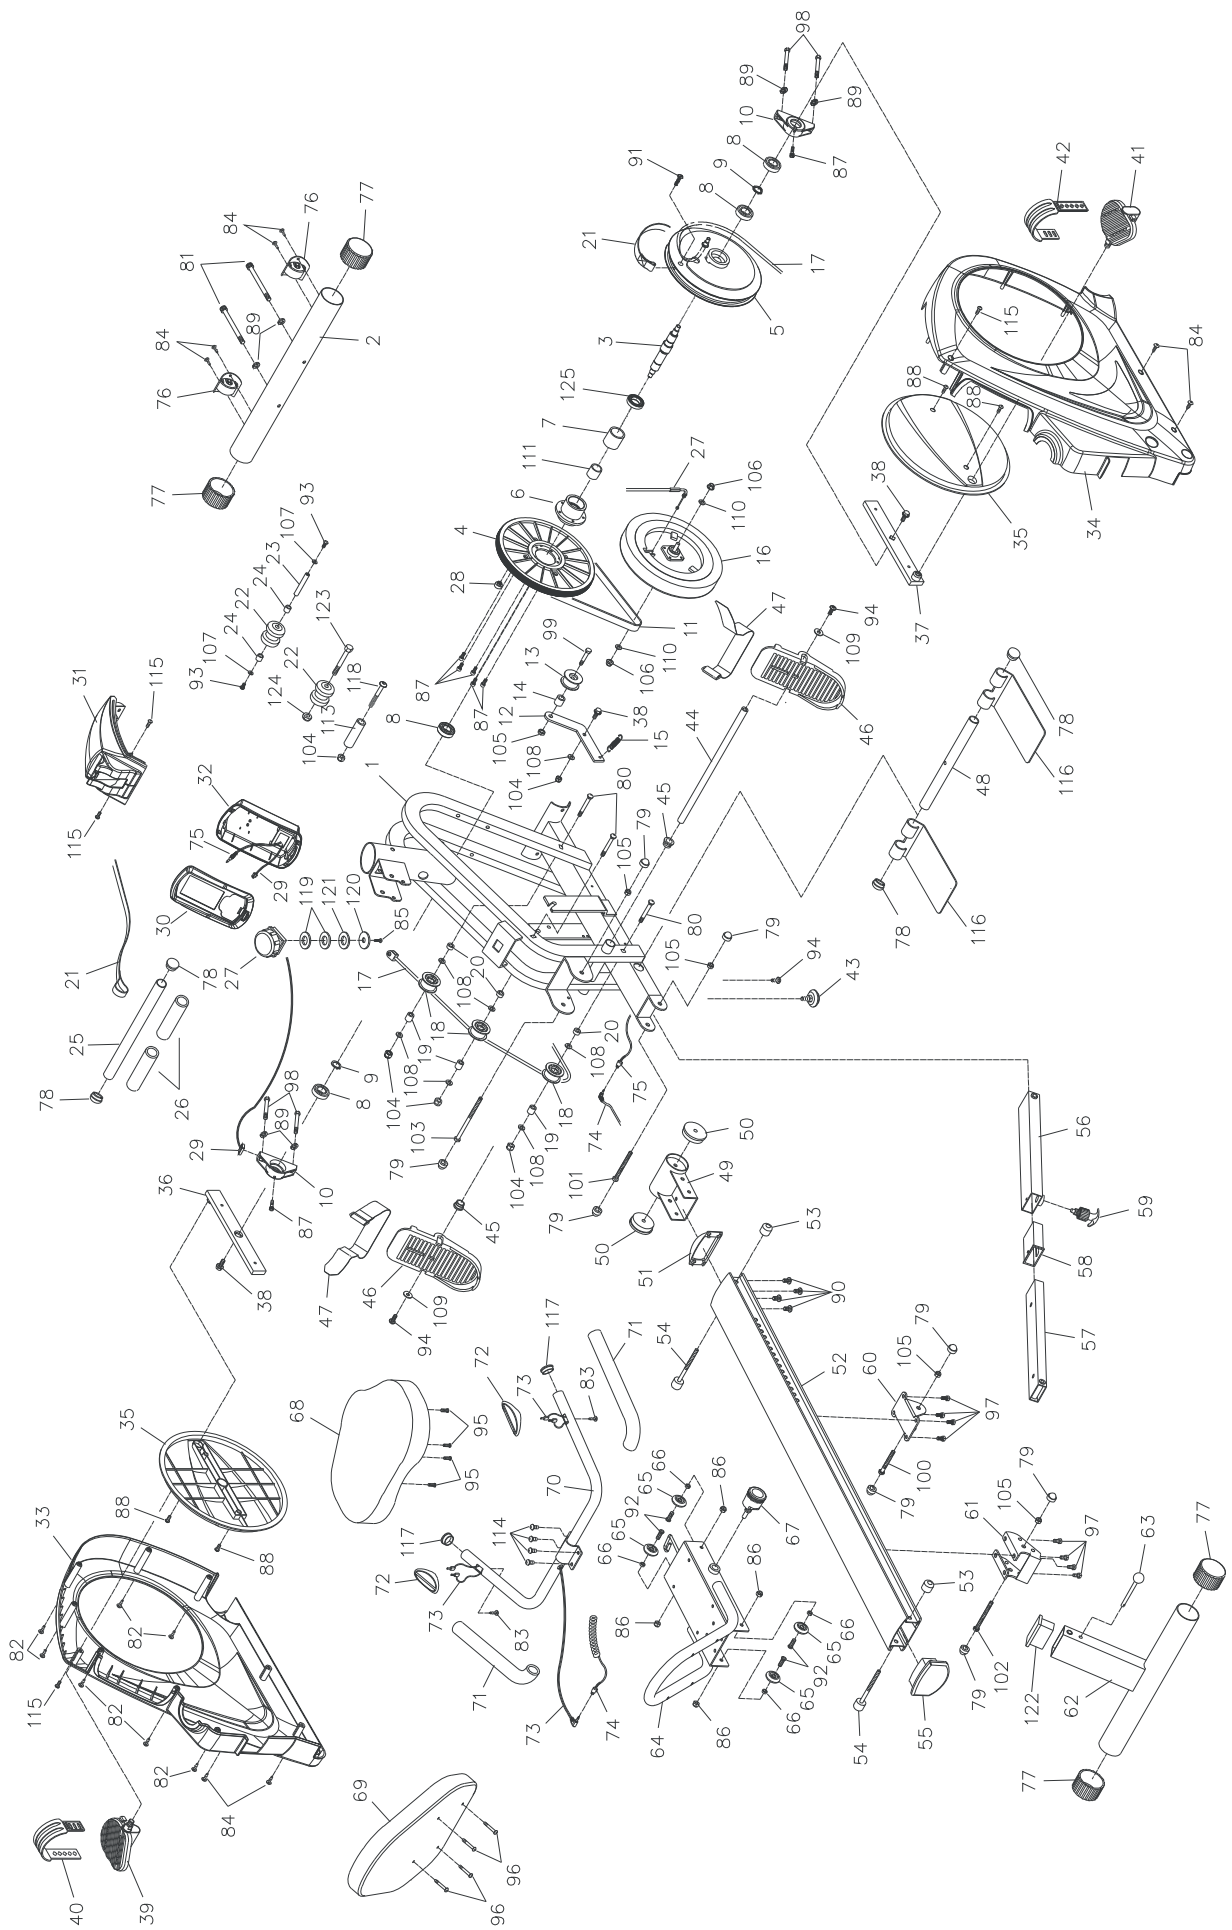

## PARTS LIST

| NO. | PART NAME             | QTY |
|-----|-----------------------|-----|
| 1   | Main Frame            | 1   |
| 2   | Front Stabilizer      | 1   |
| 3   | Axle                  | 1   |
| 4   | Pulley                | 1   |
| 5   | Strap Wheel           | 1   |
| 6   | Connection Wheel      | 1   |
| 7   | One Way Bearing(3520) | 2   |
| 8   | Bearing (6004zz)      | 4   |
| 9   | C Ring (M20)          | 2   |
| 10  | Bearing Housing       | 2   |
| 11  | V-Ribbed Belt         | 1   |
| 12  | Idler Arm             | 1   |
| 13  | Idler Wheel           | 1   |
| 14  | Idler Wheel Spacer    | 1   |
| 15  | Tension Spring        | 1   |
| 16  | Magnetic System       | 1   |
| 17  | Bungee Cord           | 1   |
| 18  | Bungee Wheel          | 3   |
| 19  | Wheel Bushing         | 3   |
| 20  | Wheel Spacer          | 3   |
| 21  | Strap                 | 1   |
| 22  | Strap Roller          | 2   |
| 23  | Roller Axle           | 1   |
| 24  | Roller Spacer         | 2   |
| 25  | Handlebar             | 1   |
| 26  | Foam Grip             | 2   |
| 27  | Tension Knob          | 1   |
| 28  | Magnet                | 1   |
| 29  | Sensor Wire           | 1   |
| 30  | Top Meter Cover       | 1   |
| 31  | Top Cover             | 1   |
| 32  | Meter                 | 1   |
| 33  | Left Cover            | 1   |
| 34  | Right Cover           | 1   |
| 35  | Crank Cover           | 2   |
| 36  | Left Crank            | 1   |

| NO. | PART NAME                                             | QTY |
|-----|-------------------------------------------------------|-----|
| 37  | Right Crank                                           | 1   |
| 38  | Flange Bolt (M8x1.25x25mm)                            | 3   |
| 39  | Left Pedal                                            | 1   |
| 40  | Left Pedal Strap                                      | 1   |
| 41  | Right Pedal                                           | 1   |
| 42  | Right Pedal Strap                                     | 1   |
| 43  | Stand                                                 | 1   |
| 44  | Pedal Shaft                                           | 1   |
| 45  | Spacer                                                | 2   |
| 46  | Foot Pedal                                            | 2   |
| 47  | Pedal Strap                                           | 2   |
| 48  | Stopper Tube                                          | 1   |
| 49  | Rail Pivot                                            | 1   |
| 50  | Pivot Bushing                                         | 2   |
| 51  | Rail Connection Cap                                   | 1   |
| 52  | Rail                                                  | 1   |
| 53  | Stopper                                               | 2   |
| 54  | Stopper Bolt                                          | 2   |
| 55  | Rail Cap                                              | 1   |
| 56  | Support Tube                                          | 1   |
| 57  | Inner Support Tube                                    | 1   |
| 58  | Bushing                                               | 1   |
| 59  | Release Knob                                          | 1   |
| 60  | Support Bracket                                       | 1   |
| 61  | Rear Support Bracket                                  | 1   |
| 62  | Rear Support                                          | 1   |
| 63  | Pull Pin                                              | 1   |
| 64  | Seat Carriage                                         | 1   |
| 65  | Seat Roller                                           | 4   |
| 66  | Seat Roller Spacer ( $\varphi$ 8x $\varphi$ 12x6.5mm) | 4   |
| 67  | Spring Pin                                            | 1   |
| 68  | Seat                                                  | 1   |
| 69  | Back Cushion                                          | 1   |
| 70  | Handrail                                              | 1   |
| 71  | Foam Grip                                             | 2   |
| 72  | Pulse Sensor Plate                                    | 2   |

| NO. | PART NAME                             | QTY |
|-----|---------------------------------------|-----|
| 73  | Pulse Sensor Wire                     | 1   |
| 74  | Pulse Coil Wire                       | 1   |
| 75  | Pulse Connection Wire                 | 1   |
| 76  | Moving Wheel                          | 2   |
| 77  | Round Endcap (60mm)                   | 4   |
| 78  | Round Plug (25mm)                     | 4   |
| 79  | Nut Cap (M10)                         | 8   |
| 80  | Carriage Bolt (M8x1.25x60mm)          | 3   |
| 81  | Bolt, Socket Head (M8x1.25x70mm)      | 2   |
| 82  | Screw, Round Head (M4x20mm)           | 7   |
| 83  | Screw, Round Head (M4x25mm)           | 2   |
| 84  | Screw, Round Head (M5x18mm)           | 8   |
| 85  | Screw, Round Head (M5x0.8x15mm)       | 1   |
| 86  | Nylock Nut (M8x1.25x6.2t)             | 4   |
| 87  | Bolt, Socket Head (M5x0.8x15mm)       | 7   |
| 88  | Bolt, Round Head (M6x1x15mm)          | 4   |
| 89  | Spring Washer (M8)                    | 6   |
| 90  | Bolt, Flat Head (M8x1.25x16mm)        | 4   |
| 91  | Bolt, Flat Head (M8x1.25x25mm)        | 1   |
| 92  | Bolt, Flat Button Head (M8x1.25x25mm) | 4   |
| 93  | Bolt, Button Head (M6x1.0x12mm)       | 2   |
| 94  | Bolt, Button Head (M8x1.25x15mm)      | 3   |
| 95  | Bolt, Hex Head (M6x1x15mm)            | 4   |
| 96  | Bolt, Hex Head (M6x1x30mm)            | 4   |
| 97  | Bolt, Hex Head (M8x1.25x16mm)         | 8   |
| 98  | Bolt, Hex Head (M8x1.25x55mm)         | 4   |
| 99  | Bolt, Hex Head (M10x1.5x45mm)         | 1   |
| 100 | Bolt, Hex Head (M10x1.5x75mm)         | 1   |
| 101 | Bolt, Hex Head (M10x1.5x85mm)         | 1   |
| 102 | Bolt, Hex Head (M10x1.5x95mm)         | 1   |
| 103 | Bolt, Hex Head (M10x1.5x125mm)        | 1   |
| 104 | Nylock Nut (M8x1.25x8t)               | 4   |
| 105 | Nylock Nut (M10x1.5)                  | 5   |
| 106 | Flange Nut (M10x1.25)                 | 2   |
| 107 | Washer (M6)                           | 2   |
| 108 | Washer (M8x $\varphi$ 16)             | 5   |
| 109 | Large Washer (M8x $\varphi$ 23)       | 2   |

| NO. | PART NAME                                   | QTY |
|-----|---------------------------------------------|-----|
| 110 | Washer (M10)                                | 2   |
| 111 | One way Bearing(2520)                       | 1   |
| 113 | Roller Spacer                               | 1   |
| 114 | Bolt, Button Head (M8x12mm)                 | 4   |
| 115 | Bolt, Round Head (M5x12mm)                  | 4   |
| 116 | Pilates Pedal                               | 2   |
| 117 | Plug                                        | 2   |
| 118 | Bolt, Hex Head(M8x1.25x70mm)                | 1   |
| 119 | Washer ( $\varphi$ 26x $\varphi$ 38 x 2.0t) | 2   |
| 120 | Washer ( $\varphi$ 6x $\varphi$ 32 x 2.0t)  | 1   |
| 121 | Washer ( $\varphi$ 26x $\varphi$ 34x 1.0t)  | 1   |
| 122 | Square Plug                                 | 1   |
| 123 | Bolt, Hex Head (M10x1.5x65mm)               | 1   |
| 124 | Nylock Nut (M10x1.5)                        | 1   |
| 125 | Bearing 6804                                | 1   |
|     |                                             |     |



**WARRANTY, SAFETY AND ASSEMBLY INFORMATION**  
**BFE0039 – 3 IN 1 ROWER / RECUMBENT & STRENGTH TRAINER**

**IMPORTANT**

Please read and retain this manual as it will assist with identification for parts and service.

-----

BOYLES FITNESS warrants their products to be free from defects in material and workmanship under normal use and service conditions.

The various components of this machine are warranted against defects and workmanship for the time periods specified as follows:

**BFE0039**  
**3 IN 1 ROWER / RECUMBENT & STRENGTH TRAINER**  
**LIMITED WARRANTY**

**Lifetime Frame**  
**12 months Parts**

All warranty coverage extends only to the original retail purchaser from the date of purchase. BOYLES FITNESS' obligation under this Warranty is limited to replacing or repairing, at BOYLES' option, the product or parts therein. Any enquiries relating to warranties or spare parts must be directed to Service **07 3272 7010**.

For efficient processing of your enquiry please have relevant date of purchase, retailer name you purchased the item from and the brand on the product. This warranty does not extend to any damage to a product caused by abuse, improper or abnormal usage (as detailed in this instruction manual), or repairs not provided by BOYLES. Nor does this warranty extend to products used for commercial or rental purposes. This warranty does not cover ordinary wear, tear and weathering, failure to follow directions, improper installation, improper maintenance or acts of God (such as damage caused by storms, lightning and by snow or ice). No other Warranty beyond that specifically set forth above is authorised by BOYLES.

Our sales and service centre has been set up to provide assembly assistance, replacement parts and accessories, and to efficiently handle all warranty related matters.

**Phone 07 3272 7010**

**Hours 9:00am – 4:00pm Mon-Fri (excluding public holidays)**

**Email: [spares@boylesfitness.com.au](mailto:spares@boylesfitness.com.au)**

**Website [www.bfe.net.au](http://www.bfe.net.au)**

### **BFE Warranty Policy – November 1<sup>st</sup> 2013**

1. When purchased from an authorised BFE distributor the BFE warranty shall guarantee that all framework and components of your product are free from faulty manufacture. All faulty framework and components will be repaired or replaced as set out in this policy. All warranties in this policy apply to INDOOR HOME/DOMESTIC USE ONLY.

2. These warranties do not apply to products used in commercial use applications.

3. Warranty DOES NOT cover normal wear & tear and excludes faults due to misuse, abuse, incorrect assembly or lack of general maintenance.

4. Warranty is applicable to products sold and placed within Australia only.

5. IMPORTANT. Most of BFE products are pretested and we have inspectors checking all products prior to shipment. The number one reason for a fault is due to INCORRECT ASSEMBLY.

If you do have problems please go back to the start and double check your assembly and pay special attention to all WIRING connections. If you have accidentally cut or damaged the wiring please let us know and we will be happy to send you a new set at no-charge.

If you have done this and are confident you have double checked your assembly and are still having problems please email our service department at [spares@boylesfitness.com.au](mailto:spares@boylesfitness.com.au) including your best contact details ,proof of purchase, serial number and a brief explanation of what is wrong. Emailing is the quickest and most reliable way to get your service request processed. Once we have your details we will either call or email you back with the next steps. The quickest way, once we determine the problem and send you a replacement part, is that we can talk you through over the phone on how to fit it.

If it is deemed by our service tech that it is too difficult, we can arrange (where available) a service technician.

NOTE. If we arrange for a service technician (where applicable) and it is found that it is not a Manufactures fault and found to be an assembly issue, normal wear and tear, transport damage or misuse then there will be a call out fee of \$140 depending on location. (Surcharge applies for non-metro areas)

**WARRANTY TERMS-** Warranty commences from the date of purchase from the retail store. Warranty only applies to the original purchaser and is NON transferable. Warranty is void if the serial number of the product has been removed or tampered with.

Warranty does not apply to defects, faults or failures due to:

(a) Defects caused during assembly or failure to assemble to the assembly manual provided. Assembly errors include but are not limited to damaged wiring harness, stripped crank arms and or pedals and bolts used in the wrong locations.

(b) Lack of general maintenance and or failure to service or maintain the equipment in accordance with the user manual specifications and recommendations. This includes a lack of lubrication. Only use factory supplied lubricant. DO NOT USE WD40 or anything similar. You can purchase lubricant from your retailer or contact us directly at [sales@boylesfitness.com.au](mailto:sales@boylesfitness.com.au)



- (c) **Power Surges.** The computers, control boards and motors are very sensitive to power fluctuations. You must use a surge protector on all items that plug into your mains power otherwise your electronics will not be covered by this warranty. You can purchase these from numerous retailers or you can call us on 02 46 366 680 to get a price.
- (d) User negligence, abnormal or excessive use, misuse, abuse or transport damage.
- (e) Repairs, alterations or modifications by NON BFE authorised service technician.
- (f) Accident, fire, flood or malicious damage by third person.
- (g) Ordinary wear and tear.
- (h) Failure to keep the product in a clean, dry environment causing rust. You should wipe off any sweat and moisture after each training session.
- (i) Any products sold or placed in an application or the incorrect environment that is not recommended by BFE or as not stipulated in the owner's manual such as a commercial / rental environment will void the warranty set forth by BFE
- (j) BFE recommends the use of a protective rubber floor mat. This reduces the incidence of dust and lint collection around the motor, reduces noise & protects your floor. You can purchase this from your retailer or contact BFE directly on 02 46 366 680

BFE will have the option to repair or replace any product which requires attention under the warranty.

**NOTE:** Lifetime refers to the warranty coverage of the units expected service life. NOT the lifetime of the purchaser.

#### **Servicing/Spare Parts-**

As with any mechanical equipment general maintenance should be performed on a regular basis by an authorised retailer or service technician. This will ensure longevity of the product and ensure that it is kept working in optimum condition. Failure to properly maintain your equipment may lead to safety issues and may also void the warranty. You should only use genuine BFE replacement parts otherwise the warranty will be void.

#### **Freight Costs:**

The cost of freighting the replacement part under warranty to the customer shall be free of charge. Your requirement is to return the faulty part via the pre-paid postal service which we will supply.

#### **Returned Goods:**

The unauthorised return of parts or product shall be refused and placed in the hands of the carrier at the cost of the shipper. Return authorisations can be obtained from BFE head office only.

#### **Additional Warranty**

If you would like to extend your labour warranty by 1 year (\$99), 2 years (\$199), 3 years (\$299) please contact our office by emailing [sales@boylesfitness.com.au](mailto:sales@boylesfitness.com.au) (Not available in all areas)

**Service Department hours: Monday to Friday between 9am and 4pm**

**Service Phone Number: 07 3272 7010 Email: [spares@boylesfitness.com.au](mailto:spares@boylesfitness.com.au)**

PLEASE NOTE: that Authorised service technicians do not reside in all areas of this vast country. If you live beyond the reasonable service area of a metropolitan area, BFE may not be able to support the labour portion of the product warranty. Alternatively you can return (at your cost) your product to the closest BFE repair centre, where it will be fixed at no charge under the warranty period.

Metropolitan Area- defined as no more that 50km from G.P.O in all capital cities.

Disclaimer:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a 'Major failure' and for compensation for any other Reasonable foreseeable loss or damage.

You are also entitled to have goods repaired or replaced if the goods fail to be of an acceptable quality and the failure does not amount to a major failure.

BFE does not assume , nor authorise any representative or other person to make or assume for BFE, any warranties whatsoever, whether expressed or implied, in , in connection with the sale, service, or shipment of our products.

BFE reserve the right to make changes and improvements in our products and specifications without incurring any obligation to similarly alter products previously purchased.

This warranty operates in addition to other rights and remedies available to consumer's rights under the Australian Consumer Law.

**Service Department hours: Monday to Friday between 9am and 4pm**

**Service Phone Number: 07 3272 7010 Email: [spares@boylesfitness.com.au](mailto:spares@boylesfitness.com.au)**

