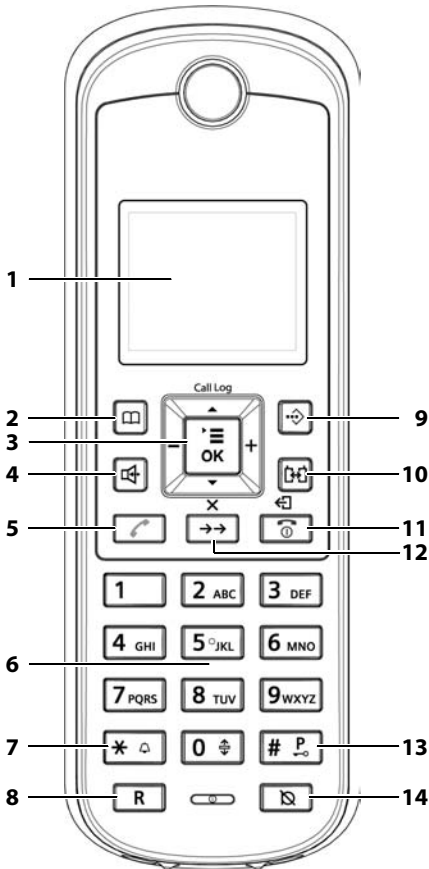




 

# Gigaset

## C675

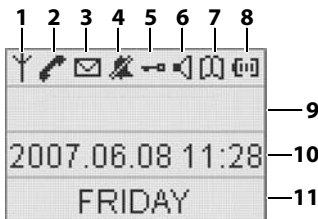


# The handset at a glance



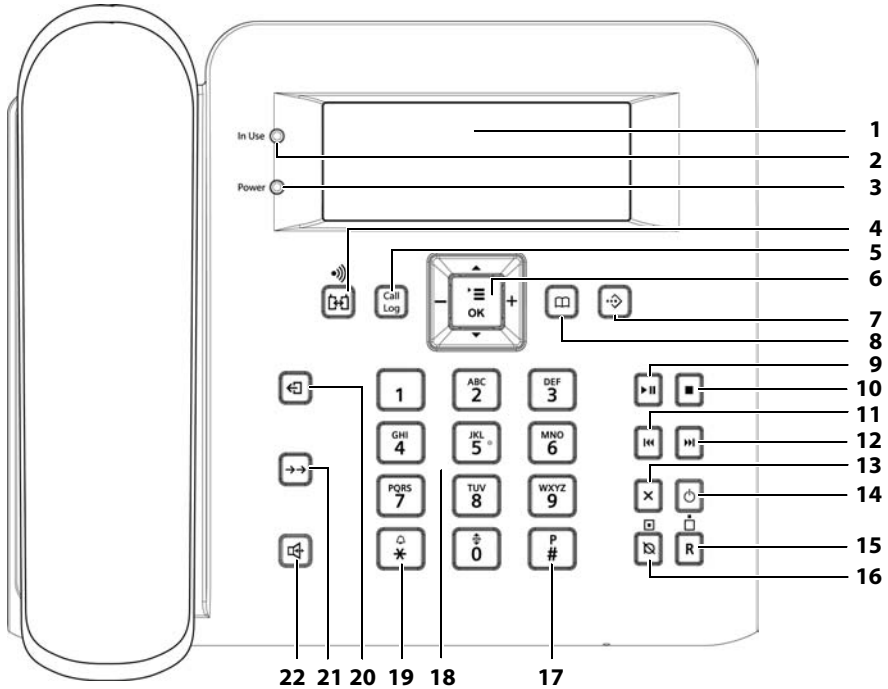
- 1 Display
- 2 Directory
- 3 Navi key
-  up/down,
-  Menu/OK
-  Volume
-  Call Log
- 4 Hands free
- 5 Talk
- 6 Digital keys
- 7 \* Key (Ringer off by long press)
- 8 Flash Key
- 9 Call-by-call list key
- 10 Intercom Key
- 11 End/Back (On/Off by long press)
- 12 Redial/Delete
- 13 # Key (Lock keypad by long press)
- 14 Mute Key

## Handset LCD



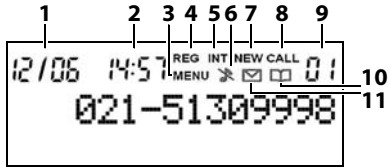
- 1 Radio signal
- 2 Talk
- 3 Incoming Call
- 4 Ringer off
- 5 Keypad lock
- 6 Hands free
- 7 Directory
- 8 Battery Icon
- 9 Handset Name
- 10 Date and Time
- 11 Weekday

# The base at a glance



- |  |                                 |
|--|---------------------------------|
| 1 Display  | 9 Play recording/Pause          |
| 2 Using LED  | 10 Stop playing recording       |
| 3 Power LED  | 11 Previous recording           |
| 4 Intercom/Paging  | 12 Next recording               |
| 5 Call log   | 13 Delete                       |
| 6 Navi-key   | 14 Answer machine On/Off        |
|  up/down, | 15 Flash/Personal recording     |
|  Menu/OK, | 16 Mute/Family member recording |
|  Volume   | 17 # Key                        |
| 7 Call-by-call list key  | 18 Digital keys                 |
| 8 Directory  | 19 * Key/Ringer off             |
|  | 20 Back                         |
|  | 21 Redial key                   |
|  | 22 Hands free                   |

## Base LCD



- 1 Date
- 2 Time
- 3 Menu mode
- 4 Registering
- 5 Intercom/Internal call
- 6 Ringer off
- 7 Missed call
- 8 Incoming call
- 9 If call (8): Number of incoming calls  
If directory (10): Record number
- 10 Directory
- 11 Missed call  
If flashing: Received voice message  
(country, network and provider-dependent:  
not shown if VMWI network service not sup-  
ported)

# Contents

<b>The handset at a glance</b> .....	<b>1</b>
<b>The base at a glance</b> .....	<b>2</b>
<b>Safety precautions</b> .....	<b>5</b>
<b>First steps</b> .....	<b>7</b>
Installing the base station .....	7
Setting up the handset for use .....	7
Registering handsets .....	8
Deregistering handsets .....	8
Locating a handset ("paging") .....	9
Setting the date and time .....	9
<b>Operating the handset</b> .....	<b>9</b>
Activating/deactivating the keypad lock ..	9
Ringer OFF/ON .....	9
Reverting to idle status .....	9
Operating the menu .....	9
Correcting incorrect entries .....	9
Scrolling to display long number .....	9
<b>Menu trees</b> .....	<b>10</b>
Menu tree (Handset) .....	10
Menu tree (Base) .....	11
<b>Making calls</b> .....	<b>12</b>
Making an external call .....	12
Accepting a call .....	12
Adjusting talking volume .....	12
Muting .....	12
Ending a call .....	12
Activating/deactivating auto answer .....	12
Calling Line Identification .....	12
<b>Using the directory and lists</b> .....	<b>13</b>
Directory .....	13
Last number redial list .....	13
Call-by-call list .....	14
<b>Using several handsets</b> .....	<b>15</b>
Making internal calls/Intercom .....	15
Conference calls .....	15
<b>Operating the answer machine of the base</b> .....	<b>16</b>
Operating when on the move (remote control) .....	17
<b>Setting the handset</b> .....	<b>18</b>
Changing audio settings .....	18
Setting the contrast .....	18
Setting the key tone .....	18
Changing the display language .....	18
Restoring the handset to the factory settings .....	18
<b>Setting the base</b> .....	<b>19</b>
Setting the date and time .....	19
Changing audio settings .....	19
Setting the key tone .....	19
Setting the contrast .....	19
Restoring the base to the factory settings .....	19
<b>Connecting the base to PABX</b> .....	<b>20</b>
Dialling modes and flash time .....	20
Saving an access code (PABX prefix) .....	20
Network Setting .....	20
<b>Appendix</b> .....	<b>21</b>
Care .....	21
Contact with liquid .....	21
General Specifications .....	21
Writing and editing text .....	22
Customer Service & Assistance .....	23
<b>Manufacturer warranty (Middle East)</b> .....	<b>25</b>
<b>Service Centres (Midde East)</b> .....	<b>27</b>
<b>Product warranty (India)</b> .....	<b>29</b>
<b>Service Centres (India)</b> .....	<b>31</b>
<b>Index</b> .....	<b>33</b>

## Safety precautions

### Warning:

Read the safety precautions and the user guide before use.

Explain their contents and the potential hazards associated with using the telephone to your children.



Only use the mains adapter supplied, as indicated on the underside of the base station or charging cradle.



Only use the **recommended, rechargeable batteries** (page 22), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury.

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when the hands-free function is activated. Otherwise you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base station or charging cradle in bathrooms or shower rooms. The base station and charging cradle are not splashproof (page 21).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.



Please remove faulty base stations from use or have them repaired by our Service, as they could interfere with other wireless services.

## Safety precautions



All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.

If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

### **Please note:**

Not all of the functions described in this user guide are available in all countries.



## First steps

### Installing the base station

The base station is designed for use in closed, dry rooms with a temperature range of +5 °C to +45 °C.

Set up the base station at a central point in your apartment or house.

#### Please note:

- ◆ Never expose the telephone to heat sources, direct sunlight or other electrical appliances.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

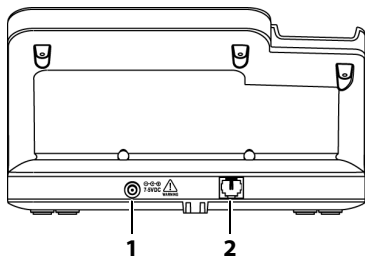
### Range and reception strength

#### Range:

- ◆ Outdoors: up to 300 m
- ◆ Indoors: up to 50 m

### Connecting the base station

- ▶ **First** connect the power supply unit and **then** the phone jack as shown below.



- 1 Power supply unit 220 V
- 2 Phone jack with phone cord

#### Please note:

- ◆ The mains adapter must **always be connected**, as the phone will not operate without mains connection.
- ◆ Only use the mains adapter and phone cord **supplied**.

- ◆ If you buy a replacement phone cord, make sure that the phone jack has the correct type of wiring.

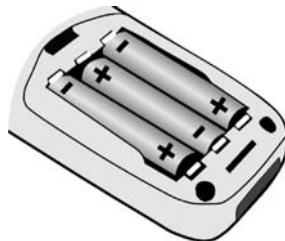
### Setting up the handset for use

#### Inserting the batteries

##### Warning:

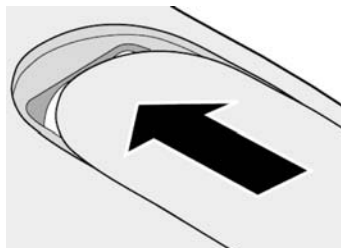
Use only the rechargeable batteries recommended by Gigaset Communicatins GmbH. Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries the right way round. The polarity is indicated in/on the battery compartment.



#### Closing the battery cover

Put the cover on the phone as indicated on the picture below. Push the cover upward until click sound is heard, means the cover is fixed properly.



## First steps

### Opening the battery cover

Push downward to open the cover.

### Initial charging and discharging of batteries

If the handset is activated, the flashing battery icon in the top right of the display indicates that the batteries are being charged.

During handset operation, the battery icon indicates the charge status of the batteries. The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.

- ▶ To do this, leave the handset in the charging cradle **without interruption** for **15** hours.
- ▶ Afterwards, remove the handset from the charging cradle and do not put it back again until the batteries are fully discharged.

#### Please note:

After the first battery charge **and** discharge you may replace your handset in its charger after every call.

#### Please note:

- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while the charge capacity of the batteries will decrease for technical reasons.




 
 
### Registering handsets

You can register up to four handsets to your base.




Registering the handset to the base station occurs automatically on first using.

If the automatic register failed, please do the operations on the handset and on the base as below.

### Operations on the handset

- ▶ Press .
- ▶ Select **ADVANCED SET.** with  and confirm with .
- ▶ Select **REGISTRATION** and confirm with .
- ▶ Confirm both messages with .
- ▶ Proceed with the operations on the base.

### Operations on the base

- ▶ Press and **hold** the paging key  () on the base until beep sounds (approx. 3 sec.).
- ▶ Input the handset name and confirm with .





 
Once it has been registered successfully, the handset returns to idle status. The name and the handset's internal number is shown in the display e.g. INT 1.

If fail to register, repeat the procedure.

### Deregistering handsets

#### Please note:

Do not deregister handsets unless necessary!



- ▶ Press .
- ▶ Select **ADVANCED SET.** with  and confirm with .
- ▶ Select **DEREGISTRATION** and confirm with .
- ▶ Confirm the message with .
- ▶ **DEREGISTERED** is displayed.

Handset will ask for registering after deregistered, otherwise you will not able to dial by handset.

## Locating a handset ("paging")


 

You can locate your handset using the base station.

**Briefly** press the paging key  () on the base station → **PAGING EXTENSION?**

→ Input the number of handset for paging or press   Key for all handsets





Handsets paged will ring, even if the ringer tones are deactivated.

### Ending paging

- ▶ **Briefly** press the paging key  () on the base station or press the end key  on the handset.

## Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls.

- ▶ Press .
- ▶ Select **TIME SETTING** with  and confirm with .
- ▶ Input the time/date and confirm with .

e.g. set time and date to 2008-7-17 20:38

- ▶ Enter **TIME SETTING**



- ▶ Ordinal input:


2 ABC	0	3 DEF	8 TUV	2 ABC	0	0
8 TUV	0	7 PQRS	1	7 PQRS	OK	

You do not need to set time and date again on base, for handset will synchronize this setting to base automatically.

## Operating the handset



### Activating/deactivating the keypad lock



Long press   (handset) to toggle lock and unlock.



The  icon appears in the display when the keypad lock is activated.

The keypad lock is deactivated automatically if someone calls you. It is re-activated when the call is finished.

### Ringer OFF/ON

 
Long press   to turn off ringer tone.

Handset displays  and the base displays .


Long press   once again to turn on ringer.

### Reverting to idle status

You can revert to idle status as follows:

- ▶ Press the end call key  (handset) back to idle.




Or:

- ▶ Press  key (base) back to idle.


Changes that you have not confirmed or saved will be lost.

### Operating the menu

 
Your telephone's functions are accessed using a menu.

 
- ▶ Press  with the handset in idle status to open the main menu.
- ▶ Navigate to the function using the control key . Press the  key to access the function.

### Correcting incorrect entries

- ◆ Press  to delete the character to the left of the cursor.

### Scrolling to display long number

If a telephone number is more than 12 digits in Phonebook or Redial list, the icon  is displayed.

You can use the  for scrolling to display next digits of the whole number.

# Menu trees

## Menu tree (Handset)

AUDIO SETTING	RINGER VOLUME	HIGH
		MEDIUM
		LOW
		OFF
		ASCENDING
		RINGER MELODY
		...
		MELODY 10
CONFERENCE	ON	
	OFF	
TIME SETTING		
PERSONAL SET.	CALL LOGS	ALL CALLS
		MISSED CALL
	AUTO ANSWER	ON
		OFF
	CONTRAST	LEVEL 1
		LEVEL 2
		LEVEL 3
	KEY BEEP	ON
		OFF
	LANGUAGE	FRENCH
		ENGLISH
ADVANCED SET.	REGISTRATION	
	DEREGISTRATION	
	HANDSET RESET	NO
		YES

## Menu tree (Base)

---

TIME SETTING		
AUDIO SETTING	RINGER VOLUME	HIGH
		MEDIUM
		LOW
		OFF
	RINGER MELODY	MELODY 1
		...
		MELODY 10
KEY BEEP	ON	
	OFF	
CONTRAST	LEVEL 1	
	LEVEL 2	
	LEVEL 3	
FLASH TIME	100	
	300	
	600	
TONE/PULSE	TONE	
	PULSE	
NETWORK	PUBLIC NET.	
	PRIVATE NET.	
BASE RESET	YES	
	NO	
NO.OF RINGS	3 RINGS	
	6 RINGS	
	TOLL SAVER	
PABX PREFIX		

 

## Making calls

---

### Making an external call


---

External calls are calls using the public telephone network.

- ▶ Enter the number and press the talk key  or .

Or:

- ▶ Press  or  and then enter the number.



You can cancel the dialling operation with the end call key .

#### **Please note:**

Dialling using the directory (page 13), the last number redial list (page 13), the call history (page 14) or the call-by-call info services list (page 14) saves you from having to re-enter numbers and network provider prefixes ("call-by-call numbers").

### Accepting a call


 

---

Press  or  and to accept an incoming call.

If the handset is in the charging cradle and the **AUTO ANSWER** function is activated, the handset will take a call automatically when you lift it out of the cradle.



### Adjusting talking volume

---

Press  or  () to adjust the talking volume.

 
### Muting

---

- ▶ Press  to deactivate the microphone in your handset during an external call.
- ▶ Press  again to reactivate the microphone.

 
### Ending a call



 


---

Press the end call key .

### Activating/deactivating auto answer

---

If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key .

- ▶ Press .
- ▶ Select **PERSONAL SET.** with  and confirm with .
- ▶ Select **AUTO ANSWER** and confirm with .
- ▶ Select **ON** or **OFF** and confirm with .

### Calling Line Identification

---

**Precondition:**

**You have applied the CID service.**

When you get a call, the caller's phone number will be displayed on your handset. The caller's name and number will be both displayed if it is stored in the phonebook

**Please note:**

The phone was made according to the national standards. However sometimes the CID function can't be displayed properly for the reason of some special using condition: e.g. connecting several phones on a single line or the PABX is not a standard appliance. Please contact your local telecom service supplier.

## Using the directory and lists

---

 

The options are:

- ◆ Directory
- ◆ Last number redial list
- ◆ Call history
- ◆ Call-by-call list

### Directory

---

In the directory you can store up to 50 phone numbers and corresponding names.

- ▶ In idle status, open the directory by pressing the  key.
- ▶ Press  to look for entries.







#### Length of entries

Number: max. 24 digits

Name: max. 15 characters




### Saving a number in the directory

---

- ▶ Press  and  to open the directory menu.
- ▶ Select **ADD ENTRY** with  and confirm with .
- ▶ Enter the name of the contact and confirm with .
- ▶ Enter the phone number and confirm with .




 



### Dialling with the directory

---

- ▶ Press  and select an entry with .
- ▶ Press  to dial.




 
 
 
 
### Editing an entry in the directory

---

- ▶ Press  and  to open the directory menu.
- ▶ Select **EDIT ENTRY** with  and confirm with .
- ▶ Select an entry and confirm with .
- ▶ Edit the name and confirm with .
- ▶ Edit the phone number and confirm with .

### Deleting an entry in the directory

---




 
 
 
- ▶ Press  and  to open the directory menu.
- ▶ Select **DELETE ENTRY** with  and confirm with .
- ▶ Select an entry and confirm with .
- ▶ Confirm the message **DELETE ? / DELETE ALL?** with  (on base) /  (on handset).

The entry is deleted, **DELETED** is displayed.

Please delete expired entries to keep up the directory storage.

### Deleting the complete directory

---




- ▶ Press  and  to open the directory menu.
- ▶ Select **DELETE LIST** with  and confirm with .
- ▶ Confirm the message **DELETE ? / DELETE ALL?** with  (on base) /  (on handset).

The directory is deleted, **DELETED** is displayed.

### Last number redial list





---

The last number redial list contains the ten numbers last dialled.

- ▶ Press  and select a number with .
- ▶ Press  to dial.

### Call history

---



 

 
- ▶ Press  (Handset) /  (Basestation) and select a number with .
- ▶ Press  to dial.

**Precondition:** Calling Line Identification (page 12) is applied and there are stored calls.

### Setting the type of list

---

Depending on the type of list set, all numbers of the last 30 incoming calls or just the missed calls are saved.

- ▶ Press  to open the menu.
- ▶ Select **PERSONAL SET.** with  and confirm with .
- ▶ Select **CALL LOGS** and confirm with .
- ▶ Select **ALL CALLS** or **MISSED CALL** and confirm with .

The calls list entries are retained when you change the list type.



 
### Call-by-call list

---

In the call-by-call list, you can store network provider prefixes ("call-by-call numbers").

#### Store a call-by-call number

---


- ▶ Press the  key **twice**.
- ▶ Enter the provider's name and confirm with .
- ▶ Enter the provider's number and confirm with .

The method for entering the call-by-call number below is for your reference since it may be different for various cards.


- ▶ Enter the call-by-call number, e.g. 17910.
- ▶ Insert a pause by pressing the # key **twice** if necessary.

#### Use the call-by-call dialling

 
 

---

- ▶ Enter a long distance number and then press .

Or:

- ▶ Select a number from the directory or redial list and then press .

Or:

- ▶ Press  or , then press  and then enter the long distance number.



## Using several handsets

---

### Making internal calls/Intercom

---

Internal calls to other handsets registered to the same base are free.

#### Calling handset

- ▶ Press **[69]**.
- ▶ Enter the number of the handset.  
Or press **[0 3]** to call the base.  
Or press the star key **[\* 3]** to call all handsets.
- ▶ To answer the call with the handset or base, press **[↶]** or **[📞]**.

#### Ending a call

- ▶ Press the end call **[📞]** key.

### Transferring a call to another handset

---

You can transfer an external call to another handset (connect).

- ▶ During the external call, press **[69]**.
- ▶ Enter the handset number you want to transfer.

When the internal participant answers:

- ▶ If necessary announce the external call.
- ▶ Press the end call key **[📞]**.

The external call is transferred to the other handset.

### Internal consultation calls

---

When you are speaking to an **external** participant, you can call an **internal** participant at the same time for consultation.

- ▶ During the external call, press **[69]**.
- ▶ Enter the handset number you want to consult with.

You are connected with the internal participant. To return to held call press **[69]**. If an **internal** participant presses the end call key **[📞]**, the other handset remains connected to the external participant.

## Conference calls

---

When you are speaking to an **external** participant, an internal caller can listen in on this call and take part in a conference call.

#### Activate/Deactivate conference call

- ▶ Press **[≡]**.
- ▶ Select **CONFERENCE** with **[↻]** and confirm with **[OK]**.
- ▶ Select **ON/OFF** to activate/deactivate the function and confirm with **[OK]**.

#### Starting a conference call

The **CONFERENCE** function must be activated as described above.

The line is engaged with an external call. Your display will show information to that effect.

- ▶ Press **[↶]** or **[📞]** to start a conference call.

#### Ending a conference call

- ▶ Press the end call key **[📞]**.

If an **internal** participant presses the end call key **[📞]**, the other handset remains connected to the external participant.

## Operating the answer machine of the base


---

You can operate the answer machine that is integrated into the base using the keys on the base (page 2) or by remote control (other phone/mobile phone, see page 17).

### Activating/deactivating the answer machine

---

In order to accept calls automatically the answering machine must be activated.

- ▶ Press  to activate or deactivate the answering machine.

### Incoming message

When the answering machine is activated, an incoming call is processed as follows:

After playing the announcement the answering machine generates a beep and starts recording mode. The recording mode is ended automatically after 3 minutes or when the caller hangs up. As an indication of a new message, **VOICE MSG XX/YY** is shown on the display, and the LED at the answer machine on/off button flashes (XX=number of new messages, YY=number of total messages).

#### Please note:



- If no personal announcement is recorded a pre-recorded announcement is played.
- If the recording memory is exhausted, the answering machine will deactivate automatically until you delete some messages.

### Recording a personal announcement


 
---

The phone is supplied with a pre-recorded announcement.


 
To record a personal announcement proceed as follows:

- ▶ Press and hold  ()

The recording starts when **ANNOUNCEMENT RECORDING** is displayed.

- ▶ Now speak your announcement (max. 2 minutes).
- ▶ Release the  () key.

### Restoring pre-recorded announcement

- ▶ Press and hold the  () key and release it as soon as **ANNOUNCEMENT RECORDING** is displayed.

### Play back announcement

- ▶ Press  () **briefly**.



If you have not recorded a personal announcement, the pre-recorded announcement is played as follows:

*Please leave your message after the tone.*


 
### Recording a family message


---

You can leave a message for other family members on your answering machine.

- ▶ Press and hold  ()

The recording starts when you hear a beep.

- ▶ Now leave your message (max. 3 minutes).
- ▶ Release the  () key to end the recording.

A new message is indicated by the  icon in the display.

## Playing back messages

Press **[▶▶]** to play back a message.

You have the following options:

- [▶▶]** Switch to pause/play back
- [▶]** Skip to next message
- [◀]** Skip to previous message

## Deleting messages

Press **[X]** to delete the message currently played back.

Please delete messages regularly to make storage available for new messages.

## Call acceptance/charge saving function for remote operation

You can set when you want the answer machine to accept a call.

- ▶ Press **[≡]**.
- ▶ Select **NO.OF RINGS** with **[↓]** and confirm with **[OK]**.
- ▶ Select **3 RINGS**, **6 RINGS** or **TOLL SAVER** and confirm with **[OK]**.

In **TOLL SAVER** mode, the following applies for call acceptance:

- ◆ If there are no new messages, the answer machine accepts a call after **6** rings.
- ◆ If new messages are present, the answer machine accepts a call after **2** rings.

When operating remotely you can tell after the second ring that there are no new messages (otherwise the answer machine would already have accepted your call). There will be no call charges if you hang up now.

## Operating when on the move (remote control)

You can check and activate your answer machine from any other telephone (hotel, pay phone etc.).

### Preconditions:

- ◆ The phone you are using for remote operation has touch tone dialling (DTMF), i.e. you hear different tones when you press the keys. Alternatively, you can use a code transmitter (available from your mobile phone retailer).

## Calling the answer machine and playing back messages

- ▶ Dial your own number.
- ▶ After you heard your announcement, enter the remote access code (default: 0000).

The following menu is audibly played:

The audio instructions for remote control	
Press <b>[2 ABC]</b>	Play the incoming messages.
Press <b>[2 ABC]</b> again	Stop
Press <b>[0 0]</b>	Erase
Press <b>[1]</b>	Backward
Press <b>[3 DEF]</b>	Forward
Press <b>[4 GHI]</b>	Activate or deactivate
Press <b>[7 PQRS]</b>	Play the functional list

## Change remote access code

Change the remote access code to prevent unauthorized remote access to your answering machine.

- ▶ Press and hold **[\*]**.
- ▶ When **SET REMOTE CODE** is displayed enter the new 3-digit remote access code and confirm with **[OK]**.

## Setting the handset






---

Your handset is preconfigured, but you can change the settings to suit your individual requirements.






### Changing audio settings

---

#### Changing the ringer volume



 


- ▶ Press .
- ▶ Select **AUDIO SETTING** with  and confirm with .
- ▶ Select **RINGER VOLUME** and confirm with .
- ▶ Choose between five volumes: **HIGH**, **MEDIUM**, **LOW**, **OFF** and the **ASCENDING** ring (volume increases with each ring) and confirm with .

#### Changing the melody

- ▶ Press .
- ▶ Select **AUDIO SETTING** with  and confirm with .
- ▶ Select **RINGER MELODY** and confirm with .
- ▶ Choose between various ringer melody and confirm with .



 


### Setting the contrast

---

- ▶ Press .
- ▶ Select **PERSONAL SET.** with  and confirm with .
- ▶ Select **CONTRAST** and confirm with .
- ▶ Choose between three levels (**LEVEL 1**, **LEVEL 2**, **LEVEL 3**) and confirm with .

### Setting the key tone



 


---

- ▶ Press .
- ▶ Select **PERSONAL SET.** with  and confirm with .
- ▶ Select **KEY BEEP** and confirm with .
- ▶ Select **ON/OFF** to activate/deactivate the key tone and confirm with .

### Changing the display language

---

 

 


You can view the display texts in different languages.

- ▶ Press .
- ▶ Select **PERSONAL SET.** with  and confirm with .
- ▶ Select **LANGUAGE** and confirm with .
- ▶ Select **ENGLISH/FRENCH** to change the language and confirm with .

### Restoring the handset to the factory settings

---

You can reset any individual settings and changes that you have made. This will not affect entries in the directory or the handset's registration to the base.

- ▶ Press .
- ▶ Select **ADVANCED SET.** with  and confirm with .
- ▶ Select **HANDBSET RESET** and confirm with .
- ▶ Select **YES** to reset the handset or **NO** to cancel the restoring process and confirm with .

## Setting the base

---

The base settings are carried out using a registered Gigaset C67H handset.

## Setting the date and time






---

You do not need to set time and date on base again, if you have set on handset (see page 9).





 
## Changing audio settings

---

### Changing the ringer volume





- ▶ Press .
- ▶ Select **AUDIO SETTING** with  and confirm with .
- ▶ Select **RINGER VOLUME** and confirm with .
- ▶ Choose between four volumes (**HIGH**, **MEDIUM**, **LOW**, **OFF**) and confirm with .

### Changing the melody

- ▶ Press .
- ▶ Select **AUDIO SETTING** with  and confirm with .
- ▶ Select **RINGER MELODY** and confirm with .
- ▶ Choose between various ringer melody (by pressing 0 to 9) and confirm with .





## Setting the key tone

---

- ▶ Press .
- ▶ Select **KEY BEEP** with  and confirm with .
- ▶ Select **ON/OFF** to activate/deactivate the key tone and confirm with .

## Setting the contrast


 


---

- ▶ Press .
- ▶ Select **CONTRAST** with  and confirm with .
- ▶ Choose between three levels (**LEVEL 1**, **LEVEL 2**, **LEVEL 3**) and confirm with .

## Restoring the base to the factory settings

---

When the settings are restored, the handsets are still registered.

- ▶ Press .
- ▶ Select **BASE RESET** with  and confirm with .
- ▶ Select **YES** to reset the base or press **NO** to cancel the restoring process and confirm with .

## Connecting the base to PABX

---





The following settings are only necessary when your PABX requires them; see the PABX user guide.

### Dialling modes and flash time

---

#### Changing the dialling mode



 

---

- ▶ Press .
- ▶ Select **TONE/PULSE** with  and confirm with .
- ▶ Select the dialling mode **TONE** (Touch tone dialling (DTMF)) or **PULSE** (Dial pulsing (DP)) and confirm with .

#### Setting flash time

---





Your phone is preset at the factory for operation on the main connection. For operation on a PABX, you may have to change this value. Please refer to the user guide for your PABX.

- ▶ Press .
- ▶ Select **FLASH TIME** with  and confirm with .
- ▶ Select the flash time in ms (100, 300, 600) and confirm with .

### Saving an access code (PABX prefix)

 

 

---

**Precondition:** You may have to enter an access code for external calls in your PABX, e.g. "9". This number can be automatically prefixed if you set the prefix.

- ▶ Press .
- ▶ Select **PABX PREFIX** with  and confirm with .
- ▶ Enter or change the access code, at least two digits and confirm with .

## Network Setting



---

- ▶ Press .
- ▶ Select **NETWORK** with  and confirm with .
- ▶ Select **PUBLIC NET.** or **PRIVATE NET.** and confirm with .

 
 



 

### Dial an external number

---

The access code (**PABX PREFIX**) is automatically prefixed, if all preconditions are fulfilled:

 
 
- ◆ The **NETWORK** is set to **PRIVATE NET.**
- ◆ The access code (**PABX PREFIX**) is set.
- ◆ You enter the phone number before pressing  or .

#### Example:

- ▶ Set **NETWORK** to **PRIVATE NET.**
- ▶ Set **PABX PREFIX** number to 9.
- ▶ Enter     .
- ▶ Press  or .

The number dialled out is 9P12345.

#### Caution:

The access code (**PABX PREFIX**) is not prefixed if you press  or  before entering number.

## Appendix

---

### Care

---

Wipe the base station, charging cradle and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

**Never** use a dry cloth. This can cause static.

### Contact with liquid

---

If the handset has come into contact with liquid:

1. **Switch off the handset and remove the battery pack immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)**.
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

## General Specifications

---

Range	up to 300 m outdoors, up to 50 m indoors
Base station power supply	230 V ~/50 Hz
Environmental conditions in operation	+5 °C to +45 °C;
Handset size	approx. 52 x 152x 28 mm (Width x Length x Depth)
Handset weight	ca. 138 g
Standby time (hours)	120
Talktime (hours)	5
Battery Capacity (mAh)	650

## Recommended batteries

Technology:

Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 600–1200 mAh





We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life:

- ◆ SanyoTwicell 650
- ◆ SanyoTwicell 700
- ◆ Panasonic 700 mAh "for DECT"
- ◆ GP 700 mAh
- ◆ Yuasa AAA Phone 700
- ◆ Varta Phone Power AAA 700mAh
- ◆ GP 850 mAh
- ◆ Sanyo NiMH 800
- ◆ Yuasa AAA 800
- ◆ Corun AAA 650 mAh

The device is supplied with three recommended batteries.

## Writing and editing text

 
 
 
 


 
 
 
 
 
 

The following rules apply when writing text:

- ◆ Control the cursor with    .
- ◆ Characters are inserted on the left of the cursor.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

## Writing names

Press the relevant key several times to enter letters/characters.

 
 
 
 

 
 
 
 
 
 
 

## Standard characters on the base

	1x	2x	3x	4x	5x
	 <sup>1)</sup>	_	*	!	1
	a	b	c	(	2
	d	e	f	)	3
	g	h	i	/	4
	j	k	l	'	5
	m	n	o	;	6
	p	q	r	s	7
	t	u	v	?	8
	w	x	y	z	9
	0				
 <sup>2)</sup>	*				
 <sup>2)</sup>	#	P			

1)Space

2)without effect when entering names

## Standard characters on the handset

	1x	2x	3x	4x	5x
	 <sup>1)</sup>	-	!	#	1
	a	b	c	(	2
	d	e	f	)	3
	g	h	i	/	4
	j	k	l	'	5
	m	n	o	;	6
	p	q	r	s	7
	t	u	v	<sup>2)</sup>	8
	w	x	y	z	9
	0				
 <sup>3)</sup>	*				
 <sup>3)</sup>	#	P			

1)Space

2)black rectangle

3)without effect when entering names



## Customer Service & Assistance

---

Do you have any questions? As a Gigaset customer, you can find help quickly in this User Manual and in the service section of our Gigaset online portal [www.gigaset.com/service](http://www.gigaset.com/service).

In our constantly updated online service you can find:

- ◆ Extensive information about our products
- ◆ FAQ compilations
- ◆ Keyword search to help find topics quickly
- ◆ Compatibility database: Find out which base stations and handsets can be combined.
- ◆ Product comparison: Compare the features of several products with each other.
- ◆ Downloads for user manuals and current software updates
- ◆ E-mail contact form for customer service

Please register your phone online right after purchase.

This enables us to provide you with even better service regarding questions or an after sales query/issue/claim. In order to contact our customer service via email, please use the email contact form from our Gigaset online portal after selecting your home country.

Our representatives are also available on the telephone hotlines for consultation.

## Customer Service &amp; Assistance

Australia .....	1300 780 878	verso la rete di altri operatori fissi o mobili consultate le tariffe del vostro operatore)
Austria .....	0043 1 311 3046	Jordan .....
Bahrain .....	97 31 73 11 173	Kuwait .....
Belgium .....	0 78 15 66 79	+965 -22458737/22458738
Bosnia Herzegovina .....	033 276 649	Lebanon .....
Brazil .....	4003 3020	+9611240259/
(grandes cidades e regiões metropolitanas -		+9611236110
Custo de uma ligação local)		Luxembourg .....
.....	0800 888 3020	+352 8002 3811
(demaiss localidades - Gratuito)		Malaysia .....
Bulgaria .....	<b>+359 2 9710666</b>	+603-8076 9696
(0.50 евро на минута от всички държави за		Malta .....
стационарни телефони. За обаждания от		+390 2360 46789 (0,10 €)
мобилни телефони може да има други цени).		Mexico
Canada .....	1-866 247-8758	... 01800 999 4442738 (01800 999 GIGASET)
China .....	0 21 400 670 6007 (RMB 0.11)	Netherlands .....
Croatia .....	01 2456 555 (0,23 Kn)	<b>0900-3333102</b>
Czech Republic .....	0 233 032 727	(0,25 € per minuut (vast net). Voor oproepen uit
Denmark .....	+45 (0) 35 25 86 00	het mobiele netwerk kunnen andere prijzen
Finland .....	09 231 134 25	gelden.)
France .....	<b>+33 170 706 181</b>	New Zealand .....
Coût d'un appel local depuis une ligne fixe		0800 780 878
France Télécom.		Norway .....
Germany .....	01805 333 222	22 70 84 00
Der Anruf kostet Sie aus den deutschen Fest-		(Oppstartskost 89 øre + 15 øre pr minutt fra
netzen 0,14 € pro Minute. Anrufe aus den deut-		fasttelefon linje. For samtaler fra mobil vil det
schon Mobilfunknetzen kosten höchstens 0,42		gjelde egne priser.)
€ pro Minute.		Oman .....
Greece .....	<b>801-100.0.500</b>	+968 709281 Ext. 49/21/75
(Χρέωση 0,0026 € το λεπτό για το σταθερό δίκτυο		Poland .....
της Ελλάδας. Για κλήσεις από κινητό ίσως ισχύουν		801 140 160
άλλες χρεώσεις)		Portugal .....
Hong Kong .....	2763 0203	<b>(351) 808 781 223</b>
.....	2389 7285	(custo de uma chamada local)
Hungary .....	01 267 21 09 (27 Ft)	Qatar .....
India .....	Please refer to your	00974 4257777 / 00974 4257844
.....	local warranty card	+40 021 204 9130
Indonesia .....	(62-21) 5673813	Russia .....
.....	(62-21) 888856000	8 (495) 2281312
Ireland .....	18 50 77 72 77	Saudi Arabia .....
Italy .....	<b>199.15.11.15</b>	00966 2 6500282 Ext. 209
(€ cent 8,36 + IVA al minuto da telefono fisso		Serbia .....
della rete Telecom Italia senza scatto alla ris-		0800 222 111
posta mentre per le chiamate effettuate attra-		Singapore .....
		6735 9100
		Slovak Republic .....
		02 59 68 22 66 (4,428 sk)
		Slovenija .....
		01 5644171
		South Africa .....
		+2711 46 13 181
		Spain .....
		902 103935
		Sweden .....
		87 50 99 11
		Switzerland .....
		0848 212 000
		Taiwan .....
		02 266 24343
		Turkey .....
		0216 459 98 59
		Ukraine .....
		+380-44-451-71-72
		United Arab Emirates .....
		+97144458255/
		+97144458254
		United Kingdom .....
		0 84 53 67 08 12
		USA .....
		1-866 247-8758
		Vietnam .....
		1900 545 416

## Manufacturer warranty (Middle East)

---

On the purchase of your new Gigaset product, we guarantee that this equipment is a genuine manufacturer's product and extend the following warranty:

We guarantee this product against manufacturing defects for two full years from the date of purchase, unless specified otherwise.

Adaptors and batteries for cordless phones carry 6 months warranty from the date of purchase.

Gigaset Communications authorized Service Centres will replace or repair, if necessary, any defective part/parts free of charge by presenting this certificate of warranty at the Service Centre mentioned overleaf.

This Certificate of warranty does not apply if the telephone has:

1. Been misused, mishandled, willfully damaged, neglected, damaged by lightning, improperly repaired, tested, altered improperly in any way.
2. A defect arising out of any failure to follow instructions either in the manual or product specification.
3. In case repairs are carried out by unauthorized personnel or unauthorized source warranty will be void.
4. A defect arising from using non-Gigaset approved accessories or ancillary items attached to or in connection with the telephone.
5. If this certificate of warranty is not signed and stamped by the authorized distributor.
6. Any other claim resulting out of or in connection with the device shall be excluded from this warranty.

### **For Southern Africa:**

In the event of an after-sales issue/warranty claim please refer back to your point of purchase.

Proof of purchase (receipt) has to be submitted.

**Certificate of warranty (Middle East)**

The warranty is not valid if it is not signed and stamped by the authorized distributor.

Please fill in the following details and stamp the card to calidate the warranty.

All details must be filled in by the dealer and retained by the customer.

This warranty shall apply to products purchased in the Middle East only.

Customer's Name: \_\_\_\_\_

Product / Model: \_\_\_\_\_

Dealer's Name: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_ Invoice / Cash Memo Details: \_\_\_\_\_

\_\_\_\_\_

Dealer's Stamp

## Service Centres (Midde East)

---

### UAE

#### Customer Service Hotline UAE

TEL: 00971-4-4458255 / 00971-4-4458254

#### Service Collection Point

www.technocare-prodigy.com

### KARAMA

Sea Shell Electronics

Opp. Karama Centre

Dubai, UAE

Tel: 00971-4-3979228

Fax: 00971-4-3966205

### Deira

Souvenir Mobiles,

Omar Bin Katab Road,

Oppst. Gulf Peral hotel (Tahir Hotel)

Al Baraha Street,

Tel: 00971-4-2731910 / 00971-4-2737377

### Sharajah

Hotline Telecom

Sahara Centre

Sharjah, UAE

Tel: 00971-6-5312126

### Al Ain

Phone Station

Al Ain Mall, Town Centre,

Tel: 00971-3-7515588

### Fujairah

Al Manzil,

Al Gurfa Street,

Main market Road,

Tel: 00971-9-2233488

### Oman

National Telephone Services Co. LLC

P.O. Box 2786 PC:112, Sultanate of Oman

Tel: +968-709281 Ext. 45/21/75

Fax: +968-791013

E-mail: isonts@omentel.net.om

### Qatar

Modern Home,

51-East - Salwa Road,

Al-Maha Complex, Doha

Tel: 00974-4257844 / 00974-4257777

Fax: 00974-4314700

### Bahrain

Authorized Service Center,

Bldg: 211, Rd: 339, Block: 321,

Old Place Road, Manama,

Tel: 00973-17311173

E-mail: servicemanager@ashrafs.com.bh

### Saudi Arabian Service Centers: Ahmed Abdulwahed Trading Co.

#### Jeddah Service Center

Al-Amal Plaza, Hail Street,

Jeddeh, Saudi Arabia,

Tel: 02-6500282 Ext. 209

#### Riyadh Service Center

Olaya Street

Riyadh, Saudi Arabia,

Tel: 01-4622470 / 4623850

#### Khobar Service Centre

Al-Khobar Street,

Al-Khobar, Saudi Arabia,

Tel: 03-8944193/03-8952359

#### Madina Munawara

Al-Ayon Street,

Tel: 00966-4-8387931

#### Khamis Mushyat

Al-Khalidiya St.,

Tel: 00966-7-2230772

#### Tabuk

Main Street,

Tel: 00966-4-4219232

## **Service Centres (Middle East)**

### **Kuwait**

#### **Customer Service Hotline Kuwait**

Tel: 00965-22458737 / 00965-22458738

Al-Baptain Service Center

Shop #: 247

Qibla, Block 11,

Avenue 11,

Souk al Kabeer,

Fahad Al Salem Street,

Tel: 00965-2464993

### **Jordan**

SEDR Home & office Electronics

Co - Tronicom

Wasfi Al-Tal St.,

Building No. 80,

2nd floor,

Tel: 00962-6-5625460/1/2

### **Lebanon**

306, Jdeideh Sin el Fil Blvd,

Tel: 00961-1240259 / 00961-1236110

# Product warranty (India)

---

## Congratulations

On the purchase of your new Gigaset product, we guarantee that this equipment is a genuine manufacturer's product and extend the following warranty:

We guarantee this product against manufacturing defects for two full years from the date of purchase, unless specified otherwise.

Adaptors and batteries for cordless phones carry 6 months warranty from the date of purchase.

Gigaset Communications authorized Service Centres will replace or repair, if necessary, any defective part/parts free of charge by presenting this certificate of warranty at the Service Centre mentioned overleaf.

## Warranty

1. This Certificate of warranty does not apply if the telephone has:
2. Been misused, mishandled, willfully damaged, neglected, damaged by lightning, improperly repaired, tested, altered improperly in any way.
3. A defect arising out of any failure to follow instructions either in the manual or product specification.
4. In case repairs are carried out by unauthorized personnel or unauthorized source warranty will be void.
5. A defect arising from using non-Gigaset approved accessories or ancillary items attached to or in connection with the telephone.
6. If this certificate of warranty is not signed and stamped by the authorized distributor.
7. Any other claim resulting out of or in connection with the device shall be excluded from this warranty.

**Product warranty (India)**

**Certificate of warranty (India)**

The warranty is not valid if it is not signed and stamped by the authorized distributor.

Please fill in the following details and stamp the card to calidate the warranty. All details must be filled in by the dealer and retained by the Customer. The purchase receipt shall be required as evidence for invoking the warranty.

Customer's Name: \_\_\_\_\_

Product / Model: \_\_\_\_\_

Dealer's Name: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

Invoice / Cash Memo No./Date: \_\_\_\_\_

- Ownership of devices or components replaced by and returned Gigaset communications shall vest in Gigaset communications.
- This warranty shall apply to 2.4Ghz products purchased in India only.

Dealer's Stamp



## Service Centres (India)

---

We offer you support that is fast and tailored to your specific needs!

Our Online Support on the Internet:

[www.gigaset.com/service](http://www.gigaset.com/service)

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

### Service Centres

#### **Ahmedabad - inTarvo Technologies Limited**

1st Floor, Rituraj Complex, 84/B, Swastik Society, Near Swastik Cross Roads, Navrangpura Ahmedabad - 380 009, Gujarat

Mr. Alpesh Rabari

Phone: 079-65499327

E-mail: setl.ahm@intarvo.com

#### **Bangalore - inTarvo Technologies Limited**

# 6/A, AVS Compound, Ijipura, 80 ft Road, Koramangala, Bangalore - 560 034, Karnataka

Mr. Harish

Phone: 080-41312700

E-mail: rtoebl.bangalore@intarvo.com

#### **Baroda - inTarvo Technologies Limited**

Shop No.10-11, Ground Floor, Profit Center, Kalaghoda, Syajigunj, Baroda - 390 005, Gujarat

Mr. Rakesh Agrawal

Phone: 0265-3911106

E-mail: sewd.baroda@intarvo.com

#### **Chennai - inTarvo Technologies Limited**

No: 112, 1st Floor, Vairam Complex, Thyagaraya Road, T.Nagar, Chennai - 600 017, Tamil Nadu

Mr. Deepa Balajee

Phone: 044-43412292

E-mail: deepa.balajee@intarvo.com

#### **Delhi - inTarvo Technologies Limited**

G4, 5, 6 Chandra Bhawan Nehru Place, New Delhi - 110 019

Mr. Meenakshi

Phone: 011-41095840

E-mail: se.np@intarvo.com

#### **Gurgaon - inTarvo Technologies Limited**

12, 13, 14, First Floor, Ganpati Complex, Old Delhi Road, Opp Hudda Nersury, Near Kataria Chowk, Gurgaon - 122 001, Hararyana

Mr. Bhasker Patni

Phone: 0124-4286829 / -4286830

E-mail: bhasker.patni@intarvo.com

#### **Hyderabad - inTarvo Technologies Limited**

Sangeeta Plaza, No 3-9-241, 1st Floor, Near Police Station, West Marredpally, Secunderabad - 500 026, Andhra Pradesh

Mr. Narendra

Phone: 040-40072514

E-mail: csothers.hyd@intarvo.com

#### **Kochi - Bits N Bytes Computers**

No.43/1821 A, Post Office Building, S.R.M Road, Pachalam, Cochin, Kerala - 682 012

Mr. Shalu Thomas/Ms. Jinny

Phone: 9847401718 / 9744705512

E-mail: jinny.bits@gmail.com / micro-worldchn@vsnl.net

#### **Kolkata - inTarvo Technologies Limited**

2 Ripon Street, Near Hira International Hotel, Kolkata - 700 016, West Bengal

Mr. Surjit Dhar

Phone: 033-22277892/899

E-mail: se.east@intarvo.com

## Service Centres (India)

### **Ludhiana - inTarvo Technologies Limited**

2nd Floor Madhok Complex, Ferozepur Road, Ludhiana - 141 003, Punjab

Mr. Manpreet Kaur

Phone: 0161-5081043

E-mail: se.ludhiana@intarvo.com

### **Mumbai - inTarvo Technologies Limited**

First Floor, Hitech Plaza, Near MIDC office, Shanti nagar, Mahakali,Caves Road, Andheri (E) 400069, Mumbai

Mr. Kiran Chaudhary

Phone: 022-41224402

E-mail: kiran.chaudhary@intarvo.com

### **Nasik - inTarvo Technologies Limited**

Viraj Corner, 2nd Floor, Shop No-9, Near India Bull, Opp BSNL Office, Sharanpur Road, Canada Corner, Nasik - 422 001, Maharashtra

Mr. Gopichand A. patil

Phone: (0253) 3024014

E-mail: sewd.nashik@intarvo.com

### **Noida - inTarvo Technologies Limited**

C-32, First Floor, SECTOR-2, Near Hotel Nirula, Noiada - 201 301, Uttar Pradesh

Ms. Sudhir

Phone: 0120-4318632

E-mail: rcd.noida@intarvo.com

### **Pune - inTarvo Technologies Limited**

"Shubham", 858, Dastur Meher Road, Near To Old Dorabji & Sons Hotel, Camp Pune - 411 001, Maharashtra

Mr. Savita Pardeshi

Phone: 020-41255792

E-mail: se.pune@intarvo.com

### **Rajkot - inTarvo Technologies Limited**

RT Outsourcing Services Ltd - Rajkot, 1 ST FLOOR PRTRIBHA COMPLEX NEAR MAHASA-GER TRAVELS MOTI TANKI CHOWK Rajkot – 360001

Mr. Ajit Nay

Phone: 0281-3049872/3054819/20

E-mail: se1.rajkot@rtservices.com

### **Surat**

S.P Connecting

SEES, Shiv Pooja Point, Opp Turning point , Ghoddod road, Surat - 395002

Mr.Rushi Popat

Phone: 2612660552/ 9879133662

E-mail: sonyericsson.surat@yahoo.com

### **Vijayawada - Sigma Technologies**

# 40-5-19/4A Lakshman's Enclave, Tikkle Road, Vijayawada - 520 010, Andhra Pradesh

Mr.Ravikumar Khammampalli

Phone: 9246472168

E-mail: customercare@sigmatechnologies.info

### **Vizag - Planet Solutions**

KhammampalliC/o. S.N.K. IT Solutions Pvt. Ltd., D.No: 50-12-7/2, First Floor, Satya Residency, Seethammapeta, 530 016 Visakhapatnam

Mr. Srinivas Emula

Mr. K. Somu Naidu

Phone: 97044-80006 / 92466-45999

E-mail: aishplanet@

# Index

---

## A

- Access code . . . . . 20
  - for a PABX . . . . . 20
- Activating
  - answer machine . . . . . 16
  - call acceptance . . . . . 12
  - keypad lock . . . . . 9
- Answer machine . . . . . 16
  - activating/deactivating . . . . . 16
  - deleting messages . . . . . 17
  - incoming message . . . . . 16
  - playing back messages . . . . . 17
  - recording a personal announcement . . . . . 16
  - remote operation . . . . . 17
- Automatic
  - call acceptance . . . . . 12

## B

- Base station
  - connecting . . . . . 7
  - connecting and installing . . . . . 7
  - connecting to PABX . . . . . 20
  - range . . . . . 7
  - restoring to factory settings . . . . . 19
  - setting . . . . . 19
- Battery
  - charging . . . . . 8
  - display . . . . . 8
  - fitting . . . . . 7
  - icon . . . . . 8
  - recommended batteries . . . . . 22

## C

- Call
  - accepting . . . . . 12
  - ending . . . . . 12
  - external . . . . . 12
  - internal . . . . . 15
  - transferring (connect) . . . . . 15
- Call acceptance . . . . . 12, 17
- Call duration . . . . . 12, 16
- Call history . . . . . 14
- Call-by-call list . . . . . 14
- Call-by-call numbers . . . . . 14

- Calling
  - external . . . . . 12
- Calling Line Identification . . . . . 12
- Care of the telephone . . . . . 21
- Changing
  - dialling mode . . . . . 20
  - display language . . . . . 18
  - ringer tone . . . . . 18, 19
- Charge saving function (remote operation) . . . . . 17
- Conference (internal) . . . . . 15
- Connecting, base station to PABX . . . . . 20
- Consultation call (internal) . . . . . 15
- Correcting incorrect entries . . . . . 9
- Customer Care . . . . . 23
- Customer Service & Assistance . . . . . 23

## D

- Deactivating
  - answer machine . . . . . 16
  - call acceptance . . . . . 12
  - keypad lock . . . . . 9
- Deleting
  - characters . . . . . 9
  - message . . . . . 17
- Deregistering (handset) . . . . . 8
- Dial pulsing . . . . . 20
- Dialling
  - call-by-call list . . . . . 14
  - directory . . . . . 13
- Dialling mode . . . . . 20
- Directory . . . . . 13
  - add entry . . . . . 13
  - delete entry . . . . . 13
  - edit entry . . . . . 13
  - saving entry . . . . . 13
- Display
  - changing display language . . . . . 18
  - contrast . . . . . 18, 19
  - in idle status . . . . . 9
  - number (CLI/CLIP) . . . . . 12
  - setting . . . . . 18, 19
- DP (dial pulsing) . . . . . 20

## E

- End call key . . . . . 12
- Ending, call . . . . . 12
- Ending, see deactivating

**H**

Handset  
  contact with liquid . . . . . 21  
  deregistering . . . . . 8  
  display language . . . . . 18  
  idle status . . . . . 9  
  locating . . . . . 9  
  muting . . . . . 12  
  paging . . . . . 9  
  registering . . . . . 8  
  restoring to factory settings . . . . . 18  
  setting . . . . . 18  
  setting up . . . . . 7  
  signal strength . . . . . 7  
  transferring a call . . . . . 15  
  using several . . . . . 15  
Hearing aids . . . . . 5

**I**

Icon  
  battery . . . . . 8  
  keypad lock . . . . . 9  
Idle status (display) . . . . . 9  
Idle status, returning to . . . . . 9  
Incorrect input (correction) . . . . . 9  
Installing, base station . . . . . 7  
Internal  
  conference . . . . . 15  
  consulting . . . . . 15  
  making calls . . . . . 15  
Internal call . . . . . 15

**K**

key tone . . . . . 18, 19  
Keypad lock . . . . . 9  
Keys  
  end call key . . . . . 12

**L**

Last number redial . . . . . 13  
Liquid . . . . . 21  
List  
  call history . . . . . 14  
  call-by-call list . . . . . 14  
Locating, handset . . . . . 9  
Lock  
  activating/deactivating keypad  
  protection . . . . . 9

**M**

Mains adapter . . . . . 5  
Making calls  
  accepting a call . . . . . 12  
  external . . . . . 12  
  internal . . . . . 15  
Manufacturer warranty (Middle East) . . . . . 25  
Medical appliances . . . . . 5  
Menu  
  menu guidance . . . . . 9  
  overview . . . . . 10, 11  
Message  
  answer machine . . . . . 16  
Message key  
  opening lists . . . . . 14  
Messages  
  deleting . . . . . 17  
  playing back . . . . . 17  
Muting  
  handset . . . . . 12

**N**

Network provider (numbers list) . . . . . 14  
Number  
  deleting in the directory . . . . . 13  
  displaying caller's number (CLIP) . . . . . 12  
  editing in the directory . . . . . 13  
  saving in the directory . . . . . 13  
Numbers list  
  network provider . . . . . 14

**P**

PABX  
  connecting base station . . . . . 20  
  saving access code . . . . . 20  
  setting dialling mode . . . . . 20  
Paging . . . . . 9  
Playing back  
  message (answer machine) . . . . . 17  
Product warranty (India) . . . . . 29

**R**

Range . . . . . 7  
Registering (handset) . . . . . 8  
Remote control . . . . . 17  
Ringer tone  
  changing . . . . . 18, 19  
  setting volume . . . . . 18, 19

**S**

Saving (access code) . . . . .	20
Service Centres (India) . . . . .	31
Service Centres (Midde East) . . . . .	27
Setting	
date . . . . .	9, 19
key tone . . . . .	18, 19
time . . . . .	9, 19
Setting up	
handset . . . . .	7
Signal strength . . . . .	7
Sound, see Ringer tone	
Special functions . . . . .	20
Specifications . . . . .	21

**T**

Talking volume	
adjusting . . . . .	12
Touch tone dialling . . . . .	20

**V**

Volume	
adjusting . . . . .	12
ringer tone . . . . .	18, 19

**W**

Warranty . . . . .	21
Writing, editing text . . . . .	22

Issued by  
Gigaset Communications GmbH  
Frankenstr. 2a, D-46395 Bocholt

© **Gigaset Communications GmbH 2011**  
All rights reserved. Subject to availability.  
Rights of modification reserved.  
[www.gigaset.com](http://www.gigaset.com)

**A31008-M1764-A601-6-3T19**