



FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler – features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

ACCESSORIES AND CONSUMABLES

In the AEG webshop, you'll find everything you need to keep all your AEG appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags...



Visit the webshop at:
www.aeg-electrolux.com/shop

CONTENTS

- 4 Safety information
- 5 Installation instructions
- 7 Product description
- 10 Operating instructions
- 13 Helpful hints and tips
- 15 Care and cleaning
- 16 What to do if...
- 17 Environment concerns

The following symbols are used in this user manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance.



General information and tips



Environmental information

Subject to change without notice



SAFETY INFORMATION



For your safety and correct operation of the appliance, read this manual carefully before the installation and use. Always keep these instructions with the appliance also if you move or sell it. The users must fully know the operation and safety functions of the appliance.

Children and vulnerable people safety



WARNING!

Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge to use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety.

- Keep all packaging away from children. There is the risk of suffocation or injury.
- Keep the children away from the appliance during and after the operation, until the appliance is cold.



WARNING!

Activate the child safety device to prevent small children and pets from an accidental activation of the appliance.

Safety during operation

- Remove all packaging, stickers and layers from the appliance before the first use.
- Set the cooking zones to "off" after each use.
- The risk of burns! Do not put the objects made of metal, for example cutlery or saucepan lids, on the surface that you cook. They can become hot.
- The Users with an implanted pacemaker must keep their upper body minimum 30 cm from induction cooking zones that are activated.



WARNING!

Fire risk! Too hot fats and oils can occur with ignition very quickly.

Correct operation

- Always monitor the appliance during operation.
- The appliance is only for domestic use!
- Do not use the appliance as a work or a storage surface.
- Do not keep hot cookware on the control panel to prevent damages of the controls.
- Do not put or keep very flammable liquids and materials, easy fusible objects (made of plastic or aluminium) on or near the appliance.
- Be careful when you connect the appliance to the near sockets. Do not let the electricity bonds touch the appliance or hot cookware. Do not let the electricity bonds to tangle.

How to prevent a damage to the appliance.

- If the objects or cookware fall on the glass ceramic, the surface can be damaged.

- Cookware made of cast iron, cast aluminium or with damaged bottoms can cause scratch of the glass. Do not move them on the surface.
- Do not let cookware boil dry to prevent the damage to cookware and the glass.
- Do not use the cooking zones with empty cookware or without cookware.
- Do not put the aluminium foil on the appliance.
- Do not put hot cookware on the display, also when the appliance is off. There is a risk to discolour or other damage to the display. A sound operates when there is a cookware on the display.
- Make sure that the airflow space of 5 mm between the worktop and front of the unit below it stays opened.



 



WARNING!

If there is a crack on the surface, disconnect power supply to prevent the electrical shock.

INSTALLATION INSTRUCTIONS



Before the installation, note down the serial number (Ser. Nr.) from the rating plate. The rating plate of the appliance is on its lower casing.

Modell HK884400XG		Prod.Nr. 949 595 186 00	
Typ 58 GBD C3 AU		220-240 V 50-60 Hz Induction 7,4 kW	
Made in Germany	Ser.Nr.	7,4 kW	
AEG	  		

The Safety Instructions



WARNING!

You must read these!

Make sure that the appliance is not damaged because of transportation. Do not connect a damaged appliance. If it is necessary, speak to the supplier.

Only an authorised servicing technician can install, connect or repair this appliance. Use only original spare parts.

Only use the built-in appliances after you assemble the appliance into correct built-in units and work surfaces that align to the standards.

Do not change the specifications or change this product. Risk of injury and damage to the appliance.

Fully obey the laws, ordinances, directives and standards in force in the country where you use the appliance (safety regulations, recycling regulations, electrical safety rules etc.)!

Keep the minimum distances to other appliances and units!

Install shock protection, for example install the drawers only with a protective floor directly below the appliance!

Keep safe the cut surfaces of the worktop from moisture with a correct sealant!

Seal the appliance to the work top with no space between with a correct sealant!

Keep safe the bottom of the appliance from steam and moisture, e.g. from a dishwasher or oven!

Do not install the appliance adjacent to doors and below windows! If not, when you open the doors or windows they can push off hot cookware from the appliance.





**WARNING!**



Risk of injury from electrical current. Carefully obey the instructions for electrical connections.

- The electrical mains terminal is live.
- Make electrical mains terminal free of voltage.
- Install correctly to give shock protection.
- Loose and incorrect plug and socket connections can make the terminal become too hot.
- A qualified electrician must install the connections in the clamps correctly.
- Use a strain relief clamp on cable.
- Use the correct mains cable of type H05BB-F Tmax 90°C (or higher) for a single phase or two phase connection.
- Replace the damaged mains cable with a special cable (type H05BB-F Tmax 90°C; or higher). Speak your local Service Centre.


The appliance must have the electrical installation which lets you disconnect the appliance from the mains at all poles with a contact opening width of minimum 3 mm.

You must have correct devices to isolate: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.

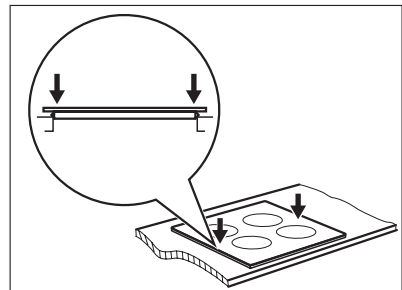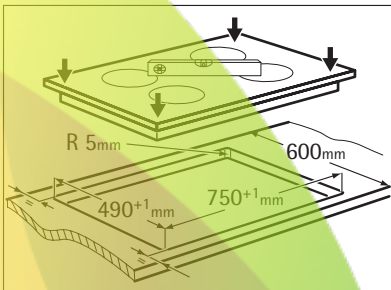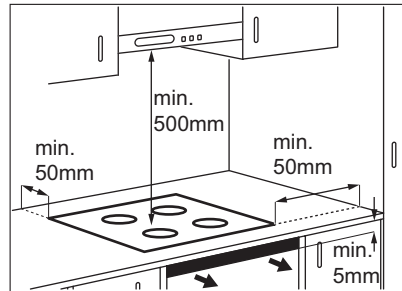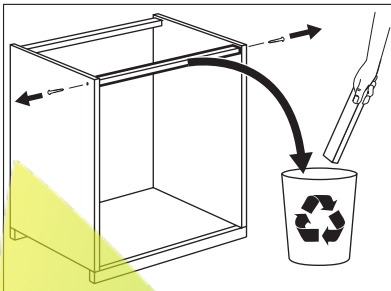Assembly

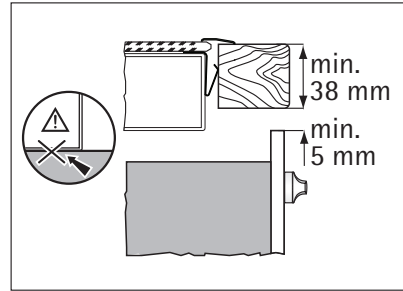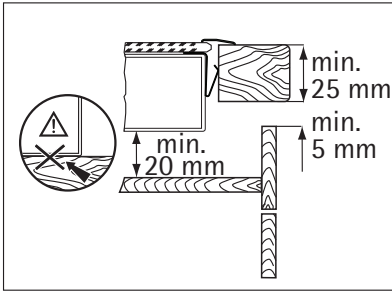


If you use a protection box (the additional accessory), the front airflow space of 5 mm and protective floor directly below the appliance are not necessary.

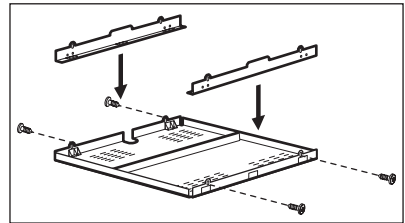


PRODUCT DESCRIPTION

General overview

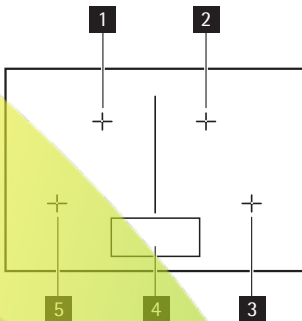

- 1** Induction cooking zone 2300W, with Power function 3200W
- 2** Induction cooking zone 2300W, with Power function 3200W
- 3** Induction cooking zone 2300W, with Power function 3200W
- 4** Control panel
- 5** Induction cooking zone 2300W, with Power function 3200W

Control panel layout

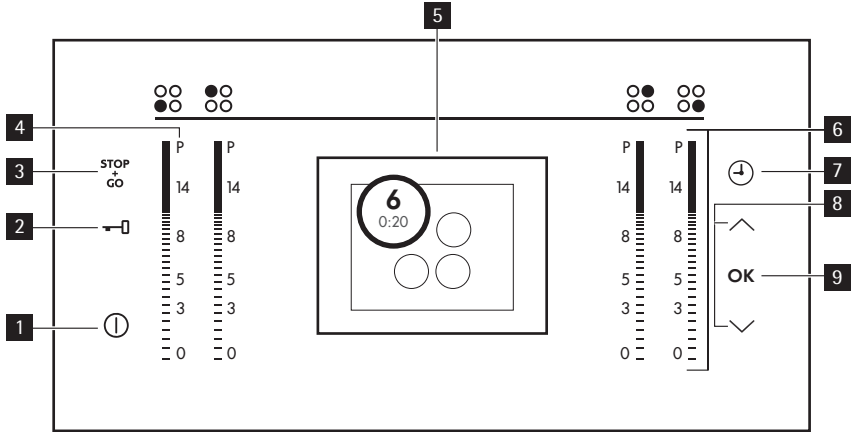


Use the sensor fields to operate the appliance. The displays, indicators and sounds tell which functions operate.

	sensor field	function
1	ⓘ	It activates and deactivates the appliance.
2	🔑	It locks/unlocks the control panel.
3	STOP+GO	It activates and deactivates the STOP+GO function.
4	P	It activates the Power Boost function.
5	The display	It shows the functions that operate.
6	The control bar	To set the heat setting.
7	🕒	It sets the timer (Automatic Counter , Power-off timer , Minute Minder).
8	^ / v	It set the settings.
9	OK	It confirms the setting.


Display

Messages in the display and sounds tell which functions operate.

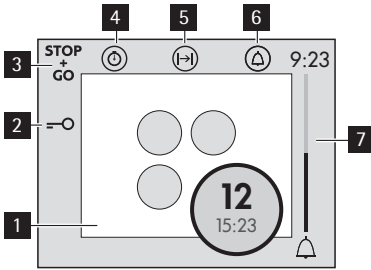

- 1** The cooking zones
- 2** The Key lock function operates.
- 3** The $\text{STOP} + \text{GO}$ function operates.
- 4** Automatic Counter
- 5** Power-off timer
- 6** Minute Minder
- 7** Minute Minder indicator

The cooking zone in the display	Description
	The cooking zone operates. Above: heat setting, below: the timer.
	Keep Warm / Stop+Go function operates.
	Power Boost is activated.
	Power Boost operates.
	Zone in adjustment.
	There is no cookware on the cooking zone.
	The Automatic Heat Up function operates.

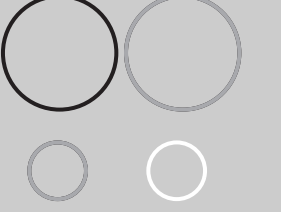The cooking zone in the display	Description
	<p>OptiHeat Control. The cooking zone is off. The Dimension and colours show the residual heat:</p> <ul style="list-style-type: none"> • Big red - still cooking • Big bright red - keep warm • Small bright red - still hot • Small white - the cooking zone is cold

Residual heat



WARNING!

After, a cooking session the cooking zone stay hot. The risk of burns!

The induction cooking zones make the heat necessary for cooking directly in the bottom of the cookware. The glass ceramic is hot from the heat of the cookware.

OPERATING INSTRUCTIONS

Activation and deactivation

Touch ① for 1 second to activate or deactivate the appliance.

Automatic Switch Off

The function deactivates the appliance automatically if:

- All cooking zones are deactivated.
- You do not set the heat setting after you activate the appliance.
- You spill something or put something on the control panel for more than 10 seconds, (a pan, a cloth, etc.). The sound operates some time and the appliance deactivates. Remove the object or clean the control panel.
- The appliance gets too hot (e.g. when, a saucepan boils dry). Before you use the hob again, the cooking zone must be cool.
- You use incorrect cookware. The symbol ? comes on and the cooking zone deactivates automatically after 2 minutes.
- You do not deactivate a cooking zone or change the heat setting. After some time, the appliance deactivates. See the table.

The times of Automatic Switch Off


The heat setting	1-3	4-7	8-9	10-14
The cooking zone deactivates after	6 hours	5 hours	4 hours	1.5 hours

Language selection


To change the language, start the appliance with **ⓘ** and then touch **OK**. Set the language menu with arrows. Touch **OK** to confirm. The display shows the list of languages. Touch **^** or **∨** to set the language. Touch **OK** to confirm.

The heat setting

Touch the control bar at the heat setting. Change up or down, if it is necessary. Do not release before you have a correct heat setting. The display shows the heat setting and the counter starts.

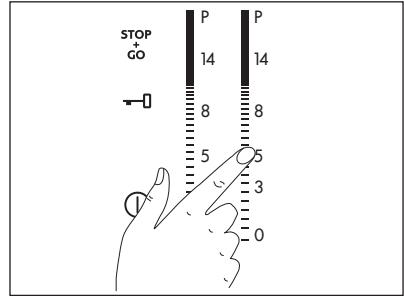

The Automatic Heat Up

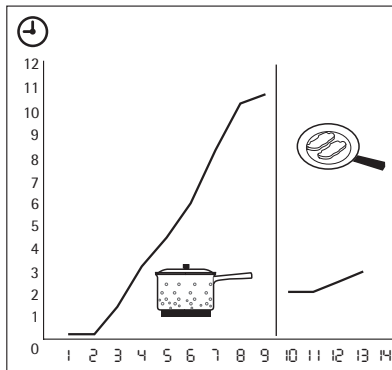

You can get a necessary heat setting in a shorter time if you activate the Automatic Heat Up function. This function sets the highest heat setting for some time (see the illustration), and then decreases to the necessary heat setting.

To start the Automatic Heat Up function for a cooking zone:

1. Touch **P**.
2. Immediately touch the necessary heat setting. (A comes on the display)

To deactivate the function change the heat setting.

Power Boost


Power Boost makes more power available to the induction cooking zones. Power Boost is activated for 10 minutes at most. After, that the induction cooking zone automatically sets back to highest heat setting.

To activate the function, touch **P**. **P** in the ring comes on. As the zone gets more hot, the colour of the ring changes.

To deactivate, touch a heat setting 1-14.

Power management

The power management divides the power between two cooking zones in a pair (see the illustration). The power function increases the power to the maximum level for one cooking zone in the pair. Automatically decreases the power in the second cooking zone to a lower level. The display for the reduced zone change between two levels.

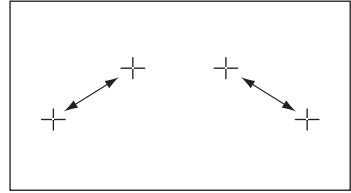

Timer

There are 3 timer functions: Automatic Counter, Power-off timer and Minute Minder. To set the timer function touch \odot again and again until the indicator of a necessary function comes on.

\odot Automatic Counter

Use this function to monitor how long the cooking zone operates. It starts automatically and comes on below heat setting in the cooking zone on the display.

- To reset the Automatic Counter, touch \odot to get the Automatic Counter \odot . Then set the cooking zone from the list with arrows and touch OK to confirm.

H Power-off timer

Use the Power-off timer to set how long the cooking zone operates for only this one time. Touch H two times to get the Power-off timer. Then set the cooking zone from the list with arrows and touch OK to confirm. Set the time with arrows and touch OK to confirm. When the time comes to an end, the zone deactivates.

- To stop the sound: touch H

\triangle Minute Minder

Touch \triangle three times to get the Minute Minder. Set the time with arrows. The Minute Minder indicator comes on. When the time comes to an end, the sound operates.

- To stop the sound: touch \triangle

STOP+GO

The STOP+GO function sets all cooking zones that operate to the lowest heat setting (II).

When STOP+GO operates, you cannot change the heat setting.

The STOP+GO function does not stop the timer function.

- To activate this function touch STOP+GO . The symbol II comes on.
- To deactivate this function touch STOP+GO . The heat setting that you set before comes on.

Lock

When the cooking zones operate, you can lock the control panel, but not II . It prevents an accidental change of the heat setting.

First set the heat setting.

To activate this function touch LOCK . The symbol LOCK comes on.

The Timer stays on.

To deactivate this function touch \rightarrow . The heat setting that you set before comes on.

When you deactivate the appliance, you also deactivate this function.

The Child Safety Device

This function prevents an accidental operation of the appliance.

To activate the Child Safety Device:

- Touch \rightarrow for 4 seconds when all zones are off or when the appliance is shutting down. The display shows the message, that the Child Safety Device operates.
- Deactivate the appliance with I .

To deactivate the Child Safety Device

- Activate the appliance with I .
- Touch \rightarrow and then OK.

To override the Child Safety Device for only one cooking time

- Activate the appliance with I . Touch \wedge and \vee
- Set the heat setting in 10 seconds. You can operate the appliance. When you deactivate the appliance with I , the Child Safety Device operates again.

Deactivation and activation of the sounds

Activate the appliance. Touch OK and then set the sound menu with arrows. Touch OK to confirm. Set the option with the arrows. Touch OK to confirm.

When this function operates, you can hear the sounds only when:

- you touch I
- the Minute Minder comes down
- the Power-off timer comes off
- you put something on the control panel.

HELPFUL HINTS AND TIPS



Use the induction cooking zones with correct cookware.



Put the cookware on the cross which is on the surface that you cook. Cover the cross fully. The magnetic part of the bottom of the cookware must be 125mm minimum. Induction cooking zones adapt to the dimension of the bottom of the cookware automatically. You can cook with the large cookware on two cooking zones at the same time.

Cookware for induction cooking zones



For induction cooking zones a strong electro-magnetic field creates the heat in the cookware very quickly.

Cookware material

- **Correct:** cast iron, steel, enamelled steel, stainless steel, the bottom made of multi-layer (with correct mark from a manufacturer).
- **Not correct:** aluminium, copper, brass, glass, ceramic, porcelain.

Cookware is correct for an induction hob if ...

- ... some water boils very quickly on a zone set to the highest heat setting.
- ... a magnet pulls on to the bottom of the cookware.



The bottom of the cookware must be as thick and flat as possible.

The noises during operation

If you can hear

- crack noise: cookware is made of different materials (Sandwich construction).
- whistle sound: you use one or more cooking zones with high power levels and the cookware is made of different materials (Sandwich construction).
- humming: you use high power levels.
- clicking: electric switching occurs.
- hissing, buzzing: the fan operates.

The noises are normal and do not refer to appliance malfunction.

Energy saving



- If it is possible, always put the lids on the cookware.
- Put cookware on a cooking zone before you start it.

Öko Timer (Eco Timer)



To save the energy, the heater of the cooking zone deactivates before the count down timer signal. The difference in the operation time is depends of the heat setting level and the time you cook.

The examples of cooking applications

The data in the table is for guidance only.

Heat setting	Use to:	Time	Hints
1	Keep cooked foods warm	as necessary	Put a lid on a cookware.
1-3	Hollandaise sauce, melt: butter, chocolate, gelatine	5-25 min	Mix from time to time.
1-3	Solidify: fluffy omelettes, baked eggs	10-40 min	Cook with a lid on.

Heat setting	Use to:	Time	Hints
3-5	Simmer rice and milkbased dishes, heating up ready-cooked meals	25-50 min	Add the minimum two times as much liquid as rice, mix milk dishes at some point of the procedure through.
5-7	Steam vegetables, fish, meat	20-45 min	Add some tablespoons of liquid.
7-9	Steam potatoes	20-60 min	Use max. ¼ l water for 750 g of potatoes.
7-9	Cook larger quantities of food, stews and soups	60-150 min	Up to 3 l liquid plus ingredients.
9-12	Gentle fry: escalope, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts	as necessary	Turn halfway through.
12-13	Heavy fry, hash browns, loin steaks, steaks	5-15 min	Turn halfway through.
14	Boil large quantities of water, cook pasta, sear meat (goulash, pot roast), deep fry chips.		

The Power function is best to heat up large quantities of water.

Information on acrylamides

Important! According to the newest scientific knowledge, if you brown food (specially the one which contains starch), acrylamides can pose a health risk. Thus, we recommend that you cook at the lowest temperatures and do not brown food too much.

CARE AND CLEANING

Clean the appliance after each use.
Always use cookware with clean bottom.



WARNING!

The sharp objects and abrasive cleaning agents can cause damage to the appliance. For your safety, do not clean the appliance with steam cleaners or high-pressure cleaners.



Scratches or dark stains on the glass-ceramic cause no effect on how the appliance operates.

To remove the dirt:

- Remove immediately: melted plastic, plastic foil, and food with sugar. If not, the dirt can cause damage to the appliance. Use a special scraper for the glass. Put the scraper on the glass surface at an acute angle and move the blade on the surface.
 - Remove after the appliance is sufficiently cool: limescale rings, water rings, fat stains, shiny metallic discolorations. Use a special cleaning agent for glass ceramic or stainless steel.
- Clean the appliance with a moist cloth and some detergent.

3. At the end rub the appliance dry with a clean cloth.


WHAT TO DO IF...

Problem	Possible cause and remedy
You cannot activate the appliance or operate it.	<ul style="list-style-type: none"> • Activate the appliance again and set the heat setting in 10 seconds. • You touched 2 or more sensor fields at the same time. Only touch one sensor field. • The Child Safety Device or the Lock or STOP operates. See the chapter Operating instructions. • There is water or fat stains on the control panel. Clean the control panel.
A Sound operates and the appliance deactivates. A sound operates when the appliance is deactivated.	You put something on one or more sensor fields. Remove the object from the sensor fields.
The residual heat indicator does not change the colour.	The cooking zone is not hot because it operated only for a short time. If the cooking zone should be hot, speak to the service centre.
The Automatic Heat Up function does not operate.	<ul style="list-style-type: none"> • There is still residual heat on the cooking zone. Let the cooking zone become sufficiently cool. • The highest heat setting is set. The highest heat setting has the same power as the Automatic Heat Up function.
The heat setting changes between two levels.	The Power management is activated. See the section Power management.
The sensor fields become hot.	The cookware is too large or you put it too near to the controls. Put large cookware on the rear cooking zones if it is necessary.
There is no signal when you touch the panel sensor fields.	The signals are deactivated. Activate the signals (see OffSound Control).
The backlight is on but the contrast of the display is bad.	The hot cookware is on the display. Remove the object and let the appliance become sufficiently cool. If the contrast does not come back, speak to service centre.
II and text comes on	The Automatic Switch Off operates. Deactivate the appliance and activate it again.
? comes on	<ul style="list-style-type: none"> • No cookware on the cooking zone. Put cookware on the cooking zone. • Not correct cookware. Use the correct cookware. • The diameter of the bottom of the cookware is too small for the cooking zone. Move cookware to a smaller cooking zone.
E and number comes on.	There is an error in the appliance. Disconnect the appliance from the electrical supply for some time. Disconnect the fuse from the electrical system of the house. Connect again. If E comes on again, speak to the service centre.

Problem	Possible cause and remedy
E4 comes on	There is an error in the appliance, because a cookware boils dry. The protection against become too hot for the cooking zone operates. The Automatic Switch Off operates. Deactivate the appliance. Remove the hot cookware. After, approximately 30 seconds activate the cooking zone again. The error message should go out of the display, residual heat indicator can stay. Let the cookware become sufficiently cool and check it with the section Cookware for the induction cooking zone.

If you tried the above solutions and cannot repair the problem, speak to your dealer or the customer service. Give the data from the rating plate, three digit letter, code for the glass ceramic (it is in the corner of the glass surface) and an error message that comes on. Make sure, you operated the appliance correctly. If not the servicing by a customer service technician or dealer will not be free of charge, also during the warranty period. The instructions about the customer service and conditions of guarantee are in the guarantee booklet.

ENVIRONMENT CONCERNS

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Packaging material



The packaging materials are friendly to the environment and can be recycled. The plastic components are identified by marking: >PE<,>PS<, etc. Discard the packaging materials as household waste at the waste disposal facilities in your municipality.





