 


Gigaset

C670

The handset at a glance

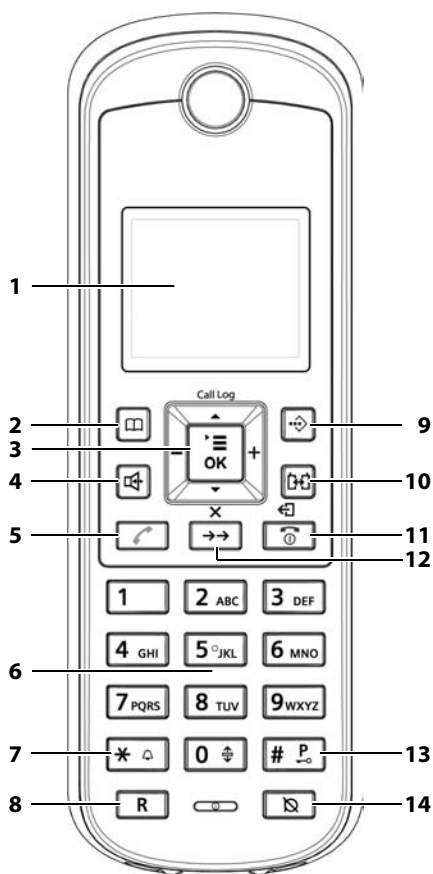

1 Display

2 Directory

3 Navi key

up/down,

Menu/OK

Volume

Call Log

4 Hands free

5 Talk

6 Digital keys

7 * Key (Ringer off by long press)

8 Flash Key

9 Call-by-call list key

10 Intercom Key


11 End/Back (On/Off by long press)

12 Redial/Delete

13 # Key (Lock keypad by long press)

14 Mute Key

Handset LCD

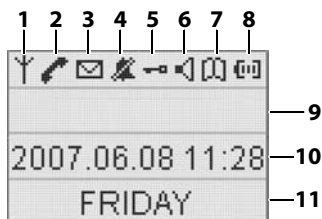

1 Radio signal

2 Talk

3 Incoming Call

4 Ringer off

5 Keypad lock

6 Hands free

7 Directory


8 Battery Icon

9 Handset Name

10 Date and Time

11 Weekday

The base at a glance

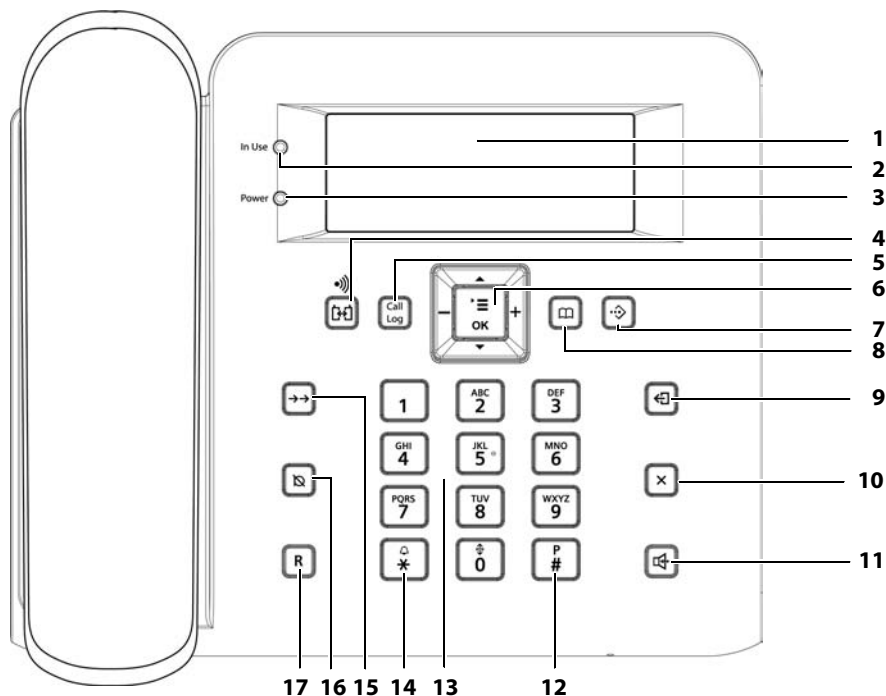

1 Display

2 Using LED

3 Power LED

4 Intercom/Paging

5 Call log

6 Navi-key



up/down,



Menu/OK



Volume

7 Call-by-call list key

8 Directory

9 Back

10 Delete

11 Hands free

12 # Key

13 Digital Keys


14 * Key/Ringer off

15 Redial Key

16 Mute

17 Flash

Base LCD

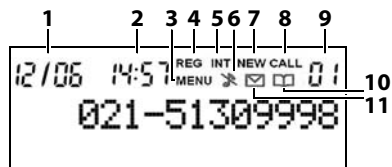

- 1 Date
- 2 Time
- 3 Menu mode
- 4 Registering
- 5 Intercom/Internal call
- 6 Ringer off
- 7 Missed call
- 8 Incoming call
- 9 If call (8): Number of incoming calls
If directory (10): Record number
- 10 Directory
- 11 Missed call
(country, network and provider-dependent:
not shown if VMWI network service not supported)

Contents

The handset at a glance	1
--------------------------------	----------

The base at a glance	2
-----------------------------	----------

Safety precautions	5
---------------------------	----------

First steps	7
--------------------	----------

Installing the base station	7
-----------------------------	---

Setting up the handset for use	7
--------------------------------	---

Registering handsets	8
----------------------	---

Deregistering handsets	8
------------------------	---

Locating a handset ("paging")	9
-------------------------------	---

Setting the date and time	9
---------------------------	---

Operating the handset	9
------------------------------	----------

Activating/deactivating the keypad lock	9
---	---

Ringer OFF/ON	9
---------------	---

Reverting to idle status	9
--------------------------	---

Operating the menu	9
--------------------	---

Correcting incorrect entries	9
------------------------------	---

Scrolling to display long number	9
----------------------------------	---

Making calls	10
---------------------	-----------

Making an external call	10
-------------------------	----

Accepting a call	10
------------------	----

Adjusting talking volume	10
--------------------------	----

Muting	10
--------	----

Ending a call	10
---------------	----

Activating/deactivating	
-------------------------	--

auto answer	10
-------------	----

Calling Line Identification	10
-----------------------------	----

Menu trees	11
-------------------	-----------

Menu tree (Handset)	11
---------------------	----

Menu tree (Base)	12
------------------	----

Using the directory and lists	13
--------------------------------------	-----------

Directory	13
-----------	----

Last number redial list	13
-------------------------	----

Call-by-call list	14
-------------------	----

Using several handsets	15
-------------------------------	-----------

Making internal calls/Intercom	15
--------------------------------	----

Conference calls	15
------------------	----

Setting the handset	16
----------------------------	-----------

Changing audio settings	16
-------------------------	----

Setting the contrast	16
----------------------	----

Setting the key tone	16
----------------------	----

Changing the display language	16
-------------------------------	----

Restoring the handset to the	
------------------------------	--

factory settings	16
------------------	----

Setting the base	17
-------------------------	-----------

Setting the date and time	17
---------------------------	----

Changing audio settings	17
-------------------------	----

Setting the key tone	17
----------------------	----

Setting the contrast	17
----------------------	----

Restoring the base to the	
---------------------------	--

factory settings	17
------------------	----

Connecting the base	
----------------------------	--

to PABX	18
----------------	-----------

Dialling modes and flash time	18
-------------------------------	----

Saving an access code	
-----------------------	--

(PABX prefix)	18
---------------	----

Network Setting	18
-----------------	----

Appendix	19
-----------------	-----------

Care	19
------	----

Contact with liquid	19
---------------------	----

General Specifications	19
------------------------	----

Writing and editing text	20
--------------------------	----

Customer Service & Assistance	21
-------------------------------	----

Manufacturer warranty	
------------------------------	--

(Middle East)	23
----------------------	-----------

Service Centres (Middle East)	25
--------------------------------------	-----------

Product warranty (India)	27
---------------------------------	-----------

Service Centres (India)	29
--------------------------------	-----------

Index	31
--------------	-----------

Safety precautions

Warning:

Read the safety precautions and the user guide before use.

Explain their contents and the potential hazards associated with using the telephone to your children.



Only use the mains adapter supplied, as indicated on the underside of the base station or charging cradle.



Only use the **recommended, rechargeable batteries** (page 20), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury.

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when the hands-free function is activated. Otherwise you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base station or charging cradle in bathrooms or shower rooms. The base station and charging cradle are not splashproof (page 19).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.



Please remove faulty base stations from use or have them repaired by our Service, as they could interfere with other wireless services.

Safety precautions



All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.

If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

Please note:

Not all of the functions described in this user guide are available in all countries.

First steps

Installing the base station

The base station is designed for use in closed, dry rooms with a temperature range of +5 °C to +45 °C.

Set up the base station at a central point in your apartment or house.

Please note:

- ◆ Never expose the telephone to heat sources, direct sunlight or other electrical appliances.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.


Range and reception strength

Range:

- ◆ Outdoors: up to 300 m
- ◆ Indoors: up to 50 m

Connecting the base station

- **First** connect the power supply unit and **then** the phone jack as shown below.

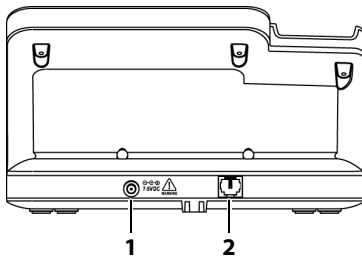

- 1 Power supply unit 220 V
2 Phone jack with phone cord

Please note:

- ◆ The mains adapter must **always be connected**, as the phone will not operate without mains connection.
- ◆ Only use the mains adapter and phone cord **supplied**.

- ◆ If you buy a replacement phone cord, make sure that the phone jack has the correct type of wiring.

Setting up the handset for use

Inserting the batteries

Warning:

Use only the rechargeable batteries recommended by Gigaset Communications GmbH. Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.


- Insert the batteries the right way round.

The polarity is indicated in/on the battery compartment.



Closing the battery cover

Put the cover on the phone as indicated on the picture below. Push the cover upward until click sound is heard, means the cover is fixed properly.

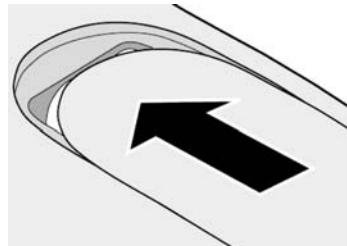

First steps

Opening the battery cover

Push downward to open the cover.

Initial charging and discharging of batteries

If the handset is activated, the flashing battery icon in the top right of the display indicates that the batteries are being charged.

During handset operation, the battery icon indicates the charge status of the batteries. The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.

- ▶ To do this, leave the handset in the charging cradle **without interruption** for **15** hours.
- ▶ Afterwards, remove the handset from the charging cradle and do not put it back again until the batteries are fully discharged.

Please note:

After the first battery charge **and** discharge you may replace your handset in its charger after every call.

Please note:

- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while the charge capacity of the batteries will decrease for technical reasons.

Registering handsets

You can register up to four handsets to your base.

Registering the handset to the base station occurs automatically on first using.

If the automatic register failed, please do the operations on the handset and on the base as below.

Operations on the handset

- ▶ Press .
- ▶ Select **ADVANCED SET.** with  and confirm with .
- ▶ Select **REGISTRATION** and confirm with .
- ▶ Confirm both messages with .
- ▶ Proceed with the operations on the base.

Operations on the base

- ▶ Press and **hold** the paging key  () on the base until beep sounds (approx. 3 sec.).
- ▶ Input the handset name and confirm with .

Once it has been registered successfully, the handset returns to idle status. The name and the handset's internal number is shown in the display e.g. INT 1.

If fail to register, repeat the procedure.

Deregistering handsets

Please note:

Do not deregister handsets unless necessary!

- ▶ Press .
- ▶ Select **ADVANCED SET.** with  and confirm with .
- ▶ Select **DEREGISTRATION** and confirm with .
- ▶ Confirm the message with .
- ▶ **DEREGISTERED** is displayed.

Handset will ask for registering after deregistered, otherwise you will not able to dial by handset.

Locating a handset ("paging")

You can locate your handset using the base station.

Briefly press the paging key   on the base station → **PAGING EXTENSION?**

→ Input the number of handset for paging or press   Key for all handsets

Handsets paged will ring, even if the ringer tones are deactivated.

Ending paging

- ▶ **Briefly** press the paging key   on the base station or press the end key  on the handset.

Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls.

- ▶ Press .
- ▶ Select **TIME SETTING** with  and confirm with .
- ▶ Input the time/date and confirm with .

e.g. set time and date to 2008-7-17 20:38

- ▶ Enter **TIME SETTING**

- ▶ Ordinal input:

2 ABC	0	3 DEF	8 TUV	2 ABC	0	0
8 TUV	0	7 PQRS	1	7 PQRS	OK	

You do not need to set time and date again on base, for handset will synchronize this setting to base automatically.

Operating the handset

Activating/deactivating the keypad lock

Long press   (handset) to toggle lock and unlock.

The  icon appears in the display when the keypad lock is activated.

The keypad lock is deactivated automatically if someone calls you. It is re-activated when the call is finished.

Ringer OFF/ON

Long press   to turn off ringer tone.

Handset displays  and the base displays .

Long press   once again to turn on ringer.

Reverting to idle status

You can revert to idle status as follows:

- ▶ Press the end call key  (handset) back to idle.

Or:

- ▶ Press  key (base) back to idle.

Changes that you have not confirmed or saved will be lost.

Operating the menu

Your telephone's functions are accessed using a menu.

- ▶ Press  with the handset in idle status to open the main menu.
- ▶ Navigate to the function using the control key . Press the  key to access the function.

Correcting incorrect entries

- ◆ Press  to delete the character to the left of the cursor.

Scrolling to display long number

If a telephone number is more than 12 digits in Phonebook or Redial list, the icon  is displayed.

You can use the  for scrolling to display next digits of the whole number.

Making calls

Making an external call

External calls are calls using the public telephone network.

- ▶ Enter the number and press the talk key  or .

Or:

- ▶ Press  or  and then enter the number.

You can cancel the dialling operation with the end call key .

Please note:

Dialling using the directory (page 13), the last number redial list (page 13), the call history (page 14) or the call-by-call info services list (page 14) saves you from having to re-enter numbers and network provider prefixes ("call-by-call numbers").

Accepting a call

Press  or  and to accept an incoming call.

If the handset is in the charging cradle and the **AUTO ANSWER** function is activated, the handset will take a call automatically when you lift it out of the cradle.

Adjusting talking volume

Press  or  () to adjust the talking volume.

Muting

- ▶ Press  to deactivate the microphone in your handset during an external call.
- ▶ Press  again to reactivate the microphone.

Ending a call

Press the end call key .

Activating/deactivating auto answer

If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key .

- ▶ Press .
- ▶ Select **PERSONAL SET.** with  and confirm with .
- ▶ Select **AUTO ANSWER** and confirm with .
- ▶ Select **ON** or **OFF** and confirm with .

Calling Line Identification

Precondition:

You have applied the CID service.

When you get a call, the caller's phone number will be displayed on your handset. The caller's name and number will be both displayed if it is stored in the phonebook

Please note:

The phone was made according to the national standards. However sometimes the CID function can't be displayed properly for the reason of some special using condition: e.g. connecting several phones on a single line or the PABX is not a standard appliance. Please contact your local telecom service supplier.

Menu trees

Menu tree (Handset)

AUDIO SETTING	RINGER VOLUME	HIGH
		MEDIUM
		LOW
		OFF
		ASCENDING
	RINGER MELODY	MELODY 1
		...
		MELODY 10
CONFERENCE	ON	
	OFF	
TIME SETTING		
PERSONAL SET.	CALL LOGS	ALL CALLS
		MISSED CALL
	AUTO ANSWER	ON
		OFF
	CONTRAST	LEVEL 1
		LEVEL 2
		LEVEL 3
	KEY BEEP	ON
		OFF
	LANGUAGE	FRENCH
		ENGLISH
ADVANCED SET.	REGISTRATION	
	DEREGISTRATION	
	HANDSET RESET	NO
		YES

Menu trees

Menu tree (Base)

TIME SETTING		
AUDIO SETTING	RINGER VOLUME	HIGH
		MEDIUM
		LOW
		OFF
	RINGER MELODY	MELODY 1
		...
		MELODY 10
KEY BEEP	ON	
	OFF	
CONTRAST	LEVEL 1	
	LEVEL 2	
	LEVEL 3	
FLASH TIME	100	
	300	
	600	
TONE/PULSE	TONE	
	PULSE	
NETWORK	PUBLIC NET.	
	PRIVATE NET.	
BASE RESET	YES	
	NO	
PABX PREFIX		

Using the directory and lists

The options are:

- ◆ Directory
- ◆ Last number redial list
- ◆ Call history
- ◆ Call-by-call list

Directory

In the directory you can store up to 50 phone numbers and corresponding names.

- ▶ In idle status, open the directory by pressing the  key.
- ▶ Press  to look for entries.

Length of entries

Number: max. 24 digits

Name: max. 15 characters

Saving a number in the directory

- ▶ Press  and  to open the directory menu.
- ▶ Select **ADD ENTRY** with  and confirm with .
- ▶ Enter the name of the contact and confirm with .
- ▶ Enter the phone number and confirm with .

Dialling with the directory

- ▶ Press  and select an entry with .
- ▶ Press  to dial.

Editing an entry in the directory

- ▶ Press  and  to open the directory menu.
- ▶ Select **EDIT ENTRY** with  and confirm with .
- ▶ Select an entry and confirm with .
- ▶ Edit the name and confirm with .
- ▶ Edit the phone number and confirm with .

Deleting an entry in the directory

- ▶ Press  and  to open the directory menu.
- ▶ Select **DELETE ENTRY** with  and confirm with .
- ▶ Select an entry and confirm with .
- ▶ Confirm the message **DELETE ? / DELETE ALL?** with  (on base) /  (on handset).

The entry is deleted, **DELETED** is displayed.

Please delete expired entries to keep up the directory storage.

Deleting the complete directory

- ▶ Press  and  to open the directory menu.
- ▶ Select **DELETE LIST** with  and confirm with .
- ▶ Confirm the message **DELETE ? / DELETE ALL?** with  (on base) /  (on handset).

The directory is deleted, **DELETED** is displayed.

Last number redial list

The last number redial list contains the ten numbers last dialled.

- ▶ Press  and select a number with .
- ▶ Press  to dial.

Call history

- ▶ Press  (Handset)/ (Basestation) and select a number with .
- ▶ Press  to dial.

Precondition: Calling Line Identification (page 10) is applied and there are stored calls.

Setting the type of list

Depending on the type of list set, all numbers of the last 30 incoming calls or just the missed calls are saved.

- ▶ Press  to open the menu.
- ▶ Select **PERSONAL SET.** with  and confirm with .
- ▶ Select **CALL LOGS** and confirm with .
- ▶ Select **ALL CALLS** or **MISSED CALL** and confirm with .

The calls list entries are retained when you change the list type.

Call-by-call list

In the call-by-call list, you can store network provider prefixes ("call-by-call numbers").

Store a call-by-call number

- ▶ Press the  key **twice**.
- ▶ Enter the provider's name and confirm with .
- ▶ Enter the provider's number and confirm with .

The method for entering the call-by-call number below is for your reference since it may be different for various cards.

- ▶ Enter the call-by-call number, e.g. 17910.
- ▶ Insert a pause by pressing the # key **twice** if necessary.

Use the call-by-call dialling

- ▶ Enter a long distance number and then press .

Or:

- ▶ Select a number from the directory or redial list and then press .

Or:

- ▶ Press  or , then press  and then enter the long distance number.

Using several handsets

Making internal calls/Intercom

Internal calls to other handsets registered to the same base are free.

Calling handset

- ▶ Press .
- ▶ Enter the number of the handset.
Or press  to call the base.
Or press the star key  to call all handsets.
- ▶ To answer the call with the handset or base, press  or .

Ending a call

- ▶ Press the end call  key.

Transferring a call to another handset

You can transfer an external call to another handset (connect).

- ▶ During the external call, press .
- ▶ Enter the handset number you want to transfer.

When the internal participant answers:

- ▶ If necessary announce the external call.
- ▶ Press the end call key .

The external call is transferred to the other handset.

Internal consultation calls

When you are speaking to an **external** participant, you can call an **internal** participant at the same time for consultation.

- ▶ During the external call, press .
- ▶ Enter the handset number you want to consult with.

You are connected with the internal participant. To return to held call press . If an **internal** participant presses the end call key , the other handset remains connected to the external participant.

Conference calls

When you are speaking to an **external** participant, an internal caller can listen in on this call and take part in a conference call.

Activate/Deactivate conference call

- ▶ Press .
- ▶ Select **CONFERENCE** with  and confirm with .
- ▶ Select **ON/OFF** to activate/deactivate the function and confirm with .

Starting a conference call

The **CONFERENCE** function must be activated as described above.

The line is engaged with an external call. Your display will show information to that effect.

- ▶ Press  or  to start a conference call.

Ending a conference call

- ▶ Press the end call key .

If an **internal** participant presses the end call key , the other handset remains connected to the external participant.

Setting the handset

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

Changing audio settings

Changing the ringer volume

- ▶ Press .
- ▶ Select **AUDIO SETTING** with  and confirm with .
- ▶ Select **RINGER VOLUME** and confirm with .
- ▶ Choose between five volumes: **HIGH**, **MEDIUM**, **LOW**, **OFF** and the **ASCENDING** ring (volume increases with each ring) and confirm with .

Changing the melody

- ▶ Press .
- ▶ Select **AUDIO SETTING** with  and confirm with .
- ▶ Select **RINGER MELODY** and confirm with .
- ▶ Choose between various ringer melody and confirm with .

Setting the contrast

- ▶ Press .
- ▶ Select **PERSONAL SET.** with  and confirm with .
- ▶ Select **CONTRAST** and confirm with .
- ▶ Choose between three levels (**LEVEL 1**, **LEVEL 2**, **LEVEL 3**) and confirm with .

Setting the key tone

- ▶ Press .
- ▶ Select **PERSONAL SET.** with  and confirm with .
- ▶ Select **KEY BEEP** and confirm with .
- ▶ Select **ON/OFF** to activate/deactivate the key tone and confirm with .

Changing the display language

You can view the display texts in different languages.

- ▶ Press .
- ▶ Select **PERSONAL SET.** with  and confirm with .
- ▶ Select **LANGUAGE** and confirm with .
- ▶ Select **ENGLISH/FRENCH** to change the language and confirm with .

Restoring the handset to the factory settings

You can reset any individual settings and changes that you have made. This will not affect entries in the directory or the handset's registration to the base.

- ▶ Press .
- ▶ Select **ADVANCED SET.** with  and confirm with .
- ▶ Select **HANDSET RESET** and confirm with .
- ▶ Select **YES** to reset the handset or **NO** to cancel the restoring process and confirm with .

Setting the base

The base settings are carried out using a registered Gigaset C67H handset.

Setting the date and time

You do not need to set time and date on base again, if you have set on handset (see page 9).

Changing audio settings

Changing the ringer volume

- ▶ Press .
- ▶ Select **AUDIO SETTING** with  and confirm with .
- ▶ Select **RINGER VOLUME** and confirm with .
- ▶ Choose between four volumes (**HIGH**, **MEDIUM**, **LOW**, **OFF**) and confirm with .

Changing the melody

- ▶ Press .
- ▶ Select **AUDIO SETTING** with  and confirm with .
- ▶ Select **RINGER MELODY** and confirm with .
- ▶ Choose between various ringer melody (by pressing 0 to 9) and confirm with .

Setting the key tone

- ▶ Press .
- ▶ Select **KEY BEEP** with  and confirm with .
- ▶ Select **ON/OFF** to activate/deactivate the key tone and confirm with .

Setting the contrast

- ▶ Press .
- ▶ Select **CONTRAST** with  and confirm with .
- ▶ Choose between three levels (**LEVEL 1**, **LEVEL 2**, **LEVEL 3**) and confirm with .

Restoring the base to the factory settings

When the settings are restored, the handsets are still registered.

- ▶ Press .
- ▶ Select **BASE RESET** with  and confirm with .
- ▶ Select **YES** to reset the base or press **NO** to cancel the restoring process and confirm with .

Connecting the base to PABX

The following settings are only necessary when your PABX requires them; see the PABX user guide.

Dialling modes and flash time

Changing the dialling mode

- ▶ Press .
- ▶ Select **TONE/PULSE** with  and confirm with .
- ▶ Select the dialling mode **TONE** (Touch tone dialling (DTMF)) or **PULSE** (Dial pulsing (DP)) and confirm with .

Setting flash time

Your phone is preset at the factory for operation on the main connection. For operation on a PABX, you may have to change this value. Please refer to the user guide for your PABX.

- ▶ Press .
- ▶ Select **FLASH TIME** with  and confirm with .
- ▶ Select the flash time in ms (100, 300, 600) and confirm with .

Saving an access code (PABX prefix)

Precondition: You may have to enter an access code for external calls in your PABX, e.g. "9". This number can be automatically prefixed if you set the prefix.

- ▶ Press .
- ▶ Select **PABX PREFIX** with  and confirm with .
- ▶ Enter or change the access code, at least two digits and confirm with .

Network Setting

- ▶ Press .
- ▶ Select **NETWORK** with  and confirm with .
- ▶ Select **PUBLIC NET.** or **PRIVATE NET.** and confirm with .

Dial an external number

The access code (**PABX PREFIX**) is automatically prefixed, if all preconditions are fulfilled:

- ◆ The **NETWORK** is set to **PRIVATE NET.** .
- ◆ The access code (**PABX PREFIX**) is set.
- ◆ You enter the phone number before pressing  or .

Example:

- ▶ Set **NETWORK** to **PRIVATE NET.**.
- ▶ Set **PABX PREFIX** number to 9.
- ▶ Enter     .
- ▶ Press  or .

The number dialled out is 9P12345.

Caution:

The access code (**PABX PREFIX**) is not prefixed if you press  or  before entering number.

Appendix

Care

Wipe the base station, charging cradle and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static.

Contact with liquid

If the handset has come into contact with liquid:

1. **Switch off the handset and remove the battery pack immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)**.
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

General Specifications

Range	up to 300 m outdoors, up to 50 m indoors
Base station power supply	230 V ~/50 Hz
Environmental conditions in operation	+5 °C to +45 °C;
Handset size	approx. 52 x 152x 28 mm (Width × Length × Depth)
Handset weight	ca. 138 g
Standby time (hours)	120
Talktime (hours)	5
Battery Capacity (mAh)	650

Recommended batteries

Technology:

Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 600–1200 mAh

We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life:

- ◆ SanyoTwicell 650
- ◆ SanyoTwicell 700
- ◆ Panasonic 700 mAh "for DECT"
- ◆ GP 700 mAh
- ◆ Yuasa AAA Phone 700
- ◆ Varta Phone Power AAA 700mAh
- ◆ GP 850 mAh
- ◆ Sanyo NiMH 200
- ◆ Yuasa AAA 800
- ◆ Corun AAA 650 mAh

The device is supplied with three recommended batteries.

Writing and editing text

The following rules apply when writing text:

- ◆ Control the cursor with    .
- ◆ Characters are inserted on the left of the cursor.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Writing names

Press the relevant key several times to enter letters/characters.

Standard characters on the base

	1x	2x	3x	4x	5x
	 ¹⁾	—	*	!	1
	a	b	c	(	2
	d	e	f	)	3
	g	h	i	/	4
	j	k	l	'	5
	m	n	o	;	6
	p	q	r	s	7
	t	u	v	?	8
	w	x	y	z	9
	0				
	*				
	#	P			

1)Space

2)without effect when entering names

Standard characters on the handset

	1x	2x	3x	4x	5x
	 ¹⁾	—	!	#	1
	a	b	c	(	2
	d	e	f	)	3
	g	h	i	/	4
	j	k	l	'	5
	m	n	o	;	6
	p	q	r	s	7
	t	u	v	²⁾	8
	w	x	y	z	9
	0				
	*				
	#	P			

1)Space

2)black rectangle

3)without effect when entering names

Customer Service & Assistance

Do you have any questions? As a Gigaset customer, you can find help quickly in this User Manual and in the service section of our Gigaset online portal www.gigaset.com/service.

In our constantly updated online service you can find:

- ◆ Extensive information about our products
- ◆ FAQ compilations
- ◆ Keyword search to help find topics quickly
- ◆ Compatibility database: Find out which base stations and handsets can be combined.
- ◆ Product comparison: Compare the features of several products with each other.
- ◆ Downloads for user manuals and current software updates
- ◆ E-mail contact form for customer service

Please register your phone online right after purchase.

This enables us to provide you with even better service regarding questions or an after sales query/issue/claim. In order to contact our customer service via email, please use the email contact form from our Gigaset online portal after selecting your home country.

Our representatives are also available on the telephone hotlines for consultation.

Customer Service & Assistance

Australia 1300 780 878
 Austria 0043 1 311 3046
 Bahrain 97 31 73 11 173
 Belgium 0 78 15 66 79
 Bosnia Herzegovina 033 276 649
 Brazil 4003 3020
 (grandes cidades e regiões metropolitanas -
 Custo de uma ligação local)
 0800 888 3020
 (demaix localidades - Gratuito)
 Bulgaria **+359 2 9710666**
 (0.50 евро на минута от всички държави за
 стационарни телефони. За обаждания от
 мобилни телефони може да има други цени).
 Canada 1-866 247-8758
 China 0 21 400 670 6007 (RMB 0.11)
 Croatia 01 2456 555 (0,23 Kn)
 Czech Republic 0 233 032 727
 Denmark +45 (0) 35 25 86 00
 Finland 09 231 134 25
 France **+33 170 706 181**
 Coût d'un appel local depuis une ligne fixe
 France Télécom.
 Germany 01805 333 222
 Der Anruf kostet Sie aus den deutschen Fest-
 netzen 0,14 € pro Minute. Anrufe aus den deut-
 schen Mobilfunknetzen kosten höchstens 0,42
 € pro Minute.
 Greece **801-100.0.500**
 (Χρέωση 0,0026 € το λεπτό για το σταθερό δίκτυο
 της Ελλάδας. Για κλήσεις από κινητό ίσως ισχύουν
 άλλες χρεώσεις)
 Hong Kong 2763 0203
 2389 7285
 Hungary 01 267 21 09 (27 Ft)
 India Please refer to your
 local warranty card
 Indonesia (62-21) 5673813
 (62-21) 888856000
 Ireland 18 50 77 72 77
 Italy **199.15.11.15**
 (€ cent 8,36 + IVA al minuto da telefono fisso
 della rete Telecom Italia senza scatto alla ris-
 posta mentre per le chiamate effettuate attra-

verso la rete di altri operatori fissi o mobili con-
 sultate le tariffe del vostro operatore)
 Jordan 00962 6 5625460/1/2
 Kuwait +965 -22458737/22458738
 Lebanon +9611240259/
 +9611236110
 Luxembourg +352 8002 3811
 Malaysia +603-8076 9696
 Malta +390 2360 46789 (0,10 €)
 Mexico
 01800 999 4442738 (01800 999 GIGASET)
 Netherlands **0900-3333102**
 (0,25 € per minuut (vast net). Voor oproepen uit
 het mobiele netwerk kunnen andere prijzen
 gelden.)
 New Zealand 0800 780 878
 Norway 22 70 84 00
 (Oppstartskost 89 øre + 15 øre pr minutt fra
 fasttelefon linje. For samtaler fra mobil vil det
 gjelde egne priser.)
 Oman +968 709281 Ext. 49/21/75
 Poland 801 140 160
 Portugal **(351) 808 781 223**
 (custo de uma chamada local)
 Qatar 00974 4257777 / 00974 4257844
 Romania +40 021 204 9130
 Russia 8 (495) 2281312
 Saudi Arabia 00966 2 6500282 Ext. 209
 Serbia 0800 222 111
 Singapore 6735 9100
 Slovak Republic 02 59 68 22 66 (4,428 sk)
 Slovenia 01 5644171
 South Africa +2711 46 13 181
 Spain 902 103935
 Sweden 87 50 99 11
 Switzerland 0848 212 000
 Taiwan 02 266 24343
 Turkey 0216 459 98 59
 Ukraine +380-44-451-71-72
 United Arab Emirates +97144458255/
 +97144458254
 United Kingdom 0 84 53 67 08 12
 USA 1-866 247-8758
 Vietnam 1900 545 416

Manufacturer warranty (Middle East)

On the purchase of your new Gigaset product, we guarantee that this equipment is a genuine manufacturer's product and extend the following warranty:

We guarantee this product against manufacturing defects for two full years from the date of purchase, unless specified otherwise.

Adaptors and batteries for cordless phones carry 6 months warranty from the date of purchase.

Gigaset Communications authorized Service Centres will replace or repair, if necessary, any defective part/parts free of charge by presenting this certificate of warranty at the Service Centre mentioned overleaf.

This Certificate of warranty does not apply if the telephone has:

1. Been misused, mishandled, willfull damaged, neglected, damaged by lightning, improperly repaired, tested, altered improperly in any way.
2. A defect arising out of any failure to follow instructions either in the manual or product specification.
3. In case repairs are carried out of by unauthorized personnel or unauthorized source warranty will be void.
4. A defect arising from using non-Gigaset approved accessories or ancillary items attached to or in connection with the telephone.
5. If this certificate of warranty is not signed and stamped by the authorised distributor.
6. Any other claim resulting out of or in connection with the device shall be excluded from this warranty.

For Southern Africa:

In the event of an after-sales issue/warranty claim please refer back to your point of purchase.

Proof of purchase (receipt) has to be submitted.

Certificate of warranty (Middle East)

The warranty is not valid if it is not signed and stamped by the authorized distributor.

Please fill in the following details and stamp the card to calidate the warranty.

All details must be filled in by the dealer and retained by the customer.

This warranty shall apply to products purchased in the Middle East only.

Customer's Name: _____

Product / Model: _____

Dealer's Name: _____

Date of Purchase: _____ Invoice / Cash Memo Details: _____

Dealer's Stamp

Service Centres (Midde East)

UAE

Customer Service Hotline UAE

TEL: 00971-4-4458255 / 00971-4-4458254

Service Collection Point

www.technocare-prodigy.com

KARAMA

Sea Shell Electronics

Opp. Karama Centre

Dubai, UAE

Tel: 00971-4-3979228

Fax: 00971-4-3966205

Deira

Souvenir Mobiles,

Omar Bin Katab Road,

Oppst. Gulf Peral hotel (Tahir Hotel)

Al Baraha Street,

Tel: 00971-4-2731910 / 00971-4-2737377

Sharajah

Hotline Telecom

Sahara Centre

Sharjah, UAE

Tel: 00971-6-5312126

Al Ain

Phone Station

Al Ain Mall, Town Centre,

Tel: 00971-3-7515588

Fujairah

Al Manzil,

Al Gurfa Street,

Main market Road,

Tel: 00971-9-2233488

Oman

National Telephone Services Co. LLC

P.O. Box 2786 PC:112, Sultanate of Oman

Tel: +968-709281 Ext. 45/21/75

Fax: +968-791013

E-mail: isonts@omentel.net.om

Qatar

Modern Home,

51-East - Salwa Road,

Al-Maha Complex, Doha

Tel: 00974-4257844 / 00974-4257777

Fax: 00974-4314700

Bahrain

Authorized Service Center,

Bldg: 211, Rd: 339, Block: 321,

Old Place Road, Manama,

Tel: 00973-17311173

E-mail: servicemanager@ashrafs.com.bh

Saudi Arabian Service Centers:

Ahmed Abdulwahed Trading Co.

Jeddah Service Center

Al-Amal Plaza, Hail Street,

Jeddeh, Saudi Arabia,

Tel: 02-6500282 Ext. 209

Riyadh Service Center

Olaya Street

Riyadh, Saudi Arabia,

Tel: 01-4622470 / 4623850

Khobar Service Centre

Al-Khobar Street,

Al-Khobar, Saudi Arabia,

Tel: 03-8944193/03-8952359

Madina Munawara

Al-Ayon Street,

Tel: 00966-4-8387931

Khamis Mushyat

Al-Khalidiya St.,

Tel: 00966-7-2230772

Tabuk

Main Street,

Tel: 00966-4-4219232

Service Centres (Midde East)

Kuwait

Customer Service Hotline Kuwait

Tel: 00965-22458737 / 00965-22458738

Al-Baptain Service Center

Shop #: 247

Qibla, Block 11,

Avenue 11,

Souk al Kabeer,

Fahad Al Salem Street,

Tel: 00965-2464993

Jordan

SEDR Home & office Electronics

Co - Tronicom

Wasfi Al-Tal St.,

Building No. 80,

2nd floor,

Tel: 00962-6-5625460/1/2

Lebanon

306, Jdeideh Sin el Fil Blvd,

Tel: 00961-1240259 / 00961-1236110

Product warranty (India)

Congratulations

On the purchase of your new Gigaset product, we guarantee that this equipment is a genuine manufacturer's product and extend the following warranty:

We guarantee this product against manufacturing defects for two full years from the date of purchase, unless specified otherwise.

Adaptors and batteries for cordless phones carry 6 months warranty from the date of purchase.

Gigaset Communications authorized Service Centres will replace or repair, if necessary, any defective part/parts free of charge by presenting this certificate of warranty at the Service Centre mentioned overleaf.

Warranty

1. This Certificate of warranty does not apply if the telephone has:
2. Been misused, mishandled, willfully damaged, neglected, damaged by lightning, improperly repaired, tested, altered improperly in any way.
3. A defect arising out of any failure to follow instructions either in the manual or product specification.
4. In case repairs are carried out by unauthorized personnel or unauthorized source warranty will be void.
5. A defect arising from using non-Gigaset approved accessories or ancillary items attached to or in connection with the telephone.
6. If this certificate of warranty is not signed and stamped by the authorised distributor.
7. Any other claim resulting out of or in connection with the device shall be excluded from this warranty.

Product warranty (India)

Certificate of warranty (India)

The warranty is not valid if it is not signed and stamped by the authorized distributor.

Please fill in the following details and stamp the card to calidate the warranty. All details must be filled in by the dealer and retained by the Customer. The purchase receipt shall be required as evidence for invoking the warranty.

Customer's Name: _____

Product / Model: _____

Dealer's Name: _____

Date of Purchase: _____

Invoice / Cash Memo No./Date: _____

- Ownership of devices or components replaced by and returned Gigaset communications shall vest in Gigaset communications.
- This warranty shall apply to 2.4Ghz products purchased in India only.

Dealer's Stamp

Service Centres (India)

We offer you support that is fast and tailored to your specific needs!

Our Online Support on the Internet:

www.gigaset.com/service

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

Service Centres

Ahmedabad - inTarvo Technologies Limited

1st Floor, Rituraj Complex, 84/B, Swastik Society, Near Swastik Cross Roads, Navrangpura Ahmedabad - 380 009, Gujarat

Mr. Alpesh Rabari

Phone: 079-65499327

E-mail: setl.ahm@intarvo.com

Bangalore - inTarvo Technologies Limited

6/A, AVS Compound, Ijipura, 80 ft Road, Koramangala, Bangalore - 560 034, Karnataka

Mr. Harish

Phone: 080-41312700

E-mail: rtoebl.bangalore@intarvo.com

Baroda - inTarvo Technologies Limited

Shop No.10-11, Ground Floor, Profit Center, Kalaghoda, Syajigunj, Baroda - 390 005, Gujarat

Mr. Rakesh Agrawal

Phone: 0265-3911106

E-mail: sewd.baroda@intarvo.com

Chennai - inTarvo Technologies Limited

No: 112, 1st Floor, Vairam Complex, Thyagaraya Road, T.Nagar, Chennai - 600 017, Tamil Nadu

Mr. Deepa Balajee

Phone: 044-43412292

E-mail: deepa.balajee@intarvo.com

Delhi - inTarvo Technologies Limited

G4, 5, 6 Chandra Bhawan Nehru Place, New Delhi - 110 019

Mr. Meenakshi

Phone: 011-41095840

E-mail: se.np@intarvo.com

Gurgaon - inTarvo Technologies Limited

12, 13, 14, First Floor, Ganpati Complex, Old Delhi Road, Opp Hudda Nersury, Near Kataria Chowk, Gurgaon - 122 001, Harayana

Mr. Bhasker Patni

Phone: 0124-4286829 / -4286830

E-mail: bhasker.patni@intarvo.com

Hyderabad - inTarvo Technologies Limited

Sangeeta Plaza, No 3-9-241, 1st Floor, Near Police Station, West Marredpally, Secunderabad - 500 026, Andhra Pradesh

Mr. Narendra

Phone: 040-40072514

E-mail: csothers.hyd@intarvo.com

Kochi - Bits N Bytes Computers

No.43/1821 A, Post Office Building, S.R.M Road, Pachalam, Cochin, Kerala - 682 012

Mr. Shalu Thomas/Ms. Jinny

Phone: 9847401718 / 9744705512

E-mail: jinny.bits@gmail.com / micro-worldchn@vsnl.net

Service Centres (India)

Kolkata - inTarvo Technologies Limited

2 Ripon Street, Near Hira International Hotel,
Kolkata - 700 016, West Bengal

Mr. Surjit Dhar

Phone: 033-22277892/899

E-mail: se.east@intarvo.com

Ludhiana - inTarvo Technologies Limited

2nd Floor Madhok Complex, Ferozepur
Road, Ludhiana - 141 003, Punjab

Mr. Manpreet Kaur

Phone: 0161-5081043

E-mail: se.ludhiana@intarvo.com

Mumbai - inTarvo Technologies Limited

First Floor, Hitech Plaza, Near MIDC office,
Shanti nagar, Mahakali, Caves Road, Andheri
(E) 400069, Mumbai

Mr. Kiran Chaudhary

Phone: 022-41224402

E-mail: kiran.chaudhary@intarvo.com

Nasik - inTarvo Technologies Limited

Viraj Corner, 2nd Floor, Shop No-9, Near
India Bull, Opp BSNL Office, Sharanpur Road,
Canada Corner, Nasik - 422 001, Maharashtra

Mr. Gopichand A. patil

Phone: (0253) 3024014

E-mail: sewd.nashik@intarvo.com

Noida - inTarvo Technologies Limited

C-32, First Floor, SECTOR-2, Near Hotel
Nirula, Noida - 201 301, Uttar Pradesh

Ms. Sudhir

Phone: 0120-4318632

E-mail: rcd.noida@intarvo.com

Pune - inTarvo Technologies Limited

"Shubham", 858, Dastur Meher Road, Near To
Old Dorabji & Sons Hotel, Camp Pune - 411
001, Maharashtra

Mr. Savita Pardeshi

Phone: 020-41255792

E-mail: se.pune@intarvo.com

Rajkot - inTarvo Technologies Limited

RT Outsourcing Services Ltd - Rajkot, 1 ST
FLOOR PRITIBHA COMPLEX NEAR MAHASA-
GER TRAVELS MOTI TANKI CHOWK Rajkot -
360001

Mr. Ajit Nay

Phone: 0281-3049872/3054819/20

E-mail: se1.rajkot@rtservices.com

Surat

S.P Connecting

SEES, Shiv Pooja Point, Opp Turning point ,
Ghodhod road, Surat - 395002

Mr. Rushi Popat

Phone: 2612660552/ 9879133662

E-mail: sonyericsson.surat@yahoo.com

Vijayawada - Sigma Technologies

40-5-19/4A Lakshman's Enclave, Tikkle
Road, Vijayawada - 520 010, Andhra Pradesh

Mr. Ravikumar Khammampalli

Phone: 9246472168

E-mail: customercare@sigmatechnolo-
gies.info

Vizag - Planet Solutions

Khammampalli C/o. S.N.K. IT Solutions Pvt.
Ltd., D.No: 50-12-7/2, First Floor, Satya Resi-
dency, Seethammapeta, 530 016 Visakha-
patnam

Mr. Srinivas Emula

Mr. K. Somu Naidu

Phone: 97044-80006 / 92466-45999

E-mail: aishplanet@

Index

A

- Access code 18
 - for a PABX 18
- Activating
 - call acceptance 10
 - keypad lock 9
- Automatic
 - call acceptance 10

B

- Base station
 - connecting 7
 - connecting and installing 7
 - connecting to PABX 18
 - range 7
 - restoring to factory settings 17
 - setting 17
- Battery
 - charging 8
 - display 8
 - fitting 7
 - icon 8
 - recommended batteries 20

C

- Call
 - accepting 10
 - ending 10
 - external 10
 - internal 15
 - transferring (connect) 15
- Call acceptance 10
- Call duration 10
- Call-by-call list 14
- Call-by-call numbers 14
- Calling
 - external 10
- Calling Line Identification 10
- Care of the telephone 19
- Changing
 - dialling mode 18
 - display language 16
 - ringer tone 16, 17
- Conference (internal) 15
- Connecting, base station to PABX 18
- Consultation call (internal) 15
- Correcting incorrect entries 9
- Customer Care 21

D

- Deactivating
 - call acceptance 10
 - keypad lock 9
- Deleting
 - characters 9
- Deregistering (handset) 8
- Dial pulsing 18
- Dialling
 - call-by-call list 14
 - directory 13
- Dialling mode 18
- Directory 13
 - add entry 13
 - delete entry 13
 - edit entry 13
 - saving entry 13
- Display
 - changing display language 16
 - contrast 16, 17
 - in idle status 9
 - number (CLI/CLIP) 10
 - setting 16, 17
- DP (dial pulsing) 18

E

- End call key 10
- Ending, call 10
- Ending, see deactivate

H

- Handset
 - contact with liquid 19
 - deregistering 8
 - display language 16
 - idle status 9
 - locating 9
 - muting 10
 - paging 9
 - registering 8
 - restoring to factory settings 16
 - setting 16
 - setting up 7
 - signal strength 7
 - transferring a call 15
 - using several 15
- Hearing aids 5

Index

- I**
- Icon
 - battery 8
 - keypad lock 9
 - Idle status (display) 9
 - Idle status, returning to 9
 - Incorrect input (correction) 9
 - Installing, base station 7
 - Internal
 - conference 15
 - consulting 15
 - making calls 15
 - Internal call 15
- K**
- key tone 16, 17
 - Keypad lock 9
 - Keys
 - end call key 10
- L**
- Last number redial 13
 - Liquid 19
 - List
 - call-by-call list 14
 - Locating, handset 9
 - Lock
 - activating/deactivating keypad protection 9
- M**
- Mains adapter 5
 - Making calls
 - accepting a call 10
 - external 10
 - internal 15
 - Manufacturer warranty (Middle East) . . . 23
 - Medical appliances 5
 - Menu
 - menu guidance 9
 - overview 11, 12
 - Message key
 - opening lists 14
 - Muting
 - handset 10
- N**
- Network provider (numbers list) 14
 - Number
 - deleting in the directory 13
 - displaying caller's number (CLIP) 10
 - editing in the directory 13
 - saving in the directory 13
 - Numbers list
 - network provider 14
- P**
- PABX
 - connecting base station 18
 - saving access code 18
 - setting dialling mode 18
 - Paging 9
 - Product warranty (India) 27
- R**
- Range 7
 - Registering (handset) 8
 - Ringer tone
 - changing 16, 17
 - setting volume 16, 17
- S**
- Saving (access code) 18
 - Service Centres (India) 29
 - Service Centres (Middle East) 25
 - Setting
 - date 9, 17
 - key tone 16, 17
 - time 9, 17
 - Setting up
 - handset 7
 - Signal strength 7
 - Sound, see Ringer tone
 - Special functions 18
 - Specifications 19
- T**
- Talking volume
 - adjusting 10
 - Touch tone dialling 18
- V**
- Volume
 - adjusting 10
 - ringer tone 16, 17
- W**
- Warranty 19
 - Writing, editing text 20

Issued by
Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© **Gigaset Communications GmbH 2011**
All rights reserved. Subject to availability.
Rights of modification reserved.
www.gigaset.com

A31008-M1763-A601-6-3T19