

Product Limited Warranty

Labelmate USA warrants to the original end-user customer that Labelmate USA products will be free from defects in materials and workmanship for the duration described herein below. Labelmate USA's Limited Warranty covers only those defects that arise as a result of normal use of the products and does not cover any other problems, including those that arise as a result of: (i) improper maintenance or modification; (ii) parts or supplies not provided or supported by Labelmate USA; (iii) operation outside the products' specifications; or (iv) unauthorized repair, modification or misuse. Use of any unauthorized accessory or attachment will void coverage.

The Warranty period for all products commences the date of shipment from Labelmate USA and accrues to the original end-user customer. Warranty coverage is non-transferable and terminates immediately upon rental, resale or any other change in ownership. Original purchase documentation should be retained for Warranty coverage verification.

In the event Labelmate USA substantiates, during the applicable Warranty period, a defect in any product which is covered by Labelmate USA's Warranty, Labelmate USA shall repair or replace the product, at Labelmate USA's option. Labelmate USA retains sole discretion to determine whether or not a product is defective. In no event shall Labelmate USA have any obligation to repair or replace until the customer returns the defective product to Labelmate USA. The customer assumes any and all responsibility and liability associated with transportation of products for service under this Warranty.

WARRANTY PERIOD	PRODUCTS COVERED
5-Years	"CAT" and "Mini CAT" Label Rewinders "UCAT" Label Unwinders
3-Years	Label Counters (Excluding Counter Displays and Encoders) Label Dispensers (Excluding Counter Displays) Label Slitters (Mechanical Parts Only, and excluding Counter Displays) Reel-to-Reel Machines (Excluding Counter Displays and Encoders) Print Mechanisms (Excluding Counter Displays and Encoders) Quick-Chucks
1-Year	Power Supplies, AC/DC Adaptors and Transformers Counter Displays Encoders Any other products or parts not specified herein
180-Days	Out-of-Warranty Repairs

In the event your product requires service or you have questions regarding Warranty coverage, please call toll-free (877) 833-7149 inside the United States, or +1 (702) 435-8535 outside the United States.

LABELMATE MAKES NO OTHER WARRANTY OF ANY KIND, WHETHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND/OR FITNESS FOR A PARTICULAR PURPOSE. NO OTHER PERSON, AGENT, DEALER OR RESELLER IS AUTHORIZED TO GIVE ANY WARRANTIES ON BEHALF OF LABELMATE. ANY OBLIGATION TO WARRANTY OTHER THAN THAT SPECIFICALLY ADDRESSED HEREIN IS EXPRESSLY DISCLAIMED.

LABELMATE USA LLC

12A Sunset Way, Henderson, NV 89014 USA
(702) 435-8535 FAX (702) 435-8536
Toll-Free (877) 833-7149 in USA!
support@labelmateusa.com

www.labelmateusa.com

LABELMATE USA LLC

MC-11

MINI-CAT Label Rewinder with Adjustable Core Holder

- Switched Bi-Directional Control
- Constant Adjustable Torque™
"CAT" technology
- Adjustable Speed up to
15" (380-mm) per second



MC-11 with optional Adjustable Paper Guide

Remove all parts from shipping container and verify contents.

Package Contents

- MC-11 Rewinder Unit with Adjustable Core Holder
- AC-DC Adapter (Power Supply Module)
- User Manual (this document)

Retain the Shipping Container and Packaging for Storage and Transport.

• **KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE** •

PRODUCT SPECIFICATIONS

Max. Label Width:	4.5 inches (115-mm)
Max. Label Roll Weight:	8.5 lbs. (3.9 kg)
Max. Label Roll Size:	Up to 8.5 inches (215-mm)
Speed:	Adjustable up to 15-ips (380-mm/sec)
Start/Stop:	On/Off/On directional switch
Power Supply:	Voltage selectable AC/DC Adapter
	120VAC 60Hz
	UL & CSA Listed (230VAC 50Hz available)



WARNING

**This product is for indoor use only.
Not for use in wet locations.
Unplug unit before removing waste material or
performing any cleaning or maintenance services.**



INITIAL SET-UP

1. Place the MC-11 so that the three (3) Rewind Fingers are perpendicular to the web of the labels to be rewind. The MC-11 is bi-directional, and can be operated in either direction.
2. Verify that the (ON/OFF/ON Direction) Switch on the rear of the MC-11 is in the OFF (0) position.
3. Insert the Power Supply Cord into the Power Jack on the rear of the MC-11.
4. Set the VOLT CHANGE SW slide switch on the AC/DC Adapter to "4.5" as an initial setting.
5. Plug the AC/DC Adapter into a suitable 120-vac 60Hz electrical outlet. The AC/DC Adapter can be left plugged in at all times.
6. The Rewinder has a combination Power and Direction (ON/OFF/ON Direction) Switch on the rear panel. See the photo below. The Center Position of the Switch is "OFF" (0). To make the Rewinder run to the right (looking from the rear of the Rewinder), press the Power / Direction Switch in the direction of the right arrow. To make the Rewinder run to the left, press the Power / Direction Switch in the direction of the left arrow.



REWINDING LABELS

Rewind labels onto any core 1" - 4" diameter and up to 4.5" wide.

1. Loosen the three (3) black Lock Levers on the back of the Core Holder Flange Plate.
2. Grasp the front Flange Plate with one hand and the rear Flange Plate with the other. Notice the rear Flange Plate has convenient cutouts for your thumb.
3. Rotate the Plates in opposite directions until the three (3) Core Fingers move to the center next to each other.
4. Slide an empty cardboard core ONLY PART WAY over the Fingers.
5. Now rotate the Flange plates in the opposite direction to expand the Fingers against the inside of the cardboard core. While you hold the Flanges so the Fingers are tight against the inside of the Core, move one of the Locking Levers to the LOCK position. NOTE: If one or more of the Locking Levers is up against the Hub and won't lock, pull up on the Lever (away from the Flange Plate) and reposition it.
6. Now move the other two (2) Locking Levers to the LOCK position.
7. Slide the cardboard core all the way up against the Flange Plate.
8. Pull the label web to the cardboard core and use a piece of tape to secure the label web.
9. Adjust the position of the MC-11 if necessary so it is square with the label path.
10. If you are using the APG-MC Adjustable Paper Guide, move the Arm into position to guide the outer edge of the labels and lock it into place.
11. Place the (ON/OFF/ON Direction) Switch to the ON position in the desired direction of operation, left or right.
12. Start the printer and observe that the labels are being rewind correctly. You can adjust the (VOLT CHANGE SW) Slide Switch on the AC/DC Adapter to provide more or less rewind force as desired.
13. When rewind is finished, place the (ON/OFF/ON Direction) Switch to the OFF (0) position.
14. If the APG-MC Adjustable Paper Guide is in use, unlock and move the Arm out of the way.
15. Slide the cardboard core and the wound labels off the MC-11. You do not need to loosen the three (3) Locking Levers unless you want to use a different diameter core.

UNWIND FEATURE

To use the MC-11 as an Unwinder, place the VOLT CHANGE SW to the "1.5" position and place the (ON/OFF/ON Direction) Switch to provide resistance to the roll of labels you wish to unwind.

MAINTENANCE

The MC-11 Rewinder requires no maintenance.