

EPX-7500 LONG RANGE KING

**“EPX-7500”
LONG RANGE KING
Operation Instructions**

EPX-7500 LONG RANGE KING

INTRODUCTION:

Thank you for purchase of the EPX-7500 Long Range King. Long Range King System is an advanced Metal Detector System utilizing advanced FORWARD GAUSS technology that is both an audio and visual detector. This metal detector was first used in the field in 1984 and the FORWARD GAUSS technology that it uses has proven to be (by far) the most successful.

This system was originally developed for professional archeologists and treasure hunters and has been used on many stations. With the development of faster and more complex processing units and a reduction in the cost of materials, we were able to begin offering this breakthrough technology to the general public at a much more affordable cost. Part of the success of this metal detector system is that it does not look like a standard 'metal detector'. Instead, it has the appearance of a fine, well manufactured piece of scientific equipment that one might expect to find at an archeological site.

The EPX-7500 Long Range King is 'custom built' in a sturdy, hard side, padded case with two locks. The transmitter is case mounted and includes the 'Standard Seven' elements with selector switch. The system includes an installed, rechargeable gel cell battery with charger, transmitting antenna, receiving rods and receiver with belt clip, headphones and user manual all inserted into the specially fitted case.

To obtain maximum performance, we urge you to take a few minutes to read this manual carefully.

EPX-7500 LONG RANGE KING


PARTS AND NAMES:

1. Carefully unpack and familiarize yourself with the components of your **EPX-7500 LONG RANGE KING** Remote Sensing Detector System. The components are:
 - A black case with aluminum trim, a handle and two locks. This case contains the transmitter unit and all other components. The transmitter is permanently mounted in the case.



EPX-7500 LONG RANGE KING

- Details of Transmitter:

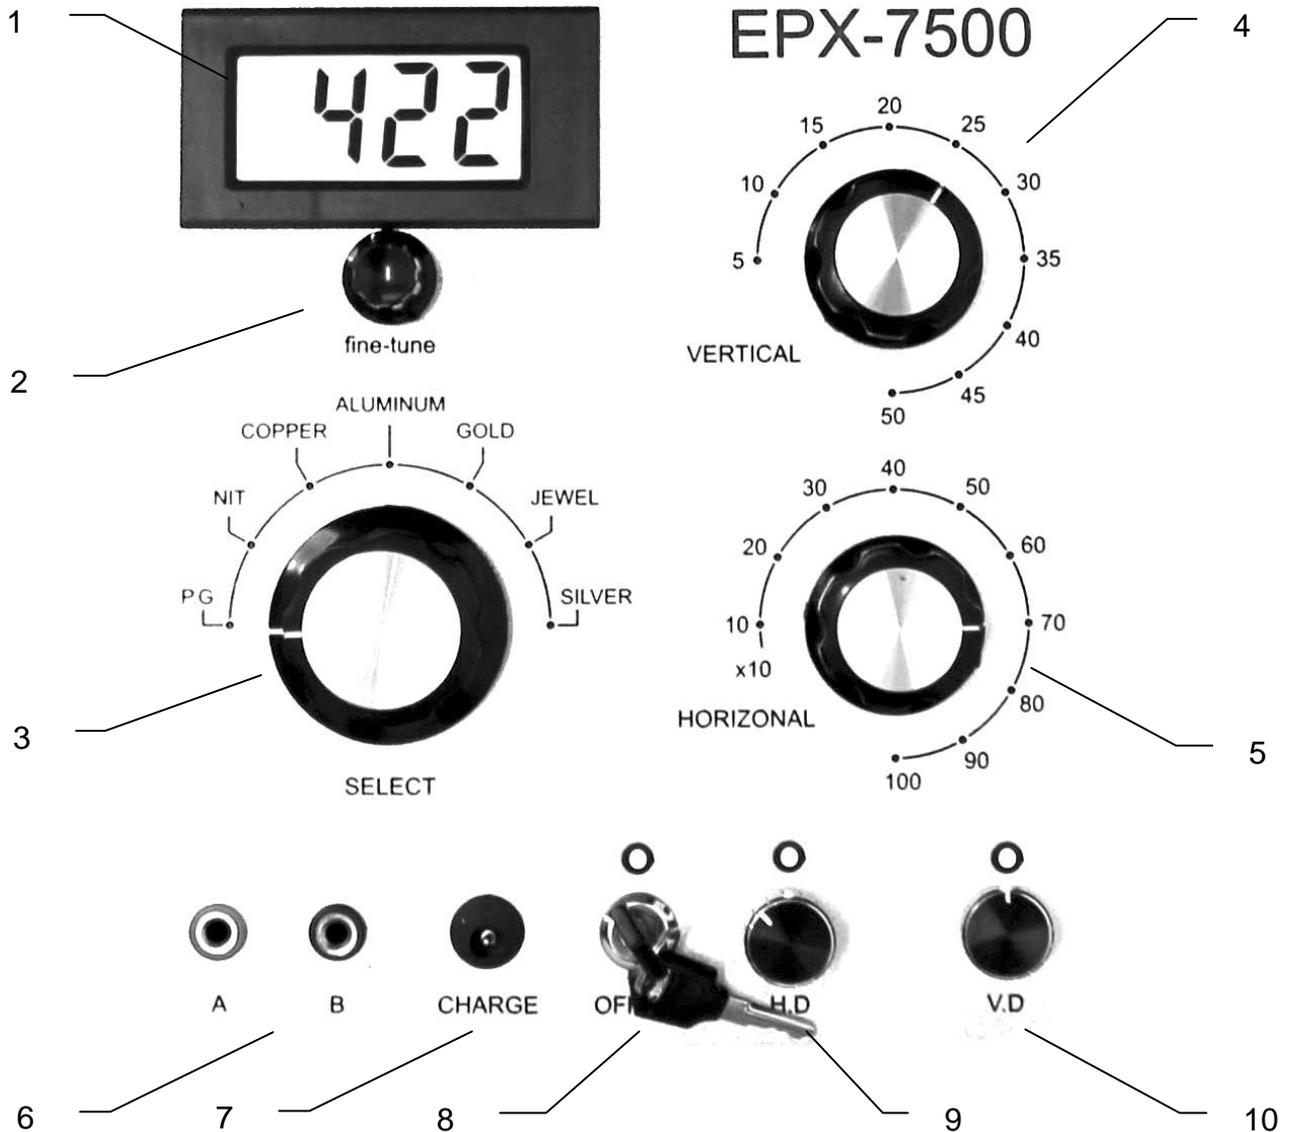

Details:

- | | |
|----------------------------------|--|
| (1) LCD Panel | (6) Jack of Antenna (Sending) |
| (2) fine-tune | (7) Charging Plug Socket (Transmitter) |
| (3) Channel Selector | (8) On/Off Switch |
| (4) Vertical Depth Selector | (9) Horizontal Sensitivity Adjuster |
| (5) Horizontal Distance Selector | (10) Vertical Sensitivity Indicator |

EPX-7500 LONG RANGE KING

- Besides the transmitter, the remaining components are removable. The rechargeable battery is already installed in this unit. Battery must be charged overnight prior to first use. It should not be recharged until LED's indicating the elements begin to dim or there is no longer interference on the AM radio when transmitter is turned on.
- Head Phones - one set of head phones. Plugged in the bottom right corner of Belt Receiver




- Enhancer




EPX-7500 LONG RANGE KING

- The Belt Receiver - this is a gray box. On the face (front) is an ON/OFF/VOLUME knob. In the top left corner there is Enhancer, in the right there is an LED (light). This light is on at any time the receiver is on. To the left of the knob there are two jacks (plug receptacles). They are labeled Head Phones and Rods respectively. There is a belt clip on the back of the box. This component takes rechargeable batteries. The batteries are factory installed.

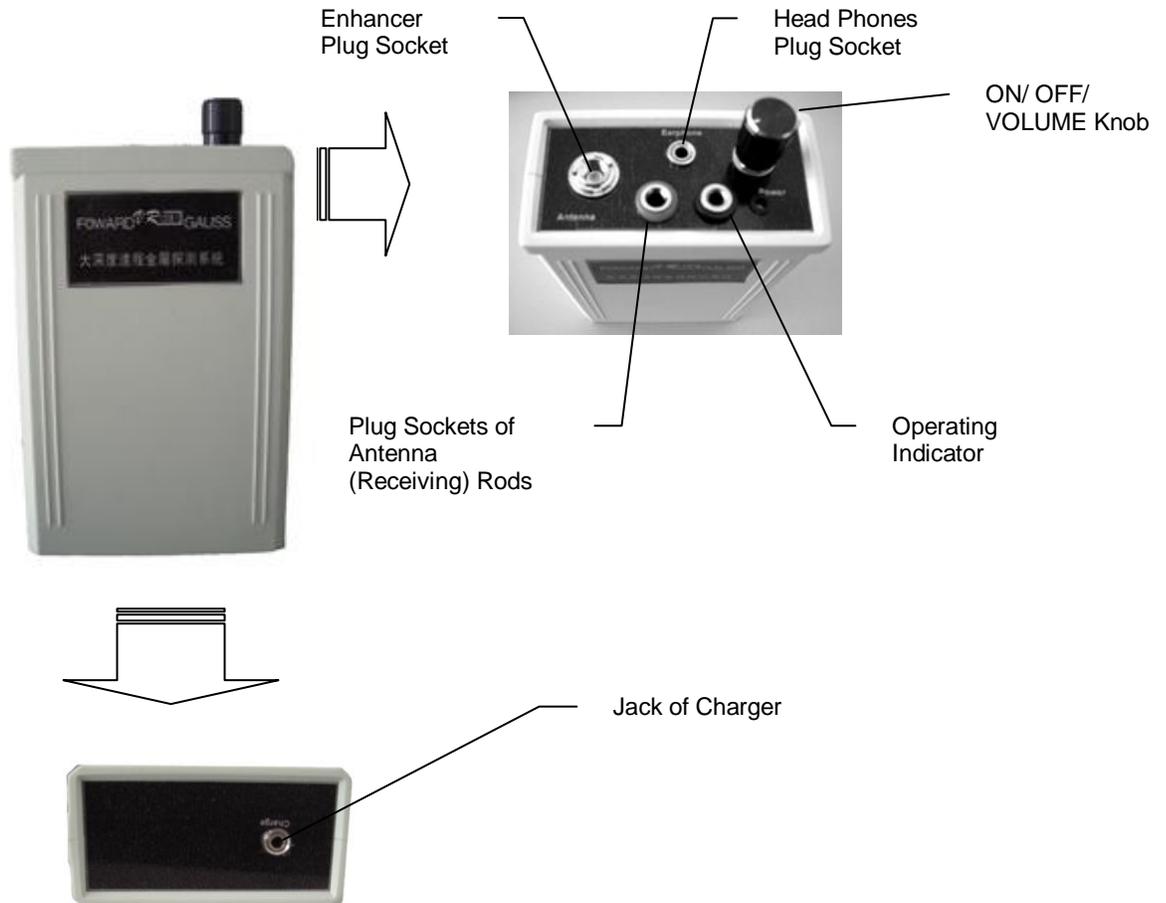

EPX-7500 LONG RANGE KING

- Antenna (Receiving) Rods - these are sealed copper cylinders, and black and red wires that terminates with plugs, these plugs fit the black and red receptacles on the belt receivers. Extending perpendicularly from each cylinder is a brass rod sheathed in copper tubing. The copper tube slides forward to extend the rods.

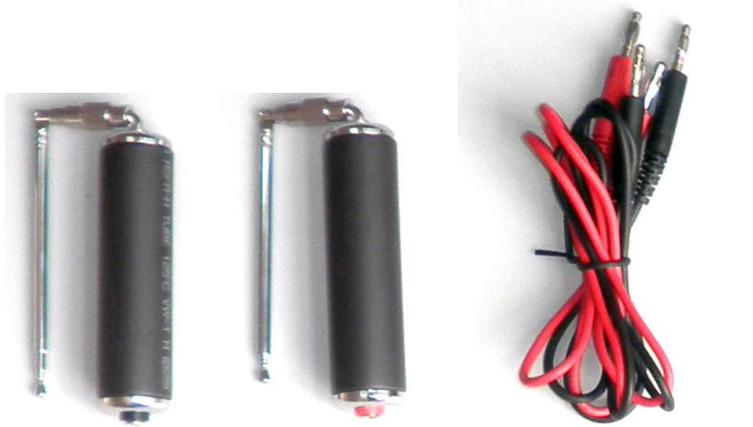

- Battery Charger of Belt Receiver; AC/DC adapter, input AC 220V 50Hz, output DC 3.6V 450mA.



- Battery Charger of Transmitter. **DO NOT** reverse sequence. 1000mA, 240V.



EPX-7500 LONG RANGE KING

- Antenna (Sending)



- Mark Flag



- Keys of the Outer case and the On/Off Switch on the Transmitter.



EPX-7500 LONG RANGE KING

2. Move toggle switch to the ON position to test lights. Transmitter may be tested by placing a small transistor radio, tuned to the lowest AM frequency, next to transmitter while it is on. There should be interference on the radio if the transmitter is functioning. Turning the largest knob on the transmitter will cause each light to light in sequence. The interference will change tone when the different elements are selected.
3. After unpacking the antenna rods, and before you plug them into the Belt Receiver, you will need to practice with them to 'get the feel' of them.
 - Extend the rods approximately six inches.
 - Take one rod in each hand.
 - Hold hands about twelve inches apart.
 - Start with the ends of the rods about five inches apart and tilted slightly downward about two inches.
 - **RELAX**
 - Walk at a normal pace.
 - Do not raise or swing rods.
 - Practice walking with rods until you can walk without swinging them. Mastering the use of the rods may take some practice, but is one of the key skills needed to effectively use your system.
4. After you have mastered using the rods, attach the Belt Receiver to your belt in the center front of your body. This is the optimum location for the receiver.
 - Plug the antenna rods into the Belt Receiver.
 - Test the rods as you did in step three. This is to make sure that there is no interference.
5. Now that the components have been tested and found functioning it is time to field test the system. Field test system in an area as free of metal debris as possible.

EPX-7500 LONG RANGE KING

6. To field test the system, place transmitter on the ground, plug the antenna into corresponding receptacles (labeled output jacks). **NEVER PLUG IN OR UNPLUG ANTENNA WHILE TRANSMITTER IS ON. DOING THIS WILL CAUSE DAMAGE TO THE SYSTEM AND SERIOUS INJURY TO THE OPERATOR.** Dig a small trench, approximately 3.5" deep, in front of the transmitter, in which to bury the antenna. Set the selector to the desired element. Turn on transmitter. Turn the horizontal and vertical knobs counter-clockwise as far as they will turn. Then, turn them clockwise just until the LED above the corresponding knob starts to brighten. Not all the way to the right. (This sets the transmitter to the ground conditions where you are working.) After three to five minutes, while standing approximately 25' from the transmitter, plug in receiving rods and the head phones into the receiver and place head phones on head. Turn on receiver set to half volume, there should be no sound. Walk slowly toward the transmitter. When you hear the same noise that you heard on the radio as you were testing the transmitter, note your distance from the transmitter. Back up approximately five feet, example, if you walked to within 15 feet of the transmitter, back up until you are approximately 20 feet from transmitter. Using 20 feet as an example. Using the rods, as practiced, walk a circle around the transmitter, staying approximately 20 feet from the transmitter. If the area is clear of target element, the rods should not cross.
7. To practice using the system bury a test object, approximately the weight of several coins or pieces of jewelry, about 50 feet from the transmitter.
8. Repeat Step 6. As you approach the line between the antenna and your test target, you will begin to hear a frequency in the headset. When you are on the line between the antenna and the test target the sound will be the loudest. Now the rods should cross when the line between the test target and the transmitter is crossed. (Remember the line will form between the antenna in the ground and the target - not the transmitter and the target.) As you pass the line, the volume will be reduced to nothing and the rods will uncross. Mark where the sound was the loudest and the rods crossed. Now move another ten feet from the transmitter (if you were 20 feet away from the transmitter, move out to 30 feet). Repeat the process, again marking where the noise was the loudest and the rods crossed. By drawing a straight line from the transmitter through the two places you marked you will have your X Axis. Shut off belt receiver and transmitter. Wait 15 minutes, then move the transmitter and antenna to a new location, repeat the process. Remember to bury the antenna. The line that is developed this time will be your Y Axis. Where the X Axis and Y Axis intersect will be your target.
9. After Steps 4 through 8 have been mastered it is time to try to locate unknown targets.
10. Select search site. It is suggested that you bury a test target at the search site to test the system and conditions. Repeat Steps 6 through 8. After successfully completing Step 8, remove test target and turn off transmitter. Wait about fifteen minutes before beginning actual search. Repeat Steps 6 through 8 while searching for desired target element.

EPX-7500 LONG RANGE KING

NOTES:

1. Test each search site at least twice. Locate the transmitter at least 50 feet from the first location for the second test. This will eliminate the possibility that a null reading was caused by the transmitter being placed directly on or within a few feet of the target.
2. Remember that you should not have any electronic devices or metal objects attached to your body, (especially cellular phones and pagers).
3. The line is developed from the antenna in the ground not from the case and/or transmitter.
4. Turn off transmitter when changing elements or when changing position of transmitter for triangulation, and wait at least fifteen (15) minutes before turning it back on. (This is to allow the first line to fade before developing the intersecting line.)
5. Do not add any metal or other test objects to the area being tested while the transmitter is turned on.
6. Under certain conditions, the line formed between the transmitter and the target may function as an antenna. Therefore you may hear AM radio transmissions in your headset. You will only hear the transmissions when you are on the line.

EPX-7500 LONG RANGE KING

PROPOSAL :

Now, we provide a suggestion of how to use the system.

After finishing all the field test of this system, placing transmitter on the ground. Plug the antenna into output jacks. This antenna can cover 360° detecting range. The most sensitive detecting area is as the dotted lines shown in Fig1.

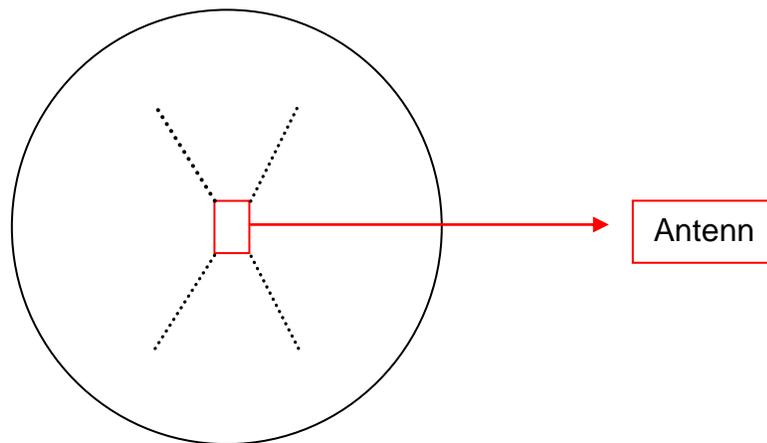


Fig1

Between the antenna and your target, there is a signal line (it is a suppositional, virtual line). You should carry the receiver rods and attach the receiver unit, and walk around the antenna to find one point of the signal line. As you approach the signal line between the antenna and your target, you will begin to hear a frequency in the headset. When you are on the signal line, the sound will be the loudest, and the receiving rods should cross. Pls. note, every point on the signal line should be marked.

According to above way, walk around the Antenna and the Transmitter for seeking the point of signal line. At the 1st time, distance between you and the Antenna is about 5~10m. And make a mark when receiving rods cross. At the 2nd time, choose another place, the distance between you and the the Antenna should be 20~25m. then walk around the Antenna. When the rods cross, make another mark. See Fig2. Note: all marks and the Antenna should be in one signal line.

Move the Transmitter and Antenna to another place. Walk around the Antenna and the Transmitter as above way to confirm marks and confirm the second signal line.

These two signal line should be cross. The coss point is the target place.

When the rods are not corssed, you have deviated your target. When you pass the target, the rods will turn and point the target.

EPX-7500 LONG RANGE KING


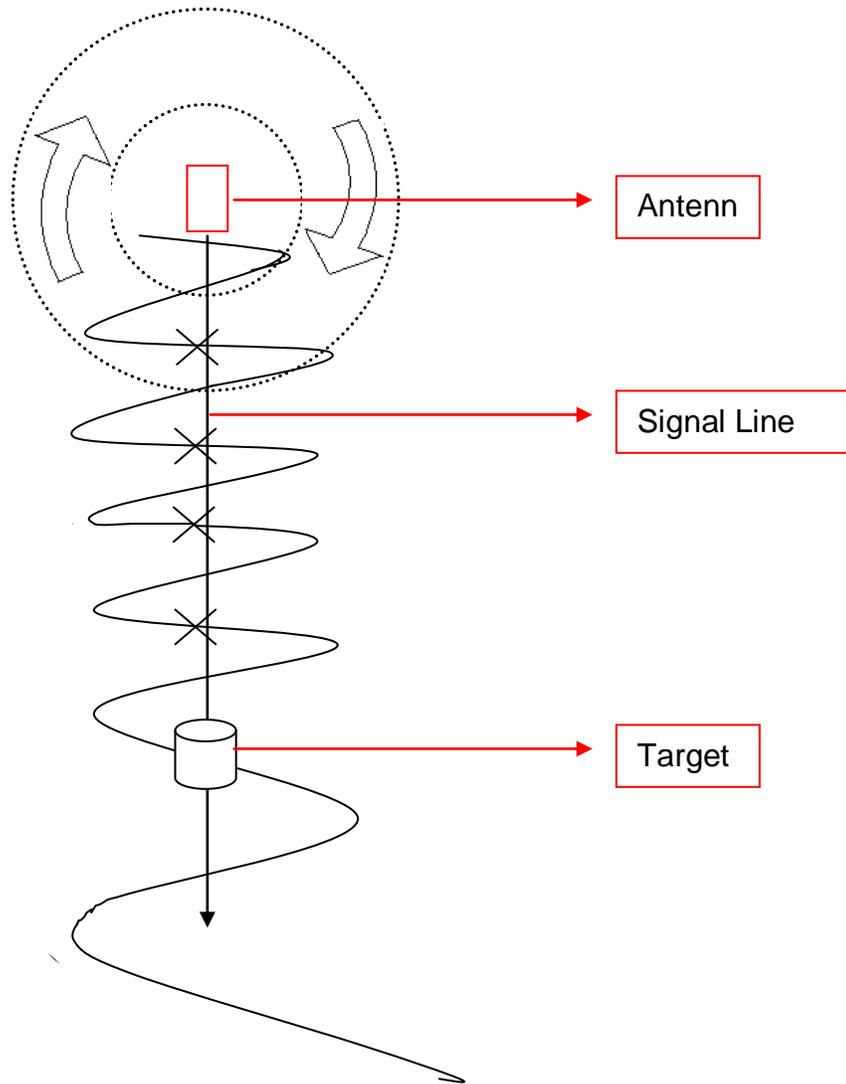


Fig2

EPX-7500 LONG RANGE KING

Followed are the Detailed Operation Tips:

1. put half of Antenna (Sending) in the ground.

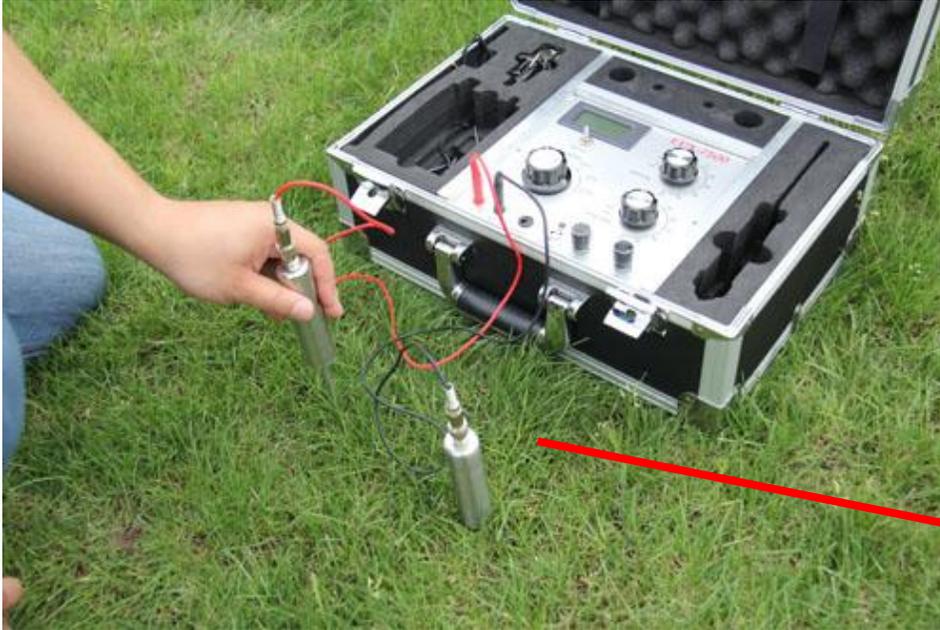

Antenna

2. Connect Antenna with the machine, and put the Keys in the On/Off Switch on the Transmitter. Turn on the Transmitter.



EPX-7500 LONG RANGE KING

3. Adjust the Seven Channels to select the detecting target.



Turn Horizontal Distance Selector and Vertical Depth Selector to select the detecting range and detecting depth.

4. Adjust the frequency range:

EPX-7500 LONG RANGE KING

SELECT \ Fine-tune	Frequency Range	Recommended
P.G	395-943	<p>1. After select a detecting target, adjust the frequency to the minimum frequency value which is reflected by the geographical environment.</p> <p>2. Because the different reaction of geology and mineralization, such as: gold, silver, copper, pyrite, iron, lead, zinc, and groundwater, pls. start to detect from the minimum frequency. If the mineralization interference intensity, pls. choose the corresponding intermediate average to detect. Choose the best suitable detection frequency.</p>
TIN	433-1038	
COPPER	472-1132	
ALUMINUM	512-1227	
GOLD	618-1480	
JEWEL	725-1740	
SILVER	831-1999	

5. Turn on the Belt Receiver, and connected with the Antenna (Receiving) Rods. You can set the Belt Receiver on your belt. Please refer to the below picture:

EPX-7500 LONG RANGE KING



Belt Receiver



Antenna (Receiving) Rods



Note: All above is ready, please wait for 15 minutes, before starting to detect.

How to detect ?

EPX-7500 LONG RANGE KING

6. All the above is Ok and starts to detect. One person takes the Belt Receiver and Antenna (Receiving) Rods, other person takes Mark Flag.


Move slowly around the Antenna and the transmitter, it is better 2 feet per second.



And pay attention how to take the Antenna (Receiving) Rods. Please refer to the following picture.



Walk around the Antenna and the transmitter in a ring.
please refer to the right picture how to walk.

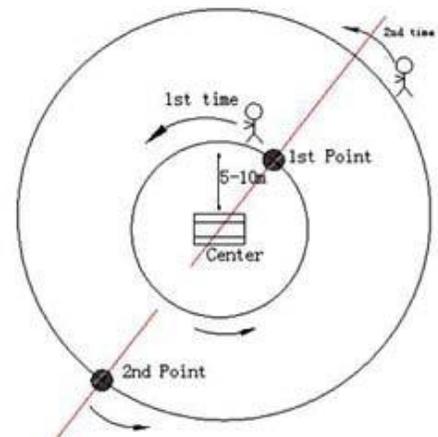

EPX-7500 LONG RANGE KING

Note:

- (1). Keep taking the Antenna (Receiving) Rods position and parallel as the above pictures.
- (2). Must move slowly around the Antenna and the transmitter, it is better 2 feet per second.

7. When the Antenna (Receiving) Rods are crossed, stick one Mark Flag in the ground to mark the cross position.



8. First walk around the Antenna and the transmitter in a ring, semi diameter is about 5-10m, to make sure a point.

EPX-7500 LONG RANGE KING



Then, walk around the Antenna and the transmitter in a bigger ring, semi diameter is over 5-10m, to make sure another point.




And the Antenna and the transmitter and the two points are in one line, refer to the below picture:

EPX-7500 LONG RANGE KING



9. Above is first step detecting, and change the Antenna and the transmitter position, and detect again following the above detecting method, to make sure another line. The cross of the two lines is the position of the gold. Please refer to the below picture.

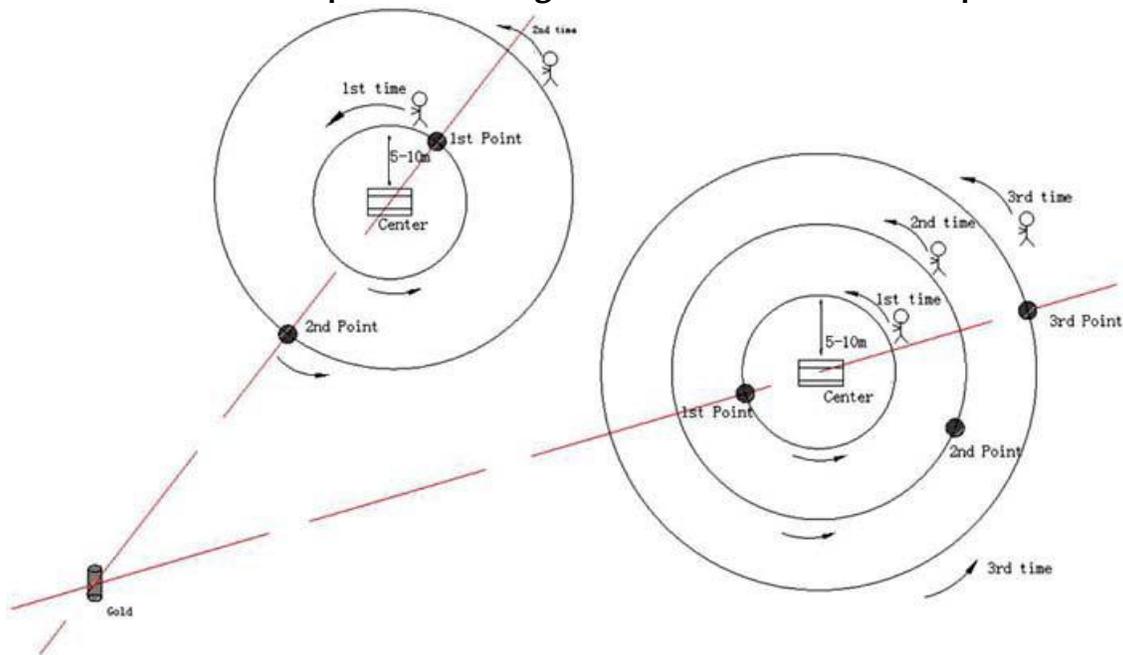

ADDITIONAL INSTRUCTIONS FOR THE EPX-7500 LONG RANGE KING

The following are step-by-step directions on the use of the antenna and system. Consult diagram to help you with these directions.

EPX-7500 LONG RANGE KING

Insert the antenna. While the antenna covers an area 360 around it, the best useable area is that area radiating in front of and to 60° from each side of the antenna. This area is enclosed within the dashed lines of the diagram.

After you have established this sector; move to one of the edge of one of the angles, approximately 15' from the antenna. You can be as close as 10' to a maximum of 18'. You don't need to go any further from the antenna than this to determine whether there is a possible target in the area covered between the two angles. Set the headset volume to the lowest setting that you can still hear. Now begin walking the arc between the two angles. You will hear a gradual increase in the tone as you approach the center of the arc. This tone will gradually decrease as you pass the arc and move toward the other angle. If you cross a target line, as you walk the arc, you will experience a sharp increase in tone that will immediately decrease as you pass the line. If you experience this, the rods should also cross. Walk over that area again but this time place a flag where the sharp tone begins and another where it ends. Continue to the far edge of the arc. Now walk back across the arc. If you again experience the sharp increase in the tone place a flag at the beginning and end as you did before.

The target line is in the center between the flags. Take a compass reading of that line.

Now move the antenna to another location on the site and repeat the procedure above. The target is where the lines cross.

WARRANTY CARD

USER UNIT		PHONE	
ADDRESS		ZIP CODE	

EPX-7500 LONG RANGE KING

PRODUCT TYPE		PRODUCT SERIAL NO.	
SALE UNIT		CONTACT PERSON	
ORDER DATE			
SERVICE RECORD			

Notice for Customers:

1. We warrant that the product will be free of manufacturing defects for a period of 1 year from the date of purchase.

2. Following circumstances are above and beyond the free maintenance service.
 - A. Damage caused by operation outside the instructions and notices stated in the operation manual or instruction manual. Damage caused by irresistible natural disasters

 - B. Damage caused by taking device apart without supplier agreement.