


OPERATING GUIDE for your GEM-K800 KEYPAD

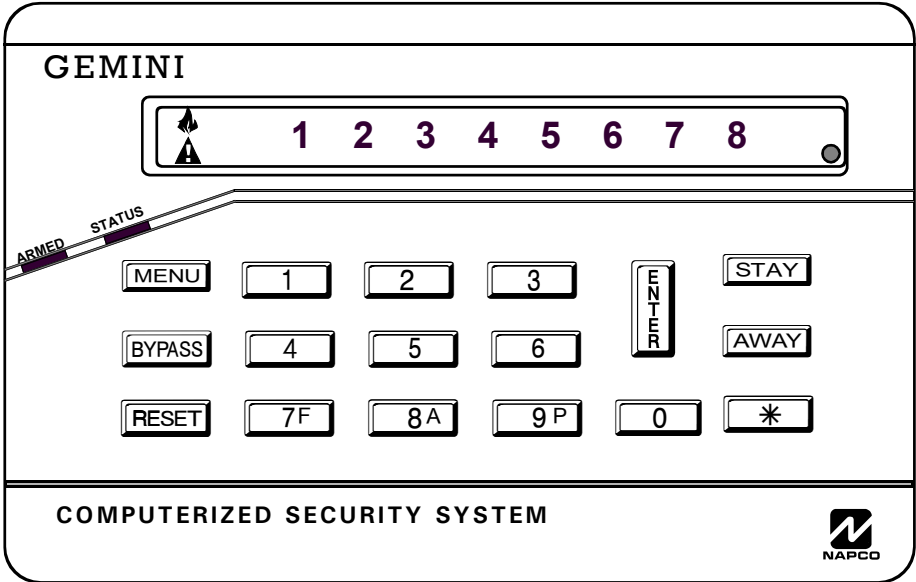

INTRODUCTION

Congratulations on your purchase of an advanced GEMINI-P800 Series Security System. Meticulously developed by a leading manufacturer of state-of-the-art security products, this system will provide you with unprecedented peace-of-mind & incorporates some of the most sophisticated features available today. Above all, it has been designed an extra step, to provide all those operating it with very easy, intuitive use. Please carefully review the information contained in this manual, so that you and all potential users of the system familiarize yourselves with its operation, and can therefore take full advantage of GEMINI's many convenient features and amenities.

Your system consists of a control panel (a computer housed within a white metal panel enclosure), one or more GEMINI Decorator Keypads for controlling the system, and various security detection devices. These detection devices are divided among separate areas known as “zones”, set up throughout your premises. Each zone number corresponds to a Zone light on your Keypad's display area.

When a zone's number is ON (or lit), it indicates that one or more detection device(s) assigned to that area are active or open. For example, if Zone 1 is the front door, and it is open, the **1** on the keypad display will be lit. If zone 2 is a motion detector, and there is movement in that area, **2** will light. Depending upon the actual layout your security professional has chosen to properly protect your premises, each zone may function a little differently: The zone protecting your front door may be programmed as an Exit/Entry zone to allow you time to enter the premises and disarm the system, without inadvertently sounding the alarm. Alternatively, a zone protecting a window could be designated as an “instant” zone, so that if it is entered or opened while the system is on/armed, there will be an immediate alarm.

Your easy GEMINI Keypad puts super-simple system control at your fingertips. Most keypad commands involve entering your four digit User Code. This includes Arming (or activating) and Disarming (or deactivating) the system. Simply put, ARMED means the system is ON; DISARMED means the system is OFF. If the system is OFF and you want to turn it ON, just enter your Code. To turn the system back OFF, enter your code again. ***It's easy, just always remember, in the event of an alarm, entering your User Code will silence all Sirens.*** Your keypad is your command and status center, it keeps you informed visibly—using its zone and status lights, and audibly—using its built-in keypad sounder. For more information, please see Keypad Controls and Indicators on page 4.

TABLE OF CONTENTS

TABLE OF CONTENTS

KEYPAD CONTROLS & INDICATORS	4
ARMING AWAY: SETTING THE ALARM WHEN LEAVING	5
ARMING STAY: PROTECTING YOURSELF AT HOME	6
EMERGENCY CONDITIONS	7
TURNING OFF THE ALARM (DISARMING) WHEN RETURNING	8
FIRE PROTECTION	9
FUNCTION MENU	11
SYSTEM TROUBLES	12
PROGRAMMING (OPTIONAL)	14
GLOSSARY	15
LIMITED WARRANTY	16

System Information

Central Station Phone Number: _____

Central Station Account Number: _____

For Service Call: _____

Entry Delay: _____

Exit Delay: _____

Alarm Time-out: _____

Important - Test Your System Weekly !

1 Bell / Battery Test (Panel Disarmed)

Test your bell or siren by pressing **MENU** followed by **1**.

This will cause the bell, or siren to sound for 2 seconds and also initiate a test of the battery .

2 Zone Test (Panel Disarmed)

Walk throughout the premises, opening each protected door or window, and activating each motion sensor. Check the keypad to see that each respective zone number displays in the window.

3 Central Station Communication Test (Panel Disarmed)

This test should only be performed on weekends or at a time designated by your alarm company.

- 1 Notify Central Station of the impending test.
- 2 Secure all zones to light the Status Light on your keypad.
- 3 Enter your User Code followed by **STAY** or **AWAY** to Arm the system.
- 4 Violate your alarm by opening a window / door etc.
- 5 The siren or bell should sound and the system will send the alarm signals to the Central Station.
- 6 Enter your User Code followed by **1** to silence the alarm.
- 7 Call Central Station to insure that the alarm signals were received properly.

KEYPAD CONTROLS AND INDICATORS

Fire Alarm Light 🔥 will flash and the Keypad sounder will beep when system is in a Fire Alarm Condition (See Silencing a fire Alarm, Page 8)

Zone Lights (1 through 8) will light to indicate that the corresponding Zone is open, and will flash to indicate a Zone in alarm.

AC Light will light to indicate that AC Power is present.

Trouble Light ⚠️ will light and the Keypad sounder will pulse to indicate that a system trouble is present. (See System troubles, Page 12)


Status Light will light when all zones are secure and system is ready to be Armed.

Armed Light will light when system is Armed, and will flash when system is in Alarm

Press **[MENU]** followed by the corresponding Function number to enable special functions and options. (See Special Functions, Page 11)

To Bypass a zone, press **[BYPASS]** and the zone number to be bypassed, and then Arm system.

Press **[RESET]** to reset Fire Zone, clear miss-entered codes, reset Alarm Memory, etc.

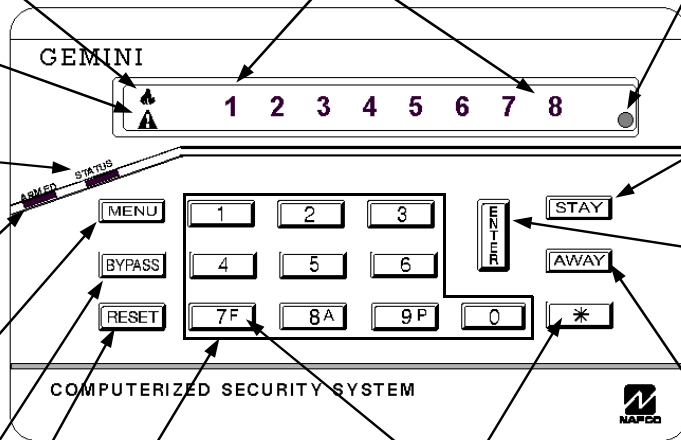

Press **[STAY]** after a valid User Code, the system will arm in STAY Mode (With interior Zones bypassed).

[ENTER] causes the entered code or selected function to be executed.

Numerical Keys 1-9, 0. Used to enter User Codes, Zone numbers, etc.

Emergency Keys Press simultaneously to signal an emergency condition.
 Press **[7F] + [*]** for Fire Emergency,
[8A] + [*] for Auxiliary Emergency or
[9P] + [*] for Police Emergency.
 (Programmable)

[AWAY] Allows arming with interior protection on.

ARMING AWAY: SETTING THE ALARM WHEN LEAVING

Arming in AWAY Mode

- 1 Before arming your system, make sure the green **Status** light is ON. This indicates that all of your protective zones are secure. If any zones are open, the corresponding Zone number will be lit. Secure these zones before proceeding. If any zones cannot be secured, see Bypassing zones below.
- 2 Enter your user code and press **[AWAY]**. The green **Status** light will go out, the red **Armed** light will light.
 - If you make a mistake entering your code, press **[RESET]**, re-enter your code and press **[AWAY]**.
 - If FIRE 🔥 is lit, the Fire zone has not been properly reset. Press **[RESET]**, enter your user code and press **[AWAY]**.
(See Silencing a Fire Alarm, page 8).
- 3 Leave the premises through the Exit/Entry door. If the keypad gives a steady tone you have taken too long. Enter your code again to disarm system and begin again at step 1 above.

Easy Arm--AWAY

The optional Easy Arm--AWAY feature allows the system to be armed by simply pressing and holding down **[AWAY]** for 3 seconds. This will allow the easy arming of the system by someone who is not a regular system user.

Selectively Bypassing Zones

If an open zone cannot be immediately fixed it can be left unprotected, or *bypassed*, while the rest of the system is Armed.

To bypass a zone:

- 1 With the panel disarmed, press **[BYPASS]** followed by the number of the zone to be bypassed. The bypassed zone's number will flash slowly.
- 2 Enter your user code and press **[AWAY]**. The green **Status** light will go out and the red **Armed** light will light.
- 3 Leave the premises through the Exit/Entry door.
When the system is subsequently disarmed, all bypassed zones will be reset, ready to be armed again. If it is necessary to bypass any inoperative zone(s), it is important to have the zone(s) repaired as soon as possible.
A bypassed zone does not provide any protection, compromising system security.

ARMING STAY: PROTECTING YOURSELF AT HOME

Arming in STAY Mode (Arm with Interior Zones Bypassed)

- 1 Interior Zones, when bypassed, allow free movement within the home while the protection of armed perimeter zones is maintained. Before arming your system, make sure the green **Status** light is ON. This indicates that all of your protective zones are secure. If any zones are open, the corresponding zone number will be lit. Secure those zones before proceeding.
- 2 Enter your User Code and press **[STAY]**. The green **Status** light will go out, and the red **Armed** light will light. At this point, you can stay within the premises, or since the Exit Delay is operating, you can leave the premises during the Exit Delay time.

Easy Arm--STAY

The optional Easy Arm--STAY feature allows the system to be armed by simply pressing and holding down **[STAY]** for 3 seconds. This will allow the easy arming of the system by someone who is not a regular system user.

Instant Protection


After arming STAY (above), press and hold **[STAY]** to cancel the Entry delay, activating the "Instant" mode. This is typically done in the evening when all family members are home for the night. Instant Mode can be activated at any time after the system has been armed. The red **Armed** light will flash rapidly while in the Instant Mode.

Easy Exit (Optional - Easy Exit programmed? YES NO)

Your System may have been programmed to allow Easy Exit, which allows a user to exit the premises with the system armed. By pressing **[MENU]** followed by **[0]**, the protection is removed from the Exit/ Entry zone for 3 minutes.

This will allow, for example, an early morning commuter to exit the house in the morning, without having to disarm and rearm the system, waking the family.

Arming with a System Trouble Present (TROUBLE is lit)

If the GEM-P800 has a system trouble present, TROUBLE  will be lit and the keypad sounder pulsing. If you cannot immediately clear the trouble, the system can still be armed. Simply press **[MENU]** followed by **[4]** to view the trouble.

Press **[MENU]** to view any other troubles, and exit the TROUBLE mode when done. Enter your User Code and press **[AWAY]** to arm the system. For more information, refer to page 12. **Note:** System troubles should be repaired as soon as possible.

EMERGENCY CONDITIONS

7F + *****

Fire Emergency
Enabled?

Yes No

8A + *****

Auxiliary Emergency
Enabled?

Yes No

9P + *****

Police Emergency
Enabled?

Yes No

**Ambush Alarm
Enabled?**

Yes No

Emergency Buttons **7F** **8A** **9P** *****

The three sets of emergency buttons, if programmed, are always active whether the system is armed or disarmed. Discuss these Buttons with your installer. The emergency signal will only be activated when the two respective buttons are pressed at the same time.

Fire Alarm: Simultaneously press **7F** + ***** to sound a fire alarm, and to alert the central station of a fire emergency, if so programmed.

Auxiliary Alarm: Simultaneously press **8A** + ***** to alert the central station of an auxiliary emergency, if so programmed. (The nature of this emergency alarm is to be determined by the installer)


Police Emergency: Simultaneously press **9P** + ***** to sound a police emergency alarm, and to alert the central station of a Police emergency, if so programmed.



Ambush Alarm

In the event that you are forced by an intruder to disarm your system, the ambush alarm can be activated. Disarming the system with the Ambush Code will cause the system to disarm and simultaneously send a silent ambush alarm signal to Central Station. If your system has the Ambush feature enabled, the code assigned as the User 8 code will function as your Ambush Code.

TURNING OFF THE ALARM (DISARMING) WHEN RETURNING


Disarming the System


- 1 Enter your premises through the Entry/Exit door. The keypad will sound a steady tone to remind you to disarm the system before your Entry Delay time expires.
- 2 Enter your User Code and press . The red **Armed** light will go out, indicating that the system has been disarmed.

Note: If you make a mistake entering your code, press  and re-enter the code, followed by .


Alarm Indication / Silencing an Alarm






If the Red Armed light is flashing rapidly, an alarm occurred while you were away. **Proceed with caution!** For your own protection, leave immediately and call authorities from a neighbors phone.

In the event that the system goes into alarm due to a violated burglary zone, the siren and the keypad sounder will activate, and the number of the zone in alarm will flash in the display. To silence the system, enter your User code followed by .

The keypad sounder and siren will silence, but the zone in alarm will continue to flash. Press  to reset this alarm memory.

Silencing a Fire Alarm

In the event that the Fire alarm activates due to a violated smoke or fire detector, the bell or siren will sound a distinct pulsating tone. **FIRE**  on the keypad will be flashing, and the keypad sounder will emit a pulsing tone. If a Fire Alarm does occur:

- 1 If a fire is in progress, evacuate the premises immediately! Call the Fire Department from an outside phone.
- 2 If there is no evidence of a fire, enter your User Code followed by . The bell or siren will silence, and FIRE  will stop flashing, but will still be lit.
- 3 Determine which device went into alarm. If you are protected by smoke detectors, the light on the active detector will be lit. Once it is determined which smoke detector is in alarm, press  to reset the fire zone.
- 4 If the Fire zone has reset properly, FIRE  should go out in approximately 30 seconds. If it does not go out, press  again in a few minutes. If it still does not go out, call for service.

Abort Delay

Ask your installer which of your zones have Abort Delay, a delay that enables you to reset the system before it communicates to the central station. Your system has a SIA CP-01 required Abort Delay of 30 seconds. It may be removed or increased up to 45 seconds (at your option) by consulting with your installer.

FIRE PROTECTION

Preparing a Fire Escape Plan

Even with the most advanced fire alarm system, adequate protection requires an escape plan.

To prepare your plan, draw floor plans of your building. (space is provided on the next page) Show two exits - a front or back door and a window from each room. (Make sure each window works. You may need a special fire-escape ladder if the window is high up). Write down your outside meeting place.

Family Rehearsal

Rehearse each of the following activities:

1. Everyone in his room with the doors closed.
2. One person sounds the alarm.
3. Each person tests his door.
4. Pretend that the door is hot and use the alternate escape exit.
5. Everyone meets outdoors at the assigned spot.

Important! - Read Carefully

Discuss each of these escape procedures with all those who use the building.

1. In a residence, sleep with the bedroom door closed.
2. When the fire alarm signals, escape quickly. Do not stop to pack.
3. Test the door. If it is hot, use your alternate route through the window. If the door is cool, brace your shoulder against it and open it cautiously. Be ready to slam the door if smoke or heat rushes in. Crawl through the smoke, holding your breath. Close the doors again on leaving to help prevent the fire from spreading.
4. Go to your specific outdoor meeting place so you can see that everyone is safe.
5. Call the Fire Department from a neighbor's telephone.

Would You Like More Safety Information?


For more information on home fire detection, burn safety, and home fire safety, write to:

National Fire Protection Association
Public Affairs Dept. 05A
Batterymarch Plaza
Quincy, MA 02269

FIRE PROTECTION

Floorplan

Draw a plan of your premises below.

A large, empty rectangular box with a black border, intended for drawing a floorplan of the premises.

FUNCTION MENU

By pressing **MENU** followed by the the appropriate key, (do not press simultaneously) these special functions and features can be enabled:

Easy Arm (when system is disarmed)

The Easy Arm feature allows the system to be armed by pressing **MENU** followed by **0**. This will allow the easy arming of the system by someone who is not a regular system user.

Easy Exit (when system is armed)

This function (if programmed) allows an occupant to leave the premises without disarming the system. Pressing **MENU** followed by **0** while the system is armed will start a 3 minute period, during which you can leave through the Exit/Entry door.

Bell / Battery Test

Pressing **MENU** followed by **1** will cause the bell, or siren to sound for 2 seconds. This will also initiate a test of your battery to make sure it is adequately charged. The P800 also performs an automatic battery test very 24 hours.

Access Output

If programmed, pressing **MENU** followed by **3** will activate the Access Output which may be configured to open a door strike, turn on lighting, or activate some other special feature your installer has provided.

Display System Trouble

Pressing **MENU** followed by **4** when TROUBLE **▲** is lit will cause the system to display any current system troubles. Pressing **STAY** will exit the Display System Trouble Mode.

Chime Mode On / Off

Pressing **MENU** followed by **5** will activate / deactivate the door chime. Activating this feature will cause any door to beep the keypad sounder when it is opened.


Program Mode

Pressing **MENU** followed by **8A** will enable the “Program Mode”, which will allow you to program and erase user codes (see Programming user codes, page 14).


Entry / Exit Annunciation


Pressing **MENU** followed by **9P** will deactivate / activate the Entry/Exit Annunciation, depending on its present state. By deactivating the sounder on a keypad installed in a bedroom, for example, you will only turn off *that* keypad’s sounder for Entry/Exit Annunciation. All other keypads on the system will still sound normally.

SYSTEM TROUBLES


The GEM-P800 is constantly monitoring its own components, as well as all critical services, such as AC power and the telephone line, to insure that it is always ready to provide the protection for which it was designed. When a system trouble does occur, it will caution you by lighting the TROUBLE  light and beeping the keypad buzzer.

If you cannot immediately clear the system trouble, the system can still be used. Simply press **[MENU]** followed by **[4]** to view the trouble as described below, and then arm the system.

To determine the nature of the trouble, press **[MENU]** followed by **[4]**, count the number of keypad beeps and observe the number of the illuminated zone. Refer to the following table to determine the cause of the trouble. If there is more than one trouble to view, pressing **[STAY]** will scroll to the next trouble, and then exit the TROUBLE  mode if there are no more troubles to view.

Keypad Beeps or  Flashes	Zone light ON	System Trouble Condition	Action
1 <i>Beep</i>	1	AC Power Failure	This trouble will occur if AC power is not present. Make sure system transformer is plugged into AC receptacle and check the circuit breaker, otherwise call installing company for service.
1 <i>Beep</i>	2	Low Battery	If there has been a recent power failure, the battery may be partially depleted and must be recharged by the control panel. If the trouble does not go away in 24 hours, call installing company for service.
1 <i>Beep</i>	3	Communication Failure	The system was not able to report to central station. If this is due to a temporary interruption in the telephone service, the trouble can be cleared when the service is restored by pressing [MENU] followed by [4] again to view the trouble, and then pressing [STAY] to exit. Otherwise, call installing company for service.
1 <i>Beep</i>	4	Telephone Line Cut	The telephone line has failed. If telephone service has been temporarily interrupted, the trouble will clear it is when restored. Otherwise, call installing company for service.
2 <i>Beeps</i>	1	Bell/Siren Trouble	There is a problem with the Bell or Siren. Call installing company for service.

SYSTEM TROUBLES

Keypad Beeps or  Flashes	Zone light ON	System Trouble Condition	Action
2 Beeps	2	Fire Trouble	A problem has been detected in the Fire Circuit. Call installing company for service.
2 Beeps	3	Wireless Receiver Trouble	A problem has been detected with the wireless receiver. Call installing company for service.
2 Beeps	4	Wireless Receiver Jam	A problem has been detected with a wireless receiver. Call installing company for service.
3 Beeps	1-8	Wireless Transmitter Low Battery	The battery in a wireless transmitter is low and should be replaced. This transmitter is on the zone corresponding to the number of the lit zone light. The replacement battery for the GEM-Trans2 door/window transmitter, GEM-PIR motion detector and GEM-GB glass break detector is the Duracell DL123A 3 volt lithium (2 required for the GEM-PIR and GEM-GB). The GEM-DT Dual Technology Sensor requires 4 C cell alkaline batteries. <i>Warning: Replace batteries only with the same type as specified above. Use of another battery may present a risk of fire or explosion. Do not recharge or disassemble battery, or dispose of in fire.</i>
4 Beeps	1-8	Wireless Transmitter Supervisory Failure	A problem has been detected with a wireless transmitter. Call installing company for service
5 Beeps	1-4	Wireless Smoke Detector Low Battery	The battery in a wireless smoke detector is low and should be replaced. This wireless smoke detector should be marked with a number corresponding to the number of the lit zone light. The replacement battery is the Duracell MN1604 9 Volt Alkaline(2 required). <i>Warning: Replace batteries only with the same type as specified above. Use of another battery may present a risk of fire or explosion. Do not recharge or disassemble battery, or dispose of in fire.</i>
6 Beeps	1-4	Wireless Smoke Detector Supervisory Failure	A problem has been detected with a wireless smoke detector. Call installing company for service.
7 Beeps	1-6	Zone Trouble	Call installing company for service.

PROGRAMMING (OPTIONAL)

Your Installer has assigned a User 1 Code which can be used to not only Arm and Disarm the system, but also to enter the User Program Mode, where you can program other user codes. The following explains how you will use this code to program or erase additional user codes.

Entering the User Program Mode

With the panel disarmed, press **MENU** followed by **8A** and enter the User 1 code followed by **ENTER**. The Armed, Status and **▲** lights will flash, and the keypad will beep 4 times. You are now in the User Program mode. Zones 1 through 8 will light to indicate any User Codes presently programmed.

Programming / Reprogramming User Codes

- 1 Press the User number to be programmed. (For example, press **2** to program the User 2 code).
The keypad will beep 2 times and the corresponding Zone will flash to indicate the user number you are about to program.
- 2 Press in the 4 digits of the new User 2 code, the keypad will beep 4 times.
- 3 If there are more user codes to be programmed, return to step 1 above, otherwise, go to Exiting the User Program Mode below.

Erasing a User Code


- 1 Press the User number to be erased. The keypad will beep 2 times and the corresponding Zone light will flash to indicate the user number you are about to erase.
- 2 Press **AWAY**. The zone light will go out to indicate that the user code has been erased.
- 3 If there are more user codes to be erased, return to step 1 above, otherwise, go to Exiting the User Program Mode below.

Exiting the User Program Mode

When you are done programming or erasing User codes, press **RESET** to Exit the User Program Mode.


GLOSSARY

Ambush Code - In the event that you are forced by an intruder to disarm your system, this special code can be used to disarm the system, and simultaneously send a silent alarm to Central Station. If your system has the Ambush feature enabled, the code assigned as the User 8 code will function as your Ambush Code.

Arming - Turning the system on by entering your user code at the keypad, followed by .

Auto Interior Bypass - A feature which allows the system to recognize when you have not left the premises and automatically bypass any interior zones, deactivating devices such as motion sensors, allowing free movement throughout the premises.


 
Battery - A backup source of power to provide protection for a limited time in the event of a power failure.

Bypass - the manual or automatic removal of one or more protection zones from the system. Press  and then

the zone number to bypass a zone.


Central Station - Monitors alarm, emergency and trouble reports from the alarm system and notifies proper authorities.

Chime - a keypad beep which indicates that a door has been opened while the system is disarmed.


Easy Exit - Allows an occupant to leave the premises without disarming the system. Pressing  and then  while the system is armed will permit exit by removing the protection on the Exit/Entry door for 3 minutes.

Exit/Entry Delay - The amount of time you are allowed to enter and leave the premises when the system is armed.

Exit/Entry Zone - A zone which will allow you to enter and leave the premises when the system is armed.

Instant Protection - Arming without Entry Delay while remaining on the premises. (Press and hold  while armed).

Keypad Sounder - A local warning device at the keypad to alert that Entry delay has started.

System Trouble - A problem has been detected in the system which may prevent it from working properly. TROUBLE  will be lit to indicate a system trouble.

User Code - A four digit code which is used to arm and disarm the system from the keypad.

User 1 Code - A four digit code which can be used to program, re-program and erase user codes, as well as arm and disarm the system from the keypad.

Zone - An area which is protected by a security device. Your front door may be designated as Zone 1, while the living room motion detector may be Zone 2. Refer to the Zone Label on your keypad for the Zone Identification of your system.

NAPCO LIMITED WARRANTY

NAPCO SECURITY SYSTEMS, INC. (NAPCO) warrants its products to be free from manufacturing defects in materials and workmanship for thirty-six months following the date of manufacture. NAPCO will, within said period, at its option, repair or replace any product failing to operate correctly without charge to the original purchaser or user.

This warranty shall not apply to any equipment, or any part thereof, which has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to acts of God, or on which any serial numbers have been altered, defaced or removed. Seller will not be responsible for any dismantling or reinstallation charges.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. THERE IS NO EXPRESS OR IMPLIED WARRANTY OF MERCHANTABILITY OR A WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. ADDITIONALLY, THIS WARRANTY IS IN LIEU OF ALL OTHER OBLIGATIONS OR LIABILITIES ON THE PART OF NAPCO.

Any action for breach of warranty, including but not limited to any implied warranty of merchantability, must be brought within the six months following the end of the warranty period.

IN NO CASE SHALL NAPCO BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY THE SELLER'S OWN NEGLIGENCE OR FAULT.

In case of defect, contact the security professional who installed and maintains your security system. In order to exercise the warranty, the product must be returned by the security professional, shipping costs prepaid and insured to NAPCO. After repair or replacement, NAPCO assumes the cost of returning products under warranty. NAPCO shall have no obligation under this warranty, or otherwise, if the product has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to accident, nuisance, flood, fire or acts of God, or on which any serial numbers have been altered, defaced or removed. NAPCO will not be responsible for any dismantling, reassembly or reinstallation charges.

This warranty contains the entire warranty. It is the sole warranty and any prior agreements or representations, whether oral or written, are either merged herein or are expressly cancelled. NAPCO

neither assumes, nor authorizes any other person purporting to act on its behalf to modify, to change, or to assume for it, any other warranty or liability concerning its products.

In no event shall NAPCO be liable for an amount in excess of NAPCO's original selling price of the product, for any loss or damage, whether direct, indirect, incidental, consequential, or otherwise arising out of any failure of the product. Seller's warranty, as hereinabove set forth, shall not be enlarged, diminished or affected by and no obligation or liability shall arise or grow out of Seller's rendering of technical advice or service in connection with Buyer's order of the goods furnished hereunder.

NAPCO RECOMMENDS THAT THE ENTIRE SYSTEM BE COMPLETELY TESTED WEEKLY.

Warning: Despite frequent testing, and due to, but not limited to, any or all of the following: criminal tampering, electrical or communications disruption, it is possible for the system to fail to perform as expected. NAPCO does not represent that the product/system may not be compromised or circumvented; or that the product or system will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; nor that the product or system will in all cases provide adequate warning or protection. A properly installed and maintained alarm may only reduce risk of burglary, robbery, fire or otherwise but it is not insurance or a guarantee that these events will not occur. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE, OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING. Therefore, the installer should in turn advise the consumer to take any and all precautions for his or her safety including, but not limited to, fleeing the premises and calling police or fire department, in order to mitigate the possibilities of harm and/or damage.

NAPCO is not an insurer of either the property or safety of the user's family or employees, and limits its liability for any loss or damage including incidental or consequential damages to NAPCO's original selling price of the product regardless of the cause of such loss or damage.

Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages, or differentiate in their treatment of limitations of liability for ordinary or gross negligence, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

THE FOLLOWING STATEMENT IS REQUIRED BY THE FCC.

This equipment generates and uses radio-frequency energy and, if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class-B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation.

However, there is no guarantee that interference will not occur in a particular installation. If this

equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient the receiving antenna; relocate the computer with respect to the receiver; move the computer away from the receiver; plug the computer into a different outlet so that computer and receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful: "How to Identify and Resolve Radio-TV Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington, DC 20402; Stock No. 004-000-00345-4.

NAPCO Security Systems, 333 Bayview Avenue, Amityville, NY 11701