

# USER MANUAL

## battery + motor management

charge / discharge  
NiMH - LiPo - NiCd  
voltage output



#91552


stealth evolution

for distributor address see packaging

www.nosram.com

## 1. CONNECTIONS / OPERATION


The NOSRAM STEALTH EVOLUTION was developed with the main objective placed on easy operation of all features. Intuitive navigation by means of 4 buttons makes it very easy to use and the 2-line LC display offers perfect, reliable control of all settings.

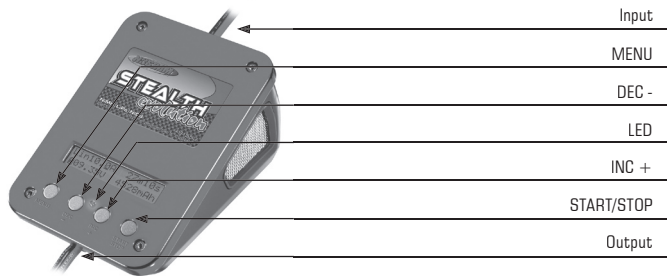

### Buttons:

**MENU** Scrolls/jumps through the function list.  
**DEC -** Decrements the underscored value.\*  
**INC +** Increments the underscored value.\*  
**START/STOP** Next program step / Start a program / Cancel a running program.

\* Button has high-speed function for rapid setting (hold down button to change value faster).

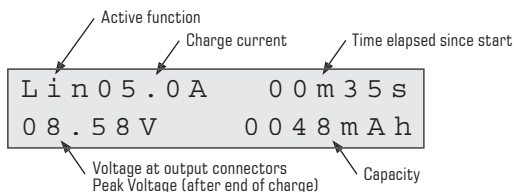

## 2. SETTINGS

The NOSRAM STEALTH EVOLUTION allows you to save 4 individual user profiles. This means you can customize 4 personal charge profiles individually and store them for later use. The NOSRAM STEALTH EVOLUTION has 4 preset works-default settings when shipped out: P1 (NiMH programm - Linear), P2 (NiMH programm - Vario-Step), P3 (2-cell LiPo programm), P4 (NiMH Receiver/Transmitter batteries programm). For details see the table below.

The NOSRAM STEALTH EVOLUTION indicates the current programm P1, P2, P3 or P4 by displaying it on the main menu. By pressing the INC+ and DEC- buttons you can change between the profiles and their settings.

To reset your NOSRAM STEALTH EVOLUTION to works-default settings, proceed as follows:

- Disconnect input voltage.
- Hold down MENU button while reconnecting the input voltage.

User Profile	#1	#2	#3	#4
Charge Mode	Lin	Stp	Lip	Lin
Charge Current(1)	5.0A	3.0A	3.0A	1.2A
Charge Current2	--	6.0A	--	--
Charge Current3	--	4.0A	--	--
Charge Capacity1	--	0.5Ah	--	--
Charge Capacity2	--	3.5Ah	--	--
Charge D-Peak	10mV	10mV	--	20mV
Charge Trickle	Off	Off	--	Off
Charge LiPo Volt	--	--	07.4V	--
Discharge Current	10.0A	10.0A	10.0A	1.0A
Discharge Voltage	5.4V	5.4V	5.6V	4.0V
Volt-Out	5.0V	5.0V	5.0V	5.0V

## 3. VOLT OUT

You can use this function in a number of ways. For example:

- Running in brushed motors or motor brushes (check for excess current consumption).
- Powering com-lathes
- Powering 7.2 V soldering irons
- Powering tire warmers

The voltage setting, current and operating time are displayed. The output voltage can be changed on the fly during operation in 0.1V steps.

### SET Volt-Out:

The voltage is continuously variable from 1.0 - 12.0V. The maximum current is 20A. We recommend a voltage of 4.0V for running in brushed motors. The special run-up electronics allow trouble-free running-in of motors with very high no-load currents and low number of turns when you set the NOSRAM STEALTH EVOLUTION to low voltages.

Dear customer,

thank you for your trust in this NOSRAM product. By purchasing a NOSRAM STEALTH EVOLUTION - Battery + Motor Management system, you have chosen a high-performance product. The successor of the extremely popular NOSRAM STEALTH sets new standards in the segment of battery + motor management systems. The NOSRAM STEALTH EVOLUTION presents itself with the the latest technology incorporated including the following High-Tech features:

- LiPo charging
- Partial Charge Mode
- Adjustable Voltage-Output Mode
- Indication of peak voltage after charging
- Limited Lifetime Warranty
- Vario-Step Charging
- 4 User Profile Memories
- Voltage Calibration Mode
- Enhanced Digital
- 3-way Protection-System

Please read the following instructions to ensure, that your NOSRAM STEALTH EVOLUTION unit always works up to your full satisfaction.

**Please read and understand these instructions completely before you use this product! With operating this product, you accept the NOSRAM warranty terms.**

## 4. SPECIFICATION

Dimensions	100 x 153 x 70mm	Voltage Output	1.0 - 12.0V / 20A
Weight	600g	Discharge cut-off voltage	0.9 - 9.0V
Input Voltage	11 - 15V	User Profile Memory	4
Charging Modes	Linear, Vario-Step & LiPo	Matching Mode	yes
Charging Capability NiMH & NiCd	1-8 cells	Partial Charge Mode	yes
Charging Capability LiPo	1-3 cells	Enhanced Digital	yes
Charge current	0.1 - 10.0A	Auto-Restart-System	yes
Trickle current	0.0 - 0.4A	3-way Protection-System	yes
Delta-Peak	5 - 95mV	Vampire Red LCD-Display	yes
PPS	yes	Buttons	4
Autostart Timer	0 - 99min	Internal, programmcontrolled fan	yes
Discharge current	0.1 - 10.0A		

## 5. CHARGE

### SET Charge Mode:

The NOSRAM STEALTH EVOLUTION comprises 3 charging methods:

**Lin ①** → „Linear“ = NiMH/NiCd-charging with constant current. This is the most popular charging method for NiMH/NiCd-batteries in competition.

**Stp ②** → „Vario-Step“ = NiMH/NiCd-charging with changeable 3-step current. This charging method allows you to charge your battery with 3 different charging currents, which are changed based on the already charged-in capacity of the battery.

**Lip ③** → „LiPo“ = LiPo-charging using the CC/CV-charging method. With this charging method, the battery gets charged with a constant current first. As soon as the battery voltage reaches the max. charging voltage of the LiPo battery, the charger automatically reduces the charging current till the battery is fully charged.

**CAUTION:** Only use the „LiPo“ charging method when charging a LiPo battery. „Linear“ and „Vario-Step“ charging methods **may not** be used to charge a LiPo battery, as this will lead to fire or explosion.

**Note:** The following charge settings depend on the chosen charging method. The numbers in front of each charge setting indicate, if this setting is available for this particular charging method or not.

**①②③ SET Charge Current(1):** The charge current can be set from 0.1 to 10.0A. If not otherwise specified by the battery manufacturer, the max. charge current should never exceed twice the nominal capacity of typical Sub-C cells used in the R/C industry. For typical LiPo batteries used in the R/C industry, the max. charge current should never exceed the nominal capacity.

**③ SET Charge Curren2 (Charge current Step 2 - Vario-Step):** With this setting you can adjust the charging current for Step 2 of the Vario-Step charging. This charging current gets enabled, as soon as the charged-in capacity reaches the value set with „SET Charge Capacit1“.

**③ SET Charge Curren3 (Charge current Step 3 - Vario-Step):** With this setting you can adjust the charging current for Step 3 of the Vario-Step charging. This charging current gets enabled, as soon as the charged-in capacity reaches the value set with „SET Charge Capacit2“.

**③ SET Charge Capacit1 (Switch from Step 1 to Step 2 - Vario-Step):** With this setting you set the capacity value, where the charging current changes from Step 1 to Step 2.

**③ SET Charge Capacit2 (Switch from Step 2 to Step 3 - Vario-Step):** With this setting you set the capacity value, where the charging current changes from Step 2 to Step 3.

**①② SET Charge D-Peak (Delta Peak):** With NiMH/NiCd-batteries, you only obtain the optimum battery performance by slightly „overcharging“ the battery. In real terms, it will not be overcharged, but charged to an optimum level. The battery voltage drops at the end of the charging process (delta). The size of the drop (delta peak) is adjustable in the range between 5 - 95mV. The higher the value, the hotter the battery will be at the end of the charge. We recommend to start with the works-default settings.

**Note:** The adjustable Delta-Peak value applies to the whole battery pack and not to one single cell!

**①② SET Charge Trickle:** This current, which flows after delta peak cutoff, is adjustable from 0.0 A to 0.4 A to achieve the highest possible voltage for NiCd cells. Set this function to „Off“ for NiMH cells.

**③ SET Charge LiPo Volt (LiPo max. charging voltage):** The max. charging voltage for LiPo batteries can be set to three different values (3.7V; 7.4V; 11.1V). Set this value in dependence of the used quantity of LiPo cells. With a 1S LiPo-pack use 3.7V, with a 2S pack use 7.4V and with a 3S pack use 11.1V.

## 6. DISCHARGE

The adjustable discharge circuit (0.1 to 10.0A) can be used for 1-8 cell NiMH/NiCd-packs and 1-3 cell LiPo-packs. The NOSRAM STEALTH EVOLUTION informs you about all the data relating to the battery pack, e.g. discharge time, capacity and average voltage.

By discharging your battery pack on the NOSRAM STEALTH EVOLUTION after use, you obtain vital information about remaining capacity for optimizing your motor or gear ratio for the next run. This also maintains your battery packs in good condition.

**SET Discharge Current:** The discharge current can be set from 0.1 - 10.0A. If not otherwise specified by the battery manufacturer, the max. discharge current can be set to 10.0A for typical Sub-C cells used in the R/C industry. For typical LiPo batteries with a high C-rate used in the R/C industry, the max. discharge current can be set to 10.0A as well. However for receiver-/transmitter battery packs or LiPo batteries with a low C-rate, you should lower the discharge current according to the manufacturer's recommendations.

**SET Discharge Voltage:** The cut-off voltage can be adjusted from 0.9 - 9.0V depending on the number of cells. We recommend a cut-off voltage of 0.9V/cell with NiMH/NiCd-batteries and 2.8V/cell with LiPo-batteries. This means, for example, 5.4V for a 6-cell NiMH/NiCd-pack or 5.6V for a 2-cell LiPo-pack.

## 7. MATCHING

This fully automatic matching program allows you to determine the actual performance of your packs before using them. Battery packs change during their life span. Use the NOSRAM STEALTH EVOLUTION to detect the actual quality of your packs. This prevents nasty surprises.

The "Matching" mode uses the charge and discharge values of the currently selected program, stored under "Settings". The pack is first discharged, then charged and finally discharged. At the end of the process, the pack capacity and the average discharge voltage are displayed.

**Note:** The „Matching“ function can be used for NiMH/NiCd and LiPo-batteries.

## 8. PARTIAL CHARGE

Never store NiMH and LiPo-batteries completely empty. This will harm the batteries and lower their performance. Due to this fact, the NOSRAM STEALTH EVOLUTION features a „Partial charge“ mode for batteries. With this function, you can set a fixed capacity value and the NOSRAM STEALTH EVOLUTION will charge exactly this capacity amount into your battery. Thus you can always perfectly prepare your battery for storage, if you want to store them over a longer period of time.

We recommend to completely discharge the battery first and then put about half of the nominal capacity back into the battery. For example, a battery with a nominal capacity of 4200mAh should be partially charged with 2100mAh.

**Note:** NiMH batteries can be stored for about 1-2 months without problems using this method. LiPo batteries can be stored for about 6 months without problems. After this time period, you should check the battery and, if necessary, put some partial charge in again if you don't use it regularly.

To partially charge a battery, follow these instructions (see chapter 12 „Programme Structure“ for further reference):

1. Be sure, that the battery has been discharged completely.
2. Choose a suitable charging profile or adjust the charge setting in the „Settings“ menu so it fits the battery, which you want to partially charge.
3. Choose „Charge“ from the menu and press the START/STOP button to get to the Autostart setting screen.
4. Now press the MENU button once, as long as you see the Autostart setting screen.
5. The screen now changes to „Par Charge“ and 1.0Ah is preset.
6. You can now use the INC+ und DEC- buttons to adjust the amount of partial charge. After setting the partial charge value, press the START/STOP button to start the partial charge.

## 9. VOLTAGE CALIBRATION MODE

With this function, you can calibrate the voltage shown on the menu screen. All NOSRAM STEALTH EVOLUTION units are already calibrated coming from the factory, but due to aging of the components, this calibration can slightly change over time. Then you can readjust the voltage on your NOSRAM STEALTH EVOLUTION with this function.

Another advantage of this function is, that two different NOSRAM STEALTH EVOLUTION units, which have been calibrated with the „Voltage calibration mode“, will show exactly the same results. Therefore results of the „Matching“ mode can be directly compared.

To enter the „Voltage calibration mode“, follow these instructions:

1. Press and hold the INC+ and DEC- buttons and connect the NOSRAM STEALTH EVOLUTION to a power source. The charger is now in voltage calibration mode.
2. Connect a battery to the NOSRAM STEALTH EVOLUTION. Take a voltmeter and measure the voltage directly at the battery connectors.
3. Adjust the voltage on the NOSRAM STEALTH EVOLUTION to the voltage on the voltmeter using the INC+ and DEC- buttons.
4. To save the new value and to return back to the main menu, press the START/STOP button once.

## 10. TROUBLESHOOTING GUIDE

The NOSRAM STEALTH EVOLUTION is protected against faults and operator errors by the 3-way Protection-System. Faults/Errors are displayed on the LCD screen and some faults/errors may interrupt the charging process to protect the charger and the battery. The error messages are as follows:

### ERROR-MESSAGES

CAUTION B A T E R R
I N T E R R U P T I / P H I
I N T E R R U P T I / P L O W
CAUTION A M P H I
CAUTION T E M P H I
CAUTION V O L T H I

### POSSIBLE CAUSES

- Wrong battery polarity, bad contact?
- Defective battery?
- Wrong LiPo-cell quantity?
- Input voltage too high (higher than 15.8V)
- Input voltage too low/switched off (lower than 10.0V)
- Bad contact on input clamps?
- Motor current >20A?
- Motor defective?
- Temperature of the charger too high.
- Cell quantity during discharge too high?

**LCD:** LCD stays dark, no function -> Change the fuse

**Fan:** Fan is program-controlled and only runs when necessary. It is no fault if fan doesn't run continuously.

**Input Low:** If input voltage is too low, the NOSRAM STEALTH EVOLUTION will continue to charge and automatically sets the charge current to a lower value to make sure that the battery gets fully charged. If this function is active, „Inp Low“ appears in the LCD alternating with the input voltage reading. You cannot increase the charge current manually.

**Fuse:** The NOSRAM STEALTH EVOLUTION has an additional internal fuse which protects the charger from irreparable damage if operated incorrectly! The NOSRAM STEALTH EVOLUTION is supplied with a replacement fuse. It is easy to replace. To change the fuse, proceed as follows:

1. Make sure that nothing is connected to the NOSRAM STEALTH EVOLUTION.
2. Unscrew the two screws at the bottom of the case and fold open the housing.
3. Remove the defective fuse and insert a new fuse.
4. Close the NOSRAM STEALTH EVOLUTION again.

## 11. SPECIAL FEATURES

**Autostart Timer:** This handy feature lets you preselect when you want to start charging your battery with the NOSRAM STEALTH EVOLUTION. The Autostart Timer is adjustable from 0 - 99min. If you stay in the „Autostart Display“ for longer then 30sec without setting a value, the NOSRAM STEALTH EVOLUTION will start charging automatically.

**Auto-Restart-System:** Already known from its predecessor, the NOSRAM STEALTH EVOLUTION continues to automatically charge a battery after the input voltage failed. A total power failure at races is no rarity and this feature allows you to fully charge your battery packs within the remaining time at a higher charge current.

**Changing the charge current on the fly:** The charge current can be changed on the fly by pressing INC+ or DEC- without interrupting the charging process. This change is not stored. The next time you start charging, the device takes the data settings of each charge profile, stored under "Settings".

**Indication of Peak Voltage after charging:** After charging has been completed, the peak voltage (instead of the voltage at the output connectors) of the charged battery pack is shown on the display.

**PPS (Peak Power System):** The voltage charge curve of NiMH cells may vary considerably at the start of charging due to cell construction. Conventional chargers interpret this incorrectly as „delta peak reached“ and terminate the charging process (false peak). The NOSRAM STEALTH EVOLUTION has the updated NOSRAM-exclusive PPS which contains advanced algorithms to detect this phenomenon: This ensures reliable full charging.

PPS allows the perfect full charge of all NiMH cell types by means of an adjustable delta peak and high-precision digital-filter detection of all parameters throughout the entire charging process. Herewith temperature charging is obsolete! The NOSRAM STEALTH EVOLUTION signals full charge and end of charge with an alert buzzer that sounds for 3 minutes at 4-second intervals.

**Charging of NiMH, NiCd and LiPo-batteries:** Fast Charge: 1-8 cells (NiMH/NiCd), 1-3 cells (LiPo), 0.1A to 10.0A on the fly. 3 charge modes: Linear, Vario-Step & LiPo with PPS and adjustable Delta-Peak (5-95mV).

**Vario-Step charge mode:** During Vario-Step charging, the battery will be charged with different charging currents divided into steps. The charge current and the duration of each step are adjustable. With the „Step“ charge mode, you can divide the charge current into 3 different steps. These 3 steps will be activated in dependence of the already charged-in capacity of the battery.

At the beginning of the charging process, the standard charging current is chosen (Step 1). As soon as the capacity of the battery reaches the value set with „SET Charge Capacit1“ (see chapter 5 „Charge“ for further reference), the charge current switches to Step 2. As soon as the capacity of the battery reaches the value set with „SET Charge Capacit2“, the charge current switches to Step 3 and the the battery will be charged with this charge current till reaching the Delta-Peak cut-off.

**Discharging of NiMH, NiCd and LiPo-batteries:** Variable 0.1 to 10.0A discharge current adjustable on the fly. Displays discharge time, capacity and average voltage. Adjustable cut-off voltage from 0.9 to 9.0V.

**PWM - Circuit:** The NOSRAM STEALTH EVOLUTION ensures efficient charging through the use of the latest digital technology. There are many benefits here:

1. Maximum charge current even at low input voltage.
2. Maximum charge current already for 1-cell (for NiMH/NiCd aswell as for LiPo-batteries).
3. Very low heating of the charger itself.
4. More charges out of a single car battery since the charger has a higher efficiency.

## REPAIR PROCEDURES / LIMITED WARRANTY

All products from NOSRAM are manufactured according to the highest quality standards. NOSRAM guarantees this product to be free from defects in materials or workmanship for 90 days (non-european countris only) from the original date of purchase verified by sales receipt. This limited warranty doesn't cover defects, which are a result of normal wear, misuse or improper maintenance. This applies among other things on:

- Cut off/changed original input- and/or output-wires
- Mechanical damage of the case
- Humidity/Water inside the case
- Mechanical damage of electronical components/PCB
- Soldered on the PCB

With Limited Lifetime Warranty products, the warranty terms on the Limited Lifetime Warranty card do also apply.

To eliminate all other possibilities or improper handling, first check all other components and the trouble shooting guide, if available, before you send in this product for repair or warranty. Products sent in for repair, that operate perfect have to be charged with a service fee.

By sending in this product, you assign NOSRAM to repair the product, if it is no warranty or Limited Lifetime Warranty case. The original sales receipt including date of purchase needs to be included. Otherwise, no warranty can be granted. For quick repair- and return service, add your address and detailed description of the malfunction.

Because we don't have control over the installation or use of this product, we can't accept any liability for any damages resulting from using this product. Therefore using this product is at owner's risk. Our limited warranty liability shall be limited to repairing the unit to our original specifications. In no case shall our liability exceed the original cost of the unit. By installing or operating this product, the user accepts all resulting liability.

The specifications like weight, size and others should be seen as guide values. Due to ongoing technical improvements, which are done in the interest of the product, NOSRAM does not take any responsibility for the accuracy of these specs.

### NOSRAM-Distributor-Service:

- Package your product carefully and include sales receipt and detailed description of malfunction.
- Send parcel to your national NOSRAM distributor.
- Distributor repairs or exchanges the product.
- Shipment back to you usually by COD (cash on delivery), but this is subject to your national NOSRAM distributor's general policy.

