 


User Manual

DAB Digital / FM Radio

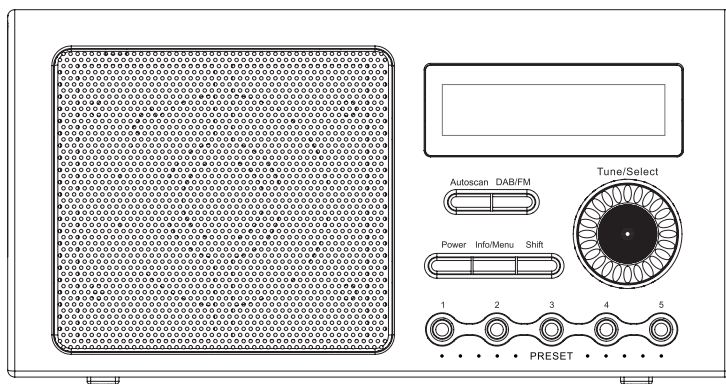 


DB-100V


Please read this user manual carefully before using the receiver

LOCATION OF CONTROLS

Front

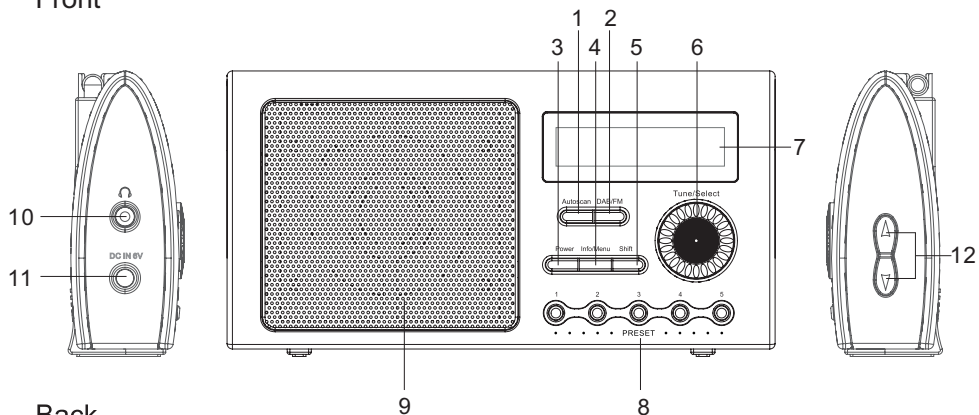

Back

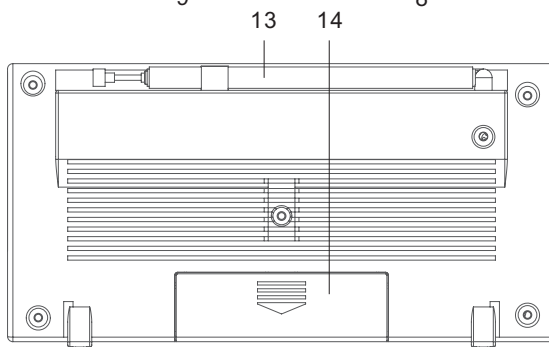 

1. Autoscan

8.Preset keys (1-5/ 6-10)

2. DAB/ FM

9.Speaker

3. Power

10. Earphone Socket

4. Info/Menu

11. DC Socket

5. Shift

12. Volume Up/ Down

6. Tune/Select

13. Aerial

7. LCD display

14. Battery Door

1. Switching your radio on first time

1.1 Power Supply

- 1.1a Main Adaptor (inside the package) connects the adaptor to the radio socket to the wall socket.
- 1.1b Batteries (not include) open the battery door and insert "AA" size alkaline batteries.
(Remarks: insert batteries correctly)

1.2 Extend the aerial as far as it can go.

1.3 Switch on the radio. The LCD backlight will light up during the operation of the radio. It will automatically show and enter auto scan mode:

Welcome to
Digital Radio

Remark: during auto scan, the LCD will display a slide bar that indicates the progress of scanned the amount of radio. Once the scan has finished, the radio will select the first alphanumerically found station.

If you can't hear any sound or volume is too large, please press the volume up or down to reach your desired level.

If you need switch to other stations, please turn Tune / Select and press Tune / Select to reach.

If you didn't pass the select key, and it will back to the original station 4 seconds.

 
2. Memory

When you switch on the radio and will play the last mode in last operation.

3. DAB mode


3.1 Preset Station

You can store 10 of your favorite stations to the preset keys Just press and hold one of the preset key (1-5) until display shows Preset X saved (X is 1-10). If you need save in location 6-10, please press Shift and number together (say Shift + 1=location 6) and it will show Preset X saved.




3.2 Recalling a preset station

 Simply press 1-5, that you can reach stored station in location 1-5. If it shows Preset X Empty, that means no preset. If you need recall 6-10, please press Shift and 1-5 together to reach.

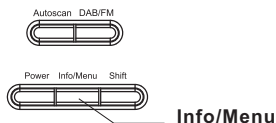

3.3 DAB Display Mode

 Every time press Info/Menu, that you will find:-

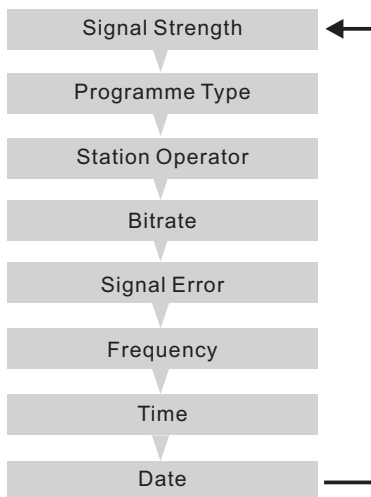

The information is displayed on the LCD display.

Signal Strength: Longer slide bar means in good reception, if drops below fifth box then you may experience problems with quality of the audio.



Program Type: Style of broadcasting. Eg: News or Rock

Operator: means service provide by which company

Bitrate / Signal Error / Frequency: Technical information being on broadcasting

Time / Date: Information will provided by radio station. If the station didn't provide and it will show "Time / Date"

Advanced Display modes

To enter advanced display mode, please hold Info/Menu for approximately 3 seconds then release.

Manual Tune: you can select from 5A to 13F, when new station in your city or unable auto tune that you can use manual tune

Full Scan: Full scan all station in your city.

DRC: Dynamic range compression (DRC) increases the amplitude of weaker frequency components of a sound signal. This makes the overall sound seem louder, making a station 'stand out' on the dial and helping to mask background interference.

Prune: Delete stations which already not available

System:

Time: adjust time, date, time mode or auto adjust

 
SW version: Show the software number of this radio

Software Upgrade: only for maintenance use

Factory Reset: Back to original mode and delete all setting and presets.

4. FM Mode

- 4.1 From DAB to FM: If you need switch from DAB to FM, please press DAB/FM. The radio will automatically tune to nearest station. It will show station name or frequency.
- 4.2 Auto Scan: to search for a FM station, you need to press Autoscan, it will start scanning up. Once a station has been found, the scanning will stop automatically. If no station is found, the tuning will cycled through the entire FM band (87.5-108MHz)
- 4.3 Preset: Please refer DAB section.
- 4.4 FM Display Mode
Every time press Info/Menu, that you will find:-

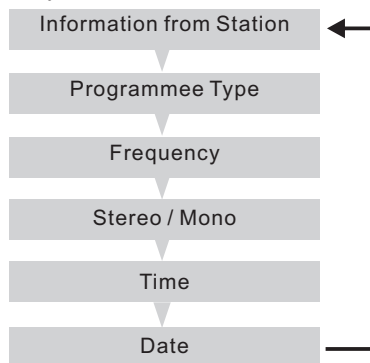

The information is displayed on the LCD display.

Advanced Display modes

To enter advanced display mode, please hold Info/Menu for approximately 3 seconds then release.

Scan Setting: All stations / Strong station

Audio Setting: Stereo Allowed / Forced mono

System:

Time: Adjust time, date, time mode or adjust automatically

SW version: Software number of this radio

Software Upgrade: for maintenance only

Factory Reset: Back to original mode and delete all setting and presets.

CAUTIONS

1. Do not allow this radio to be exposed to water, steam or sand.
2. Do not leave your radio where excessive heat could cause damage such as in parked car where the heat from the sun can build up even though the outside temperature may not seem too high.
3. The rating is located on the underside of the unit.
4. No naked flame sources such as lighted candles should be placed on the product.
5. It is strongly recommended that the original packaging supplied with your product be retained for future safe transportation.

TROUBLESHOOTING

Why can I not receive any DAB+ stations?

1. Please check if you are in digital radio coverage area.
2. If you are in a good reception area and still do not receive any signals, try moving the radio to another position of the house as physical and electromagnetic factors can play a large part in signal strength and quality.

No Sound

1. Adjust volume
2. For mains powered radio, please check that the mains power lead is connected at the side of the radio and the main power wall socket is switched
3. Check if the batteries are low when you are using batteries. We recommended using alkaline batteries to maintain working in good condition.

Support Line

For further assistance, please call our support line on 852-31101856
(Monday – Friday: 09:30-13:00 & 14:00-17:00)