






## Connecting the Player



## Connecting to your TV

You can enjoy standard quality picture and sound using this connection. Before connecting, make sure that your TV is turned off. To enjoy better picture and sound, refer to the Brown Side of this manual. Refer also to the instruction manuals of the components to be connected.

## Basic connection

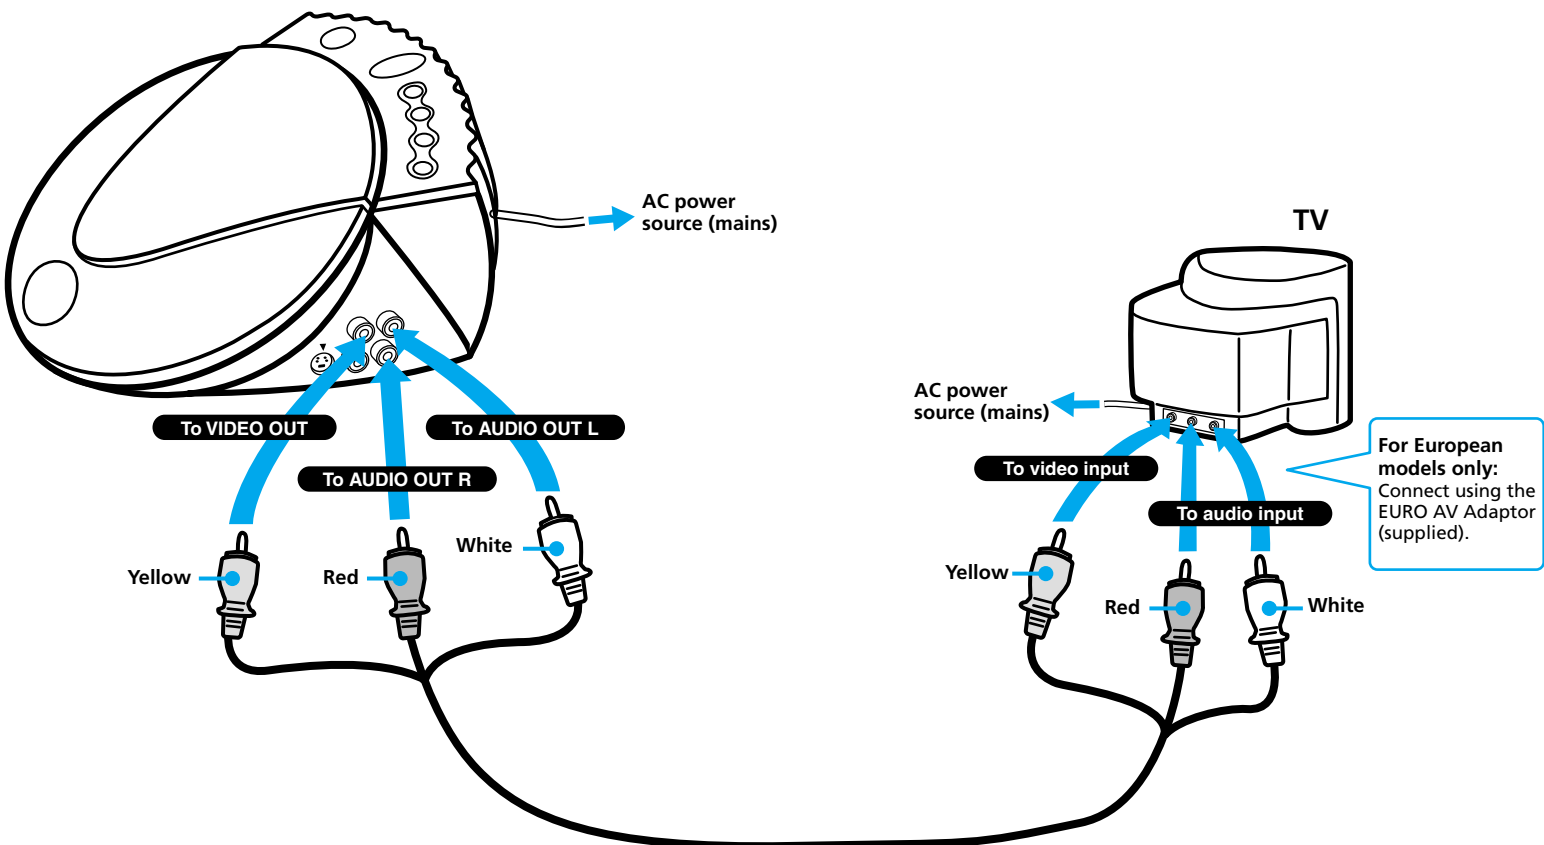

Connect the audio/video cord (supplied).  
Then, connect the player and the TV to an AC power source (mains).

## Playing Discs



## Basic steps and tips on playback

You can play DVDs, VIDEO CDs, music CDs, as well as MP3 audio tracks recorded on a DATA CD\*. Buttons on the player that share the same symbol with buttons on the remote also share the same function.

\*A CD-R/CD-RW/CD-ROM with MP3 audio tracks recorded on the disc is called a "DATA CD" in this manual.

1 On your TV :  
Turn your TV on and select the video input.

2 Turn on the player by pressing I/⏻ (on/standby).

3 Press ▲PUSH, and gently lift the lid until it clicks.

4 Place a disc on the tray.

5 Close the lid until it clicks.

5 Press ▷ (play).

5 Close the lid until it clicks.

 
## Using the Remote



To change the playing mode, sound effect, and display, or to use the DVD's menu.  
→ "Functions"  
To read disc information on the screen.  
→ "Reading the screen"

## Remote

The letters below correspond to the letters in "Functions." Use the letters to quickly find the buttons needed for each operation.

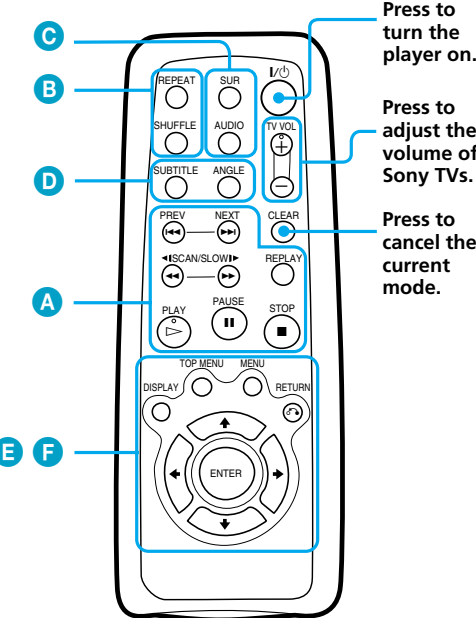

There is a tactile dot on ▷ and the "▲" button of TV VOL.

## Playing MP3 audio tracks from a list

You can select and play MP3 audio tracks from the list displayed on the menu.

## Operating the remote

• Point the remote at the remote sensor. When it does not work, operate closer to the remote sensor.

• Do not expose the remote sensor to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.

If the aspect ratio of the picture does not match your TV type

In "TV TYPE" of the screen setup setting, select the setting that matches your TV. (See "Settings and Adjustments" for details.)

To return to the menu display while playing a disc with PBC function

Press ⏻.

To play a disc without using the PBC function

Press ■ twice, and press ▷.

To adjust the TV volume (for Sony products only)

Press TV VOL +/-.

To play the next or previous chapter or track

Press ► or ◀ during playback.

To stop playback

The next time you press ▷, playback starts from the same place. (Resume Play)

To play from the beginning

Press ■ twice, then press ▷.

To remove the disc

Hold the edges of the disc and pull while pressing the center.

To turn off the player

Press I/⏻.

If no buttons are pressed for 15 minutes, the screensaver turns on. To return to the normal screen, press ▷.

The player automatically turns off in another 45 minutes.

If a menu display appears when you press ▷

In some DVDs and VIDEO CDs, a menu may appear when you press ▷. The menu usually enables you to select items such as a title (movie or album), audio language, or subtitles by using ◀/▶/◀/▶ and ENTER. In VIDEO CDs, this function is called PBC (Playback Control).

For Asian models only:  
The PBC functions of Super VCDs do not work with this player.

To return to the menu display while playing a disc with PBC function

Press ⏻.

To play a disc without using the PBC function

Press ■ twice, and press ▷.

To adjust the TV volume (for Sony products only)

Press TV VOL +/-.

To play the next or previous chapter or track

Press ► or ◀ during playback.

To stop playback

The next time you press ▷, playback starts from the same place. (Resume Play)

To play from the beginning

Press ■ twice, then press ▷.

To remove the disc

Hold the edges of the disc and pull while pressing the center.

To turn off the player

Press I/⏻.

If no buttons are pressed for 15 minutes, the screensaver turns on. To return to the normal screen, press ▷.

The player automatically turns off in another 45 minutes.

If a menu display appears when you press ▷

In some DVDs and VIDEO CDs, a menu may appear when you press ▷. The menu usually enables you to select items such as a title (movie or album), audio language, or subtitles by using ◀/▶/◀/▶ and ENTER. In VIDEO CDs, this function is called PBC (Playback Control).

For Asian models only:  
The PBC functions of Super VCDs do not work with this player.

To return to the menu display while playing a disc with PBC function

Press ⏻.

To play a disc without using the PBC function

Press ■ twice, and press ▷.

## Notes on connecting to your TV

- Do not connect this player directly to a component such as a VCR. If you do, noise may appear in the picture.
- When connecting this player to a monaural TV, use a stereo-mono conversion cord (not supplied).

## To insert batteries in the remote

Slide open the cover. Insert two AA (R6) size batteries by matching the + and - ends with the markings inside the compartment, and close the cover.

Connecting the EURO AV Adaptor (For European models only)

Attach the Euro AV Adaptor (supplied) to your TV. Then, connect the audio/video cord to the corresponding jacks of the Euro AV Adaptor.

TV Virtual Surround settings

Notes

• The surround mode signals are only output when the player is connected via the AUDIO OUT L/R jack.

• Set the surround settings of the connected components (such as TV) to off.

• Surround does not function when a disc has no rear signal.

## Changing the viewing angle and subtitles (D)

You can select picture angles if there are multiple pictures (angles) recorded on the disc, or change subtitle languages in multilingual DVDs.

To	Press
change angles	ANGLE repeatedly during playback to select the number of the angle you want to play. (DVD only)
display or change subtitles	SUBTITLE repeatedly to select the subtitle language. (DVD only) (When a 4-digit number is displayed, check the number in the "Language Code List" on the Brown Side of this manual.) To cancel the subtitle, press SUBTITLE repeatedly to select "OFF."

## Using the DVD's menu (E)

When a menu is recorded on the DVD, you can usually select items such as the title, audio language, or subtitles.

To display	Press
DVD's menu	TOP MENU or MENU. Select an item using ◀/▶/◀/▶, and press ENTER. (DVD only) TOP MENU: Displays a menu of available movie and music titles. MENU: Displays a menu of subtitles and audio languages.

## Displaying information on your screen (F)

You can display information such as the playing time or the disc text on the TV screen.

To return to the normal screen, press DISPLAY repeatedly.

 
To display	Press
time/text	DISPLAY during playback. Then press ENTER repeatedly to switch the display from total playing time to remaining time, and vice versa. (For details, see "Time display" in the next section.) DVD/CD TEXT or MP3 track name will be displayed following the time display if it is recorded on the disc. (Only the letters of the alphabet are shown.)
current audio format	DISPLAY twice during playback. (DVD only) (For details, see "Audio display" in the next section.)

## Reading the screen

You can display the time or audio format in the upper area of the TV screen during playback.

## Time display


<Example>

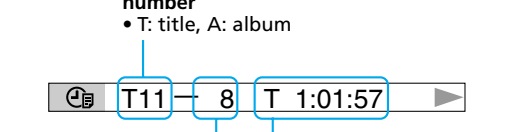

\*Here, the disc is playing chapter 8 of the 11th title, which has been played for 1 hour 1 minute and 57 seconds.

## Audio display
 
<Example>

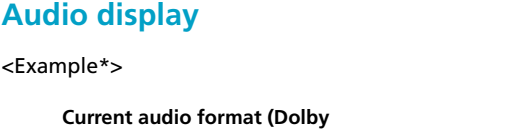

\*Here, the indicated disc's audio format is Dolby Digital 5.1channel (ch).  
5.1ch: 3 (Front Left/Right/Center) + 2 (Rear Left/Right) + 0.1 (LFE)

• "DTS" is set to "OFF" in the audio setup setting, the DTS display will not appear even if the disc has a DTS signal. (See "Settings and Adjustments" for details.)

• "DTS" is set to "OFF" in the audio setup setting, the DTS display will not appear even if the disc has a DTS signal. (See "Settings and Adjustments" for details.)

• "DTS" is set to "OFF" in the audio setup setting, the DTS display will not appear even if the disc has a DTS signal. (See "Settings and Adjustments" for details.)

• "DTS" is set to "OFF" in the audio setup setting, the DTS display will not appear even if the disc has a DTS signal. (See "Settings and Adjustments" for details.)

• "DTS" is set to "OFF" in the audio setup setting, the DTS display will not appear even if the disc has a DTS signal. (See "Settings and Adjustments" for details.)

• "DTS" is set to "OFF" in the audio setup setting, the DTS display will not appear even if the disc has a DTS signal. (See "Settings and Adjustments" for details.)

• "DTS" is set to "OFF" in the audio setup setting, the DTS display will not appear even if the disc has a DTS signal. (See "Settings and Adjustments" for details.)

• "DTS" is set to "OFF" in the audio setup setting, the DTS display will not appear even if the disc has a DTS signal. (See "Settings and Adjustments" for details.)

## Settings and Adjustments



You can select and change the settings of this player to meet your needs and to suit your playing environment.

To change the languages used in subtitles, sound, or on-screen displays.

→ "Language/Screen/Audio Setup"

To adjust the aspect ratio of the picture to fit your TV.

→ "Language/Screen/Audio Setup"

To select the setting of the audio when connected to an amplifier.

→ "Language/Screen/Audio Setup"

To set playback limitation levels (such as to limit violent scenes).

→ "Limiting Playback" (See the Brown Side of this manual.)

To turn off Setup Display:

 
Press DISPLAY repeatedly until the display disappears.

## Language/Screen/Audio Setup

You can change the languages for the OSD (on-screen display) and sound, and adjust the video and audio output to match the components (such as TV) your player is connected to.

Setup Display

The numbers correspond to the steps in the procedure given below.

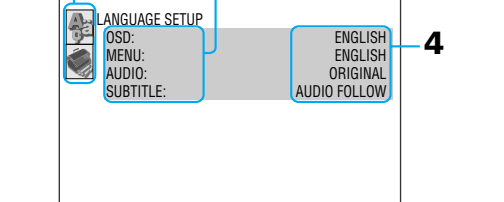

1 Press DISPLAY repeatedly in stop mode to show Setup Display.

2 Select the setup item using ◀/▶, and press ENTER.

LANGUAGE SETUP: To change the language setting.  
CUSTOM SETUP: To change settings other than the language.

3 Select an item (e.g., "OSD") using ◀/▶, and press ENTER.

Refer to the list on the right for details.

4 Select a setting (e.g., "ENGLISH") using ◀/▶, and press ENTER.

Refer to the list on the right for details.

To turn off Setup Display:

Press DISPLAY repeatedly until the display disappears.

## Selecting the language setup

For the following items, select the language from the Language List displayed on the screen.

Item	Select
OSD	The language you want for the player's menu and the Setup Display.
MENU* (DVD only)	The language you want for the menu recorded on the disc.
AUDIO* (DVD only)	The language you want for the sound. (ORIGINAL: The language prioritized in the disc is automatically chosen.)
SUBTITLE* (DVD only)	The subtitle language. (AUDIO FOLLOW: The subtitle language changes according to the audio language.)

\*If the language you select here is not recorded on the disc, another language will be automatically selected from the disc.

Hint

When you select "OTHERS," enter the language code from the list on the Brown Side of this manual using ◀/▶/◀/▶.

## Selecting the screen setup

Item	Select
TV TYPE*	16:9 4:3 LETTER BOX 4:3 PAN SCAN

\*The setting recorded on the disc has priority.

COLOR SYSTEM (For Asian models only)  
Select when playing a VIDEO CD.)

• AUTO: For a DUAL color system TV. (Default setting)  
• PAL: For a PAL color system TV.  
• NTSC: For an NTSC color system TV.

## Selecting the audio setup

Item	Select
AUDIO ATT (Audio attenuation)	• OFF: Standard setting. • ON: When the playback sound is distorted.
DIGITAL OUT (Adjust only when using a coaxial digital cord.)	(See "Connecting Other Components" on the Brown Side of this manual for instructions on this connection.) • OFF: When connecting a TV or an amplifier to AUDIO OUT L/R. • ON: When connecting an amplifier with a digital input jack, etc., to DIGITAL OUT (COAXIAL).
DOLBY DIGITAL (Adjust only when "DIGITAL OUT" is set to "ON.")	(See "Connecting Other Components" on the Brown Side for instructions on this connection.) • D-PCM: Standard setting. • DOLBY DIGITAL: When connecting to an amplifier with a built-in Dolby Digital decoder.

MPEG (For European/Asian models only)  
(Adjust only when "DIGITAL OUT" is set to "ON.")

• PCM: Standard setting.  
• MPEG: When connecting to an amplifier with a built-in MPEG audio decoder.

DTS (Adjust only when "DIGITAL OUT" is set to "ON.")

• OFF: Standard setting.  
• ON: When connecting to an amplifier with a built-in DTS decoder.

## Hint

The underlined settings are the default settings.