


Disclaimer:

Before operating equipment, please read all instructions in this manual. Failure to use this device properly may cause serious damage to the product or vehicle. PNP Inc. is not responsible for any damages or injuries that result from misuse.

Caution: Be sure the battery is fully charged or start the engine before use. **Using this product with low or partially charged battery may reduce battery reserves and cause difficulty in starting the vehicle.**

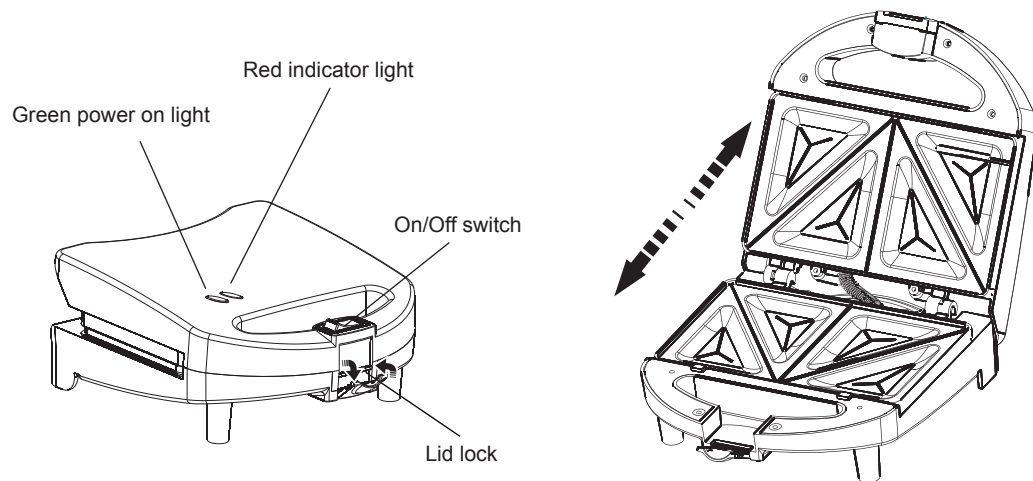

Specification:

Model	:	PowerHunt Sandwich Maker PNP-400
Voltage & Rating	:	12Volt DC, 40A/480Watts
Dimension	:	260 x 230 x 115mm
Weight	:	2.04kgs

Functions:

The PowerHunt Sandwich Maker will grill crispy sandwiches in about 3 minutes. Automatic shut off system provided for added safety.

Operation Procedure:

1. Place the Sandwich Maker on a dry, level, and nonflammable surface.
2. Turn OFF the Power Strip.
3. Plug the Sandwich Maker into the Power Strip outlet.
4. Raise cover and place sandwich on bottom grid. Close and lock lid.
5. Turn ON the Power Strip.
6. Turn ON the Sandwich Maker. The Green power on light will glow whenever the unit is switched on, the Red indicator light will go on and off during cooking.
7. **A crispy sandwich will be ready in about 3 minutes. The Red indicator light will be OFF. This indicates that your sandwich is ready.**
8. After use, please turn OFF the Sandwich Maker, and then turn OFF the Power Strip. Unplug the power cord if necessary.
9. For next round of grilling, please wait until the Red indicator light is ON.
10. Remove sandwich by gently loosening the edges with a heatproof plastic spatula or tongs. DO NOT use metal utensils, as they may damage the nonstick cooking grids.

Cooking Tips:

For a ham and cheese or other melt sandwiches, wait until sandwich is crispy, then immediately add the cheese.

Caution:

1. DO NOT use the Sandwich Maker when the vehicle or boat is in motion.
2. DO NOT immerse the Sandwich Maker in water or any other liquids.
3. DO NOT touch hot surfaces.
4. DO NOT cover the Sandwich Maker when in use.
5. Keep the Sandwich Maker away from curtains or any flammable materials when in use.
6. Always turn OFF your Power Strip when the Sandwich Maker is not in use. DO NOT unplug the Sandwich Maker when power switch of your Power Strip is in ON position.
7. The power plug design is used to prevent polarity reverse. Use with Power Strip PNP-100 ONLY. **DO NOT modify power plug for use with other socket types or connect to other power sources!**

Maintenance:

1. Disconnect the Sandwich Maker before cleaning. Allow it to cool down before moving or cleaning. Use damp cloth to clean the outside of the Sandwich Maker. DO NOT apply corrosive detergent.
2. Return the Sandwich Maker to supplier for repair if the Sandwich Maker does not operate or the case has been broken.

One Year Limited Warranty:

PowerHunt products are guaranteed to be free from defects in materials and workmanship under normal use for a period of ONE year from the date of purchase.

This warranty does not cover damage or malfunction caused by product deterioration or by accident, misuse, abuse or commercial use. Scratches, stains or damage from improper cleaning or maintenance are not covered by this warranty. Incidental or consequential damages are expressly excluded by this warranty.

To claim under this warranty, you are required to present the original sales receipt/invoice as proof of purchase. Please keep your receipt safely.

IMPORTANT:

Please complete warranty registration through website www.power-hunt.com, failure to register this warranty within 30 days from the date of purchase will invalidate the warranty.

Warranty Return Policy:

If the PowerHunt product becomes defective during the warranty period, please contact our Customer Service Department and request a return authorization (R/A) number.

Once we receive your request, our Customer Service Team will process the authorization and call, fax or email you the Return Authorization Number.

When you are ready to ship the product back to PNP Inc., the following is the procedure you need to follow:

- Clearly mark the R/A number on the shipping box. Shipments missing a legible and correct R/A number marked outside the package will be refused and PNP Inc. will not be responsible for them.
- Ship ONLY the product(s) for which the R/A number was issued. PNP Inc. will not be responsible in any way for unauthorized returned product.
- Include in the package a proof of purchase, such as a copy of the original invoice/sales receipt.
- Attach a written description of the problem of the product being returned.
- Make sure that the product is securely packed before shipping. Remember that you are responsible for the product until we receive it. PNP Inc. will not be responsible for and does not warrant against damage of any sort incurred prior to our receipt of the product.
- Product is to be shipped freight prepaid to PNP Inc. within seven (7) days of issuance of R/A number. PNP Inc. reserves the right to cancel without notice any R/A number for which the product has not been received within 21 days of issuance.
- Shipments received without a proper R/A number will be refused.

Customer Service:

PNP Inc.
Address: P.O. Box 156, Fortville, IN 46040 Tel: (317) 485-4597 Fax: (317) 485-5386
Toll free number: 888-485-4597 Website: www.power-hunt.com Email: info@power-hunt.com

Register Product Warranty OnLine
www.power-hunt.com

正面

反面

说明书编号:USG-PNP400-200801090
80G书写纸双面1色印刷
规格: 148mmx262mm