

Table of Contents

Disclaimer	2
Introduction	2
Package Content	2
Safety Instructions	2
Support	3
Getting Started	4
Parts and Controls	4
Power On and Off the Reader	5
Language Setting	5
Charging the Reader	5
Inserting Memory Card	6
Starting from Home Menu	6
Entering Option Menu	7
Importing Content	8
Importing Content	8
Importing DRM Contents	8
Installing Adobe Digital Editions (ADE)	8
Importing and Transferring Content	9
Authorizing PC and Reader	9
Transferring DRM ebooks to Reader	9
Reading Books	10
Opening Book	10
Turning book page	10
Adjusting Font Size	10
Zooming In/Out	10
Using Option Menu in Reading	11
Using Bookmark	11
Go to Page	12
Auto Flip	13
Book Information	13
Rotate	13
Playing Audio File	15
Viewing Pictures	16
File Explorer	17
Settings	18
Troubleshooting	19
Product Specifications	20
Copyrights and Trademark Notice	21
Warranty Conditions	22

Disclaimer

All the information, design and specifications contained in this manual were correct at the time of publication. However, as the product is under development and upgrading, the final device may have a slightly difference in appearance or modified functionality than presented in this manual.

Introduction

ODYS BooX is an ebook reader with full color display screen. ODYS BooX supports ebooks encrypted with Adobe DRM.

Package Content

1. Ebook Reader
2. Earphones
3. USB cable
4. Quick Start Guide
5. Warranty Card

Safety Instructions

Although this product is safe, please observe the following information and warnings.

- Do not expose the device to direct sunlight, extreme heat or cold, damp or dusty conditions. Malfunctions and damage can occur as a result.
- Do not use the device in an extremely dry environment to avoid static electricity.
- Do not shake the device or subject it to hard knocks. The device may be damaged if it falls. Do not place any heavy objects on top of the device.
- Promptly load the device's internal battery.
- Do not use the e-book reader while driving a vehicle.
- Never press two buttons simultaneously and handle the display carefully.
- Do not carry the e-book reader with other metal objects (coins or keys) in your pocket.
- Clean the device only using a soft, dry cloth and do not use any volatile substances, such as solvents, to avoid damaging the surface.
- Do not open the casing of the device under any circumstances, and do not attempt to repair or modify the device.

- Never disconnect the USB cable from your e-book reader to the PC during a data transfer or formatting. Correctly disconnect the device from the operating system. Information loss and malfunctions can occur.



Hearing Safety

Listen at a moderate volume: Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss. Sound can be deceiving. over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there. To establish a safe volume level: Set your volume control at a low setting. Slowly increase the sound until you can hear it comfortably and clearly, without distortion. Listen for reasonable periods of time: prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss. Be sure to use your equipment reasonably and take appropriate breaks. Be sure to observe the following guidelines when using your headphones. Listen at reasonable volumes for reasonable periods of time. Be careful not to adjust the volume as your hearing adapts. Do not turn up the volume so high that you can't hear what's around you. You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.



Disposal

 
Do not dispose of a defective e-book reader in normal household waste disposal containers (internal battery). Take the defective device to your retailer or to an appropriate waste collection site. This will ensure that the device is disposed of in an environmentally-friendly way.

Support

URL: <http://www.odys.de>

See our website for the latest information on this device, on other products by our company and on our company itself. Any firmware updates for this device are also made available on our website. If you have questions or problems, please read the FAQs on our website or contact our customer support service support@odys.de.

Parts and Controls

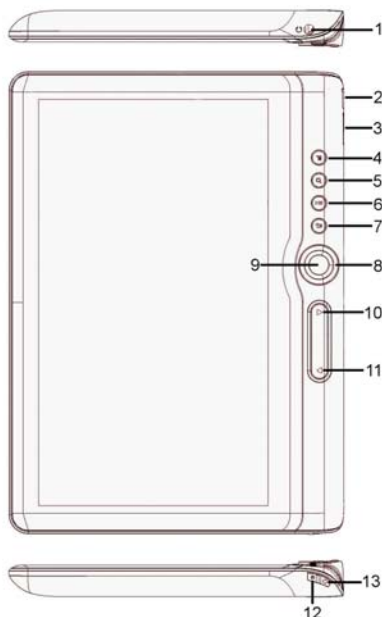

- 1 Earphone jack**
- 2 Micro USB jack** – for data transfer and charging
- 3 Micro SD card slot** – supports SD/SDHC card
- 4 Menu button** – press to call out Option Menu
- 5 Zoom button** – press to adjust font size or to zoom in/out
- 6 Music button** – to enter into music playing menu
- 7 Return button** – press once to return to previous menu,
press and hold to return to Home menu
- 8 Directional buttons** – to move cursor
- 9 OK / Enter Button**
- 10 Next pg button** – press to turn to next page
- 11 Previous pg button** – press to turn to previous page
- 12 Power button** – press and hold for 3 second to turn on/off
- 13 LED indicator**

Power On and Off the Reader

Press and hold the [Power] button for 3 seconds to turn on Reader. It may take a few moments for reader to turn on and loading the content.

- If Reader does not turn on, charging is required.
- To turn off Reader, press and hold [Power] button for 3 seconds.

Power On and Off the Display

 
- Shortly press the [Power] button to turn off the display.
- Press the [Power] button again shortly turn the display on again.

Language Setting

- To access extra functions available, press [Menu] button to open the Options Menu.
- Select [Settings] and press <OK>.
- Select [Language] and press <OK> again.
- Select your desired language and press <OK> to confirm.

Charging the Reader


- You need to charge the Reader prior to using it for the first time or when battery power is low.
- You can charge the Reader via:
 - Connect to PC via supplied USB cable.
 - When charging through PC, you cannot operate the Reader. To operate the reader during charging, click the Safely Remove Hardware from your desktop with the Reader remains connection to PC. Upon Reader is safely removed, you can operate it while charging.
- Please turn the Reader to standby mode to shorten the charging process.
- It will take about 6 hours to fully charger the reader in standby mode (LCD off)
- The battery status is displayed at the bottom left corner. The remaining battery playback time is displayed right next to the battery icon.

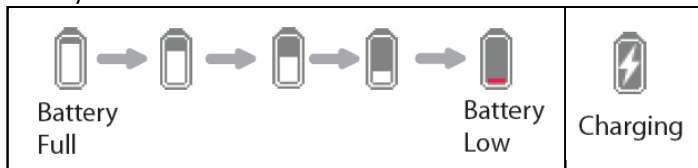

Inserting Memory Card

The Reader supports Micro SD/SDHC card. To insert a Memory card:

 
- Check that the Micro SD card is in the correct position with the contact pin facing upwards as illustrated below. You may damage the card and the reader if Micro SD card is not inserted in correct position.
- Push the Micro SD card into the card slot until it clicks.
- To remove Micro SD card, push the Micro SD card once again until it clicks.

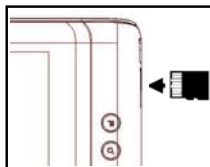

- We recommend using only Micro SD or SDHC cards up to 8GB capacity.
- When a Micro SD card is inserted in or ejected from the reader, it may take few seconds for the reader to update the content.
- Please avoid inserting or ejecting Micro SD card when other operation is running as this may cause the system hang.
- Do Not remove the card if the content inside the card is being played. This will halt the operation of the reader and cause the reader to restart.
- If the system is not responding, press and hold the <Power> button for 6 seconds to reset and turn it off.

Starting from Home Menu

 When the Reader is turn on, you will enter into the Home Menu.

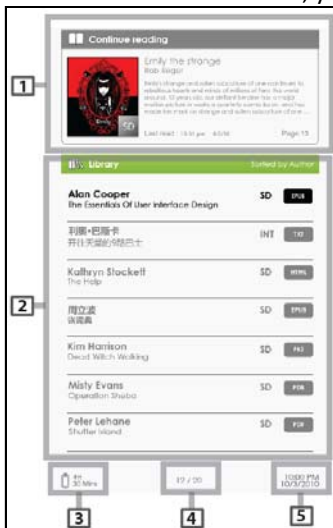

1. Continue Reading

-display the page of the last read book. Press <OK> button to open the last read page.

2. Library

-display the list of books available. Move the cursor to desired book and press <OK> to open it.

3. Battery Indicator

-displays current battery status

4. Page Number

-displays current page number and total available pages.

5. Time & Date

-display current time and date, you can set this from the [Settings]

 
Entering Option Menu

To access extra functions available, press [Menu] button to call out the Option Menu as illustrated.

Press the directional key to move cursor to desired item. Selected item will be highlighted in dark.
Press <OK> to enter.

To exit from Option menu, move cursor to  Return and press <OK> to confirm.

Alternatively, press the <Return> button to exit.

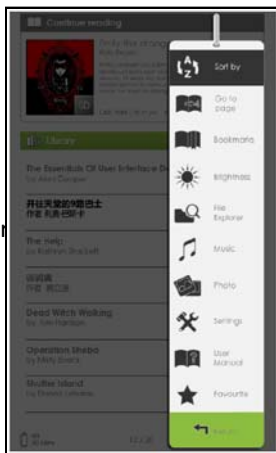

To sort books by different categories: Title, Author, Date, Format



 
Jump to a specific page



Read from previously added bookmarks




Adjust brightness of the display screen



Enter into File Explorer for advance file management



 Enter into Music Player



Enter into Photo Viewer



Enter into Settings



Open your favorite book list.

Importing Content

- The Reader supports USB Mass Storage Device function.
- To import contents (ebooks, video, audio, photo etc) into the reader, connect the reader to PC via the supplied USB cable.
- Upon successful connection to PC, the reader will enter USB mode and all operation will be halted.
- Go to [My Computer], double click on the reader's disk to open.
- Perform normal file management operation like other USB device.

Importing DRM Contents

The Reader supports Adobe DRM contents. Adobe Digital Editions (ADE) is required.



To use purchased books with this device you must use Adobe Digital Editions. Please follow the instructions from the online store from which purchased.

Installing Adobe Digital Editions (ADE)

 
- Make sure your computer is connected to internet
- You can download the installer from <http://www.adobe.com/products/digitaleditions/#fp>.
- Double click on the [digitaleditions_172] file to open the installer.
- For first time user, you will need to get a free adobe ID from adobe website. Click on the [get an Adobe ID online] link as illustrated:



- Enter your email address and complete the online form as per instructed.

Authorizing PC and Reader

- Upon registration, return to the ADE window. Enter the username and password to activate your Adobe account.
- After activation, connect the Reader to PC. ADE will detect the Reader and you are prompted to authorize device.
- After authorization, you will be able to find the Reader recognized in ADE as below. Contents inside the Reader will be displayed on the right hand windows.
-

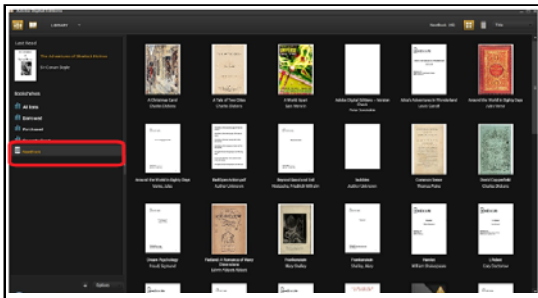

- You can now start downloading or buying ebooks from online Ebook stores supporting Adobe DRM.
- Purchased or downloaded ebooks will be stored in [My Digital Editions] in [My Documents].

Transferring DRM ebooks to Reader

- From ADE menu, click on [All Items] on the left hand column
- Items in [My Digital Editions] will be listed down in right window.
- Select the desired item(s) to be transferred.
- Drag and drop the selected item(s) into the Reader's Drive located on the last row of the left side column as illustrated below.



Opening Book

- Books transferred to Reader will be listed in Home Menu.
- Reader supports ebooks in epub, pdf, txt format.
- Use the <Directional> buttons to move the cursor to select book and press <OK> to open.

Turning book page

- On reading page, press <Next Page> or <Directional-Right> button to turn to next page. To turn to previous page, press <Previous Page> or <Directional-Left> button.

Adjusting Font Size

- In reading page, press <Zoom> button to call out the size menu.
- There a 5 font sizes available:
Normal, Medium, Large, XLarge, XXLlarge.
- Move the cursor to the desired font size then press <OK> to confirm.



Zooming In/Out

- You will need to use zooming function to enlarge images available in the ebook (epud & pdf file)
- From the size menu, select [Enlarge]
- Zoom menu will appear.



- Move the cursor to the desired zoom level and press <OK>.
- In zoom mode, use <Directional> buttons to pan across the zoomed page.
- Page turning is disabled in zoom mode.
- Press <Return> to exit zoom mode and return to original size and resume normal book reading functions.

Using Option Menu in Reading

In Reading page, press <Menu> button to call out the Option Menu.

Options available:

1. Add / Delete Bookmark
2. Bookmarks
3. Go to Page
4. Music
5. Auto flip
6. Book Information
7. Rotate
8. Display Settings
9. Add to Favorite
10. Decode Settings



Using Bookmark

Adding Bookmark

When reading, turn to the desired page that you would like to bookmark. Press <Menu> button, move the cursor to [Add Bookmark] and then <OK>.

Deleting Bookmark

- Turn to the bookmarked page that needs to be deleted. Press <Menu> and move the cursor to <Delete Bookmark>. Press <OK> to confirm.
- Alternatively, you can delete bookmark from the Bookmark List.
- In the Bookmark list, press <Menu> and select [Delete] to delete selected bookmark.



 
Depending on the e-book format you are using, some settings may not be usable with some of your e-books.

Read from Bookmarks in Home Menu

- From Home Menu, press <Menu> and select [Bookmarks] to enter Into Bookmark List.

Upper window displays a quick preview of the selected book.

Lower window displays the list of books with bookmarks. Press <OK> on the desired book to view the available bookmark list.

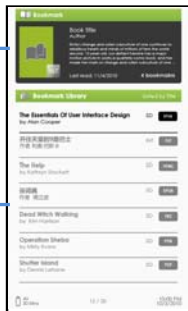

- In the Bookmark List, move the cursor to the desired bookmark, press <OK> to open.
- To delete bookmark from the Bookmark List, press <Menu> to call out [Option Menu] and select [Delete] to confirm.

Read from Bookmarks in Current Book

- In reading page, press <Menu> and select [Bookmarks] to enter into Bookmark List.
- In Bookmark List, move the cursor to the desired page and press <OK> to open.
- To delete bookmark from the Bookmark List, Press <Menu> to call out the Option Menu and select [Delete] to confirm.

Go to Page

You can jump to pages using the [Go to Page] option.
In the Option Menu, select [Go to Page].



In Go to Page menu, move the cursor by the <Directional-Left/Right> button. Input page number by <Directional –Up/Down> button.

Move the cursor to [Apply] then <OK> to apply settings.

Auto Flip

You can set the Reader to [Auto Flip] mode. The auto flip duration available are: 5s, 10s, 20s, 30s, 40s, 50s, 1 min.

Book Information

You can check the information of the current book from the [Book Information] option. This will show:

Title, Author, Publisher, File Type, Date added, File size, Publisher and Expiration.

Depends on the source of ebook that you download/purchase, some of the information may not be available.

 
Rotate

To use the device in landscape view, just rotate it 90° clockwise.

[Rotate] option allows you to rotate the display orientation 90° in clock wise direction to landscape orientation manually.

To return to original orientation, press <Menu> and enter <Rotate> once again.

In landscape view, the button layout is as below:

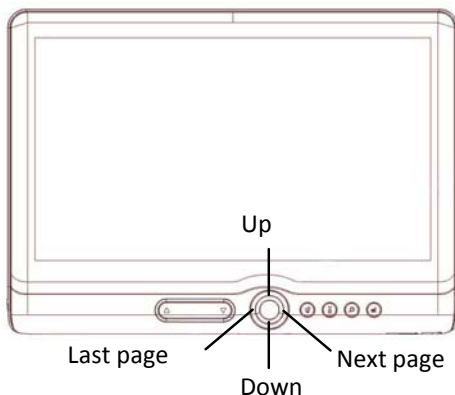


In landscape view, the Option Menu is divided into 2 pages. To access options in the second page, move the cursor to [More>] icon at the top right corner of the Option Menu and then enter by pressing <OK>.



The automatic rotation is only available while reading e-books.

 To return to previous page, move the cursor to [< Back] and then enter by pressing <OK>.

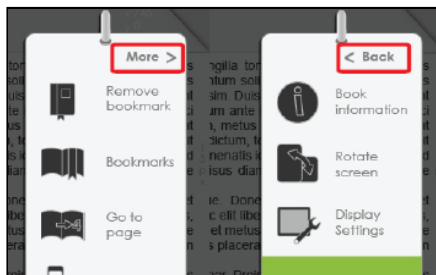

Add to Favourite

- You can add books to your Favourite List. Move the cursor to [Add to Favourite] to add current book into Favourite List.
- To view books in Favourite List, from Home Menu, press <Menu> button and select [Favourite].

 
Decode Settings

To change the text language and decoding settings.

Background Music Playback in Book page

ODYS BooX supports background music playing when reading books or viewing photos.

To control music playback in book page, press Music button <▶▶> and a mini music player control bar will appear at the bottom of the page.

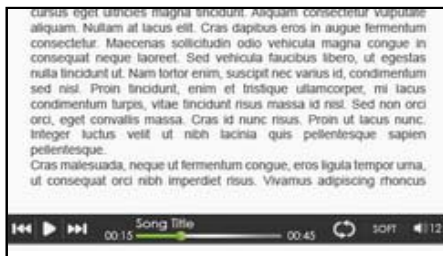

Press the music control buttons to control music playback as described below.

To return to book page, press <Return> button.

Music Player

- From Home Menu, press <Menu> to call out Option Menu.
- Move the cursor to [Music] and press <OK> to confirm.



- In the Music player, press <OK> to play/pause music playing
- Press <▶> (Directional Right) to play next song, press and hold to Fast Forward
- Press <◀> (Directional Left) to play previous song, Press and hold to Fast Rewind
- Press <▲> (Directional Up) to increase volume
- Press <▼> (Directional Down) to decrease volume
- To return to file selection, press <Return> button.

Using Option Menu in Music Player

Press <Menu> to call out Option Menu.

	Normal	EQ settings – move the cursor to [EQ Settings] , press [Left] or [Right] button to select desired EQ mode.
	Loop	Play Mode - move the cursor to [Play Mode] , press [Left] or [Right] button to select desired Play mode
	Sort by all song	To view all stored audio files
	Sort by genre	To sort audio files by genre
	Sort by album	To sort audio files by album
	Sort by artist	To sort audio files by artist

Viewing Pictures

- From Home Menu, press <Menu> to call out Option Menu.
- Move the cursor to [Photo] and press <OK> to confirm.

Upper window displays a quick preview of the selected photo

Lower window displays the file list in the reader.



- Use the <Directional> buttons to navigate through the photo list.
- Press <OK> on the selected photo to view a full screen display.
- In full screen mode, press <Directional Left/Right> to view previous and next picture.
- Press <Left/Right> to start the slide show. Press again to stop.
- To return to file selection, press <Return> button..

Using Option Menu in Photo mode

Press <Menu> to call out Option Menu.

	SlideShow	Start the photo slideshow
	Information	Show detailed information's about the current photo.
	Thumbnail	Switch to Thumbnail preview. Use the arrow keys to select a photo.
	Rotate	Select to rotate the current photo

Enter into File Explorer for advance file management

Select INT to open the internal memory or select Micro SD to open the Micro SD card content. Press <OK> to confirm.

The following file formats are accessible:

OGG, APE, WMA, WAV, MP3, FLAC, AAC, WMV, 3GP, ASF, AVI, FLV, MOV, MP4, MPG, RMVB, VOB, GIF, BMP, JPG

Use the arrow keys to navigate.

Press <OK> to open the file or folder.

 
The playback functions of the listed file formats are the same as in music mode.



Only the selected file will be played. To have a continuous playback please use the music or photo mode directly.

Using Option Menu

Press <Menu> to call out Option Menu.

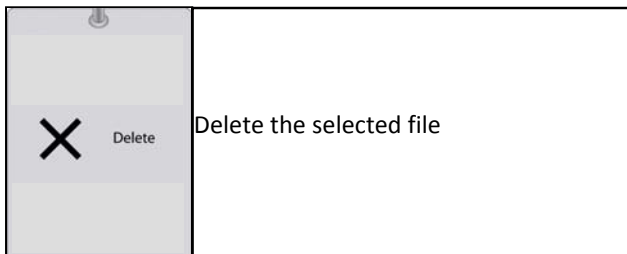

- From Home Menu, press <Menu> to call out Option Menu.
- Move the cursor to [Settings] and press <OK> to confirm.

Time & Date

Sets the displayed time and date of the Reader.

Press <Directional Left/Right> buttons to move the cursor.

Press <Directional Up/Down> buttons to input value.

Select [Apply] and press <OK> to confirm.

Device Standby

To enable / disable auto standby mode.

Press <Directional Up/Down> buttons to move the cursor.

Press <OK> to confirm.

Format Memory

To format internal memory and memory card.

All data will be lost. Please backup your data before performing this.

Select the memory you which to format and confirm with <OK>.

Press <OK> again to start formatting the selected memory.

Select [cancel] and press ok to abort.

About Product

Displays product information of the Reader.

Power Management

Displays real time battery status of the Reader.

Restore Factory Defaults

To restore the Reader's settings to defaults.

User manual

This user manual

Troubleshooting

Symptoms	Cause and solution
Without power	Whether the battery is enough. Please confirm whether turn on the player. Is the main switch turned on?
Without sound inside earphone.	Please confirm the volume is not in the status of Zero and the connection of earphone is ok. Please confirm the earphone is clean The broken MP3 will produce noise with different grades even cannot play music. Please confirm the complete files. Try another pair of headphones.
The character on the display screen is in abnormal shape.	Please confirm the language that you selected is correct.
Cannot download music normally.	Whether the installation of driver is OK Check whether damaged the connection of USB and the connection is OK. Check whether there's any empty memory space. Be sure that button lock is deactivated.
No USB connection is established to the PC.	Check cable/plug connection to the PC, Windows system configuration and USB driver. Restart PC, remove and reconnect the USB cable, reinstall drivers If the malfunction continues, contact customer services.
The device has stopped working.	Press the power button until the device turns off.
The player shuts off after a short time or cannot be turned on. However, the USB connection works.	Fully charge the battery (3 – 4 hours) If the player has not been used for an extended period of time, then the first two battery charging cycles should last 8 hours each.

Display

7 inch TFT-LCD Display, 800x480 pixels
Brightness: 200cd/m²

Storage memory

Built in memory: 4GB
supports Micro SD/SDHC

Media File Format supported

Ebook: epub, pdf, txt
Audio: mp3, wma, wav, ogg, aac
Photo: jpg, bmp, gif

Connectivity

Data transfer: USB 2.0 High Speed
Audio: 3.5mm audio jack
Power: USB jack

Miscellaneous

Clock
Real time battery indication

Battery life

Reading – up to 8 hours
Music – up to 40 hours (with backlight off)

Charging

Power: DC 5.0V, 1.2A
Duration: 6 hours max

Minimum system requirement (USB Mass Storage)

Windows 2K, ME, XP, Vista, Win 7, Mac OS 10x

Physical properties

Dimension: 187.4 x 128.5 x 11.8 mm (approx)
Weight: 280g (approx)

*****Design and specifications are subject to change without prior notice***

Copyright laws prohibit copying the data of this product or the contents of this manual (illustrations, related documents, etc.) in whole or in part without the permission of the copyright holder. Additionally, use of the data of this product or the contents of this manual is not allowed without Axdias permission except for personal use.

Microsoft, Windows, Windows Vista and Windows Media are trademarks or registered trademarks of Microsoft Corporation in the United States and / or other countries.

Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.

Adobe, the Adobe logo, Reader and PDF are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

ODYS BooX contains Adobe® Reader® Mobile software under license from Adobe Systems Incorporated, Copyright © 1995-2009 Adobe Systems Incorporated. All rights reserved. Adobe and Reader are trademarks of Adobe Systems Incorporated.



Contains Reader® Mobile technology by Adobe Systems Incorporated

Warranty Conditions

The following conditions comprise the requirements and scope of our warranty conditions and do not affect our legal and contractual warranty obligations.

We offer a warranty on our products in accordance with the following conditions:

1. AXDIA products are covered by a 24 month warranty. We will resolve damages or defects on AXDIA products free of charge within 12 months of the purchase date under the following warranty conditions. For any damage or defect determined later than 12 months after the purchase date, proof of a manufacturing fault must be submitted for repair under warranty.
The warranty does not cover batteries and other parts, which are considered consumables, parts that break easily such as glass or plastic or defects based on normal wear and tear. There is no warranty obligation in the event of marginal differences compared to the target appearance and workmanship provided these have a negligible effect on the product's fitness for use, in the event of damage caused by chemical or electrochemical effects, by water or generally from abnormal conditions.
2. The warranty will be performed in such a way that we shall decide whether to repair the defective parts or to replace them with working parts free of charge. AXDIA reserves the right to exchange the product for a replacement product of equal value if the product that is sent in cannot be repaired within a reasonable time or at reasonable cost. The product can also be exchanged for a different model of the same value. Requests cannot be made for repairs to be carried out on site. Parts that have been replaced or exchanged become our property.
3. The warranty claim does not apply if repairs or other work is carried out by unauthorized persons or if our products are equipped with additional parts or accessories that are not approved for our products.
4. Warranties that have been activated do not cause the warranty period to be extended, nor do they trigger a new warranty period. The warranty period for any replacement parts installed ends with the warranty period for the entire product.
5. Any other or further claims are excluded, especially those for replacement due to damage caused outside of the product, provided there is no obligatory legal liability. We therefore accept no liability for accidental, indirect or other consequential damage of any kind, which leads to usage restrictions, data loss, loss of earnings or interruption to business.

Asserting a warranty claim

1. To make use of the warranty service, you must contact the AXDIA Service Center by e-mail, fax or phone (see below for contact details). You can also use the service form on our website or on the back of the warranty conditions.
2. AXDIA Service Center will try to diagnose and solve your problem. If it is determined that a warranty claim exists, you will be given an RMA number (Return Material Authorization) and you will be asked to send the product to AXDIA.

IMPORTANT: AXDIA will only accept parcels that have an RMA number.

Please observe the following when sending the product:

1. Send the product suitably packaged with carriage and insurance paid. Do not enclose any accessories with the products (no cables, CD's, memory cards, manuals, etc.), unless the AXDIA Service Centre specifies otherwise.
2. Mark the RMA number on the outside of the package in such a way that it is visible and clearly legible.
3. You must enclose a copy of the sales slip as proof of purchase.
4. Once AXDIA has received the product, it will meet its warranty obligations in accordance with the warranty conditions and will return the product to the sender with carriage and insurance paid.

Service outside of warranty

AXDIA can refuse any service claim made that is not covered by the warranty. If AXDIA agrees to provide a service outside the warranty, the customer will be invoiced for all repair and transport costs.

AXDIA will not accept any packages that have not first been approved by AXDIA by means of an RMA (Return Material Authorization).

