



Fill in coffee beans

Fill tank with fresh water Plug in

### Do not use caramelized or flavored coffee!



Place receptacle under nozzle

Switch on

Draw off hot water until it flows evenly

### 3. Observe display



flashing: machine is warming up steady: machine ready


### **Degree of grinding**

**ADJUST** 

#### Adjust only when grinding unit is running

The machine is pre-set to a mean value. Recommended settings are 8 (+4 / -2)

Coffee flows too ...

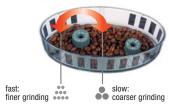


### **Quantity of coffee**

- Place cup under nozzle
  Press and hold desired
- button (espresso or coffee) Release button when
- correct amount is reached
- Quantity remains stored in memory



**PREPARATION** 

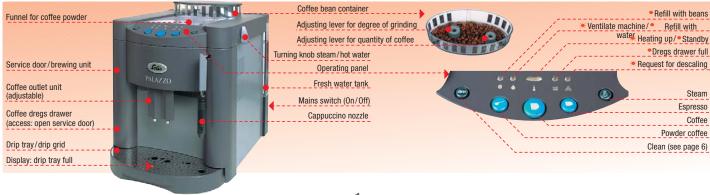





Place cup(s) under nozzle Adjust coffee flow Different cup sizes are possible

Coffee flow adjustable

Select quantity of powder Press 1 x for 1 cup

Press 2 x for 2 cups

Remove cup(s)

### To improve frothing

- Use another coffee mix (insure that it is the appropriate sort of coffee for fully automatic espresso machines)
- Use fresh roasted coffee beans
- Change degree of grinding













Place cup under nozzle Different cup sizes are possible

Adjust coffee flow Coffee flow adjustable

Select powder coffee

Fill up with powder Max. 1 level measure NEVER use instant coffee!

Press 1 x

Remove cup





Use only heatproof glass!





LED Temp. is lit: temp. correct Close turning knob

Start steam preparation LED Temp. flashes: warming up Let leftover water run off



Place glass under nozzle Froth up milk Immerse nozzle 3-4 cm deep Move glass... Open turning knob



End preparation and remove glass Clean nozzle with damp cloth



Frothed milk Choose coffee Coffee flow is adjustable to the back

6







Adjust nozzle if

necessary


LED Temp. flashes: warming up Let leftover water run off LED Temp. is lit: temp. correct Close turning knob



Start steam preparation Place can under nozzle Immerse nozzle 3-4 cm deep while frothing Open turning knob



Rotate beverage

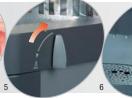

End preparation and remove can



Clean nozzle with damp cloth so that the residuals can not dry up on the nozzle



See STARTING, 2. Ventilate

temperature.







Place glass under nozzle Start hot water



preparation



Draw off hot water



End preparation and remove glass

3

# Start here

Switch off

To start programming mode, press both buttons hold them down, and switch on machine again

#### Measure water hardness



Press button





Read after 1 min.

#### **Machine wash** function

As soon as the machine has been switched on. the remaining water is rinsed out. Therefore, the very first cup of coffee is made with fresh water.







Press button

#### Prebrewing function

The coffee is first moistened and then brewed after a short nausel







not activated

not activated

### Press button

### Pregrinding function

During preparation, the next portion of coffee will already be ground (ideal if several coffees need to be prepared at same time)





activated not activated

Press button



Switch off...

and switch on again to activate the programmed functions

### CLEAN

Fill water tank.

outlet

Machine Duration: approx. 6 min.





Throw in cleaning



Press Clean for 5 sec.

When button «Clean» goes out: Cleaning is finished

#### Cappuccino nozzle

place receptacle under







Loosen the knurling screw, remove nozzle

Clean with damp cloth

Disassemble nozzle. Place nozzle parts under running water and remove milk residue. Dry separate parts, reassemble, and mount on machine.

### DESCALE







- To descale, make sure that the mains cable is plugged in and the machine switched on. During this process the heating is deactivated.
- Use a non-poisonous, harmless, commercial decalcifying agent.
- **NEVER use VINEGAR** (possible damage to device!)
- Note manufacturer's instructions!
- If the machine is turned off during the descaling procedure, it will continue again where it left off when the machine is turned on again.

### **Preparation**

- 1. Place large receptacle under Cappuccino nozzle
- 2. Solipol rated 1:1 (0,5 | Solipol/0,5 | Wasser) in the water tank.

#### Descale Duration: approx. 45 min.







Press buttons: Buttons «Clean», «Powder» and LED «Descale»

Open turning knob: LED «Descale» flashes/ close turning knob «Clean», «Powder» light

As soon as buttons / LED flash:

#### Rinse

- 1. Rinse water tank and fill
- 2. Open turning knob and draw off tank contents
- 3. Close turning knob, descaling is complete

### **Supplied accessories**



Key for strainer dismantling/assembly



Cleaning brush



Coffee measure



Test strip for water hardness

### Cleaning agent



Cleaning tablets



Descaling agent (optional)

### **Technical data**

- Nominal voltage - Nominal output

- Power - Frame

- Dimensions (L x W x D)

Weight

- Length of mains cable

- Place for extra cable

Control panel

Water tank

Capacity

- Heating unit

- Pump pressure

Safety devices

- Steam outlet

see type plate on the machine see type plate on the machine see type plate on the machine

metal-plastic

approx. 27,5 x 35 x 42 cm/approx. 11 x 14,4 x 16,9 lnch

net approx. 11 kg/net 24.25 lb

1.2 m yes on the front

removable

wate tank approx. 2 I bean container approx. 250 g

aluminum

pressure-sensitive safety release valve for heating and safety thermostat

continuously adjustable

This TSM SUCCESS MANUAL® has been examined by SEV for conformity with the safety-relevant standards, and has been analysed by an application-oriented risk analysis for the completeness and correctness of the indications for a safe use of the appliance. Thereby we assume a use with which can be reckoned based on common-sense.





TSM SUCCESS MANUAL®-safe to use-easy to understand due to TSM®-Total Security Management and ergonomic communication®

### **TROUBLESHOOTING**

#### No indication

No power to the machine

Switch on main switch Check plug and power connection

Only water instead of coffee comes when «Powder coffee» is selected



Fill up a measure of powder coffee

### Coffee is not hot enough

- Pre-heat cups
- Possibly clean brewing unit, descale if necessary
- Clean nozzle with needle (when the machine is switched off and tap is closed)

### **Heating time too long,** not enough water

Hot water/steam nozzle blocked

No hot water/steam


Descale machine

**Brewing unit cannot** be removed

- 1. Close service door
- 2. Switch on machine
- 3. Brewing unit is unlocked
- 4. Continue with — — —

#### **Brewing unit cannot** be inserted

Restore brewing unit to original position

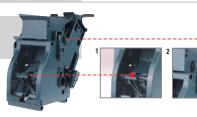

### **Preparation does not start**

#### Display:



- = The motor of the grinding unit is blocked
- = No beans
- = Fresh water tank empty
  - = Ventilate machine
- - = Dregs drawer missing = Dregs drawer full (after 14 coffees)
  - = Request for descaling

- Contact the Service technician Refill with beans
- See page 1, ventilate
- Fill water tank with fresh water
- Insert dregs drawer
- Empty dregs drawer (with machine switched on)

▶ See page 8, Troubleshooting (Brewing unit)

▶ See page 6, descale

See page 6, clean



- = Request for cleaning after 250 coffees

- - ▶ See page 1, Ventilate



- = Brewing unit missing
  - Insert brewing unit
  - Door open

### **CLEANING**

Use a mild non abrasive cleaning agent!

- The machine must not be connected to main switch for cleaning.
- Do not use conventional and/or microwave ovens for drying the coffee machine components.

### Casing

Wipe with a soft, damp cloth

### Container for coffee grounds and drip tray

Rinse under running water

### Water tank

Rinse under running water

Remove the filter that is in the water tank and rinse thoroughly. Replace by turning and pressing lightly into place.

#### **Coffee outlet**

Clean weekly



1. Place receptacle under coffee outlet



2. Press button «Coffee powder» (do not fill in coffee powder)



3. Let flow pure water through the system to avoid residuals in the pipes etc.

### **Brewing unit**

Clean weekly. Never clean the brewing unit in the dishwasher!



Open service door.
 Remove drip tray/grounds container

2.1 Loosen sieve with key..



 Press PUSH-position and remove brewing unit. If necessary, unscrew the uppermost sieve in the brewing unit

Clean everything under running warm water and let it dry. Clean service area



4. Insert drip tray and grounds container, then close service door



## **PALAZZO**

### **Operating Instruction**



The documentation for your new coffee machine consists of these instructions and the separately enclosed safety advice. This documentation should be read before the installation of the device. Keep the documentation handy at any time and pass it on to any other user.