



Using DORO Royal wall telephone



Connection

The supplied line cable is equipped with two modular plugs, one for the telephone, and one for the wall socket. A click is heard when a plug is locked in its position. You can easily change the cable by pressing the lever and pull out the plug.

Wall mounting


If the telephone is placed on the desk after use, ensure that the hook is activated, i.e.: the surface is flat. (For ship use, the wall sheath should be used in any case).

Adjustable ringing signal

Select low or high ringing signal (HØY/LAV RINGESTYRKE).

Outgoing call

- Lift handset and wait for dial tone
- Dial the subscriber number (and #)
- When finished, replace the handset

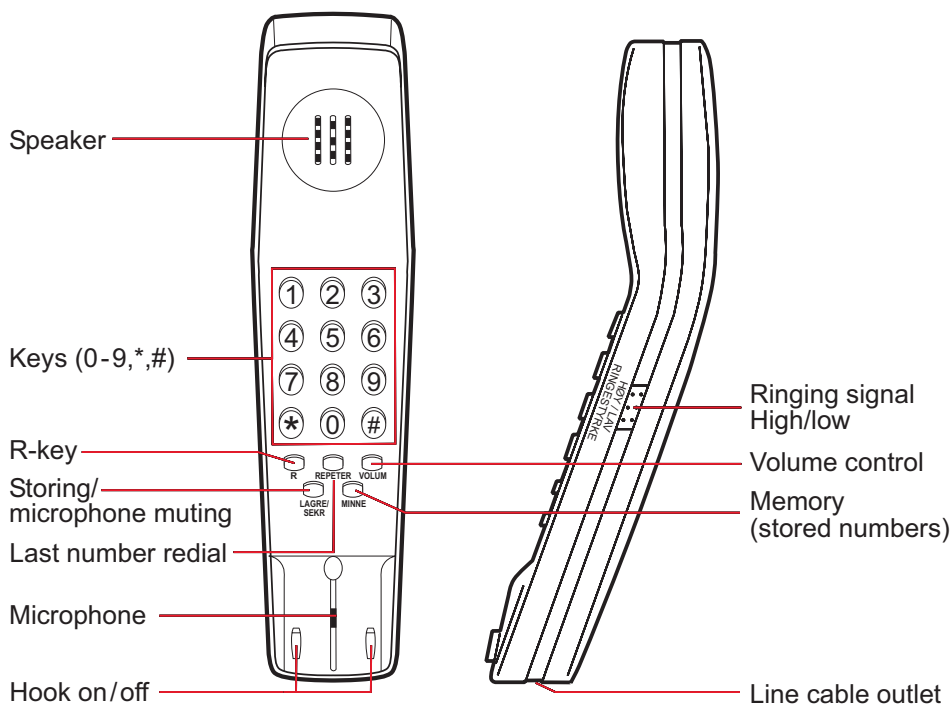

Last number redial

If the subscriber is busy, or you want to make a new call to the last dialed subscriber, lift the handset, wait for a new dial tone and then press the **last number redial** button (REPETER). Note that this button is for manually dialed numbers only. Stored numbers will not be repeated using this method.

Abbreviated numbers

10 subscriber numbers can be stored in the telephone's memory. The numbers can be used for outgoing call, by pressing 2 keys only.

Storing:

- Lift handset and press **Storing/microphone muting** button (LAGRE/SEKR) (don't mind the dial tone).
- Press the **Memory** button (MINNE).
- Select the required abbreviated dialing key: 0 – 9.
- Dial the subscriber number (max. 21 digits), followed by #.
- Press the **Storing/microphone muting** button (LAGRE/SEKR).
- Replace handset. The subscriber number is stored.

To change a number, just overwrite existing number.

Abbreviated call:

Lift handset and wait for the dial tone:

- Press **Memory** button (MINNE)
- Select required abbreviated dialing key (0 – 9). The subscriber number is automatically dialed.

Microphone muting.

During a conversation, the microphone can be muted by pressing the **Storing/microphone muting** button (LAGRE/SEKR). Press the button once more, and the microphone is back to normal.

Volume control.

By pressing the **Volume control** button (VOLUM) during a conversation, the volume may be toggled between **High** and **low** (HØY/LAV).

Additional services

Use of the R, * and # keys :

See "Getting Started" or "User Manual" for the relevant Nera satellite terminal

Trouble shooting.

- Check that the telephone cable is OK, and the plugs are connected correctly.
- Check that the on/off hook moves normally.
- Ensure that the telephone line is an analogue type (not an ISDN line).
- Ensure that additional equipment (telefax or other analogue telephones) are OK. If not disconnect all, and reconnect / test one by one.

Guarantee.

See Nera document no. 100175 "Registration and warranty Certificate" for details.

Nera SatCom AS

P.O.Box 91
N-1375 Billingstad, Norway