


- 1. Handle
- 2. Bluetooth indicator
- 3. Microphone hole
- 4. Speaker
- 5. power button
- 6. volume up / skip up
- 7. volume down / skip down
- 8. Play / pause
- 9. Microphone button
- 10. AUX in
- 11. USB charge port

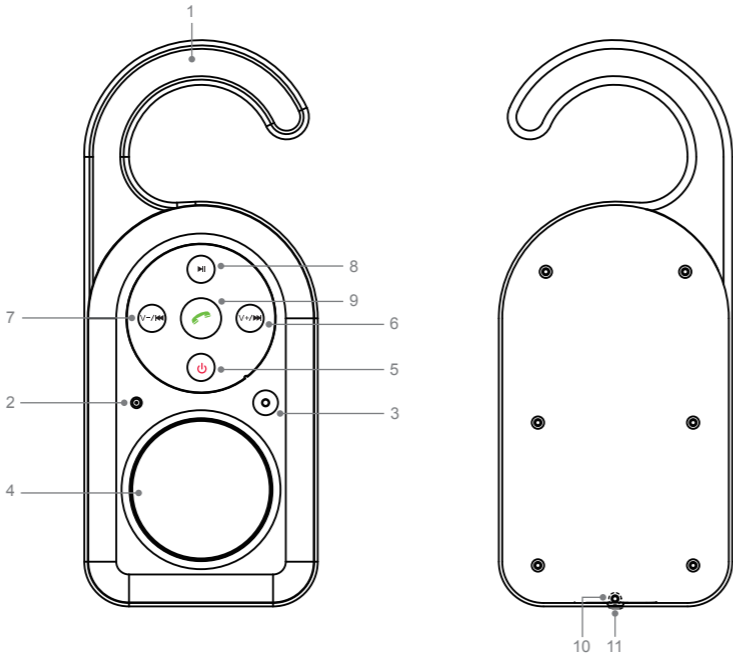

Bluetooth Feature :

- 1. Long press “POWER” button then open device , You would hear a Beep tone and the bluetooth LED indication will blue and blinking.
- 2. Short press “PLAY/PAUSE”button come into paring status , then the Bluetooth indicator will be alternately flashes blue and red light
- 3. Turn on the bluetooth function on your bluetooth device (mobile phone or tablet).Please refer to manufacturer’s instructions for instructions on enabling bluetoothto your device.
- 4. Select the device “ SR287” from the list of available bluetooth devices.
  - If required, enter the password “0000” to confirm to finalize pairing.
  - Once paired successfully, the blue LED would flash slowly.
- 5. Bluetooth will be off when AUX IN model is in use, and it will be automatically paring with the last device after AUX OUT, and click on PLAY on your mobile phone or tablet to start playing your music.

Microphone Function

- 1: Press “handfree” button you can received the calling under Bluetooth connecting mode.
- 2: Long press “ microphone” button 3 seconds will recall the nearest call

AUX IN:

Turn on the unit.Connect the one end of 3.5MM stereo cables to the speaker and the other end of the cable to the output jack on your computer sound card or any personal music player like mobile phone or tablet.  
Turn on your computer (or mobile phone or tablet). Open media player and click on PLAY to start playing your music.

General Specification:

Power source : DC3.7V ,400mAh  
Audio output : 1.5W  
SNR : ≥60dB  
Impedence of speakers : 3W ,4 Ohm  
Battery parameter : 3.7V 50mA  
AUX : 3.5MM jack

Accessories:

- 1 x User manual
- 1 X Audio cable connection cable with 3.5mm jacks
- 1x USB CABLE

LENOXX

LENOXX ELECTRONICS AUSTRALIA PTY LTD

Importers & Wholesalers of Electronics & Toys

6 Oban Court Laverton North Vic 3026

ABN: 97 844 321 851

Customer Service: 1300-666-848

Email Address: [Lenoxx@lenoxx.com.au](mailto:Lenoxx@lenoxx.com.au)

Web Site: [www.lenoxxelectronics.com](http://www.lenoxxelectronics.com)

ELECTRONICS GOODS WARRANTY

WE WARRANT THIS PRODUCT TO BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USE FOR A PERIOD OF 12 MONTHS AFTER DELIVERY TO THE ULTIMATE USER AND WE WILL REPAIR AT NO CHARGE OR REPLACE IT AT OUR OPTION SHOULD IT BECOME DEFECTIVE UNDER THIS WARRANTY PROVIDING YOU SUBMIT PROOF OF PURCHASE (ORIGINAL SALES RECEIPT) WHEN MAKING A REQUEST UNDER THIS WARRANTY. THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT, WHICH HAS BEEN SUBJECT TO MISUSE NEGLECT OR ACCIDENT. THE WARRANTY DOES NOT COVER: HANDLES, BATTERIES,ELECTRICAL CORDS, ANTENNAS, MICROPHONES, BROKEN CABINETS OR ANY OTHER ACCESSORIES USED IN CONNECTION WITH THE PRODUCT. UNDER NO CIRCUMSTANCES WILL LENOXX ELECTRONICS (AUSTRALIA) PTY LTD BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

IMPORTANT MESSAGE: BEFORE SENDING YOUR UNIT TO LENOXX FOR REPAIR YOU MUST SUPPLY PROOF OF PURCHASE (Original Sales Receipt) TO VALIDATE YOUR WARRANTY.

THIS WARRANTY IS IN ADDITION TO OTHER RIGHTS AND REMEDIES OF THE CONSUMER UNDER A LAW IN RELATION TO THE GOODS OR SERVICES TO WHICH THE WARRANTY RELATES.

'Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure ".

For warranty registration please visit our website

[www.lenoxxelectronics.com.au](http://www.lenoxxelectronics.com.au)

Service Direct Line (Australia only): 1300 - 666 - 848

MODEL NO:

SR287

BATCH NO:

PR2985