

## Introduction

This guide provides instructions for installing the IP Bullet Camera series Network Camera on your network. For all other aspects of using the product, please see the IP Bullet Camera series User's Manual, available from the Product CD.

1. Check the package contents against the list below.
2. Install the hardware on page 3
3. Set the IP address on page 3.

## IMPORTANT



This product must be installed in compliance with local laws and regulations.

## Package Contents

Item	Descriptions
Network Camera	IP Bullet camera
Power Adaptor	Option. Country specific item.
Software CD	User's Manual, Utility software
Quick User Guide	This document
Accessories	Anchor Tapping Screw / Wrench bolt L-key Wrench Video monitor cable Power Jack Cable Terminal Block(2p / 8p)

## Hardware Overview




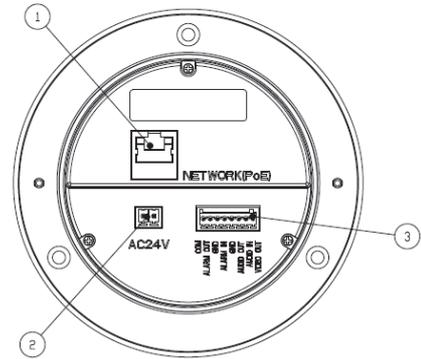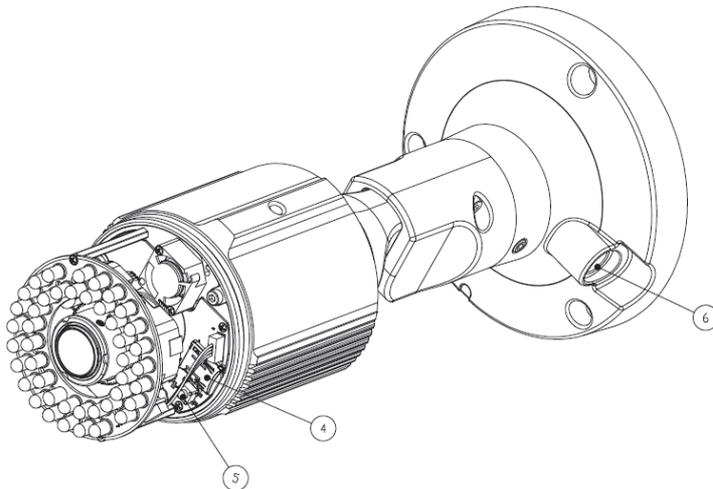

(REAR)

- 1. Network (RJ-45 PoE supported)
- 2. Power Connector
- 3. Alarm(In / Out) / Audio (In / Out) connector
- 4. Micro SD Card Slot
- 5. Control Button
- 6. Video output for service monitor / Status LED

### Pin Assignment

 


COM  
 ALARM OUT  
 GND  
 ALARM IN  
 GND  
 AUDIO OUT  
 AUDIO IN  
 VIDEO OUT

### Making Connection

- 1. If you have external devices such as sensor or alarms, make connection from connectors.
  - 2. Connect Ethernet cable to make connection to the network hub.
  - 3. Connect power cable to the camera.
- When you use PoE function, you don't need to connect power.



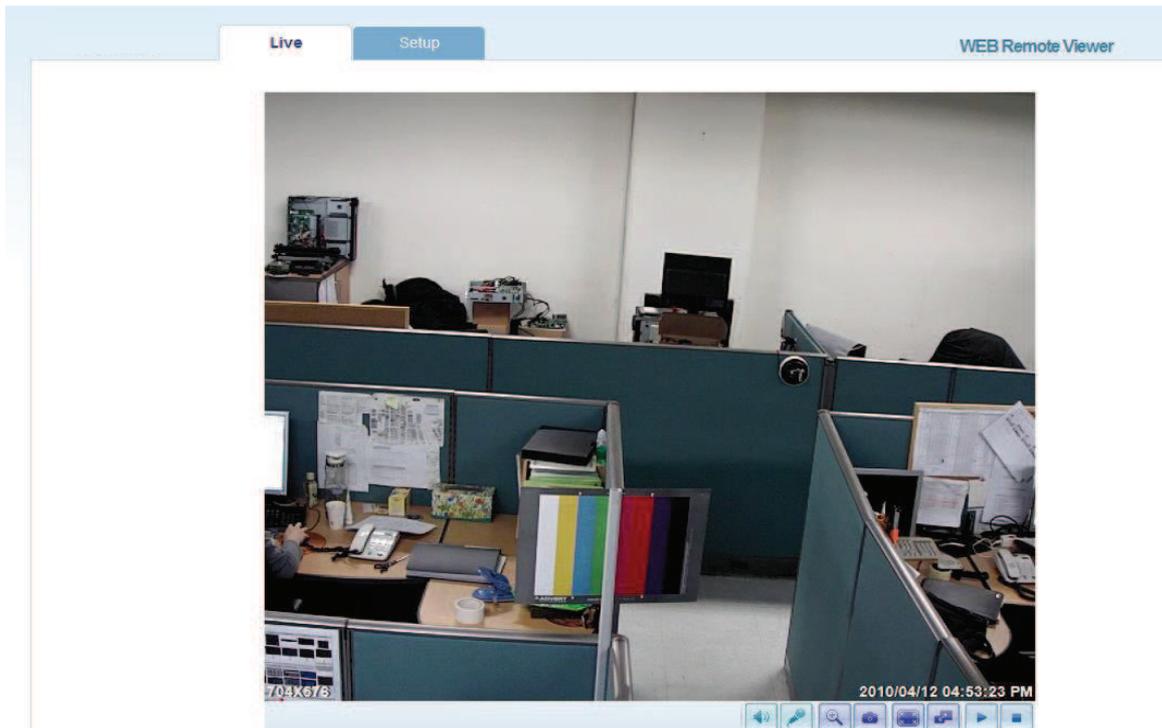

**For further information for setup, please refer to User's manual in software CD.**