

## Wireless Remote Control Vibrator / Beeper

### Package Include:

- 4 x Receiver: Z-06 (Vibration & Beep mode)
- 1 x Transmitter: CB-4L
- 1 x User manual

### Feature:

- Wireless control.
- You can control the receiver with transmitter (remote control) from any place within a reliable distance, the wireless signal can pass through walls, floors and doors.
- Reliable control: The transmitter (Encoding) and the receiver (Decoding) use an 8-bit code.
- One/several transmitters can control one/several receivers simultaneously.
- If you use two or more receivers in the same place, you can set them with different codes.
- Transmitting Frequency: 433MHz

### Receiver:

- Model No.: Z-06
- 3 Modes: Vibration, Beep, Vibration and Beep
- Decode: Learning code
- Power Supply: 2 x AAA 1.5V Battery (included)
- Size: 77mm x 38mm x 17mm
- 

### Transmitter:

- Model No.: CB-4L
- Channel: 4 CH
- Remote Control Distance: 1000m / 3000ft (theoretically)
- Encode: EV1527 Learning code (up to 1 million codes, reducing code collision and unauthorized code scanning possibilities.)
- Unit size: 135mm x 42mm x 25mm
- Power Supply: 1 x 6F22-9V battery (included, can be used for 12 months)


### Usage:

- Vibration mode: Press the button of transmitter, the receiver vibrates for 5 seconds.
- Beep mode: Press the button of transmitter, the receiver beeps for 5 seconds.
- Vibration & Beep mode: Press the button of transmitter, the receiver vibrates and beeps together for 5 seconds.
- Changing modes: As long as press the button of receiver, you can switch those three working modes optionally. Such as press the button of receiver, switch to beep mode from vibration mode; press the button of transmitter again, switch to vibration & beep mode; press the button of transmitter again, switch to vibration mode.
- Each button of transmitter can control one receiver.
- We have learned remote control to the receiver. If you don't want the receiver to work with the remote control, you can delete all stored codes:  
Delete all stored codes: Press and hold the button of the receiver for about 5 seconds until LED light turns on and go on holding till LED light turns off, then release the button, all stored codes have been deleted successfully. At this time, the transmitter cannot control the receiver.
- Learning remote controls:
  - 1) Press and hold the learning button of the receiver for about 5 seconds, then release the button when LED light is on, the receiver is in the status of Learning.
  - 2) Press button of remote control within 10 seconds, if LED light flashes twice then off, it means Learning is successful. If LED light is off after 10 seconds, it means Learning is failed and the receiver quits the status of Learning.
  - 3) The receiver can learn several remote controls of different codes.

### Note:

**If you want to delete all stored codes, you should first switch off the receiver and switch on again, then you can go on deleting codes.**

Front view

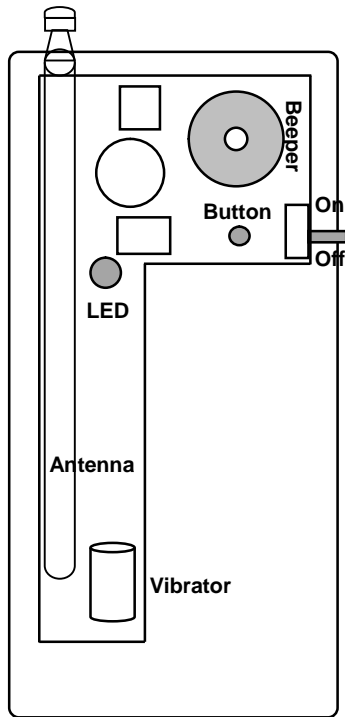

Back view

