

# Active Speaker System


Operating Instructions  
Mode d'emploi  
Bedienungsanleitung  
Manual de instrucciones

Gebruiksaanwijzing  
Bruksanvisning  
Istruzioni per l'uso  
Manual de instruções


SRS-A212

<http://www.sony.net/>  
© 2006 Sony Corporation Printed in China


A

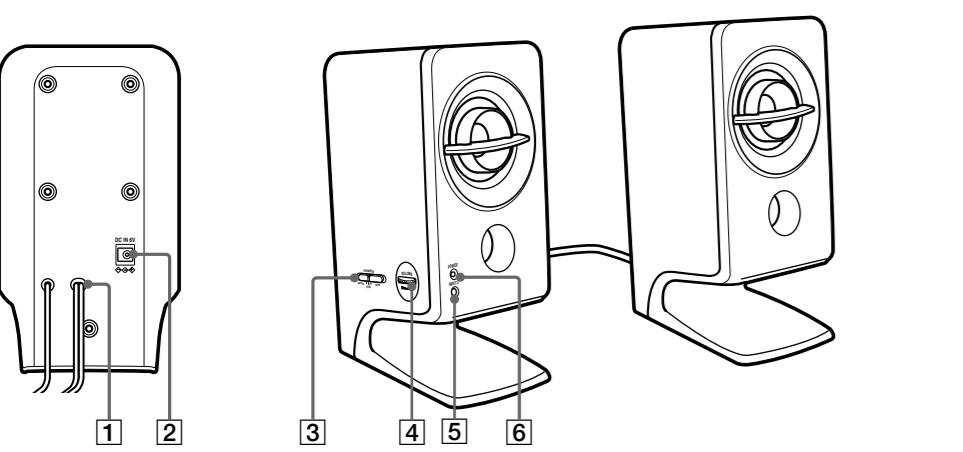Rear  
Arrière  
Rückseite  
Parte posterior


Left speaker (rear)  
Enceinte gauche (arrière)  
Linker Lautsprecher (Rückseite)  
Altavoz izquierdo (parte posterior)

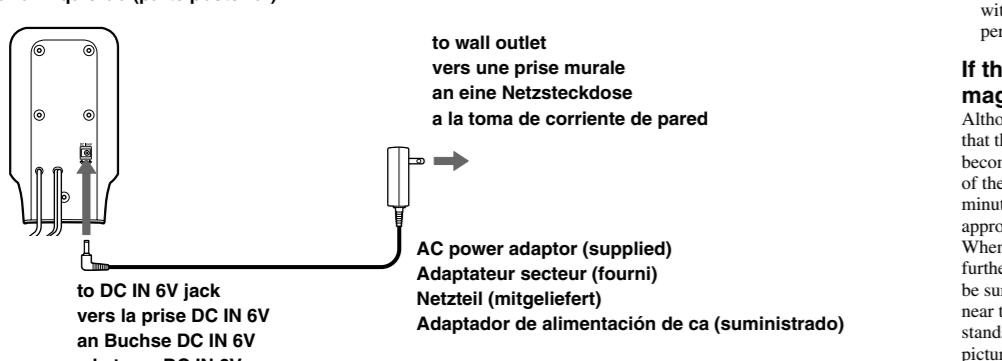

B

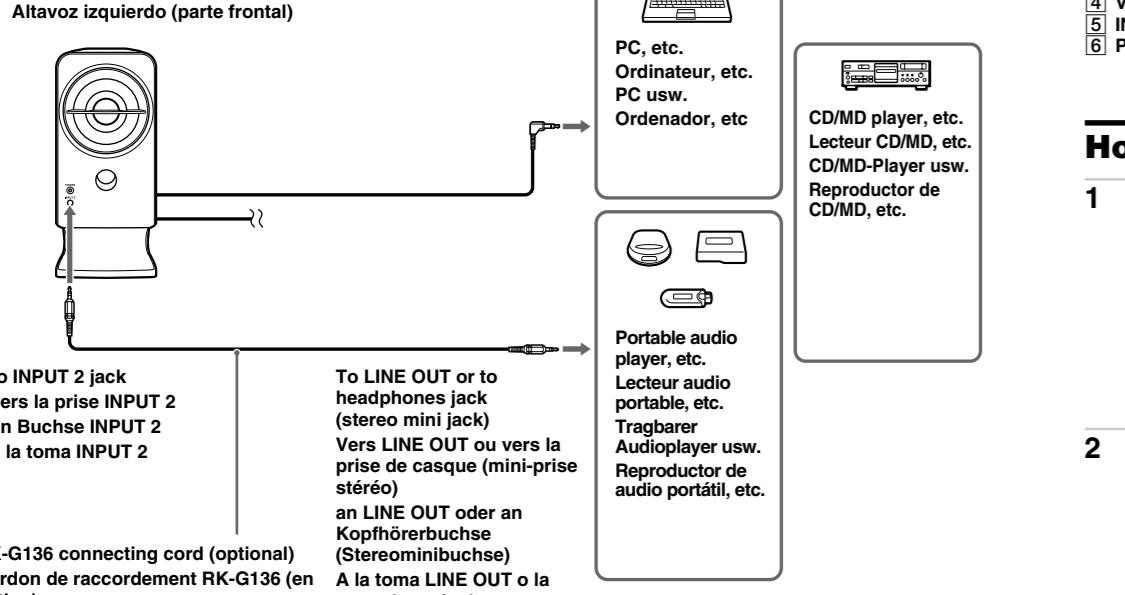Left speaker (front)  
Enceinte gauche (avant)  
Linker Lautsprecher (Vorderseite)  
Altavoz izquierdo (parte frontal)


RK-G136 connecting cord (optional)  
Cordon de raccordement RK-G136 (optionnel)  
Verbindungsleitung RK-G136  
(gesondert erhältlich)  
Cable de conexión RK-G136  
(opcional)

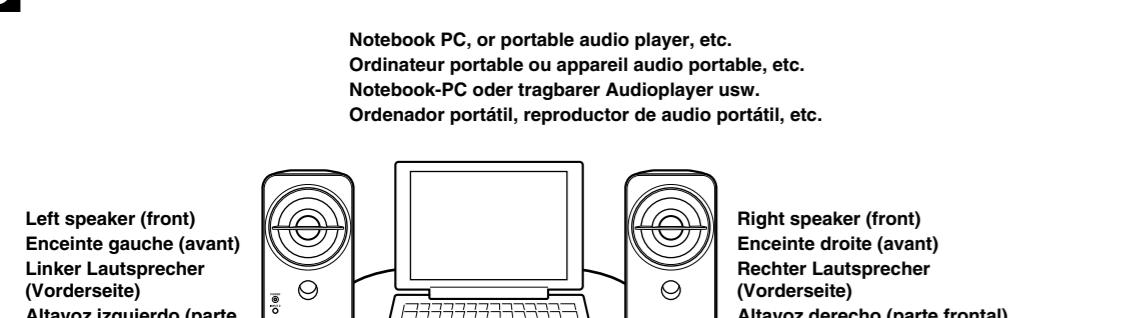

Notebook PC, or portable audio player, etc.  
Ordinateur portable ou appareil audio portable, etc.  
Notebook-PC oder tragbarer Audioplayer usw.  
Ordenador portátil, reproductor de audio portátil, etc.

Left speaker (front)  
Enceinte gauche (avant)  
Linker Lautsprecher (Vorderseite)  
Altavoz izquierdo (parte frontal)

Right speaker (front)  
Enceinte droite (avant)  
Rechter Lautsprecher (Vorderseite)  
Altavoz derecho (parte frontal)

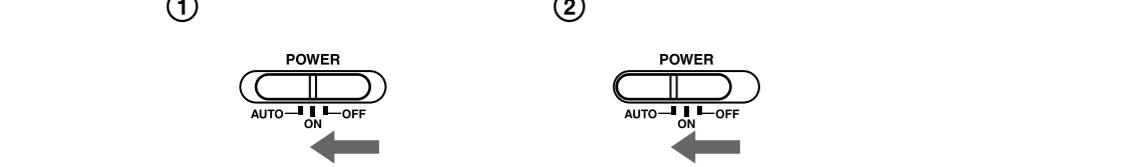

## English

Before operating the unit, please read this manual thoroughly and retain it for future reference.

### WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of electrical shock, do not open the cabinet.

Refer servicing to qualified personnel only.

To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place liquid-filled objects on the apparatus.

To reduce the risk of fire or electric shock, do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Connect the AC power adaptor to an easily accessible AC outlet. Should you notice an abnormality in the AC power adaptor, disconnect it from the AC outlet immediately.

**Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)**

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The recycling of this product will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

**Turning the speaker on/off automatically**

- **Auto Power On/Off function**

You can set the system to turn on automatically when an audio signal is input from a source device. When the system is turned on, the POWER indicator lights up.

If no signal is input for about 30 seconds or more\*, the system turns off automatically and the POWER indicator goes off.

\* Automatic off time may vary according to how the speaker is used.

**Precautions**

**On safety**

Before operating the system, be sure that the operating voltage of the system is identical with that of your local power supply.

**Where purchased - Operating voltage**

All countries/regions 100 - 240 V AC, 50/60 Hz

**Notes**

If the input signal level is too low, the system will not turn on automatically.

If a device that generates microwaves, such as a mobile phone, is nearby, the system may turn on unintentionally by the device.

If a mobile phone is connected to the system, the system may turn on unintentionally by noise or an incoming call.

When connecting a mobile phone, turn off the system manually by the POWER switch.

The system may not turn on automatically because of received noise.

If no device is connected to INPUT 1, the system may not turn off automatically, or it may turn on unintentionally.

If the beginning of the input signal may not be heard, depending on the input signal level.

When leaving the system unattended, set the POWER switch to OFF to prevent malfunction.

**On operation**

• Do not open the cabinet. Refer servicing to qualified personnel only.

• Should any solid object or liquid fall into the system, have the system checked by qualified personnel before operating it any further.

• Although the system is magnetically shielded, do not leave recorded tapes, watches, personal credit cards, or floppy disks with magnetic coding in front of the system for an extended period of time.

**If the TV picture or monitor display is magnetically distorted**

Although this system is magnetically shielded, there may be cases that the picture on some TV sets/personal computer sets may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer set once, and after 15 to 30 minutes, turn it on again. If the distortion still remains, use the appropriate measures such as store bags before turning it off. When there seems to be no improvement, locate the system further away from the TV set/personal computer set. Furthermore, be sure not to place objects in which magnets are attached or near the TV set/personal computer set, such as audio racks, TV stands, toys etc. These may cause magnetic distortion to the picture due to their interaction with the system.

**If you have any questions or problems concerning your speaker system, please consult your nearest Sony dealer.**

**Troubleshooting**

Should you have a problem with your speaker system, check the following list and take the suggested measures. If the problem persists, consult your nearest Sony dealer.

**No sound**

• Check that both UNIT 1 and the source device are turned on.

• Turn up the volume of the source device as high as possible to the extent that sound is not distorted. For details on volume adjustment, refer to the operating instructions supplied with the device.

• Make sure all the connections have been correctly made.

• If the TV picture or monitor display is magnetically distorted

Although this system is magnetically shielded, there may be cases that the picture on some TV sets/personal computer sets may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer set once, and after 15 to 30 minutes, turn it on again. If the distortion still remains, use the appropriate measures such as store bags before turning it off. When there seems to be no improvement, locate the system further away from the TV set/personal computer set. Furthermore, be sure not to place objects in which magnets are attached or near the TV set/personal computer set, such as audio racks, TV stands, toys etc. These may cause magnetic distortion to the picture due to their interaction with the system.

**If you have any questions or problems concerning your speaker system, please consult your nearest Sony dealer.**

**Identifying parts (see fig. A)**

- ① INPUT 1 Connecting cord with stereo-mini plug
- ② DC IN 6V jack Connect the supplied AC power adaptor.
- ③ POWER switch
- ④ Remote control
- ⑤ INPUT 2
- ⑥ POWER indicator

**Identifying parts (see fig. A)**

- ① INPUT 1 Connecting cord with mini-fiche
- ② PC, etc. Ordinateur, etc. PC usw. Ordenador, etc.
- ③ CD/MG player, etc. Lecteur CD/MG, etc. Reproductor de CD/MG, etc.
- ④ Portable audio player, etc. Lecteur audio portable, etc. Reproductor de audio portátil, etc.
- ⑤ LINE OUT or to headphones jack (stereo mini jack) Vers LINE OUT ou vers la prise de casque (mini-prise stéréo) an LINE OUT oder an Kopfhöreranschluss (Miniplug ministeereo).
- ⑥ To INPUT 2 jack vers la prise INPUT 2 an Buchse INPUT 2 a la toma de corriente de pared

**Hooking up the speakers**

- 1 Connect the AC power adaptor to the system. (See fig. B.)

**Note on the AC power adaptor**

Use only the supplied AC power adaptor. Do not use any other AC power adaptor to avoid damaging the speakers.

**Polarity of the plug**

to INPUT 2 jack vers la prise INPUT 2 an Buchse INPUT 2 a la toma de corriente de pared

to DC IN 6V jack vers la prise DC IN 6V an Buchse DC IN 6V a la toma de corriente de pared

AC power adaptor (supplied) Adapteur secteur (fourni) Adaptador de alimentación de ca (suministrado)

**Specifications**

**Speaker section**

Speaker system 66 mm, Full range, magnetically shielded

Enclosure type Bass reflex

Impedance 4 Ω

Rated input power 1.8 W

Maximum input power 3.6 W

**Amplifier section (Left Speaker)**

Music power output 2.4 W (1 kHz, 4 Ω, DIN)

Input Connector cord with stereo-mini plug (1.5 m × 1)

Input impedance Stereo mini jack × 1

Output impedance 4.7 kΩ (at 1 kHz)

Power 6.6 W (magnetized AC power adaptor)

Dimensions (w/h/d) Approx. 93 × 208 × 151 mm

Mass Left: approx. 390 g (14 oz), Right: approx. 350 g (12 oz)

**Supplied accessories**

AC power adaptor (1)

Operating Instructions (1)

**Optional accessories**

Connecting cord RK-G136, RK-G138

Plug adaptor PC-234S, PC-236MS

The above optional accessories are not provided in some areas.

Design and specifications are subject to change without notice.

**Position the speakers. (See fig. D.)**

The conception et les spécifications sont sujettes à modification sans préavis.

La conception et les spécifications sont sujettes à modification sans préavis.

Die Konzeption und die Spezifikationen unterliegen ohne vorherige Ankündigung Änderungen.

Las concepciones y las especificaciones están sujetas a cambios sin previo aviso.

As the conception and the specifications are subject to change without notice.

Die Konzeption und die Spezifikationen unterliegen ohne vorherige Ankündigung Änderungen.

Las concepciones y las especificaciones están sujetas a cambios sin previo aviso.

Die Konzeption und die Spezifikationen unterliegen ohne vorherige Ankündigung Änderungen.

Las concepciones y las especificaciones están sujetas a cambios sin previo aviso.

Die Konzeption und die Spezifikationen unterliegen ohne vorherige Ankündigung Änderungen.

Las concepciones y las especificaciones están sujetas a cambios sin previo aviso.

Die Konzeption und die Spezifikationen unterliegen ohne vorherige Ankündigung Änderungen.

Las concepciones y las especificaciones están sujetas a cambios sin previo aviso.

Die Konzeption und die Spezifikationen unterliegen ohne vorherige Ankündigung Änderungen.

Las concepciones y las especificaciones están sujetas a cambios sin previo aviso.

Die Konzeption und die Spezifikationen unterliegen ohne vorherige Ankündigung Änderungen.

Las concepciones y las especificaciones están sujetas a cambios sin previo aviso.

Die Konzeption und die Spezifikationen unterliegen ohne vorherige Ankündigung Änderungen.

Las concepciones y las especificaciones están sujetas a cambios sin previo aviso.

Die Konzeption und die Spezifikationen unterliegen ohne vorherige Ankündigung Änderungen.

Las concepciones y las especificaciones están sujetas a cambios sin previo aviso.

Die Konzeption und die Spezifikationen unterliegen ohne vorherige Ankündigung Änderungen.

Las concepciones y las especificaciones están sujetas a cambios sin previo aviso.

Die Konzeption und die Spezifikationen unterliegen ohne vorherige Ankündigung Änderungen.

Las concepciones y las especificaciones están sujetas a cambios sin previo aviso.

Die Konzeption und die Spezifikationen unterliegen ohne vorherige Ankündigung Änderungen.

Las concepciones y las especificaciones están sujetas a cambios sin previo aviso.

Die Konzeption und die Spezifikationen unterliegen ohne vorherige Ankündigung Änderungen.

Las concepciones y las especificaciones están sujetas a cambios sin previo aviso.

Die Konzeption und die Spezifikationen unterliegen ohne vorherige Ankündigung Änderungen.

Las concepciones y las especificaciones están sujetas a cambios sin previo aviso.

Die Konzeption und die Spezifikationen unterliegen ohne vorherige Ankündigung Änderungen.

Las concepciones y las especificaciones están sujetas a cambios sin previo aviso.

