Register your product and get support at

www.philips.com/welcome



19PFL5404/60 22PFL5604/60 22PFL5614/60 32PFL5404/60 32PFL5604/60 32PFL5604/60 42PFL5604/60

EN User Manual

RU Руководство пользователя

PHILIPS



Österreich 0810 000205 €0.07 pro Minute

België/Belgique 078250145 €0.06 Per minuut/Par minute

 България
 +3592 489 99 96
 Местен разговор

 Hrvatska
 01 6403 776
 Lokalni poziv

 Česká republika
 800142840
 Bezplatný hovor

 Danmark
 3525 8759
 Lokalt opkald

Estonia 6008600 local

 Suomi
 09 2311 3415
 paikallispuhelu

 France
 0821 611655
 €0.09 Par minute

 Deutschland
 01803 386 852
 €0.09 pro Minute

 Ελλάδα
 0 0800 3122 1280
 Κλήση χωρίς χρέωση

Magyarország 0680018189 Ingyenes hívás

Ireland North 0800 055 6882 free

South 1800-PHILIPS 7445477

Italia 840320086 €0.08 Al minuto

 Қазақстан
 +7 727 250 66 17
 local

 Latvia
 67228896
 local

 Lithuania
 52737691
 local

Luxemburg/Luxembourg 40 6661 5644 Ortsgespräch/Appel local

 Nederland
 0900 8407
 €0.10 Per minuut

 Norge
 2270 8111
 Lokalsamtale

 Polska
 (022) 3491504
 połączenie lokalne

 Portugal
 800 780 903
 Chamada local

 România
 031-810 71 25
 Apel local

0800-89 49 10

Россия Moscow (495) 961-1111 Местный звонок

Outside Moscow 8-800-200-0880

Србија +381 114 440 841 Lokalni poziv
Slovensko 0800 004537 Bezplatný hovor
Slovenija 00386 12 80 95 00 lokalni klic
España 902 888 784 €0.10 Por minuto
Sverige 08 5792 9100 Lokalsamtal

Suisse/Schweiz/Svizzera 0844 800 544 Appel local/Ortsgespräch/Chiamata locale

Türkiye 0800 261 3302 Şehiriçi arama

United Kingdom General No: 0870 900 9070 local

General National Rate No: 0870 911 0036

Україна 8-800-500-69-70 Місцевий виклик

This information is correct at the time of press. For updated information, see www.philips.com/support.

Contents

1	Notice	2
2	Important	4
3	TV overview	6
	Side controls and indicators	6
	Remote control	6
4	Use your product	8
	Switch your TV on/off or to standby	8
	Switch channels	8
	Watch connected devices	9
	Adjust TV volume	9
	Use teletext	9
5	Use more of your product	10
	Access TV menus	10
	Remove devices from the home menu	10
	Change picture and sound settings	10
	Use advanced teletext features Create and use lists of favourite channels	13
		13
	Use timers	15
	Use TV lock	15
	Use the TV clock	16
	Use Scenea	16
	Watch TV in dual view	17
	View photos and play music from a USB	
	storage device	18
	Update the TV software	19
	Change TV preferences	19
	Access decoder channel	20
	Start aTV demo	20
	Reset the TV to factory settings	20
6	Install channels	21
	Automatically install channels	21
	Manually install channels	22
	Rename channels	23
	Rearrange channels	23

_	<u> </u>	_			
7	Connect devices	2.			
	Back connectors for 26 inch and largerTV				
		2.			
	Side connectors	2			
	Connect a computer	2			
	Use Philips EasyLink	2			
	Use a Kensington lock	2			
8	Product information	3			
	Supported display resolutions	3(
	Multimedia	3(
	Tuner/Reception/Transmission	3(
	Remote control	3(
	Power	3(
	Supported TV mounts	30			
9	Troubleshooting	3.			
	General TV issues	3			
	TV channel issues	3			
	Picture issues	3			
	Sound issues	3			
	HDMI connection issues	3.			
	Computer connection issues	3			
	Contact us	3			
10	Index	3,			

1 Notice

2009 © Koninklijke Philips Electronics N.V. All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly. The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. Philips warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

Warranty

- Risk of injury, damage to TV or void of warranty! Never attempt to repair the TV yourself.
- Use the TV and accessories only as intended by the manufacturer.
- The caution sign printed on the back of the TV indicates risk of electric shock.
 Never remove the TV cover. Always contact Philips Customer Support for service or repairs.



Any operation expressly prohibited in this manual, or any adjustments and assembly procedures not recommended or authorised in this manual shall void the warranty.

Pixel characteristics

This LCD product has a high number of colour pixels. Although it has effective pixels of 99.999% or more, black dots or

bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

Mains fuse (UK only)

This TV is fitted with an approved moulded plug. Should it become necessary to replace the mains fuse, this must be replaced with a fuse of the same value as indicated on the plug (example 10A).

- 1 Remove fuse cover and fuse.
- The replacement fuse must comply with BS 1362 and have the ASTA approval mark. If the fuse is lost, contact your dealer in order to verify the correct type.
- **3** Refit the fuse cover.

In order to maintain conformity to the EMC directive, the mains plug on this product must not be detached from the mains cord cable. Copyright



VESA, FDMI and the VESA Mounting Compliant logo are trademarks of the Video Electronics Standards Association.

® Kensington and Micro Saver are registered US trademarks of ACCO World Corporation with issued registrations and pending applications in other countries throughout the world.

All other registered and unregistered trademarks are the property of their respective owners.

2 Important

Read and understand all instructions before you use your TV. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

- Risk of electric shock or fire!
 - Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilt on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips Consumer Care to have the TV checked before use.
 - Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight.

To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.



- Never insert objects into the ventilation slots or other openings on the TV.
- When the TV is swivelled ensure that no strain is exerted on the power cord. Strain on the power cord can loosen connections and cause arcing.
- Risk of short circuit or fire!
 - Never expose the remote control or batteries to rain, water or excessive heat.
 - Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire.
- Risk of injury or damage to the TV!

- Two people are required to lift and carry a TV that weighs more than 25 kg.
- When stand mounting the TV, use only the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the combined weight of the TV and the stand.
- When wall mounting the TV, use only a wall mount that can support the weight of the TV. Secure the wall mount to a wall that can support the combined weight of the TV and wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that result in accident, injury or damage.
- Risk of injury to children!Follow these precautions to prevent the TV from toppling over and causing injury to children:
 - Never place the TV on a surface covered by a cloth or other material that can be pulled away.
 - Ensure that no part of the TV hangs over the edge of the surface.
 - Never place the TV on tall furniture (such as a bookcase) without anchoring both the furniture and TV to the wall or a suitable support.
 - Educate children about the dangers of climbing on furniture to reach the TV.
- Risk of overheating! Never install the TV in a confined space. Always leave a space of at least 4 inches or 10 cm around the TV for ventilation. Ensure curtains or other objects never cover the ventilation slots on the TV.
- Risk of damage to the TV! Before you connect the TV to the power outlet, ensure that the power voltage matches the value printed on the back of the TV. Never connect the TV to the power outlet if the voltage is different.
- Risk of injury, fire or power cord damage!
 Never place the TV or any objects on the power cord.
- To easily disconnect the TV power cord from the power outlet, ensure that you

- have full access to the power cord at all times.
- When you disconnect the power cord, always pull the plug, never the cable.
- Disconnect the TV from the power outlet and aerial before lightning storms. During lightning storms, never touch any part of the TV, power cord or aerial cable.
- Risk of hearing damage! Avoid using earphones or headphones at high volumes or for prolonged periods of time.
- If the TV is transported in temperatures below 5°C, unpack the TV and wait until the TV temperature matches room temperature before connecting the TV to the power outlet.

Screen care

- Avoid stationary images as much as possible. Stationary images are images that remain on-screen for extended periods of time. Examples include: on-screen menus, black bars and time displays. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.
- Unplug the TV before cleaning.
- Clean the TV and frame with a soft, damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the TV.
- Risk of damage to the TV screen! Never touch, push, rub or strike the screen with any object.
- To avoid deformations and colour fading, wipe off water drops as soon as possible.

Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.


EN

5

3 TV overview


This section gives you an overview of commonly used TV controls and functions.

Side controls and indicators

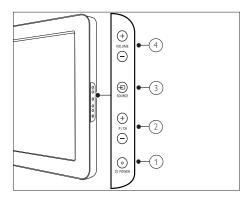

- ① POWER: Switches the product on or off. The product is not powered off completely unless it is physically unplugged.
- 2 P/CH +/-: Switches to the next or previous channel.
- 3 + SOURCE: Selects connected devices.
- (4) VOLUME +/-: Increases or decreases volume.

Remote control

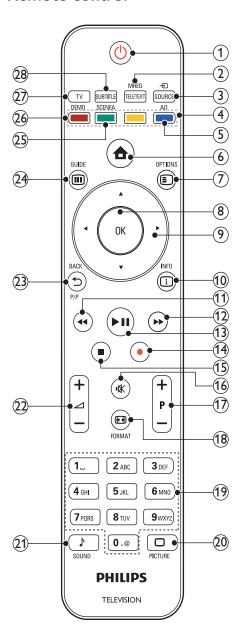

- (1) (Standby-On)
 - Switches the TV to standby if it is on.
 - Switches on the TV if it is in standby.
- 2 MHEG/TELETEXT

Toggles teletext on or off.

(3) +D SOURCE

Selects connected devices.

(4) Colour buttons

Selects tasks or options.

(5) AD (Audio Descriptor) (For RF Digital TV only)

UK only: Enables audio commentary for the visually handicapped.

(6) **♠** (Home)

Toggles the home menu on or off.

(7) © OPTIONS

Accesses options relating to the current activity or selection.

(8) OK

Confirms an entry or selection and displays the channel grid, when watching TV.

9 AVA (Navigation buttons)
Navigates through the menus.

(10) **I** INFO

Displays program information, when available. If the information spans multiple pages, press **OPTIONS** to go to the next page .

(11) **◄** (Backward)

Searches backward.

(12) ►► (Forward)

Searches forward.

(13) ► II (Play/Pause)

Starts, pauses or resumes playback.

● (Record) (only used for Easylink features)

Starts or stops video recording.

(15) ■ (Stop)

Stops playback.

(16) **★** (Mute)

Mutes or restores audio output.

(17) P +/- (Programme +/-)

Switches to the next or previous channel. When the TV menu is on, this functions as Page Up/Down.

(18) ED FORMAT

Selects a picture format.

(19) **0-9 (Numeric buttons)**Selects a channel or setting.

② □ PICTURE

Launches the picture menu. (Not supported on all models.

(21) → SOUND

Launches the sound menu. (Not supported on all models.)

22) \(+/-\) (Volume +/-)

Increases or decreases volume.

23 SACKP/P (Previous channel)

Returns to a previous channel or menu screen.

(24) IIII GUIDE

Switches between channel grid and programme list.

25 SCENEA (Wallpaper)

Displays wallpaper on your TV screen.

(26) DEMO

Toggles the demonstration menu on or

(27) TV

Switches back to the aerial source.

(28) SUBTITLE (For RF Digital TV only)


Enables or disables subtitles.

4 Use your product

This section helps you perform basic operations (see 'Use more of your product' on page 10).

Switch your TV on/off or to standby



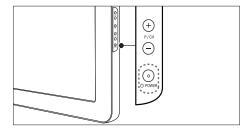

To switch on

- If the standby indicator is off, press O POWER at the side of the TV.
- If the standby indicator is red, press O
 (Standby-On) on the remote control.

To switch to standby

- Press \circlearrowleft (Standby-On) on the remote control.
 - → The standby indicator switches to red.

To switch off

- Press **OPOWER** at the side of the TV.
 - → The standby indicator switches off.




Tip


 Though your TV consumes very little power when in standby, energy continues to be consumed. When not in use for an extended period of time, disconnect the TV power cable from the power outlet.

Note

 If you cannot locate your remote control and want to switch on the TV from standby, press P/CH +/- or SOURCE at the side of the TV.

Switch channels

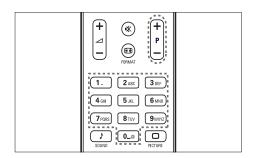

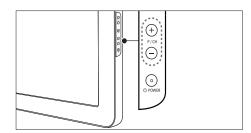


- Press P +/- on the remote control or P/CH +/- on the side of the TV.
- Enter a channel number using the Numeric buttons.
- Use the channel grid (see 'Switch channels with the channel grid' on page 8).



• When you use a favourite list, you can only select those channels in the list.

Switch channels with the channel grid

The channel grid allows you to view all available channels in a grid format.

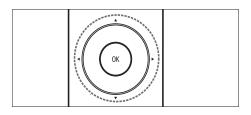

- 1 Press OK.
 - → The channel grid appears.
- 2 Press ATT to browse the channel grid and preview a channel.
 - The channel content is displayed after a lapse of approximately two seconds.
- When you find a channel of your choice, press **OK** to watch.
 - → The selected channel appears.


Watch connected devices



Note


• Switch on the device before selecting it as a source on the TV.


Use the source button

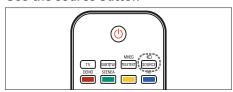

- 1 Press SOURCE.
 - → The source list appears.
- 2 Press the Navigation buttons to select a
- **3** Press **OK** to confirm your choice.
 - → The TV switches to the selected device.

Adjust TV volume

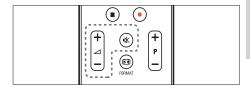

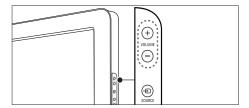


To increase or decrease volume

- Press ∠ +/-.
- Press **VOLUME +/-** on the side of the TV.

To mute or unmute sound

Use teletext

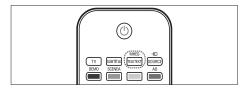

- 1 Press MHEG/TELETEXT.
 - → The main index page appears.
- 2 Select a page as follows:
 - Press the **Numeric buttons** to enter a page number
 - Press P +/- or ▲▼ to view the next or previous page
 - Press the Colour buttons to select a colour coded item
 - Press SACK to return to a previously viewed page
- **3** Press MHEG/TELETEXT to exit teletext.

5 Use more of your product

Access TV menus

Menus help you to install channels, change picture and sound settings and access other features.

- 1 Press ♠ (Home).
 - → The menu screen appears.



- Press the ▲▼◆▶ to select and navigate through one of the following menus.
 - [Watch TV] Switches back to the aerial source if another source is selected.
 - [Setup] Accesses menus that allow you to change picture, sound and other TV settings.
 - [Add new device] Adds new devices to the home menu.
- **3** Press **OK** to confirm your choice.
- **4** Press **♠** (**Home**)to exit.



Пр

 After selecting [Add new device], follow the on-screen instructions to select the correct device and connector.

Remove devices from the home menu

If a device is no longer connected to the TV, remove it from the home menu.

- 1 Press ♠ (Home).
- 2 Press Av to select a device to remove.
- 3 Press © OPTIONS.
 - → The [Remove device] list appears.
- 4 Press **OK** and select **[Remove]** to remove the device.
 - → The selected device is removed from the home menu.

Change picture and sound settings

Change picture and sound settings to suit your preferences. You can apply pre-defined settings or change settings manually.

Use settings assistant

Use the settings assistant to guide you through the best picture and sound settings.

- 1 Press ♠ (Home).
- Press ▲▼◀▶ to select [Setup] > [Picture] > [Settings assistant].
- 3 Press OK.
 - → The [Settings assistant] menu appears. Follow the on-screen instructions to choose your preferred picture settings.

Use smart picture

Use smart picture to apply pre-defined picture settings.

- 1 Press PICTURE.
 - → The [Smart picture] menu appears.
- 2 Press ▲▼ to select one of the following smart picture settings.

- [Personal]Lists customised personal picture settings.
- [Vivid] Maximises picture settings.
- [Standard]Adjusts picture settings to suit most environments and types of video.
- [Movie]Applies picture settings ideally suited for movie viewing.
- [Game] Applies picture settings maximised for fast-moving games.
- **[Energy saving]**Applies low-energy picture settings.
- **3** Press **OK** to confirm your choice.
 - → The selected smart picture setting is applied.

Manually adjust picture settings

- 1 Press **(Home)**.
- 2 Press ▲▼◀▶ to select [Setup] > [Picture].
 - → The [Picture] menu appears.
- 3 Press ▲▼◆▶ to select one of the following picture settings.
- [Smart picture] Accesses pre-defined smart picture settings.
- [Contrast] Adjusts the intensity of bright areas, keeping dark areas unchanged.
- [Brightness] Adjusts the intensity and details of dark areas.
- [Colour]Adjusts colour saturation.
- [Hue]Compensates colour variations in NTSC encoded transmissions.
- [Sharpness] Adjusts the level of sharpness in image details.
- [Noise reduction] Filters and reduces noise in an image.
- [Tint] Adjusts the colour balance in an image.
- [Custom tint] Make a customised tint setting.
- [Pixel Plus HD] Digitally adjusts picture quality to optimal contrast, colour and sharpness.

- [Dynamic contrast] Automatically enhances contrast in an image. A [Medium] setting is recommended.
- [Dynamic backlight] Adjusts the brightness of the TV backlight to match lighting conditions.
- [Colour enhancement] Makes
 colours more vivid and improves the
 resolution of details in bright colours.
 You can switch this feature on or off.
- **[Light sensor]** Dynamically adjusts picture settings to match lighting conditions.
- [PC mode] Adjusts the picture when a PC is connected to the TV via HDMI or DVI.
- [Picture format] Changes the picture format.
- [Horizontal shift] Adjusts the picture horizontally for PC-VGA or YPbPr (EXT2 or EXT3).
- **[Vertical shift]**Adjusts the picture vertically for PC-VGA or YPbPr (EXT2 or EXT3).

Change picture format

- 1 Press FORMAT.
 - → A picture format bar appears.
- 2 Press ▲▼ to select a picture format.
 - → The selected picture format is activated.
- **3** Press **OK** to confirm your choice.

Summary of picture formats

The following picture settings can be configured.



Note

 Depending on the format of the picture source, some picture settings are not available.



[Auto format] (Not for HDMI, YPbPr - EXT2/EXT3 or PC mode.) Enlarges the picture automatically to best fit the screen. The subtitles remain visible.



[Super zoom] (Not for HD and PC mode.) Removes the black bars on the side of 4:3 broadcasts. There is minimal distortion.



[4:3] Shows the classic 4:3 format.



[Subtitle zoom] Displays 4:3 pictures over the full area of the screen, with sub-titles visible. Part of the top of the picture is clipped off.



[Movie exp.14:9](Not for HD and PC mode.) Scales 4:3 format to 14:9.



[Movie exp.16:9](Not for HD and PC mode.) Scales 4:3 format to 16:9.



[Wide screen]Stretches the classic 4:3 format to



[Unscaled] Available in selected models with PC resolution under 1024 x 768, only. Allows maximum sharpness. Some distortion may be present due to the broadcaster's systems. Set your PC resolution to wide screen mode for best

Use smart sound

Use smart sound to apply pre-defined sound settings.

- 1 Press > SOUND.
 - → The [Smart sound] menu appears.
- Press ▲▼ to select one of the following smart sound settings.
 - [Standard]Adjusts sound settings to suit most environments and types of audio
 - [News] Applies sound settings ideally suited for spoken audio, such as the news
 - [Movie] Applies sound settings ideally suited for movies.
 - [Personal] Applies the settings that were customised in the sound menu.
- **3** Press **OK** to confirm your choice.
 - → The selected smart sound setting is applied.

Adjust sound settings

- 1 Press **(Home)**.
- Press ▲▼◀▶ to select [Setup] > [Sound].

 → The [Sound] menu appears.
- 3 Press ▲▼◀▶ to select one of the following sound settings.
 - [Smart sound]Accesses pre-defined smart sound settings.
 - [Bass]Adjusts the bass level.
 - [Treble] Adjusts the treble level.
 - [Volume] Adjusts the volume.
 - [Balance] Adjusts the balance of the right and left speakers to best suit your listening position.
 - [Dual I-II]Selects between audio languages if dual sound is broadcast.
 - [Mono/Stereo]Selects between mono or stereo if stereo is broadcast.
 - [TV speakers]Turns TV speakers on or off. Setting TV speakers to automatic mode turns off the

- speakers when content from an EasyLink-compliant home theatre system is detected.
- [Surround] Enables spatial sound.
- [Headphone volume] Adjusts headphone volume.
- [Auto volume] Automatically reduces sudden volume changes, for example, when switching channels.
 When enabled, this produces a more consistent audio volume.
- [Delta volume] Levels out volume differences between channels or connected devices. Switch to the connected device before you change the delta volume.

Use advanced teletext features

Access the teletext options menu

Most of the advanced teletext features are accessed via the teletext options menu.

- 1 Press MHEG/TELETEXT.
 - → The teletext screen appears.
- 2 Press © OPTIONS.
 - → The teletext options menu appears.
- 3 Press ▲▼ to select one of the following options.
 - [Freeze Page] Freezes the current page.
 - [Dual/Full screen]Enables and disables dual screen teletext, which splits the current channel or source to the left of the screen, with teletext on the right.
 - [Reveal] Hides or reveals hidden information on a page, such as solutions to riddles or puzzles.
 - [Cycle subpage] Cycles through subpages automatically if subpages are available.

- [Language] Switches to a different language group to display a language correctly when that language uses a different character set.
- 4 Press **OK** to confirm your choice.
- 5 Press MHEG/TELETEXT to exit the teletext options menu.

Select teletext subpages

A teletext page can hold several subpages. Subpages are displayed on a bar next to the main page number.

- 1 Press MHEG/TELETEXT.
 - → The teletext screen appears.
- 2 Select a teletext page with subpages.
- Press ▶ to enter a subpage.
 - → The subpage appears.
- **4** Press **◆** to switch between subpages.

Select T.O.P. teletext broadcasts

Table Of Pages (T.O.P.) teletext broadcasts allow you to jump from one subject to another without using page numbers. T.O.P. teletext is not broadcast on all TV channels.

- 1 Press MHEG/TELETEXT.
 - → The teletext screen appears.
- 2 Press © INFO.
 - → The T.O.P. overview appears.
- 3 Press ▲▼◀▶ to select a subject.
- **4** Press **OK** to view the page.

Create and use lists of favourite channels

You can create lists of your preferred TV channels and radio stations so that you can find those channels easily.



You can create and store up to four favourite lists on your TV.

Select a favourite list

- When watching TV, press **OK** to display the channel grid.
- Press © OPTIONS.
 - → The channel options menu appears.
- Press **OK** to select [Show favourite ch.]. → The favourite lists appear.
- Press ▲▼ to select a favourite list.
- Press **OK**.
 - → Only channels in the favourite list appear in the channel grid.

View all channels

You can exit a favourite list, and view all installed channels.

- When watching TV, press OK to display the channel grid.
- Press © OPTIONS.
 - → The channel options menu appears.
- Select [Show favourite ch.] > [All] .
- Press **OK**.
 - → All channels display in the channel grid.



Note

All favourite channels are marked by an asterisk in the channel grid.

Add a channel to a favourite list

- When watching TV, switch to the channel you want to add to a favourite list (see 'Switch channels' on page 8).
- Press ▲▼◀▶ to select a channel to add to a favourite list.
- Press © OPTIONS.
- 14 ΕN

- → The channel options menu appears.
- 4 Press ▲▼ to select [Mark as favourite].
- Press **OK**.
 - → The favourite lists appear.
- 6 Press ▲▼ to select a favourite list to add the channel to.
- Press **OK**.
 - → The channel is added to the favourite list.



When watching TV, press © OPTIONS > [Mark as favourite] to save the current channel into a favourite list.

Remove a channel from a favourite



Note

- Select the favourite list to edit, before removing a channel.
- When watching TV, press OK to display the channel grid.
- Press © OPTIONS.
 - → The channel options menu appears.
- 3 Press OK to enter [Show favourite ch.].
- Press ▲▼ to select a favourite list and press **OK** to confirm the choice.
- 5 Press ▲▼◀▶ to choose the channel that you wish to remove from the list.
- 6 Press © OPTIONS.
- Press ▲▼ to select [Unmark as fav.].
- Press **OK**.
 - → The channel is removed from the favourite list.

Use timers

You can set timers to switch the TV on or switch to standby at a specified time.

Automatically switch the TV to standby (sleeptimer)

Sleeptimer switches the TV to standby after a pre-defined period of time.



- You can always switch off your TV earlier or reset the sleeptimer during the countdown.
- 1 Press ♠ (Home).
- Press ▲▼◆▶ to select [Setup] > [Features] > [Sleeptimer].
 The [Sleeptimer] menu appears.
- 3 Press **◆** to set the sleep time.
 - → The sleeptimer can be up to 180 minutes in steps of five minutes. If set to zero minutes, the sleeptimer is switched off.
- 4 Press **OK** to activate the sleeptimer.
 - → The TV switches to standby after the pre-defined period of time.

Automatically switch the TV on (on timer)

You can switch the TV to a specified channel at a specified time, from standby.

- **1** Press **♠** (**Home**).
- Press ▲▼◆► to select [Setup] > [Features] > [On timer].
- 3 Press ▶ to enter the [On timer] menu.
- 4 Press ▲▼◆▶ to select [Activate] and set a frequency [Daily], [Once], or [Off].
- **5** Press **OK** to confirm.
- 6 Press AV to select [Time] and set the starting time.
- / Press [Done] to confirm.

- 8 Press ATT to select [Programme no.] and set the channel.
- 9 Press OK to confirm.
- **10** Press **♠** (Home) to exit.



- Select [On timer] > [Activate] > [Off] to disable [On timer].
- When [On timer] is [Off], only [Activate] can be selected.
- Set the TV clock before activating [On timer] feature.

Use TV lock

You can prevent your children from watching certain programs or certain channels by locking the TV controls.

Set or change the TV lock code

- 1 Press **(Home)**.
- Press ▲▼◀▶ to select [Setup] > [Features] > [Set code].
- 3 Press ▶ to enter the code setup.
- 4 Enter your code using the Numeric buttons.
- 5 Re-enter the same code in the new dialogue box for confirmation.
 - → If the code is set successfully, the dialogue box will disappear. However, if the code cannot be set, a new dialogue box will prompt you to re-enter the code.
- 6 If you want to change the code, select [Setup] > [Features] > [Change code].
- 7 Enter your current code using the Numeric buttons.
 - → If the code is validated, a new dialogue box will prompt you to enter your new code.

- 8 Enter the new code using the Numeric buttons.
 - → A message appears prompting you to enter the new code again for confirmation.



• If you forget your code, enter '8888' to override any existing codes.

Lock or unlock the TV

Locking the TV prevents your child from accessing all channels and connected devices.

- 1 Press **♠** (Home).
- Press ▲▼◀▶ to select [Setup] > [Features] > [TV lock].
- 3 Press ▶ to enter the [TV lock].
 - → A screen appears prompting you to enter a code.
- 4 Enter your code using **Numeric buttons**.
- 5 Press ▲▼ to select [Lock] or [Unlock].
- 6 Press OK.
 - → All channels and connected devices are locked or unlocked.
- 7 Press **a** (Home) to exit.



Note

 If you select [Lock], you have to enter your code every time you turn on your TV.

Lock or unlock one or more channels

- 1 When watching TV, press **OK** to display the channel grid.
- Press ▲▼◀▶ to select a channel to lock or unlock.
- 3 Press © OPTIONS.
- 4 Press ▲▼ to select [Lock channel] or [Unlock channel].

5 For each selection, press **OK** to lock or unlock the channel.



Note

• Restart the TV for the change to take effect.

Use the TV clock

You can display a clock on the TV screen.

Set the TV clock

- 1 Press **(Home)**.
- 2 Select [Setup] > [Features] > [Clock]

 → The [Clock] menu appears.
- 3 Press ▲▼◀▶ or Numeric buttons to enter time.
- 4 Press [Done] to confirm.
- 5 Press ♠ (Home)to exit.

Use Scenea

Scenea transforms your TV into a personalised photo frame. With Scenea enabled, you can display a single picture or a slideshow of pictures on your TV — perfect for parties or other social gatherings.



Note

- Use Eco mode to save energy when the Scenea wallpaper or a slideshow is displayed on your TV (see 'Use Eco mode with Scenea wallpaper' on page 17).
- Scenea wallpaper is not available in shop mode (see 'Change TV preferences' on page 19) or MHEG mode (UK only).

Display a single picture with Scenea

- 1 While watching TV, press **SCENEA**.
 - → The default Scenea picture is displayed on your TV.

Press any key except ⊕(Standby-On) or □ PICTURE to return to normal TV viewing.

Personalize the Scenea picture

- 1 While the TV is on, connect the USB storage device containing your pictures (JPEG format only) to the USB connector at the side of your TV.
 - → The home menu appears. If the home menu does not appear; press ☆
 (Home).
- 2 Select [Browse USB], then press OK.
 - ightharpoonup The USB content browser appears.
- Press to navigate to the picture of your choice.
- 4 Press SCENEA.
 - Your picture is stored as the default Scenea picture in your TV.
- 5 Disconnect the USB storage device. The device can be disconnected safely while the TV is on.
- **6** Follow the instructions to display your personalised Scenea picture (see 'Display a single picture with Scenea' on page 16).



 If the TV is reset to factory settings, your personalised Scenea picture is removed from the TV. Repeat these instructions to personalise the Scenea picture again.

Display a slideshow of pictures with Scenea

- 1 While the TV is on, connect the USB storage device containing your pictures (JPEG format only) to the USB connector at the side of your TV.
 - \hookrightarrow The home menu appears.
- 2 Press SCENEA.
 - → All pictures in your USB storage device are displayed in a slideshow, starting from the default Scenea picture stored in yourTV.

3 Press any key except ⊕ (Standby-On) or □ PICTURE to return to normal TV viewing.

Use sleeptimer with Scenea wallpaper

By default, your TV displays the Scenea picture or slideshow for 120 minutes before entering standby mode. If sleeptimer is enabled, the Scenea picture or slideshow is displayed for the duration of the sleeptimer (see 'Use timers' on page 15).

Use Eco mode with Scenea wallpaper

Using Eco mode with Scenea saves energy by lowering the TV brightness when a Scenea picture or a slideshow is displayed.

- 1 While a Scenea picture or slideshow is displayed, press \square PICTURE.
 - → The [Eco mode] menu appears.
- 2 Press ◆► to select [On].
- 3 Press OK.
 - → Eco mode with Scenea is enabled.

Watch TV in dual view

You can use the Dual View feature to display the TV channels and the input from a device with VGA or DVI connector (such as a computer or a satellite box) simultaneously on your TV.

- 1 Press **(Home)**.
- Press ▲▼◀▶ to select [Setup] > [Features] > [Dual View].
- 3 Press OK to activate [Dual View].
 - → The main screen displays the input source from DVI or VGA.
 - → The auxiliary screen displays the last viewed TV channel.
- 4 Press ♠ (Home) to exit dual view.

- [Dual View] is available only when the TV is connected to a device, such as a PC, via VGA or DVI connection.
- When in Dual view mode, press ∠ +/- to adjust volume in the main screen and press P +/- or Numeric buttons to switch between the TV channels in the auxiliary screen.

View photos and play music from a USB storage device

Caution

• Philips is not responsible if the USB storage device is not supported nor is it responsible for damage or loss of data from the device.

Your TV is fitted with a USB connector that enables you to view photos or listen to music stored on a USB storage device.

- Turn on the TV.
- Connect the USB device to the USB port on the side of your TV.
 - → The home menu appears.



- Press ▲▼◀▶ to select [Browse USB].
- Press **OK** to confirm.
 - → The USB thumbnail browser appears.



Press **@ GUIDE** to switch between thumbnail and file browsing views.

View photos

- 1 In the USB content browser, select [Picture] and press ▶ to enter.
- 2 Press @ GUIDE to switch between thumbnail and file browsing views.
- Press ▲▼◀▶ to select a photo or a photo
- Press **OK** to view the selected photo in full screen mode.



• When in full screen mode, press **◄▶** to move between photos.

View a slide show of your photos

- When a full screen image of a photo is displayed, press **OK** or ►**II**.
 - → A slide show begins from the selected image.
- 2 Press:
 - OK or ▶II to pause the slide show. → The II icon appears.
 - Press ◀◀ or ▶▶ to move between
 - Press **BACK** or to stop the slide

Change slide show settings

- When viewing a slide show, press 🗉 OPTIONS.
 - → The slide show options menu appears.
- 2 Press ▲▼ to select one of the following.
 - [Start/Stop slide.] Starts or stops a slide show.
 - [Slideshow trans.] Sets the transition from one picture to the next.
 - [Slideshow freq.] Sets the amount of time that a picture is shown.
 - [Rotate image] Rotates a picture.

- [Show info] Displays the picture name, date, size and next picture in the slide show.
- **3** Press **OK** to confirm your setting.



• [Rotate image] and [Show info] appear only when you press OK or ▶II to pause the slideshow.

Listen to music

- 1 In the USB thumbnail browser view, select [MUSIC] and press ▶ to enter.
- 2 Press **©** GUIDE to switch between thumbnail and file browsing views.
- 3 Press ▲▼◀▶ to select music or a music album.
- 4 Press **OK** to play the selected music.

Music settings

When listening to music, press © OPTIONS to access one of the following music settings.

- · [Repeat]
 - [Play once]
 - [Repeat]
 - [Shuffle]
- [Show info]

Disconnect a USB storage device



- Follow this procedure to avoid damage to your USB storage device.
- 1 Press SACK to exit the USB browser.
- Wait for five seconds before you disconnect the USB storage device.

Update the TV software

Philips continuously tries to improve its products and we recommend that you update the TV software when updates are available. Check www.philips.com/support for availability.

Check the current software version

- 1 Press **♠** (Home).
- Press ▲▼◀▶ to select [Setup] >
 [Software update] > [Current software].
 - → The TV displays the current software information.

Change TV preferences

- 1 Press ♠ (Home).
- 2 Select [Setup] > [Installation] > [Preferences].
- 3 Press OK or to enter [Preferences].
 - **[Location]**Optimises TV settings for your location home or shop.
 - **[Volume bar]**Displays the volume bar when adjusting the volume.
 - [EasyLink] Enables one-touch play and one-touch standby between EasyLink-compliant devices.
 - [Pixel Plus Link]Overrides the settings of connected devices and uses the settings of the TV. (Available only when [EasyLink] > [On] is selected).
 - **[E-sticker]**For shop mode only. Sets the location of the e-sticker.
- 4 Press ▲▼◀▶ to select your preference.
- Press OK.
- Press 🏚 (Home) to exit.

Access decoder channel

You can map channels provided through a decoder or descrambler to your TV channel selection. In this way, you can select these channels by using the RC of your TV. The decoder or a descrambler must be connected to EXT1.

Set decoder channel

Map channels from a decoder or descrambler

- 1 Press **(Home)**.
- Select [Setup] > [Installation] > [Decoder].
- 3 Press ▶ to enter [Decoder].
- 4 Press ► to enter [Channel].
- Press A to select channel number to map to the decoder/descrambler channel.
- 6 Press OK.
- 7 Press ▲▼◆► to select and enter [Status].
- 8 Press ▲▼ to select the connector used by the decoder/descrambler ([None] or [EXT 1]).
- 9 Press OK.
- **10** Press **♠** (Home) to exit.



Vote

• Select **[None]** if you do not want to map to the decoder/descrambler channel.

Start a TV demo

- 1 Press **DEMO** on the remote control.
- Press ▲▼ to select a demo and press OK to view it.
- 3 Press DEMO to exit.

Reset the TV to factory settings

You can restore the default picture and sound settings of your TV. Channel installation settings remain the same.

- 1 Press **(Home)**.
- 2 Select [Setup] > [Installation] > [Factory settings].
- 3 Press OK or ▶ to enter the [Factory settings] menu.
 - → [Reset] is highlighted.
- 4 Press **OK** to reset to factory settings.
- 5 Press ♠ (Home) to exit.

6 Install channels

The first time you set up your TV, you are prompted to select a menu language and to install TV and digital radio channels (if available). This chapter provides instructions on how to re-install and fine tune channels.


Automatically install channels

This section describes how to search and store channels automatically.

Step 1 Select your menu language



- 1 Press ♠ (Home).
- Press ▲▼◀▶ to select [Setup] > [Installation] > [Language] > [Menu language].
- 3 Press ▶ to enter [Menu language].
- 4 Press ▲▼ to select a language setting and then OK to confirm.

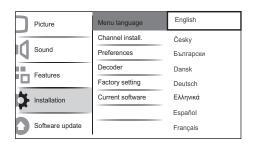


5 Press **♠** (Home) to exit.

Step 2 Install Channels

Select your country for proper channel installation.

- **1** Press **★** (**Home**).
- Press ▲▼◀▶ to select [Setup] > [Installation] > [Channel install.] > [Channel assistant].

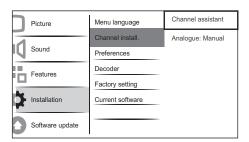

3 Press ▲▼ to select your country and then▶ to go to the next step.



4 Select [Start] and press OK to re-install channels.




- → As the system searches for channels, you have the option to [Stop] the process.
- To stop searching, select [Stop] and press OK.
 - → A dialogue box appears asking you if you really want to [Stop] or [Continue] with the process.

- Press **◆** to select **[Stop]** or **[Continue]**.
- Press **OK** to confirm your choice.
- 8 When done, press ♠ (Home) to exit.

Manually install channels

This section describes how to search and store analogue TV channels manually.

- Press **(Home)**.
- Press ▲▼◀▶ to select [Setup] > [Installation] > [Channel install.] > [Analogue: Manual].
 - → The [Analogue: Manual] menu appears.

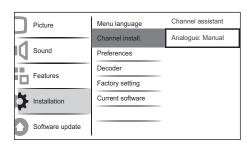

- Press ▲▼ to select the item you want to adjust.
 - [System]
 - [Search]
 - [Fine-tune]
 - [Store cur. chan.]
 - [Store new channel]
 - [Skip channel]

Step 1 Select your system



- Skip this step if your system settings are correct.
- Press **(Home)**.

- 2 Press ▲▼◀▶ to select [Setup] > [Installation] > [Channel install.] > [Analogue: Manual]. → The [Analogue: Manual] menu appears.
- 3 Press ▲▼◀▶ to select and enter [System].
- Press ▲▼ to select your country or region.
- 5 Press **OK** to confirm.
- Press **(Home)** to exit.

Step 2 Search and store new TV channels

- 1 Press **(Home)**.
- Press ▲▼◀▶ to select [Setup] > [Installation] > [Channel install.] > [Analogue: Manual].
 - → The [Analogue: Manual] menu appears.
- 3 Press ▲▼◀▶ to select and enter [Search].
- 4 Press ▲▼ or use Numeric buttons to manually enter the three digit frequency.
- Press **OK** to begin search.
 - → If a channel is unavailable at the selected frequency, the system searches for the next available channel.
- 6 Press SACK when the new channel is
- 7 Press ▲▼ to select [Store new channel] to store the new channel under a new channel number.
- 8 Press ▶ to enter [Store new channel].
- Press **◆▶** to select **[Yes]** and press **OK** to store the new channel.
- **10** Press **♠** (Home) to exit.

Step 3 Fine-tune analogue channels

- 1 Press ♠ (Home).
- 2 Press ▲▼◀▶ to select [Setup] > [Installation] > [Channel install.] > [Analogue: Manual].
 - → The [Analogue: Manual] menu appears.

- 3 Press ▲▼◆► to select and enter [Fine-tune].
- 4 Press ▲▼ to adjust frequency.
- 5 Press OK when done.
- 6 Press ▲▼ to select [Store cur. chan.] to store channel number.
- 7 Press ▶ to enter [Store cur. chan.].
- 8 Press ◆► to select [Yes] and press OK to store current channel.
- 9 Press **a** (Home) to exit.

Step 4 Skip channels

- 1 Press ♠ (Home).
- Press ▲▼◀▶ to select [Setup] >
 [Installation] > [Channel install.] >
 [Analogue: Manual].
 - → The [Analogue: Manual] menu appears.
- 3 Press ▲▼◀▶ to select and enter [Skip channel].
- 4 Press ◆► to select [Yes] and press OK to skip current channel.
 - The selected channel is skipped when you press P +/- on your remote control or view the channel grid.
- 5 Press ♠ (Home) to exit.



 You can restore a skipped channel to your channel listing (see 'Step 2 Search and store new TV channels' on page 22).

Rename channels

Channels can be renamed so that a name of your choice appears whenever the channel is selected.

- 1 When watching TV, press **OK** to display the channel grid .
- 2 Select the channel you want to rename.

- 3 Press © OPTIONS.
 - → The channel options menu appears.
- 4 Press ▲▼◀▶ to select and enter [Rename chan.].
 - → A text input box appears.
- 5 Press ▲▼◀▶ to select characters.
- 6 Press OK to confirm each of the characters.



- Rename channels the length of the name is limited to six characters.
- Use [Aa] to change upper-case letter to lowercase letter and vice versa.

Rearrange channels

After you install channels, you can rearrange the order in which they appear.

- 1 When watching TV, press **OK** to display the channel grid .
- 2 Press © OPTIONS.
 - → The channel options menu appears.
- 3 Press ▲▼◆▶ to select and enter [Reorder].
- 4 Select the channel you want to reorder and press OK.
- Press ▲▼◀▶ to select the new position for the channel.
- 6 Press **OK** to confirm the new position.
- 7 Press © OPTIONS.
 - → [Done reordering] appears.
- **8** Press **OK** to finish reordering.

7 Connect devices


This section describes how to connect various devices with different connectors and supplements examples provided in the Quick Start.



Note


 Different types of connectors may be used to connect a device to your TV, depending on availability and your needs.

Back connectors for 19-22 inch TV

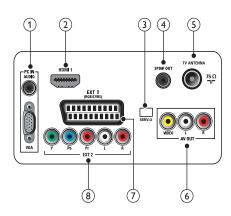


1) PC IN (VGA and AUDIO IN)

Audio and video input from a computer.

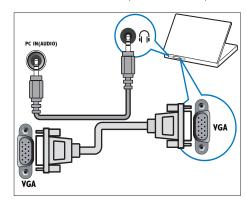

(2) HDMI 1

Digital audio and video input from highdefinition digital devices such as Blu-ray players.

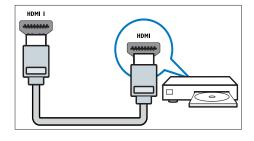


3 SERV. U

For use by service personnel only.


(4) SPDIF OUT

Digital audio output to home theatres and other digital audio systems.

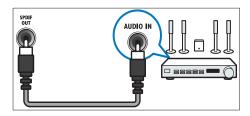


(5) TV ANTENNA

Signal input from an antenna, cable or satellite.

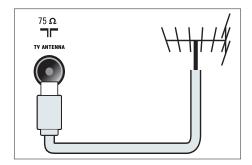


6 AV OUT (VIDEO OUT and AUDIO OUT L/R)

Audio and video output to analogue devices such as another TV or a recording device.

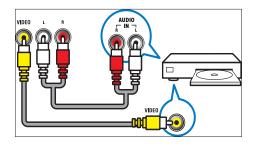


7 EXT 1 (RGB and CVBS)

Analogue audio and video input from analogue or digital devices such as DVD players or game consoles.

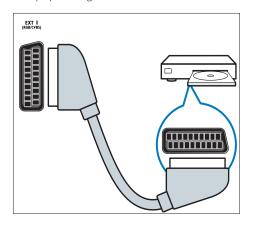


(8) EXT 2 (Y Pb Pr and AUDIO L/R)

Analogue audio and video input from analogue or digital devices such as DVD players or game consoles.

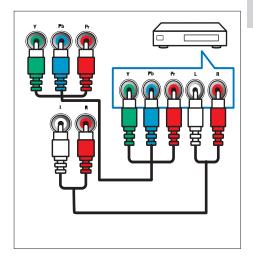


Back connectors for 26 inch and larger TV

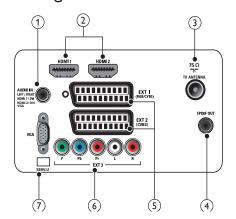


1) PC IN (VGA and AUDIO IN)

Audio and video input from a computer.

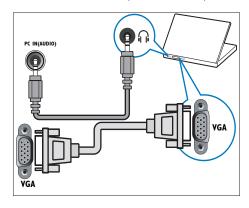


2 HDMI 1/2

Digital audio and video input from high-definition digital devices such as Blu-ray players.

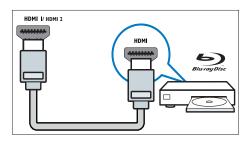


(3) TV ANTENNA

Signal input from an antenna, cable or satellite.

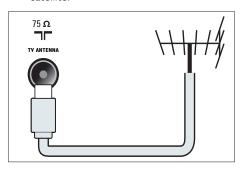


(4) SPDIF OUT

Digital audio output to home theatres and other digital audio systems.

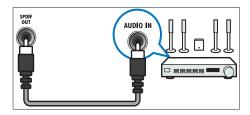


(5) EXT 1 (RGB and CVBS) / CVBS (EXT 2)

Analogue audio and video input from analogue or digital devices such as DVD players or game consoles. EXT2 supports S-Video.

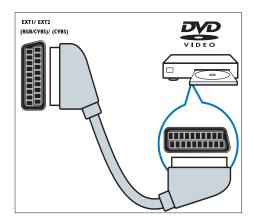

6 EXT 3 (Y Pb Pr and AUDIO L/R)


Analogue audio and video input from analogue or digital devices such as DVD players or game consoles.

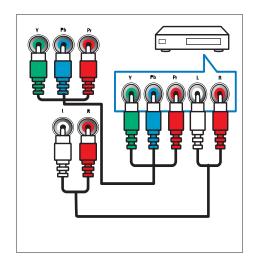

7 SERV. U


For use by service personnel only.

Side connectors

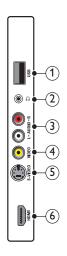

(1) USB

Data input from USB storage devices.

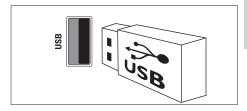


2 ∩

Stereo audio output to headphones or earphones.


(3) AUDIO L/R

Audio input from analogue devices connected to **VIDEO**.

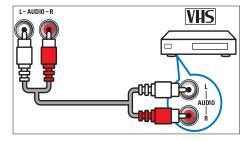


(4) VIDEO

Composite video input from analogue devices such as VCRs.

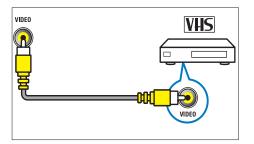


(5) S-VIDEO

S-Video (side) to be used with Audio L/R connectors for camcorder, game console, etc. When you use the S-Video (side) for video signals, do not use the Composite video (side) input for video signals.

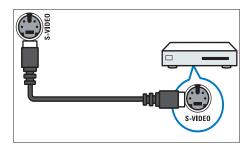

(6) HDMI

Digital audio and video input from high-definition digital devices such as Blu-ray players.

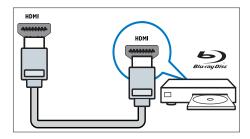

Connect a computer

Before you connect a computer to the TV

- Set the screen refresh rate on your computer to 60Hz.
- Select a supported screen resolution on your computer.

Connect a computer with one of the following connectors:




Note


• Connections via DVI or VGA require an additional audio cable.

28 **EN**


HDMI cable

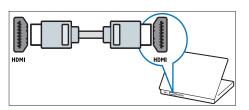


DVI-HDMI cable

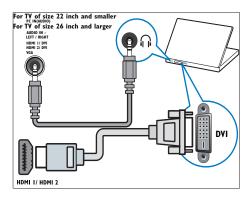

HDMI cable and HDMI-DVI adaptor

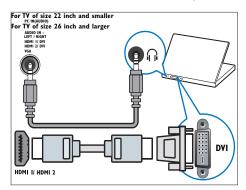

· VGA cable

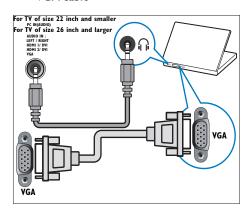

Use Philips EasyLink

YourTV supports Philips EasyLink, which enables one-touch play and one-touch standby between EasyLink-compliant devices.



Vote

 Compliant devices must be connected to your TV via HDMI.

Enable or disable EasyLink



Note

- Do not enable Philips EasyLink if you do not intend to use it.
- 1 Press MENU.
- 2 Select [Installation] > [Preferences] > [EasyLink].
- 3 Select [On] or [Off].

Use one-touch play


- 1 After enabling EasyLink, press play on your device.
 - → The TV automatically switches to the correct source.

Use one-touch standby

- 1 Press and hold **Standby** on the TV's or device's remote control for at least three seconds.
 - → The TV and all connected HDMI devices switch to standby.

Use a Kensington lock

There is a Kensington security slot at the back of the TV. Prevent theft by looping a Kensington lock between the slot and a permanent object, such as a heavy table.

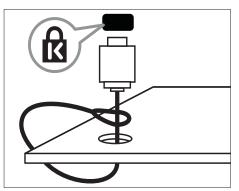

Product 8 information

Product information is subject to change without notice. For detailed product information, go to www.philips.com/support.

Supported display resolutions

Computer formats

- Resolution refresh rate:
 - 640 x 480 60Hz
 - 800 × 600 60Hz
 - 1024 × 768 60Hz
 - 1280 × 1024 60 Hz
 - 1360 x 768 60Hz
 - 1440 × 900 60Hz
 - 1680 x 1050 60Hz
 - Via HDMI/DVI input

Video formats

- Resolution refresh rate:
 - 480i 60Hz
 - 480p 60Hz
 - 576i 50Hz
 - 576p 50Hz
 - 720p 50Hz, 60Hz
 - 1080i 50Hz, 60Hz
 - 1080p 24Hz, 25Hz, 30Hz, 50Hz, 60Hz.

Multimedia

- Supported storage device: USB (Only FAT or FAT 32 USB storage devices are supported)
- Supported multimedia file formats:
 - Images: JPEG
 - Audio: MP3



Multimedia file names must not exceed 32

Tuner/Reception/ Transmission

- Aerial input: 75ohm coaxial (IEC75)
- TV system: PAL I, B/G, D/K; SECAM B/G, D/K, L/L'
- Video playback: NTSC, SECAM, PAL
- Tuner Bands: Hyperband, S-channel, UHF,

Remote control

- Type: PF02E09B, PF02E09BW (22PFL5614/60)
- Batteries: 2 x AAA (LR03 type)

Power

- Mains power: 220-240V, 50Hz
- Standby power: <0.15W
- Ambient temperature: 5 to 40 degrees

Supported TV mounts

To mount the TV, purchase a Philips TV mount or a VESA-compatible TV mount. To prevent damage to cables and connectors, be sure to leave a clearance of at least 2.2 inches or 5.5cm from the back of the TV.



Warning

• Follow all instructions provided with the TV mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper TV mounting that results in accident, injury or damage.

TV screen	Required	Required	
size (inches)	pitch (mm)	mounting bolts	
19	75×75	4 × M4	
22	100 × 100	4 × M4	
26	200 × 100	6 x M4	
32	200 × 200	4 x M6	
42	400 × 400	4 x M6	

9 Troubleshooting

This section describes commonly encountered issues and accompanying solutions.

General TV issues

The TV does not switch on:

- Disconnect the power cable from the power outlet. Wait for one minute then reconnect it.
- Check that the power cable is securely connected.

The remote control is not working properly:

- Check that the remote control batteries are correctly inserted according to the +/- orientation.
- Replace the remote control batteries if they are flat or weak.
- Clean the remote control and TV sensor lens.

The standby light on the TV blinks red:

 Disconnect the power cable from the power outlet. Wait until the TV cools down before reconnecting the power cable. If the blinking reoccurs, contact Philips Consumer Care.

You forgot the code to unlock the TV lock feature

• Enter '8888'.

The TV menu is in the wrong language.

Change the TV menu to your preferred language.

When turning the TV on/off/to standby, you hear a creaking sound from the TV chassis:

 No action is required. The creaking sound is normal expansion and contraction of the TV as it cools down and warms up. This does not impact performance.

TV channel issues

Previously installed channels do not appear in the channel list:

Check that the correct channel list is selected.

No digital channels were found during the installation:

 Check that the TV supports DVB-T or DVB-C in your country. See the listed countries on the back of the TV.

Picture issues

The TV is on, but there is no picture:

- Check that the antenna is properly connected to the TV.
- Check that the correct device is selected as the TV source.

There is sound but no picture:

• Check that the picture settings are correctly set.

There is poor TV reception from an antenna connection:

- Check that the antenna is properly connected to the TV.
- Loudspeakers, unearthed audio devices, neon lights, high buildings and other large objects can influence reception quality.
 If possible, try to improve the reception quality by changing the antenna direction or moving devices away from the TV.
- If reception on only one channel is poor, fine tune this channel.

There is poor picture quality from connected devices:

- Check that the devices are connected properly.
- Check that the picture settings are correctly set.

The TV did not save your picture settings:

 Check that the TV location is set to the home setting. This mode offers you the flexibility to change and save settings. The picture does not fit the screen; it is too big or too small:

- Try using a different picture format.
- The picture position is incorrect:
- Picture signals from some devices may not fit the screen correctly. Check the signal output of the device.

Sound issues

There is a picture but sound quality is poor:



Vote

- If no audio signal is detected, the TV automatically switches the audio output off — this does not indicate malfunction.
- Check that all cables are properly connected
- Check that the volume is not set to 0.
- Check that the sound is not muted.

There is a picture but the sound quality is poor:

 Check that the sound settings are correctly set.

There is a picture but sound comes from one speaker only:

Verify that sound balance is set to the centre.

HDMI connection issues

There are problems with HDMI devices:

- Note that HDCP support can delay the time taken for a TV to display content from a HDMI device.
- If the TV does not recognize the HDMI device and no picture is displayed, try switching the source from one device to another and back again.
- If there are intermittent sound disruptions, check that output settings from the HDMI device are correct.

 If a HDMI-to-DVI adaptor or HDMI to DVI cable is used, check that an additional audio cable is connected to AUDIO L/R or AUDIO IN (mini-jack only).

Computer connection issues

The computer display on the TV is not stable:

- Check that a supported resolution and refresh rate is selected on the computer.
- Set the TV picture format to unscaled.

Contact us

If you cannot resolve your problem, refer to the FAQs for this product at www.philips. com/support.

If the problem remains unresolved, contact Philips Consumer Care in your country as listed in the Addendum.



Warning

 Do not attempt to repair the product yourself. This may cause severe injury, irreparable damage to your product or void your warranty.



Note

 Make a note of your TV model and serial number before you contact Philips. These numbers are printed on the back of the TV and on the packaging.

10 Index

A	
analogue channel	
fine-tune	22
B	
bracket	30
С	
Channel list	
favourite	13
troubleshooting	32
Channels	
favourite list	13
install	
automatic	21
manual	22
rename	23
reorder	23
Clock	16
computer format	
technical specifications	30
Connections	
HDMI	
troubleshooting	33
mains cord	24
overview	24
technical specifications	30
troubleshooting	33
connectors	
overview	24
D	
demo	20
devices	20
add to home menu	10
connect	24
watch	9
display	,
resolution	30
Dual view	17
	17

E			
EasyLink			
disable	29		
enable	29		
one-touch play			
one-touch standby	29		
environmental care			
F			
factory settings	20		
favourite list	۷.		
select	14		
set up	1:		
Н			
HDMI cable			
troubleshooting	3.		
I			
install channels			
automatic	2		
manual	22		
K			
Kensington lock	29		
<u> </u>			
location	19		
lock	1.		
Kensington	29		
TV lock/child lock	1.		
1 V lock/clind lock	1.		
M			
menu			
main menu	10		
teletext	1.		
Multimedia			
technical specifications	30		
music	4.0		
USB	19		


0		pc connection
One-touch play	29	preferences
One-touch standby	29	screen care
•		software
P	_	standby
PC		switch chanr
	20	switch off
pc connection	28	switch on
picture format	11	troubleshoo
picture format change	11	tuner techni
troubleshooting	32	wall mount
Picture settings	10	TV lock/child l
PIN code	15	lock channel
		lock connect
R		PIN code
reception	32	
remote control		U
overview	6	USB
technical specifications	30	listen to mus
·		view photos
S		
settings		V
sound	12	Video format
settings assistant	10	video forma
Smart settings	10, 12	volume
software		adjust
version	19	,
sound settings	12	\^/
-		VV
T		Wallpaper
Table of Pages	13	
technical specifications	30	
Teletext		
features	13	
subpages	13	
table of pages	13	
timer		
on timer	15	
Sleep timer	15	
standby	15	
troubleshooting	32	
TV	- -	
adjust volume	9	
as PC monitor	28	
menu	10	

pc connection	28	
preferences	19	
screen care	5	
software	19	
standby	8	
switch channels	8	
switch off	8	
switch on	8	
	o 32	
troubleshooting		
tuner technical specifications	30	
wall mount	30	
TV lock/child lock		
lock channels	16	
lock connected devices	16	
PIN code	15	
U		
JSB		
listen to music	19	
view photos	18	
view priotos	10	
V		
· Video format		
video format technical specifications	30	
volume	50	
adjust	9	
aujust	/	
W		
W Wallpaper	16	
W Wallpaper	16	

Information about how to re-tune your TV during the digital TV switchover.

Keep this user manual safe – you'll need it.



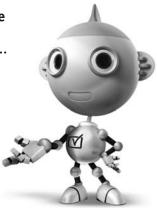

Television in the UK is going digital, bringing us all more choice and new services. Starting in late 2007 and ending in 2012, television services in the UK will go completely digital, TV region by TV region.

Please see the next page to find out when your area switches to digital.

Digital UK is the independent, non-profit organisation leading the process of digital TV switchover in the UK. Digital UK provides impartial information on what people need to do to prepare for the move to digital, and when they need to do it.

How the switchover affects your TV equipment:

Your new TV has a digital tuner built in, which means it is ready to receive the Freeview signal by simply plugging it into your aerial socket (check if you can get digital TV through your aerial now, or whether you'll have to wait until switchover, at www.digitaluk.co.uk).

When the TV switchover happens in your area, there are at least two occasions when you will need to re-tune your TV in order to continue receiving your existing TV channels, and also to pick up new ones.

get set for digital ✓

Digital UK, the body leading the digital TV switchover, will advise you when you need to re-tune during the switchover.

If you choose to connect your TV to satellite or cable with a digital box then it will not be affected by switchover, and you won't need to re-tune.


If you have any questions, please contact your equipment supplier or call Digital UK on ... 0845 6 50 50 50 or visit www.digitaluk.co.uk

How to re-tune:

To find out how to re-tune your TV, check this user manual for details.
Go to section 6 Install channels.

If you do not re-tune your channels when advised to do so by Digital UK, you may lose some or all of your channels until you do re-tune. You should re-tune your TV every few months to check for any new channels.

If you are missing any channels, it may be that they are not available in your area, or that your aerial needs upgrading.

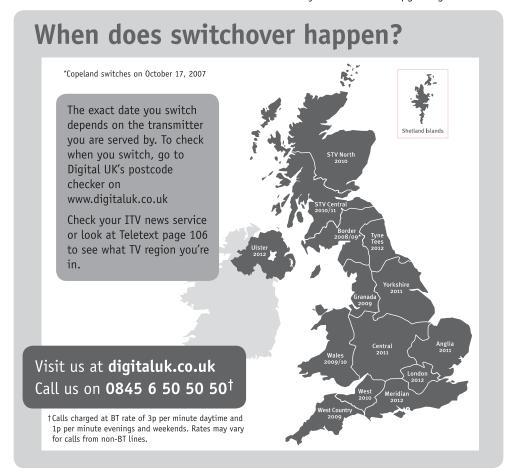



	164			

© 2009 Koninklijke Philips Electronics N.V.

All rights reserved.

Document order number: Q41G4201813 5C