



C115 User Guide

User Guide

Welcome

Thank you for purchasing the Micromax C115 CDMA phone.
Please read this manual carefully to make the full use of its features.

User manual

Table of Contents

1	Introduction	7
1.1	Key and Parts	7
1.2	Keys and Functions.....	8
1.3	Icons and Indicators	11
2	Getting Started.....	12
2.1	Remove/Insert Battery	12
2.2	Insert UIM Card	13
2.3	Charge the Battery	14
2.3.1	Charging via Power Socket.....	15
2.3.2	Charge via USB Cable	16
2.4	To switch ON and OFF.....	17
3	Phonebook.....	18
3.1	To add a New Contact.....	18

User manual

3.2 Search.....	18
3.3 Caller groups.....	19
3.4 Copy all.....	19
3.5 Delete a contact.....	19
3.6 Speed dialing.....	19
3.7 Memory Status.....	20
3.8 Owner number.....	20
4 Calling.....	21
4.1 Call Waiting.....	21
4.2 Call Forwarding.....	21
5 Call logs.....	22
6 Messages.....	23
6.1 SMS Inbox.....	23
6.2 Write SMS.....	23

User manual

6.3 Outbox.....	24
6.4 Drafts.....	24
6.5 SMS Settings.....	25
6.6 Delete all SMS.....	25
6.7 Voicemail.....	26
7 Settings.....	26
7.1 Customized Phone & Call Settings.....	26
7.2 User Profile Setup.....	28
7.3 Security Settings.....	29
8 FM Radio.....	30
8.1 FM Radio.....	30
9 Games.....	31
10 Organizer.....	31
11 Modem.....	32

User manual

12	Health and Safety Information.....	33
13	Taking Care of Your Device	36
14	After Services.....	Error! Bookmark not defined

1 Introduction

1.1 Key and Parts



1.2 Keys and Functions

Some of the important keys and their functions are listed here to help you use the phone better

SN	Keys	Function Description
1	Left soft key (LSK)	Performs functions in lower left display; Enter main menu in standby mode.
2	Right soft key (RSK)	Performs functions in lower right display; Enter Contacts interface in standby mode.
3	Send key (Snd)	In the standby screen press the Snd key to enter the Dialed calls; in dialing mode, press Snd key to make the call; answering incoming calls.
4	End key	Reject an incoming call; go back to standby screen; long press to switch on/off the phone.

















User manual

5	Navigation keys	Left navigation key (L): moving to the left; in the standby screen, press it to enter Calendar.
		Right navigation key (R): moving to the right; in standby screen, press to enter Shortcuts.
		Up navigation key (U): moving upward; short press during a call to turn up the volume; in the standby screen, press it to enter Messages.
		Down navigation key (D): moving downward; short press during a call to turn down the volume; in the standby screen, press it to enter Phonebook.
6	OK key	OK; long press in the standby screen to open/close torch
7	Keypad	Input; in the main menu screen short

User manual

		press the number key to enter corresponding menu; in standby screen, long press 1-9 key to speed dial a contact(need setting); press LSK+ * key to lock/unlock the keypad; long press # key to activate silent mode; in editing mode, short press # key to switch input method; long press 0 key in dial screen to input 0, +
8	Receiver	Listen to the voice of the other side when calling.
9	Microphone	Microphone
10	LED Flashlight	In standby screen, long press OK key to turn on/off Flashlight.
11	Speaker	Speaker

1.3 Icons and Indicators

Icons	Indicates	Icons	Indicates
	Signal level indicator		Voice Calling icon
	New message		Alarm icon
	Full messages icon		Call firewall icon
	Normal Mode		Message firewall icon
	Meeting Mode		Call and Message firewall icon
	Outdoor Mode		Keypad lock icon
	Silent Mode		Phone lock icon
	Battery level indicator		Headset icon

2 Getting Started

2.1 Remove/Insert Battery

You may need to remove the battery to insert UIM cards, or for replacing the battery.

To remove the battery:

1. Invert the back of the mobile phone upward and take off the rear cover according to the figure below.



2. Take out the battery as shown in the following figure.



3. Finally place back the rear cover of the mobile phone after removing/inserting the battery as required.


Note: *When inserting the battery, ensure that the metal teeth at the top of the battery comes in contact with the corresponding metal slots of the mobile phone. After this, press the battery down to insert the battery in place.*

2.2 Insert UIM Card

The C110 is a CDMA mobile phone. To insert UIM card:

User manual

1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the UIM card correctly in the card slot as shown below.

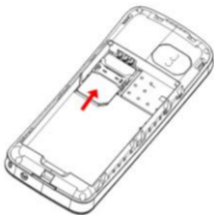

3. Finally, insert the battery and replace the rear cover of the mobile phone.

2.3 Charge the Battery

You can charge your battery via the charger or the USB cable

User manual

supplied with this phone.

2.3.1 Charging via Power Socket

1. Connect the charger to the charger jack on the phone.
2. Connect the charger to a power socket. The charging starts, with the charging icon displayed in an animated state.



3. When the charging icon becomes static, it indicates that the battery is full.
4. Disconnect the charger from the power socket and the

phone after charging.

2.3.2 Charge via USB Cable

1. Connect the USB cable to the charger socket on the phone.



2. Next, connect the USB jack of the cable with the PC or laptop. The charging starts, with the charging icon in an animated state.
3. Disconnect the USB cable from the PC/Laptop and the phone after charging.

***Note:** Slight heating during charging is normal
When the charging icon becomes static, it indicates
that the battery is full*

2.4 To switch ON and OFF

To switch ON: Long press **End key** when the phone is in the OFF mode.

If the phone lock has been activated, you need to enter the 4-digit password to unlock. (The preset unlock code is 0000.)

If the UIM card has been inserted in the phone, and the related PIN code protection is activated, you need to enter the 4-8 digit password to unlock.

Warning: If you enter three wrong PIN codes in a row, the UIM card will be locked and you need to enter the PUK code to unlock. Both the PIN code and PUK code are provided by the network operator.

To switch ON/OFF: In the standby mode, long press **End key**.

3 Phonebook

You can store names and phone numbers in the memory of the phone or UIM card.

Menu > Phonebook

3.1 To add a New Contact

In idle, enter phone numbers.

Options > Save > Select the location for saving

Or: **Menu > Phonebook > Add new contact >** Select the location for saving

You can edit the name, mobile phone number, home phone number, company name, e-mail address, office phone number, fax number. (The number of columns may be set by you in the **[Fields]** in the **[Settings]**).

3.2 Search

Menu > Phonebook > Options>Search

Search for contacts in the phonebook list

3.3 Caller groups

Menu > Phonebook > Caller groups

Add contacts in the caller group list- Family, Friends, Colleagues, VIP & others.

3.4 Copy all

Menu>Phonebook>Options>Copy all

Allows you to copy the number from phone memory to UIM memory & vice-versa

3.5 Delete a contact

Menu>Phonebook>Options>Delete

Allows you to delete a contact

3.6 Speed dialing

Menu>Phonebook>Options>Speed dialing

Add numbers under the speed dial list & make calls quickly by just pressing on the assigned number key for a contact.

3.7 Memory Status

Menu > Phonebook > Options>Memory status

Allows you to view the used & available memory status of your phone.

3.8 Owner number

Menu > Phonebook > Options>Owner number

Allows you to view your own number

4 Calling

4.1 Call Waiting

Menu > Settings > Call settings > Call Waiting

This function allows you to put the current call on hold and then answer a second one.

If, during a call, a new call comes in, you will hear a special alert sound and the screen will display the number of the new incoming call, which indicates that a third-party call is coming in and waiting for to answer.

4.2 Call Forwarding

Menu > Settings > Call settings > Call forward

With the Call forwarding function (needs network support), you may forward incoming calls to another mobile phone or a direct line telephone, but not to any extensions of a fixed telephone.

The function needs the support from the local network. In some districts, you can use the function only after you

apply to the local network operator.

5 Call logs

**Missed calls/ received calls /dialed calls/Call
Duration/Delet Calls**

Menu>Call logs

You may select the number from missed/outgoing, incoming or rejected calls and choose options to view the following:

- **Save:** Allows you to save the contact number
- **Add to blacklist:** Allows you to add a number to the blacklist & avoid any conversation with that particular contact.
- **Send Message:** Send an SMS on the number
- **Delete:** Delete the entry.

6 Messages

6.1 SMS Inbox

Menu > Messages > Inbox

To read a message, move to the entry and press **OK**

When reading a SMS, you can select **Options >**

- **Call back:** Allows you to call in the number from which the SMS was received.
- **Forward:** Forward the entry to others.
- **Delete:** Delete the message
- **Use number:** Allows you to save the number from which the SMS was received.
- **Copy to R-UIM:** Allows you to copy the number to the memory card.

6.2 Write SMS

Menu > Messages > New

Allows you to draft new messages & use functions like -

- **Insert symbol:** Allows you to insert symbols
- **Insert smiley-** Allows you insert smiley's in your message
- **Templates-** Insert from a list of available templates into your message
- **Insert phonebook-** Insert a contact number from the phonebook in your message
- **Save to drafts-** Save the message to the drafts folder.

6.3 Outbox

Menu>Messages>Outbox

View all the sent messages send in the outbox folder.

6.4 Drafts

Menu > Messages > Drafts

This allows you to read the messages that you choose to saves.

- **Forward:** Forward the entry to others.
- **Delete:** Delete the message stored in outbox

- **Message locked:** If you choose to lock the message, you will be unable to delete the message.
- **Choose delete:** Allows you to delete messages

6.5 SMS Settings

Menu > Messages > SMS Settings

Edit and change the settings under SMS settings for the following:

- **Priority set-** Set the priority of the message as urgent or normal
- **Storage-** Choose the storage location of the phone.
- **Save sent message-** Save the sent message
- **Memory status-** View the used & available memory status

6.6 Delete all SMS

Menu > Messages > Delete all SMS

Allows you to delete all messages

6.7 Voicemail

Menu > Messages > Voicemail

Set the voice mail numbers. When connecting, you can call and listen to the voice mail

7 Settings

7.1 Customized Phone & Call Settings

Functions	Description
Select language	Menu > Settings > Phone settings> Language
Time format	Menu > Settings > Phone settings > Time format
Auto keypad lock	Menu > Settings > Phone settings> Auto keypad lock Lock/Unlock the keypad by pressing the 'left soft key' & * key

User manual

Display settings	Menu > Settings > Display settings Modify settings for Wallpaper/Main menu style/Backlight time/Brightness/Banner
Set Shortcuts	Menu > Settings > Shortcuts Allows you to set shortcut functions for various applications in your phone
Torch	Menu > Settings > Torch To switch ON/OFF the torch function long press the 'center key'
Call waiting	Menu > Call settings > Call waiting
Call forward	Menu > Call settings > Call forward

User manual

Reset	Menu > Settings > Reset Tip: You need to enter the phone password when you want to restore factory default. The preset phone password is 0000 . Please bear your password in mind. In case you forget it, contact the local dealer or an authorized service center.
--------------	---

7.2 User Profile Setup

Menu> User profiles>Options>Activate

Set the following:

- **Tone settings-** Allows you to set the Ring tone for incoming calls, Message tone & aArm tone.
- **Volume settings:** Set the level of the volume for Ringtone/Voice volume & Key tone.
- **Alert type settings:** Set the alert type settings for Alert

7.3 Security Settings

To access this folder please put in the default password '0000'

Functions	Description
R-UIM lock	Menu > Settings > R-UIM lock Allows you to activate UIM PIN lock, change password or de-activate UIM
Phone lock	Menu > Settings> Security > Phone lock The preset password is 0000
Data password	Menu > Settings> Security > Data password To activate the data password put in the default password 0000. This feature helps you to password protect your important folders in the phone.
Call firewalls	Menu > Settings > Security> Call firewall
Message firewall	Menu > Settings > Security> Message firewall

User manual

Storage erase	Menu > Settings > Security> Storage erase Allows you to delete all information from the memory card, phone or both together.
------------------	---

8 FM Radio

8.1 FM Radio

Menu > FM radio

Tune in to your favourite radio stations by using the right & left navigation keys. Once selected choose to save the channel

- Surf the stations step by step by pressing the Navigation Key Up/Down
- Search the station left and right by pressing Navigation Key Left/Right
- for decreasing the volume press the '*' key for increasing the volume press the '# ' key.

9 Games

Menu>Games

Your phone has many preloaded exciting games in it. Choose the game you wish to play and cross various levels to set the ultimate highest score.

10 Organizer

Functions	Description
Alarm	Menu > Organizer > Alarm
View the calendar	Menu > Organizer > Calendar
Memo	Menu > Organizer > Memo
Calculator	Menu > Organize r> Calculator

User manual

Auto power off	Menu > Organize r> Auto power off
World clock	Menu > Organizer > World clock
Stopwatch	Menu > Organizer > Stopwatch
Timer	Menu > Organizer> Timer
Currency converter	Menu > Organizer> Currency converter

11 Modem

Follow the steps below to successfully install the modem in your phone-

1. Install the driver of the Phone.
2. After installing the drivers, the modem name is reflected in Computer Managemet.

User manual

3. Then go to Micromax CDMA Dialer & set your operator name.

Thereafter the default setting like User Name and Password is displayed

4. Go to Connect button, and connect it.

12 Health and Safety Information

Please read the following information and guidelines regarding the use of your phone. Not following them may be dangerous or illegal

SAR Compliance

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.
- SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR

User manual

value is ascertained according to the highest RF level generated during laboratory tests.

- The SAR value of the phone may depend on factors such as proximity to the network tower, use of accessories.
- The highest SAR value of the device is 0.162 W/kg averaged over 10 gm of human tissue.

SAR Recommendations:

- Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- Make sure the cell phone has a low SAR.
- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women
- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- Maintain a preferable distance of 15 mm from the device.

User manual

Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

During Flight

- Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.

In Hospitals

- Your Phone's radio waves may interfere with the functioning of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
- Do not carry the wireless device in a breast pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.

User manual

- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Unsafe Areas

- Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

13 Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it the service center.
- Do not store the device in high or cold temperature. High

User manual

temperatures can shorten the life of electronic devices and damage batteries.

- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations:

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery

User manual

at room temperature range.

- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies.

Disclaimers

- Micromax will not bear any responsibility for any incompliance with the above mentioned guidelines or improper usage of the mobile phone.
- The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the later shall govern.

User manual

- Micromax keeps the right to make modifications to any of the content in this user guide without public announcement or prior notification.