

ASH TRAY SCALE Digital Pocket Scale



AT-500 User Manual

AT-500 Manual

Thank you for purchasing the American Weigh AT-500 digital scale. Please read all operating instructions carefully before use. This electronic scale is a precision instrument. With normal care and proper treatment, it will provide years of reliable service. Never load the scale with more than the maximum capacity. Overloading will permanently damage it! Avoid any exposure to extreme heat or cold. Your scale works better when operated at normal room temperature. Always allow the scale to acclimate to normal room temperature for at least one hour before use.

Give your scale sufficient warm up time. Usually

30-60 seconds before calibration to give the internal components a chance to stabilize.

Keep your scale in a clean environment. Dust, dirt,

moisture, vibration, air currents and a close distance to other electronic equipment can all cause an adverse effect on the reliability and accuracy of your scale. Handle with care. Gently apply all items to be weighed onto tray top. Although this scale is designed to be quite durable, try to avoid rough treatment as this may permanently damage the internal sensor. Avoid shaking, dropping or otherwise shocking the

handled with extreme care.

Only operate the scale on a stable, vibration free surface

scale. This is a precision instrument and must be

I. OPERATION

Place Scale on a horizontal flat surface and remove the metal ash tray cover before weighing.

- 1. Press the [ON/OFF] key.
- 2. Wait until "0.0" is displayed.
- 3. Place the object(s) on the weighing platform.
- 4. Using the [MODE] key, you can switch between weighing units.

II. TARE WEIGHING

- 1. Turn on scale as described above.
- 2. Place the "tare item" such as a tray on the platform.
- 3. Press [TARE] and wait until "0.0g" is displayed.
- 4. Add the "net-weight-item".

III. CALIBRATION

Calibration is NOT required before first use. Only calibrate if scale is not weighing properly.

- 1. Turn the scale ON and wait for the display to go to "0.0g".
- 2. Press and hold the [CAL] key until the display shows "CAL". Now release the key.
- The display will flash "0.0g". Ensure that no weight is on the scale and press the [CAL] button to calibrate the zero point of the scale.
- 4. The display will now flash "200.0g". Place a 200g calibration weight (not included) onto the center of the platform and press the [CAL] key once more.
- 5. The display will show "PASS". Calibration is complete!

V. TROUBLESHOOTING

The primary reasons for inaccuracy or malfunction are low batteries, incorrect calibration, overload or operating on an unstable surface. Please keep this in mind and maintain and operate your scale properly. This scale is a precise instrument and must be handled with the utmost care and caution.

[Display]	Elimination of errors
[Err]	You are overloading the scale. Remove the excessive load immediately!
(UNST)	Use the scale in a more stable position

Specifications

Warranty	Power	Scale Dimensions (inches)	Platform Dimensions (inches)	Calibration Weight (not Included)	Weighing Units	Resolution	Capacity	Model
10 Year Warranty	2 x AAA Batteries (included)	3.8 × 3.8 × 1.3	~2.5 x 1.5	200g	g, oz, ozt, dwt	0.1g/0.005oz/0.005ozt/0.1dwt	500g / 17.64oz / 16.08ozt / 321.5dwt	AT-500