Safe Touch

User Manual



EN

Comelit Group S.p.A. declines any responsibility for improper use of the apparatus, for any alterations made by others for any reason, and for the use of non-original accessories or materials.

Caution! In order to reduce the risk of faults and electric shocks:

- Do not open the apparatus or carry out any repairs yourself. If necessary, request the services of qualified personnel.
- · Do not insert objects or pour liquids into the device.
- Clean using a damp cloth. Do not use alcohol or other aggressive products.

SAFETOUCH

GENERAL NOTE

This guide provides information on how to carry out basic SafeTouch functions. You can find the full manual in digital format (PDF) on our official website www.comelitgroup.com, by typing the word "Safetouch" into the search engine.

3.5" touch screen display

The display shows the icons corresponding to the available menus, which may vary depending on the system configuration. To navigate the menus, simply use your finger to touch the icon corresponding to the desired function.



RFID sensitive zone

The icon can be used to return to the main menu immediately.

The con can be used to return to the previous screen.

Important: If the screen is not touched for one minute, it switches off and enters energy saving mode.

Screen: code entry

To carry out as many procedures as possible, you must log in with a user code or an RFID key.

When the code is requested, the following screen will appear; once the 6

digits have been entered press to confirm, or c to cancel.



Important: When the product leaves the factory, only User 1 is available and enabled with the code 111111.

LED signals

Safetouch is equipped with a series of RGB LEDs at the bottom which change colour depending on the situation they are signalling.

The LEDs may turn the following colours:

Colour	Description	
Yellow	Steadily lit	Battery fault (disconnected, faulty or voltage under approx. 11.8 V), general fault, no mains power supply
Red	Flashing	Alarm memory
	Steadily lit	Alarm in progress (H24 alarm, area in alarm)

Main screen

To access the main screen, simply touch the screen if it is off, or use the relevant icons if you are already accessing the menus.

The main screen is structured as follows:



- 1. Activation/deactivation buttons
- 2. System status
- 3. Settings menu
- 4. Timed activations
- 5. Quick commands (see previous figure)
- or Date/Time (as in figure on page 33, if quick commands have not been assigned to the function buttons)
- Important: Buttons (1) and (5) can be customised; contact authorised users or your installer to do so.

EN

SAFETOUCH

System status

The 'System status' icon changes colour depending on the status of the system.

EN

The colour indicates:

9	Total activation across all areas	
4	Partial - or customised - activation (not all areas associated with the mintouch are totally activated)	
_	Areas deactivated	

If the icon is flashing, faults have occurred; to view the details simply touch the icon.

Viewing images from zones in alarm

If a camera is associated with the zones, when this zone enters alarm mode the system captures images (between 1 and 4 depending on the configuration).

In this case an additional icon will appear on the alarm screen to indicate the presence of images.



1. Icon corresponding to the images associated with the zone

This icon has 3 possible variants:

-	Indicates the presence of images relating to the zone. Press this icon to view the images.	
8,,	The Safetouch is searching for images corresponding to the zone.	
۲.	The Safetouch has not found any images corresponding to the zone.	

These icons may also be listed in the 'Events log' menu.

5

Using the RFID key

Passing the proximity key over the sensitive zone causes:

- Total activation/deactivation if the Safetouch main screen is displayed, or if the screen is off
- It replaces code entry, if done while the code entry screen is displayed.

IT.

SAFETOUCH

EN

www.comelitgroup.it

