


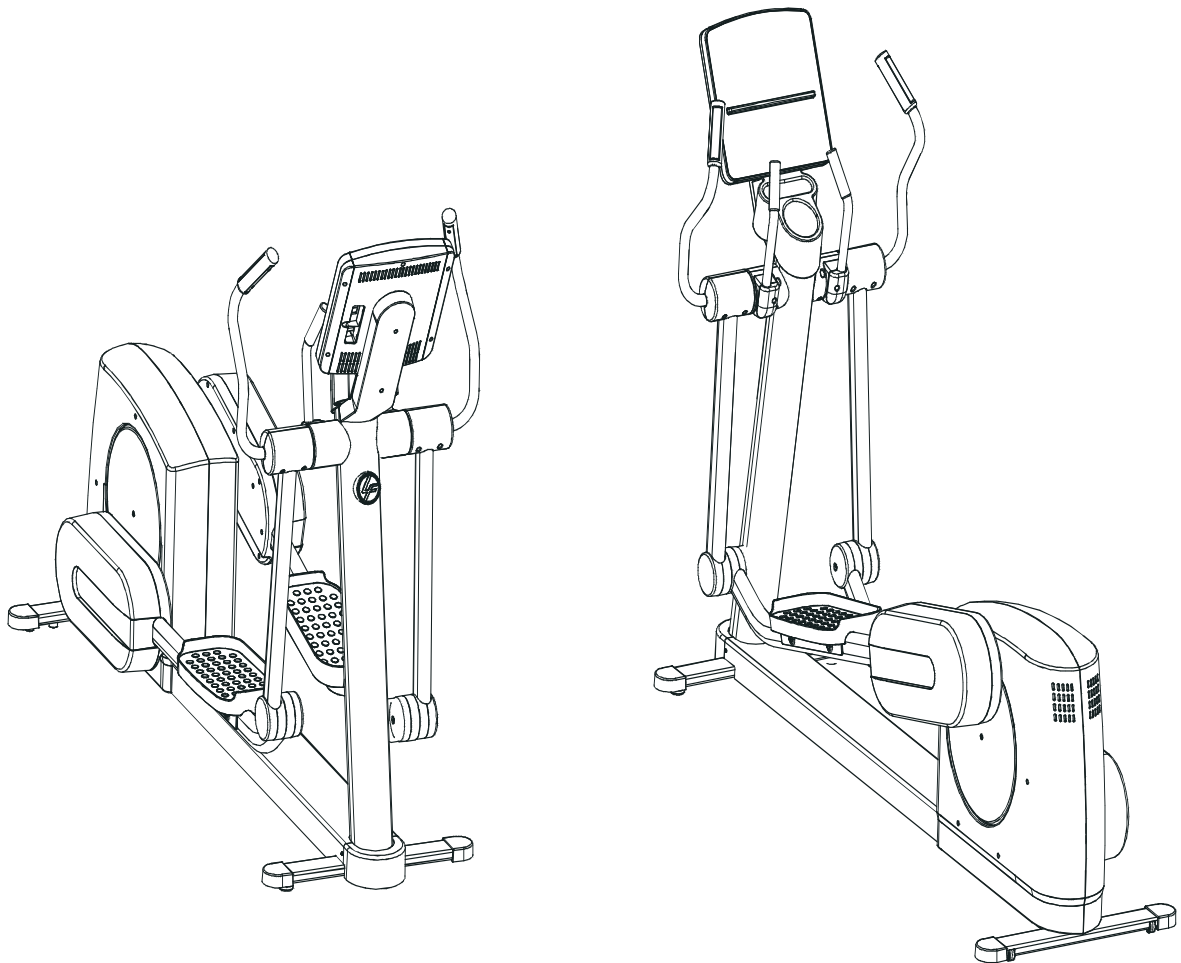

ARCTIC SILVER CROSS TRAINER 95Xe (MADE IN HUNGARY)




Customer Support Services
PARTS MANUAL rev 30 Jul 2008


OPERATION MANUAL	M051-00K62-A077
SERVICE MANUAL	M051-00K62-A060
HARDWARE BAG	AK62-00152-0001
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	0017-00008-0204 0017-00008-0205 0017-00008-0206


ACCESS PANEL ASSEMBLY	AK62-00172-0000
COAX CABLE	AK32-00020-0000
DC POWER CABLE, 80 IN.	AK32-00075-0004
LINE CORD: DOM 10A 125V	0017-00003-0704
LINE CORD: CON 10A 250V	0017-00003-0691
LINE CORD: 10A UK	0017-00003-0889
LINE CORD: AUSTRALIA	0017-00003-0918

	Page
CONSOLE SUPPORT & DEADSHAFT COVERS	4
HANDLEBARS AND BULLHORNS	5
CONSOLE AND RELATED COMPONENTS.....	6
CONSOLE ASSEMBLY.....	7
UPPER FRAME HARDWARE	8
ROCKER ARMS AND PEDAL LEVERS	9
CRANK COVER AND LOWER CAPS	10
LOWER FRAME SHROUDS AND HARDWARE.....	11
PEDAL LEVER COMPONENTS	12
DRIVE MODULE COMPONENTS	13
DRIVE MODULE HARDWARE	14

Note: The 95Xe comes with both Telemetry and LifePulse Sensors.

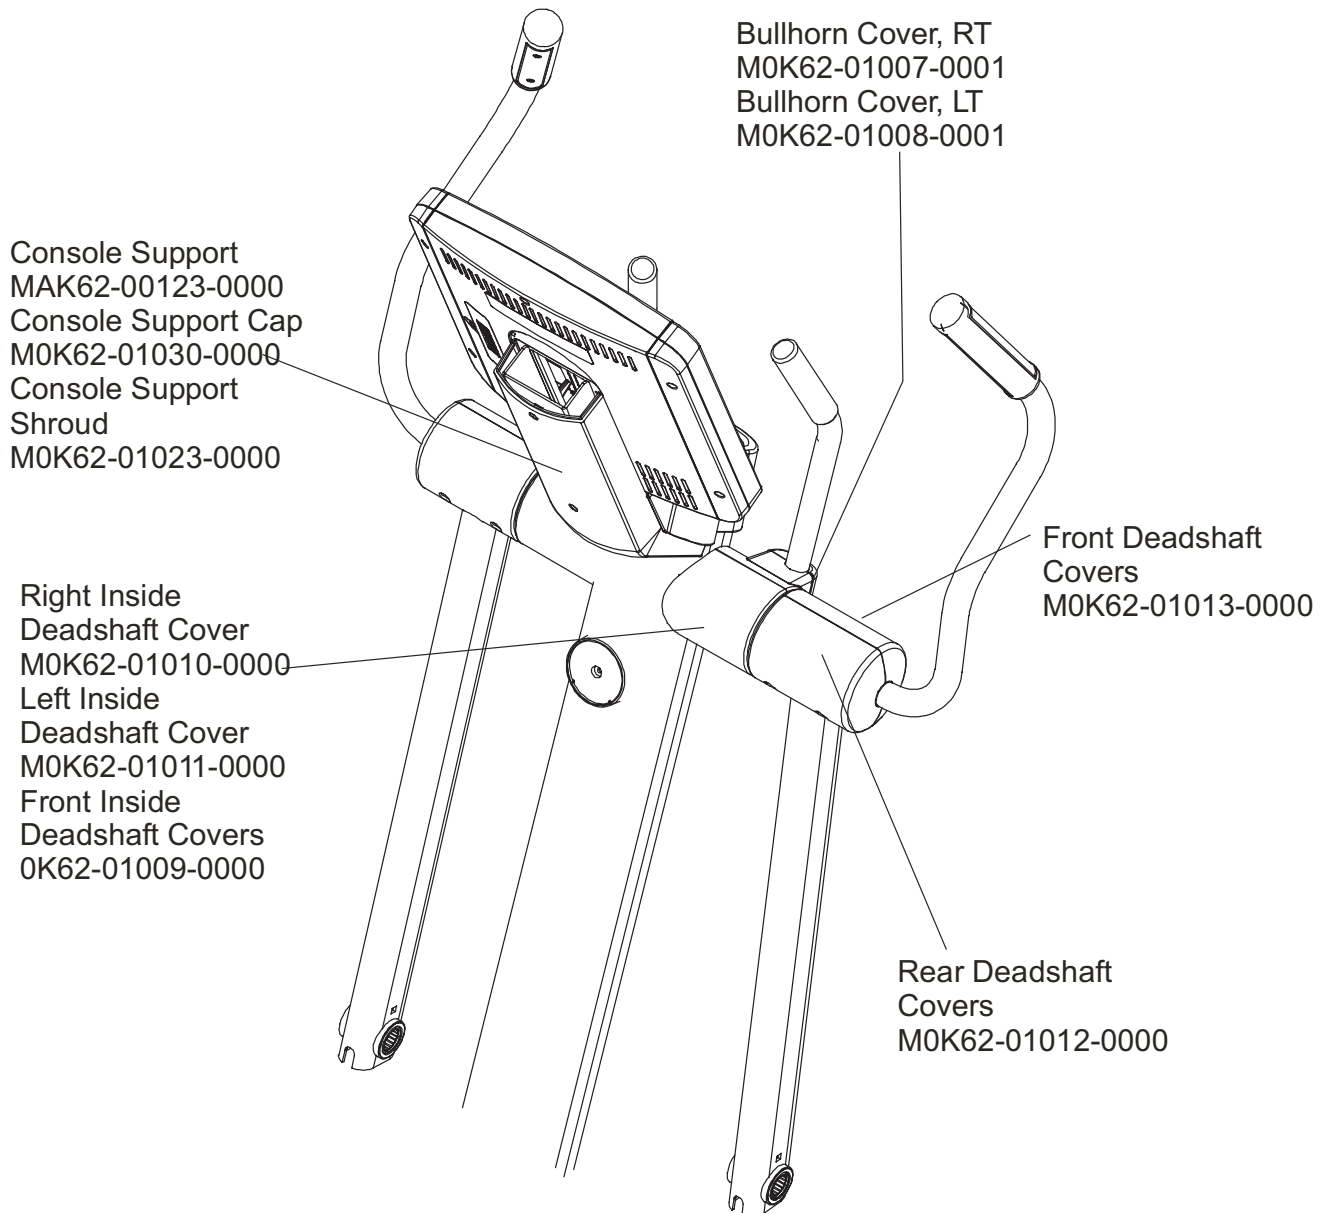

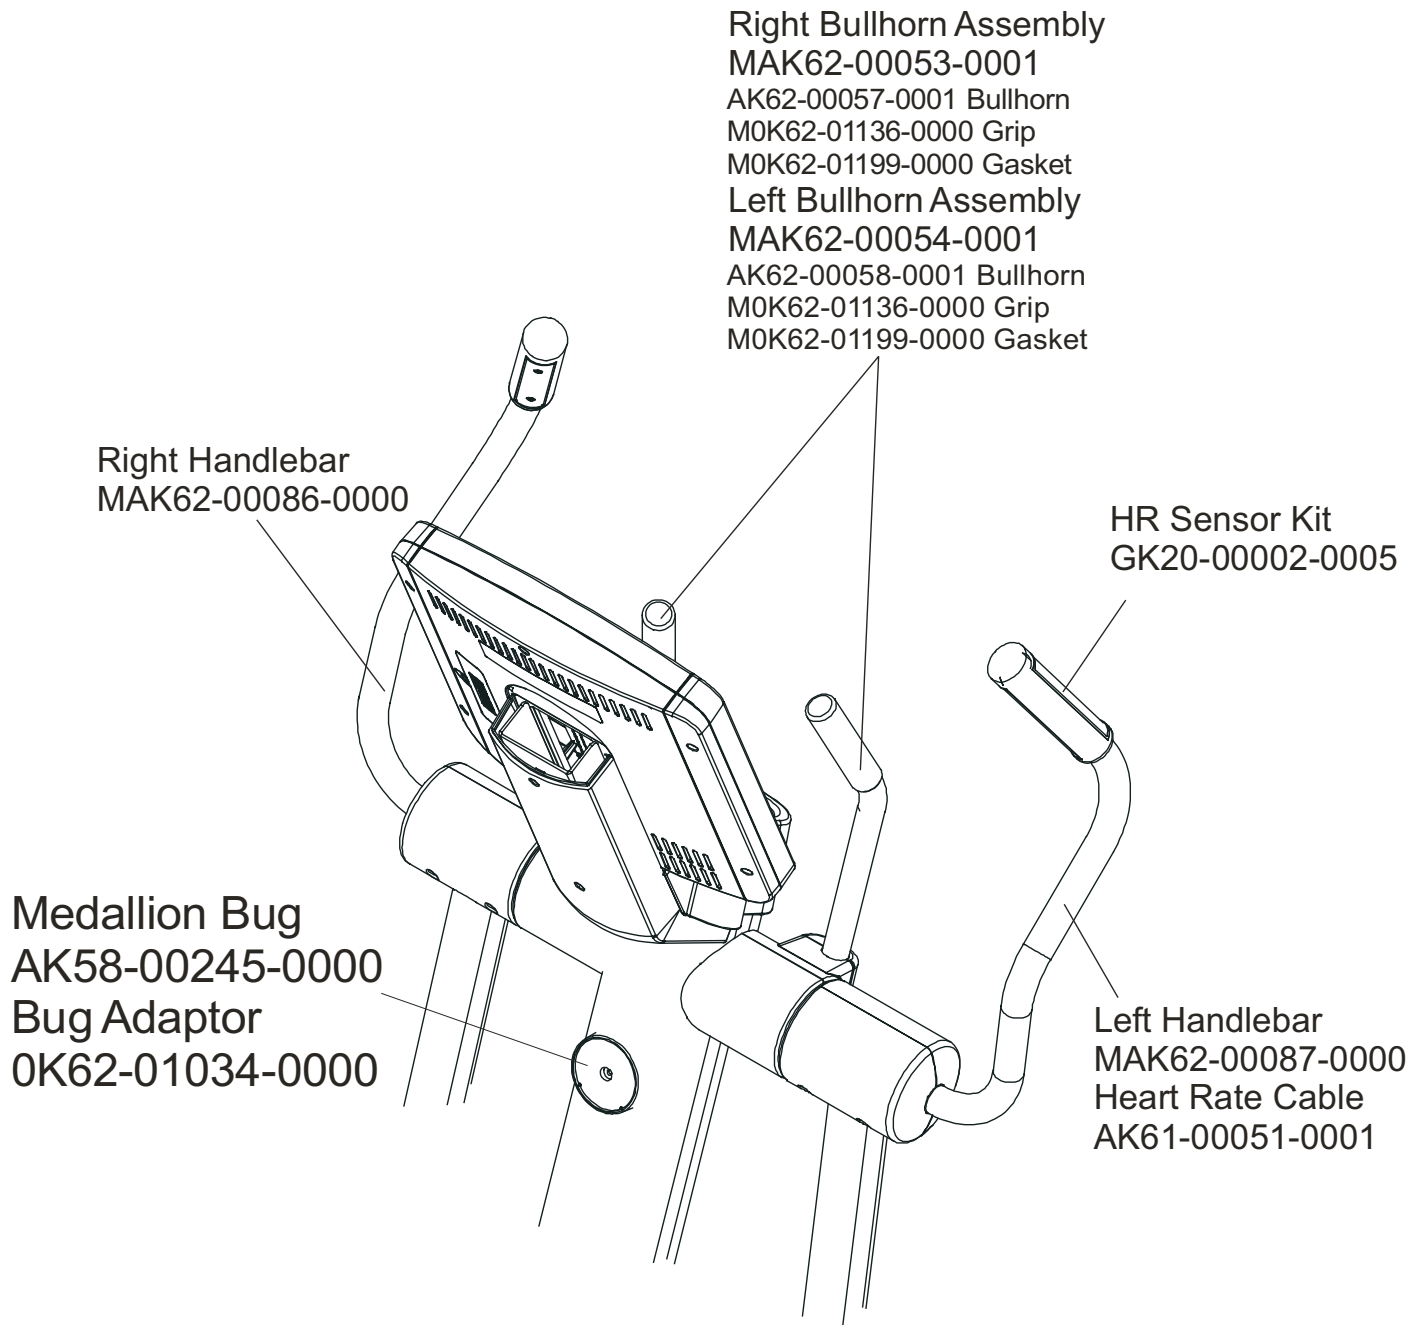

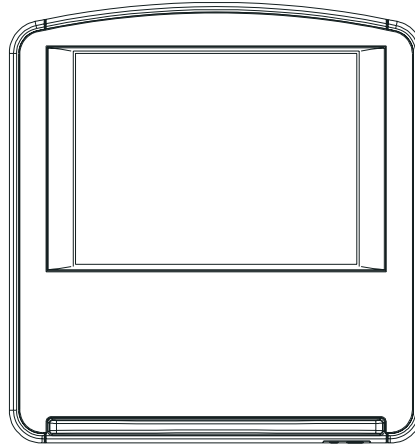


CONSOLE ASSEMBLY	
PART NUMBER	DESCRIPTION
GK62-00002-0029	KIT: SERVICE LCD CONSOLE NTSC; ENG
GK62-00002-0030	KIT: SERVICE LCD CONSOLE NTSC; SPN
GK62-00002-0031	KIT: SERVICE LCD CONSOLE NTSC; JAP
GK62-00002-0032	KIT: SERVICE LCD CONSOLE NTSC; FRN
GK62-00002-0033	KIT: SERVICE LCD CONSOLE NTSC; POR
GK62-00002-0034	KIT: SERVICE LCD CONSOLE PAL; ENG
GK62-00002-0035	KIT: SERVICE LCD CONSOLE PAL; GER
GK62-00002-0036	KIT: SERVICE LCD CONSOLE PAL; SPN
GK62-00002-0037	KIT: SERVICE LCD CONSOLE PAL; FRN
GK62-00002-0038	KIT: SERVICE LCD CONSOLE PAL; ITL
GK62-00002-0039	KIT: SERVICE LCD CONSOLE PAL; DUT
GK62-00002-0040	KIT: SERVICE LCD CONSOLE PAL; POR


OVERLAY BEZEL ASSEMBLY	
PART NUMBER	DESCRIPTION
AK62-00308-0001	BZL/SW W/OVERLAY ASSY: MFG; ENG/NTSC
AK62-00308-0004	BZL/SW W/OVERLAY ASSY: MFG; SPN/NTSC
AK62-00308-0006	BZL/SW W/OVERLAY ASSY: MFG; JAP/NTSC
AK62-00308-0007	BZL/SW W/OVERLAY ASSY: MFG; FRN/NTSC
AK62-00308-0010	BZL/SW W/OVERLAY ASSY: MFG; POR/NTSC
AK62-00309-0001	BZL/SW W/OVERLAY ASSY: MFG; ENG/PAL
AK62-00309-0003	BZL/SW W/OVERLAY ASSY: MFG; GER/PAL
AK62-00309-0004	BZL/SW W/OVERLAY ASSY: MFG; SPN/PAL
AK62-00309-0007	BZL/SW W/OVERLAY ASSY: MFG; FRN/PAL
AK62-00309-0008	BZL/SW W/OVERLAY ASSY: MFG; ITL/PAL
AK62-00309-0009	BZL/SW W/OVERLAY ASSY: MFG; DUT/PAL
AK62-00309-0010	BZL/SW W/OVERLAY ASSY: MFG; POR/PAL

ARCTIC SILVER 95Xe

Console Assembly

95XE-0XXX-02
S/N XHM005071308

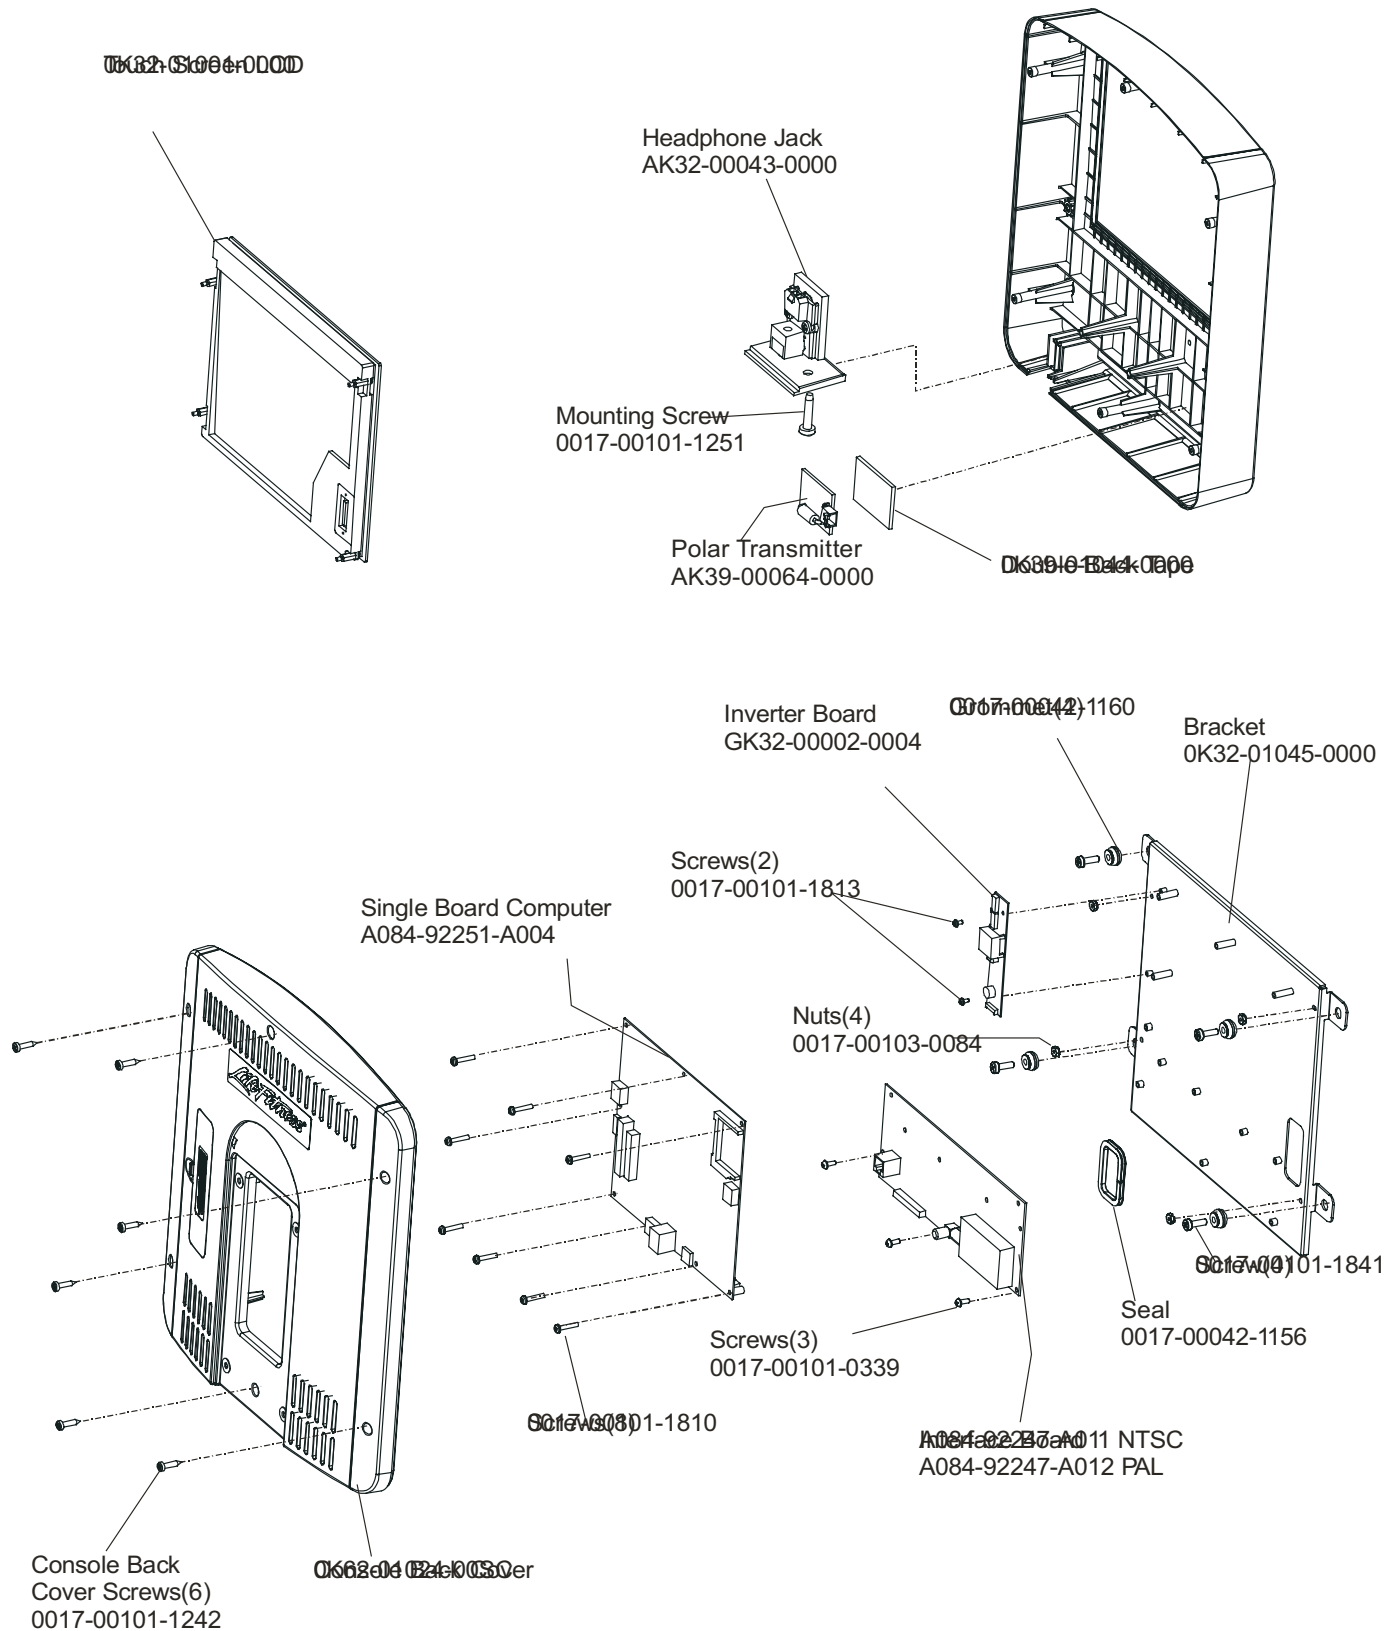

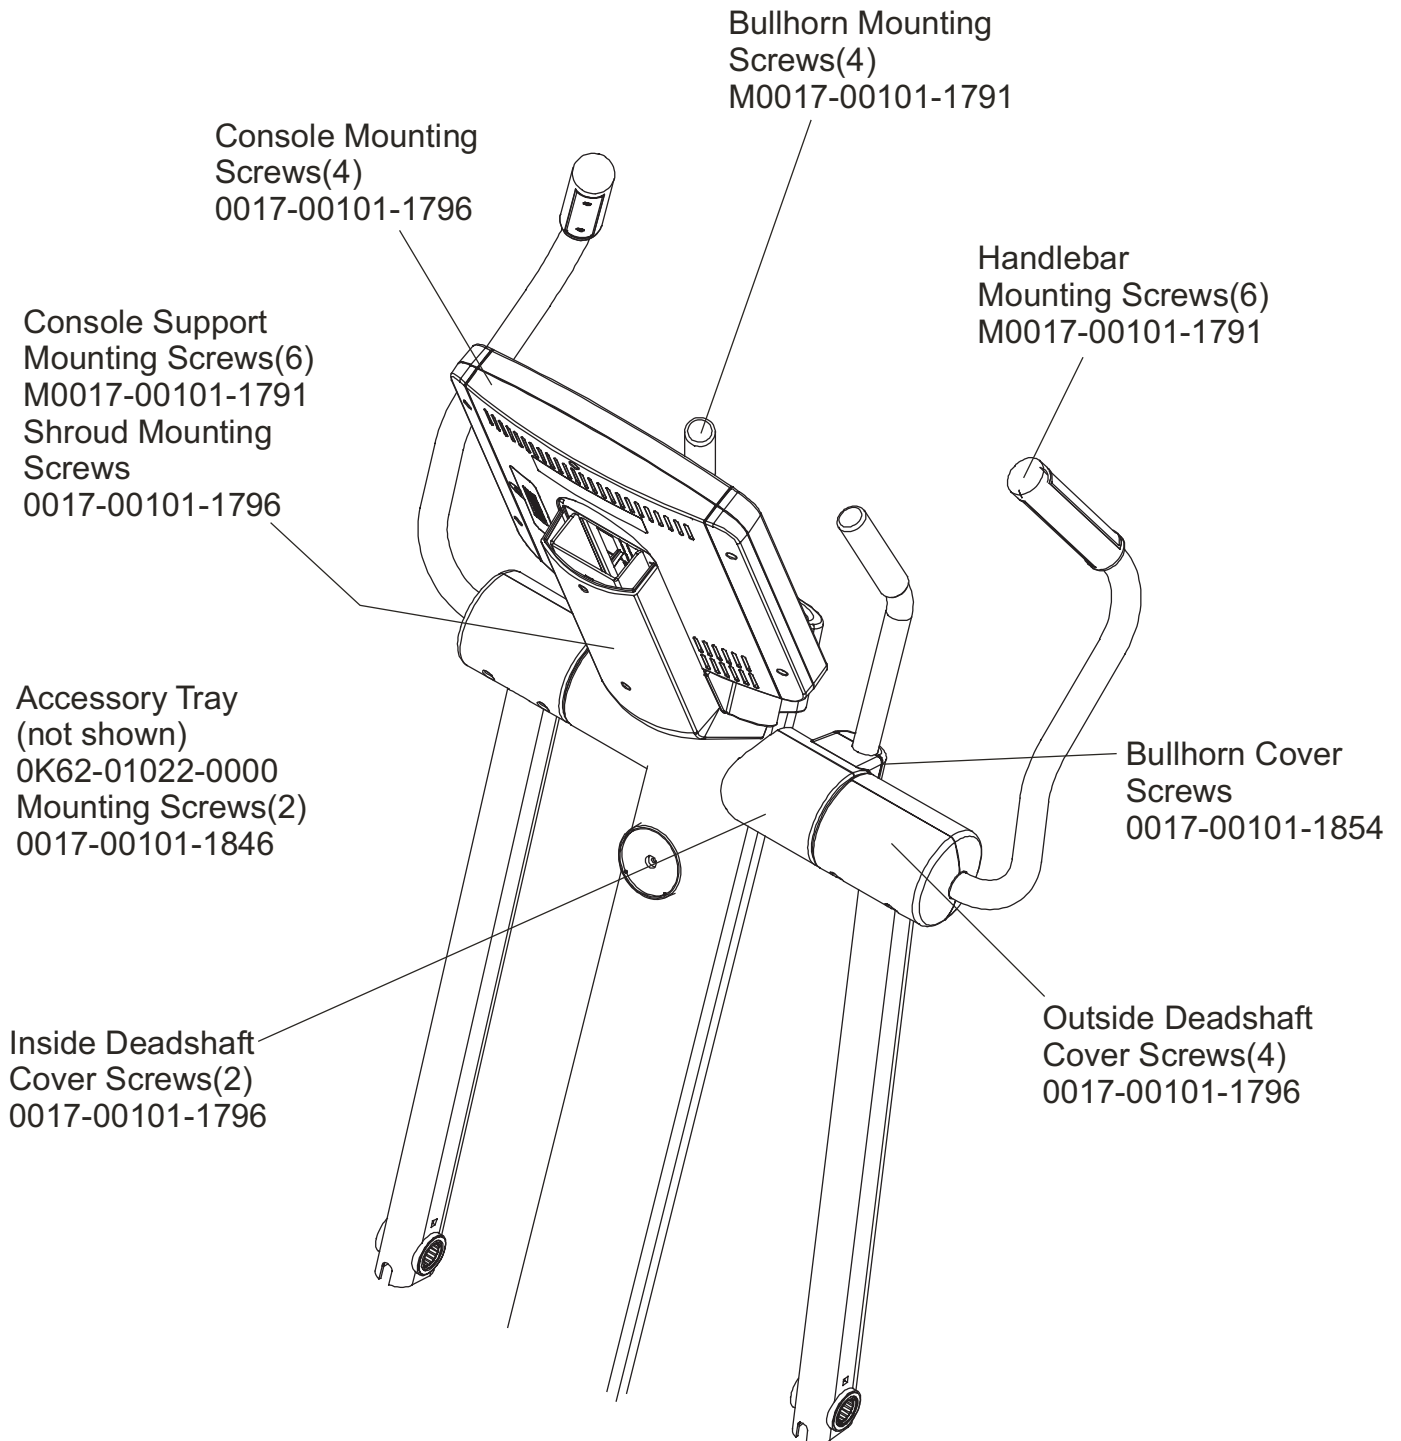


ARCTIC SILVER 95Xe
Rocker Arms & Pedal Levers

95XE-0XXX-02
S/N XHM005071308

Rocker Arms Kit
GK62-00002-0070
contents:


Rocker Arms (2)
Hardened Spacers (2)
Oilite Washers (2)
Retaining Rings (2)
Loctite 620
Alcohol pad

Rocker Arms
AK62-00002-0070
Shaft Collar w/Screws
OK61-01259-0000

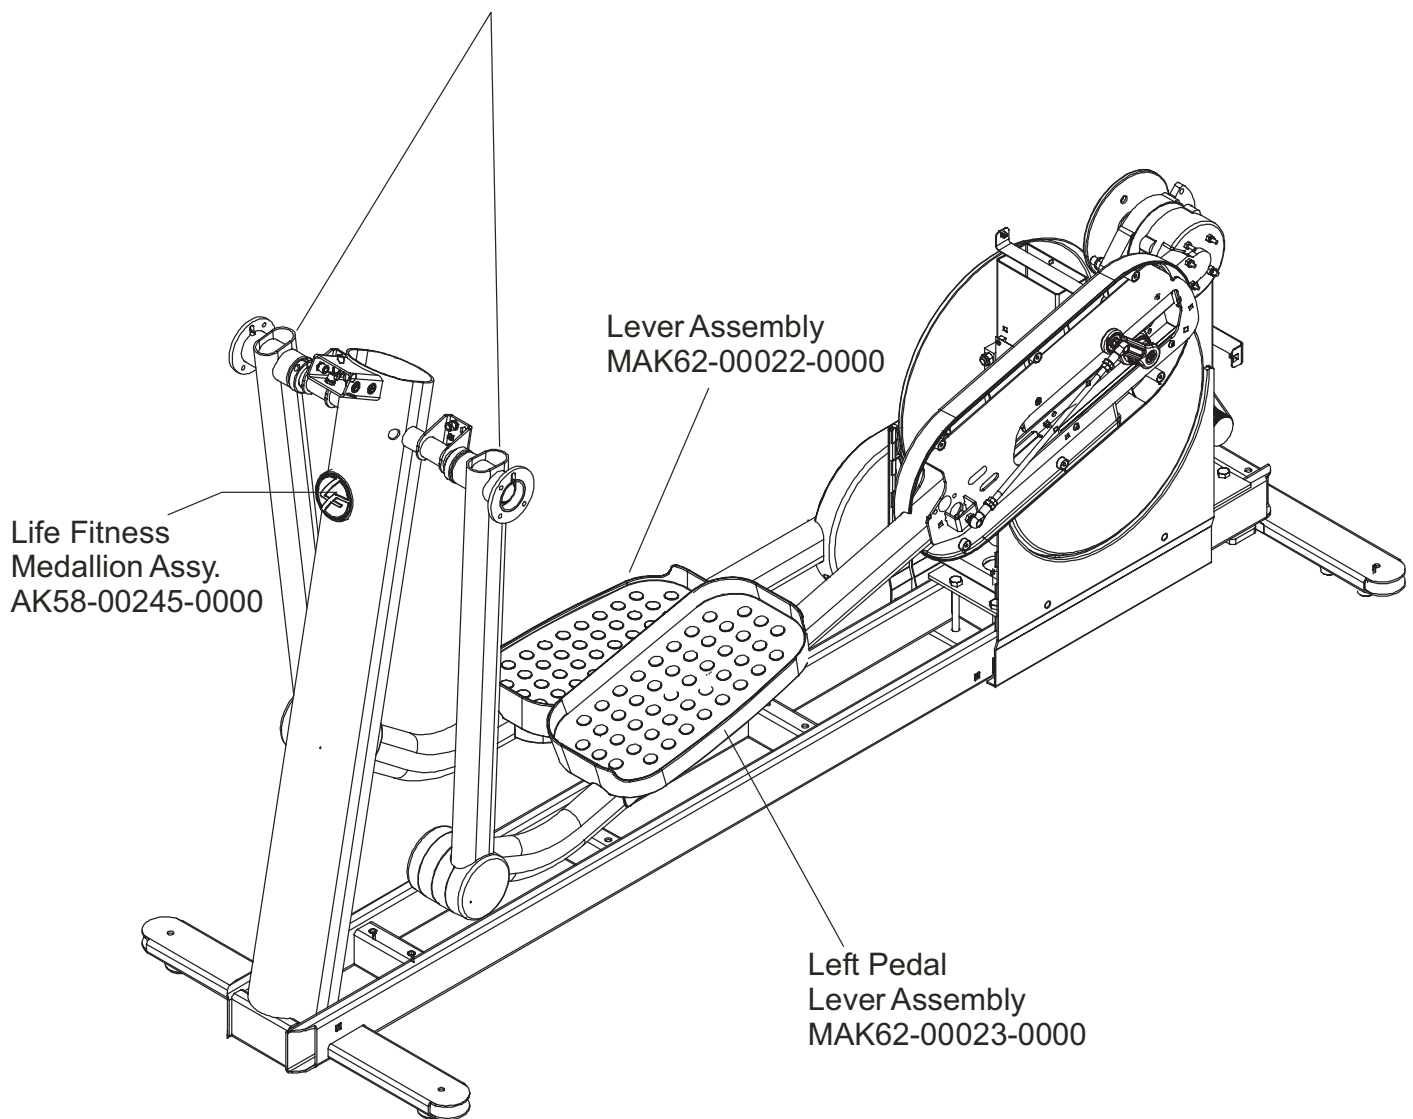


ARCTIC SILVER 95Xe
Crank Cover and Lower Caps


95XE-0XXX-02
S/N XHM005071308

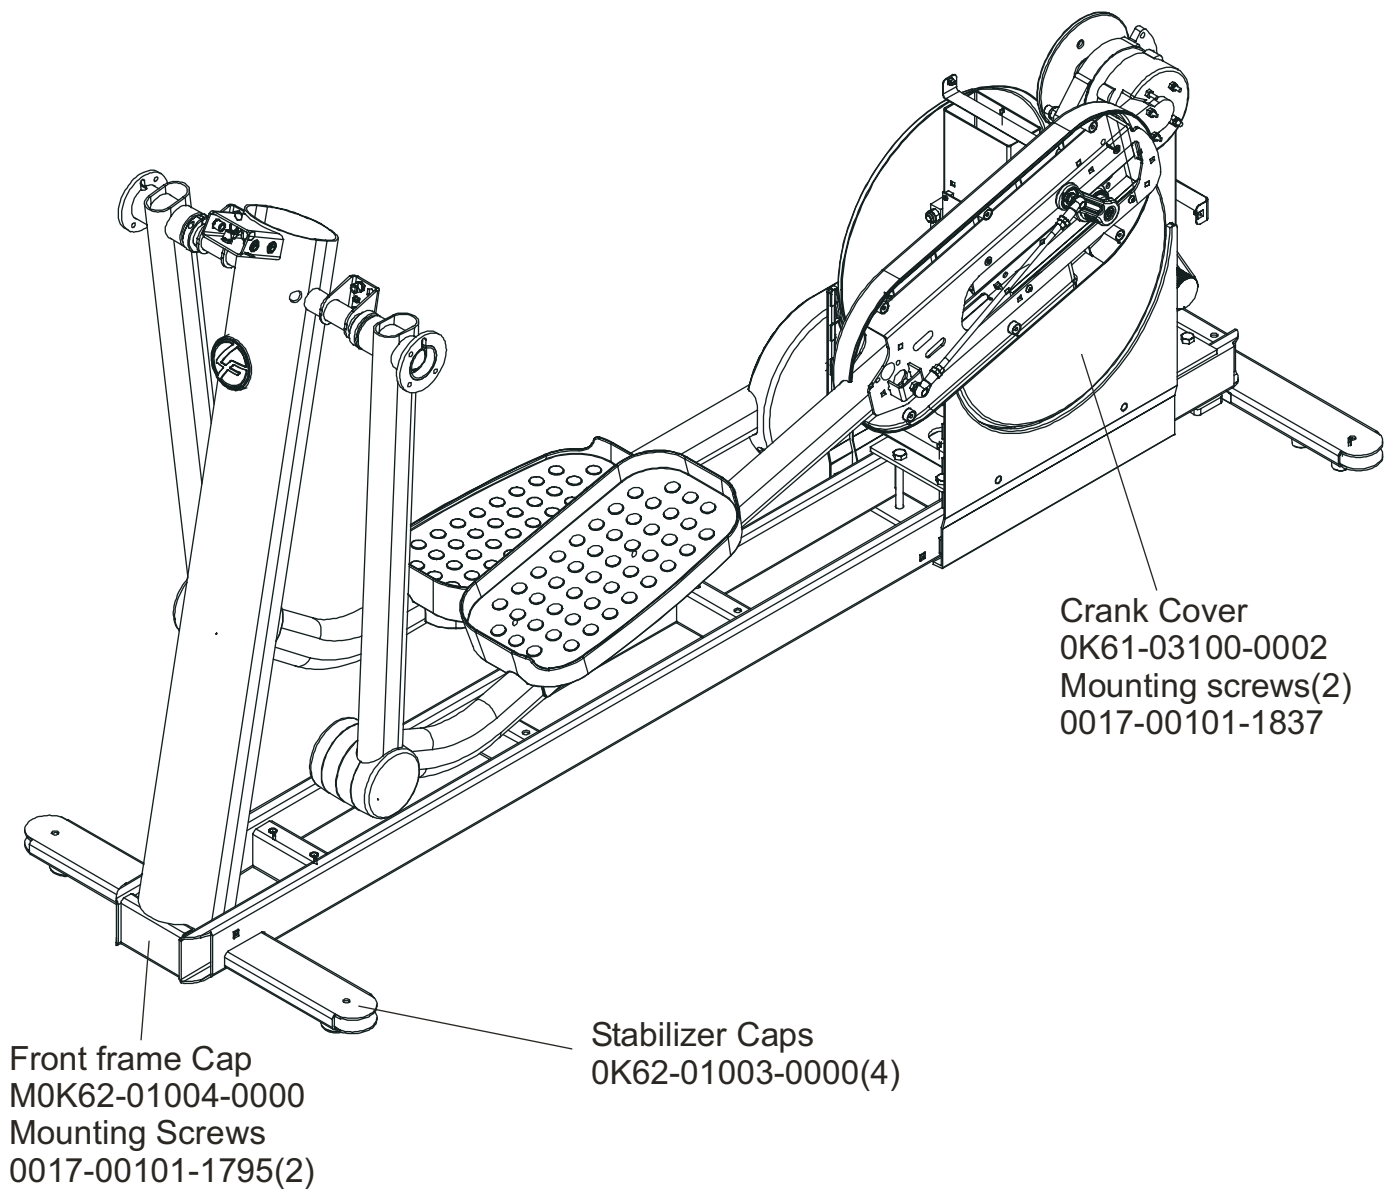

ARCTIC SILVER 95Xe
Lower Frame Shrouds & Hardware

95XE-0XXX-02
S/N XHM005071308

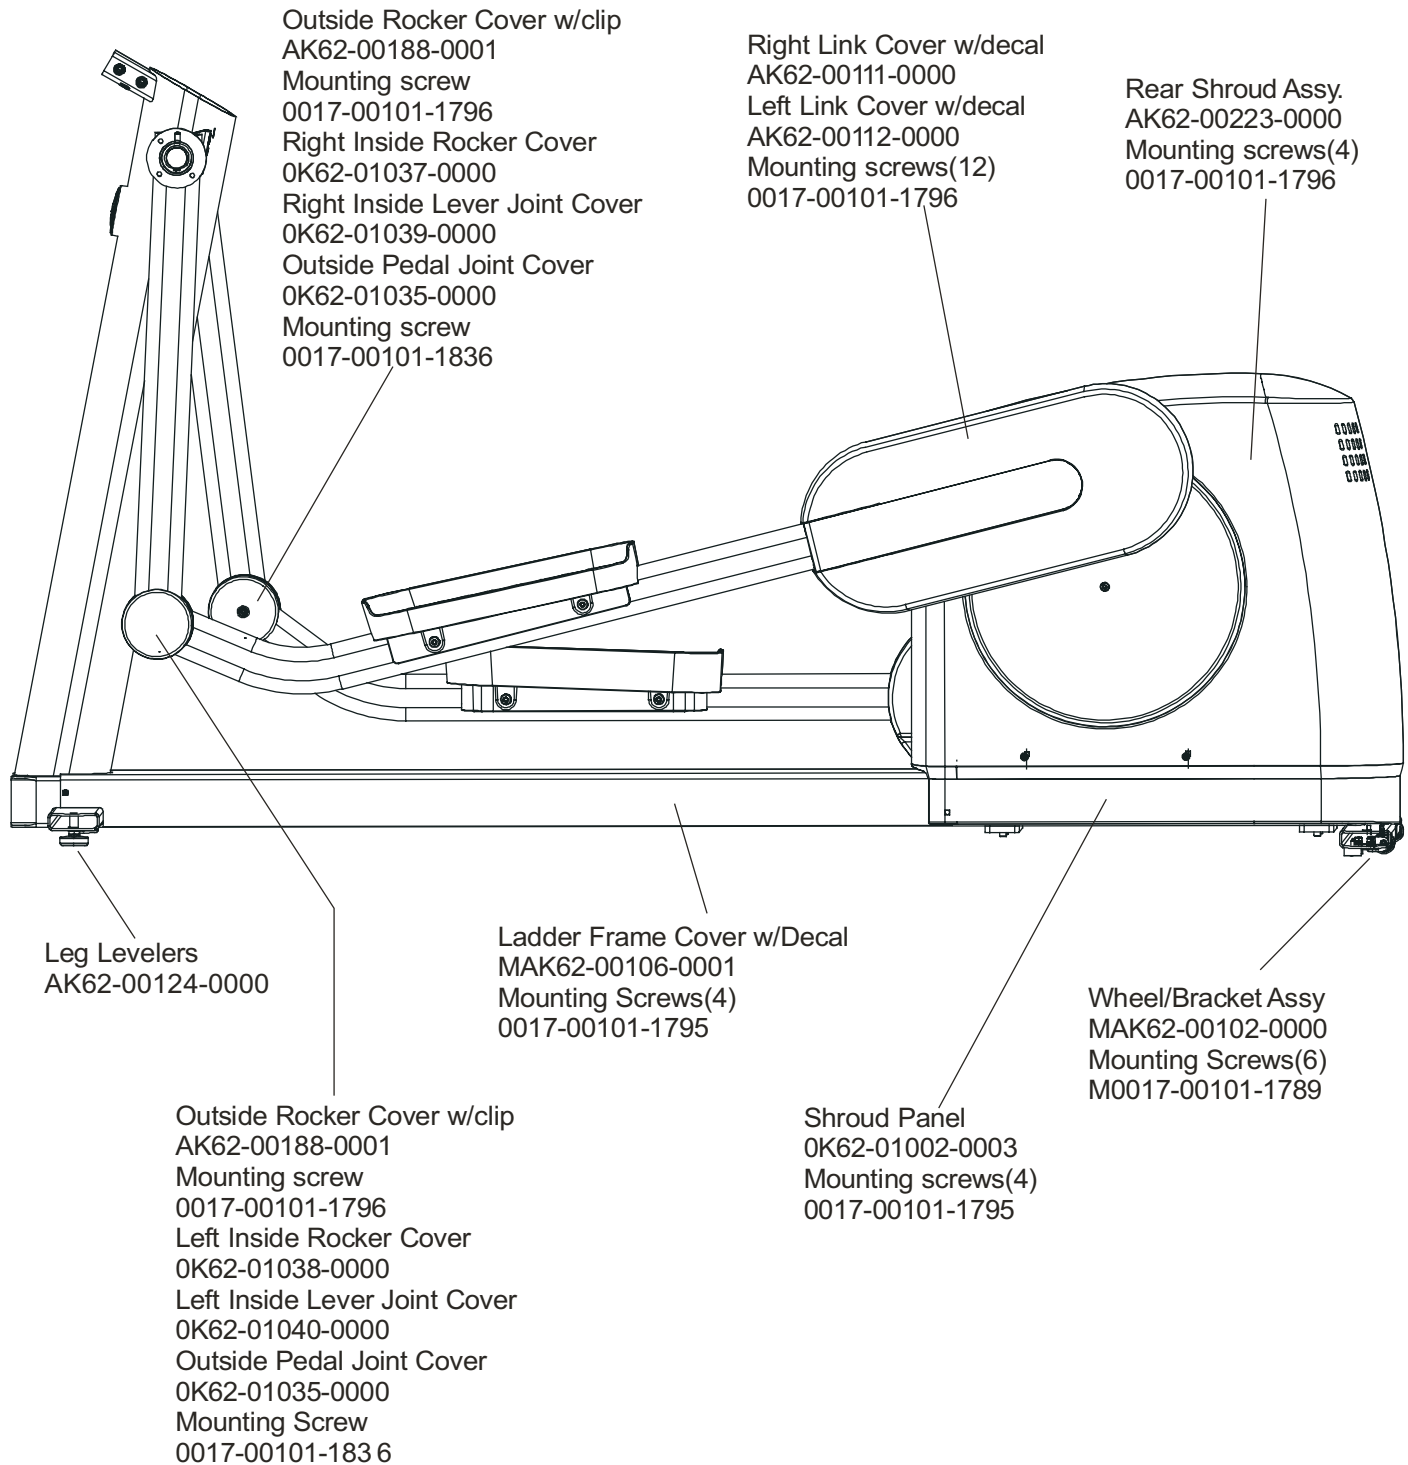

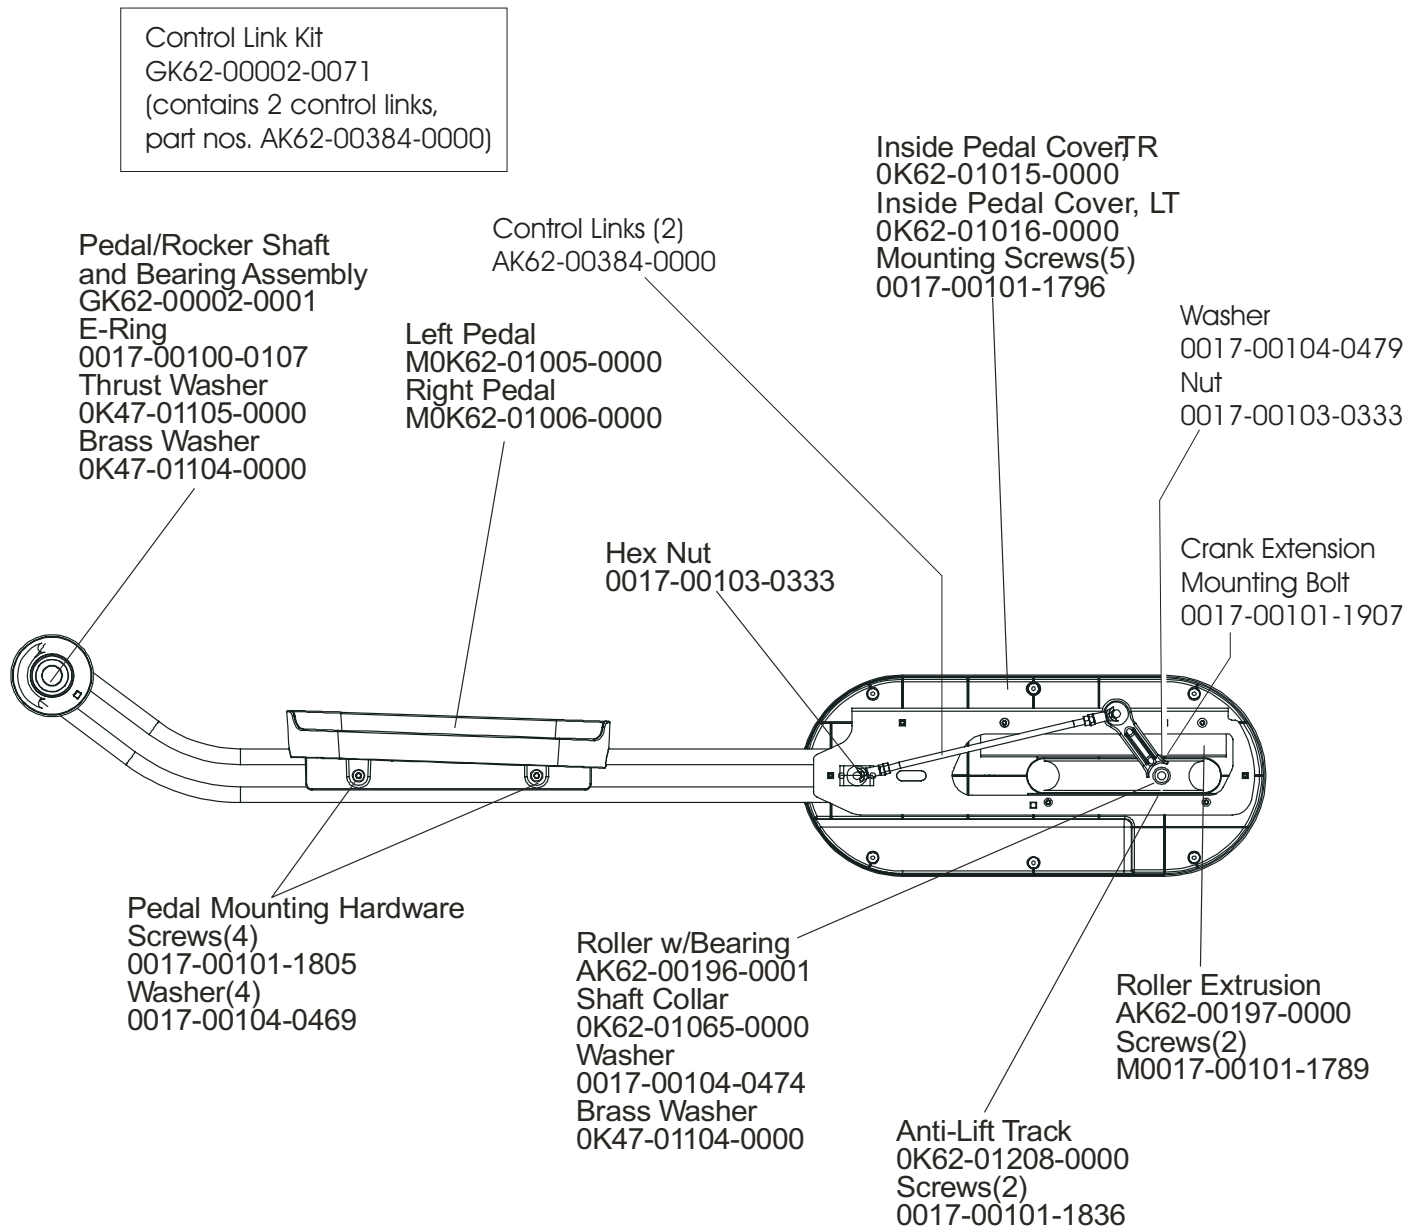

ARCTIC SILVER 95Xe
Drive Module Components

95XE-0XXX-02
S/N XHM005071308

