 



**ORCAS** 

# ACTIVE WIRELESS
 
# EAR-Buds







Hi.



Good call on picking up the Outdoor Tech. Orcas wireless earbuds. Your experience of the universe will soon be enhanced wirelessly. This manual exists to help make sure that you use them correctly, so you're definitely going to want to relax for a hot second and look through this.

Kisses.




OUTDOOR TECH.

# CONTENTS

 Anatomy	٠				١	٠				ł						٠.	į			••	1
Power Up	٠																				3
Pairing																					4
Talk			 																		5
Features																					7
Specs																					8
FAQ			 				 į														9

Care & Maintenance ......10

#### ANATOMY



- LED Indicator
- Charging Jack
- Microphone (on reverse)
- Volume/Track Control
- Multifunction Button

# ANATOMY



# Function Action

Play/Pause/ Answer/Hang Up	Press the multifunction button 🗹
Raise Volume	Press up <
Lower Volume	Press down >>>
Skip Forward	Hold up <
Skip Back	Hold down >>
Voice Command/Siri	Short Press the multifunction (£) & up >> button simultaneously

#### POWER UP



For best results, fully charge your Orcas before use.

For a full charge, plug the Orcas into your wall charger or computer via micro USB cable.

The LED indicator located below the right ear piece will flash red to indicate a low battery.

NOTE: It takes 2 hours to give your Orcas a full charge.





#### **Entering Pairing Mode**

- Hold the "multifunction button ( ) "down until the LED flashes red and blue alternately.
- 2. Release "button," you are now in pairing mode.

#### Pair

Go to your device's Bluetooth settings ADD or SEARCH devices. When "ODT ORCAS" appears, select it.

\*If asked for a pass code: Enter "0000"

After successfully connecting, the blue LED will flash twice every 4 seconds.

You should now be able to play music & make/receive calls using the headset. Hooray.

#### TALK

The following are tips on how to use your Orcas to talk on the phone:

Answer/ Cancel a call	Press the multifunction button <b>★</b>
End a call	Press the multifunction button
Decline a call	Press & Hold the multifunction button
Make a call	Use your phone to dial as usual. Listen & talk through the Orcas.
Mute/cancel mute	Press & hold up <
Transfer conversation to mobile phone or headset during a call	Press the multifunction button
Volume up during a call	Short press up <b>≪</b>
Volume down during a call	Short press down >>
Voice dial	Short Press the multi- function ♂ & up ≪ button simultaneously
Redial last number	Double click the multifunction ▲ button


#### TALK (THE FANCY STUFF)

You're popular. What happens when you're on a call with your girlfriend and your mom calls?



Answer new call & end current call:	Short press the multifunction button 🔣
Answer new call & retain current call:	Double Click the multifunction Button
Switch calls:	Double click the multifunction Button
End current call & switch retained call:	Short press the multifunction Button

### FEATURES: ORCA FINS

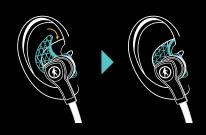

THE ORCA "FINS" PROVIDE A SUPER LEGIT FIT.

## AND WE HAVE FIT OPTIONS FOR EVERYONE







Battery Life: Continuous talk/music time 5 hours, Standby time/150 hours

\*Battery life varies subject to different playing circumstances such as music type and volume.

Bluetooth Version: V4.0

Bluetooth Profiles: A2DP, aptX, AVRCP

Operating distance: 32 feet

Dimensions: 37 x 16 x 28 mm

Weight: 13g

#### FAQ

#### 1. Why is the LED flashing red instead of blue?

The battery is low. Recharge it.

#### 2. Why is the red LED off when charging?

- A. Make sure the connection between the charging cable and the Orcas is tight.
- B. If the Orcas haven't been used in awhile, the light may not come on immediately. Charge the battery for at least 30 minutes.

#### 3. Why cant I pair my Orcas?

Your Bluetooth device and the chips must both be in pairing mode.

#### 4. Why can't I hear the sound on the headset?

- A. Make sure the Orcas are on.
- B. Make sure the volume is not too low or muted.
- C. Make sure the Orcas are properly connected with your device.
- D. Make sure the Orcas are within range of your device.

#### 5. Why can't I hear the sound clearly on the headset?

- A. Move your orcas closer to your device.
- B. Make sure your Orcas are charged up.
- C. Turn off your Orcas and device, then power up and reconnect.

# 6. Why the pause/play, last/next song not function when playing music?

Make sure your Bluetooth device supports AVRCP (Audio/Video Remote Control profile)

#### CARE & MAINTENANCE



- Keep the Orcas Dry
- Keep the Orcas away from direct sunlight or hot places. High temperatures will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Do not try to disassemble the Orcas.
- Do not let the Orcas fall onto the floor or other hard surfaces. The internal circuit board may get damaged.
- Do not use intensive chemical products or detergent to clean the product.
- Do not scratch the surface with sharp things.

# DON'T BE SO ANTISOCIAL







Facebook.com/outdoortech Twitter & Instagram: @outdoortech

Questions, comments, complaints, secret desires, or just to say what's up: email info@outdoortech.com

K bye.

