

SWEDX



www.swedx.com

User's Guide
SWEDX wave
SWEDX AD-Screen
SWEDX Photo Frame



SWEDX wave



SWEDX TV-Stand



SWEDX Soundbar



Super Slim LED-TV

SWEDX offers a wide range of accessories with professional design and functionality for LED/LED-TVs



SWEDX shelves



Wall-mount Retractable



SWEDX Matrix Screens



Wooden Wall-mount

Index	Page		
Index	3	SHARPNESS	14
Introduction	4	ASPECT RATIO	14
Safety precaution	4	OSD ROTATE	14
Basic operations	5	SOUND SETTINGS	14
Contents SWEDX Wave	6	USB/SD DATA UPDATE	14
SWEDX Wave Inputs	6	Menus in AV, YBPBR and HDMI mode	15
Contents SWEDX AD-Screen	7	PICTURE MENU	15
SWEDX AD-Screen Inputs	7	PICTURE MODE	15
Contents SWEDX Photo Frame	8	COLOR TEMPERATURE	15
SWEDX Photo Frame Inputs	8	ASPECT RATIO	15
Remote Control Buttons	9	NOISE REDUCTION	15
Main Operations	10	SCREEN	15
Volume Control	10	SOUND MENU	15
OSD Menu Operation	10	SOUND MODE	15
OSD Menu Structure	10	BALANCE	15
Menus in USB Mode	11	AUTO VOLUME	15
PLAY SETTINGS MENU	11	SURROUND SOUND	15
FUNCTION MODE	11	SPDIF MODE	15
MEDIA TYPE	11	EQ	15
SLIDE MODE	11	TIME MENU	16
SLIDE TIME	11	CLOCK	16
BG MUSIC	11	TIMER SET	16
PICTURE SCALING	11	OPTION MENU	16
PICTURE ROTATE	11	LANGUAGE	16
ROLL SETTING	12	RESTORE FACTORY DEFAULT	16
ADVANCED MENU	12	Description of SWEDX Wave	17
LANGUAGE	12	SWEDX wave operations	17
AUTO PLAY	12	Description of SWEDX AD-Screen	18
REPEAT MODE	12	Description of KADE software	19
PLAY LOG	12	An Example of the XML file	20
CLOCK MENU	13	Description of SWEDX Photo Frame	21
CURRENT CLOCK	13	Warranty and Service	22
TIMER MODE	13		
CLOCK SHOW	13		
CLOCK TEXT COLOR	13		
PICTURE&OTHER MENU	14		
BRIGHTNESS	14		
CONTRAST	14		
COLOR	14		

Introduction

SWEDX introduces a new multi functional device for digital signage purpose. This product is a combination of 3 digital signage solutions, three in one. By changing the settings in the device menu it will change the behavior and functionality of the device. The four functions are:

SWEDX Wave

SWEDX AD-Screen

SWEDX Photo Frame

Safety precaution

- Do not place the product on unstable places, from which it may fell off.
- Do not expose the product to extreme temperature and humid environment.
- Avoid subjecting the product to direct sunlit and other heat sources.
- Do not put the product into any liquid.
- Do not put anything inside the product, or place water container on top of the it.
- In thunder rainy days (especially with lightening), please unplug the power and antenna cables.
- Do not step on the power cable, or tangle them together
- Avoid overload of the exterior electric outlet to prevent fire hazard of electric shock.
- Clean the product with dry and soft cloth.
- If your product is broken, do not repair it by yourself, but contact the maintenance personnel.
- If the remote control is left unused for a longtime, please take the batteries out and store them in dry places.
- Avoid dropping the remote control.
- If the product is installed for exhibition purpose, please do not place the overheated part on the ground or carpet to prevent accident.

Please install the product at proper position, such as wall or ceiling. Please install it under the guidance of professional staff. (When used or exhibit, please do not place the product horizontally or vertically on the ground).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment is predetermined to work constantly (unless adding switch on this equipment)

Please disconnect the power cord if this

equipment will not be used for a long time.

Basic operations

- Use AC 100-240V 50-60 Hz power outlet for the product power supply.
- If the screen of the product is not on, please press the power button on the remote control.
- If you want to shut off the product temporary, please press the power button on the remote control.
- If you want to turn off the product completely, please disconnect the power cable.
- The product will turn off if there is no signal input within 30 seconds.
- In HDMI and VGA mode the product will enter idle state if there is no signal input within 30 seconds. The product will turn on when the signal is received.
- The setting and tuning of picture and sound will be saved when the product is shut off, which will be working in the pre-shut off state when the product is turned on again.
- If PC signal source is used, please first set the resolution of the PC display card as the following modes: (1920x1080 60 Hz for Full HD models and 1366x768 for HD models).
- If there is progressive output of the signal used by the user, signal source with progressive output is recommended.

Preparation

- Put the product on a stable surface.
- Do not fix the product with others fixations than those provided or suggested by the manufacturer.
- If you have a wall mount, check that it is steady.
- Do not place any material on the product.
- Do not block or cover the ventilation openings on the product.
- The product must be plugged with a tension source of 100-240 volts and 50-60 Hz.
- Power cord and cables must be properly routed and protected to prevent from stepping on them.
- Keep the power cord away from any heat source. Possible fire hazard.

Heating sources and humidity



- Keep the product dry and away from humidity.
- Keep the product away from heat sources.

Cleaning and maintenance

- Unplug the product before cleaning it. Do not use solvents or liquids to clean the product.
- Only clean the product with a soft and dry cloth.
- In case of troubleshooting, do not use spare parts other than those suggested by the manufacturer. Using inadequate spare parts can lead to electric shocks, short-circuits fire or others incidents. Please contact a technical authorized by SWEDX brand.

Departure in holidays

- Unplug the product during lightning storms or when unused for long periods of time.

	WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER(OR BACK). REFER SERVICING TO QUALIFIED SERVICE PERSONNEL		

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

Contents SWEDX Wave


Included items in SWEDX Wave models:

		
2 x CR2025 Batteries	HDMI ¹ Cabels	Power Cable
		
Remote Control	LED Screen	Control Buttons SWEDX Wave only
		
Stand ²	USB Ext. Cable	

- 1. The included HDMI cables are to be used to connect the screen to the Control buttons.
- 2. The stand is optional

CAUTION


Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



CR 2025 Battery

CAUTION

The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



 
 
CR 2025 Battery

SWEDX Wave Inputs

Inputs



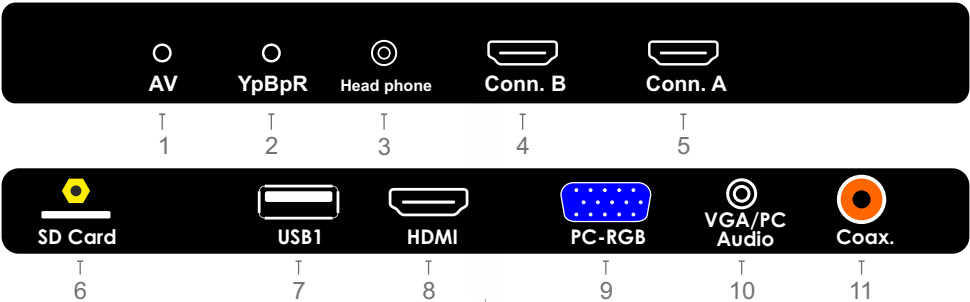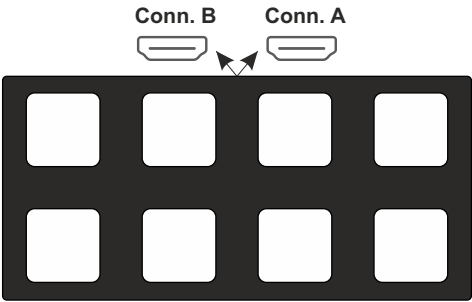


- 1. **AV**
Input for audio/video sources
**Component and AV shares the same audio input*
- 2. **YpBpR**
Input for component sources (YpBpR)
- 3. **Headphone**
Output for headphone devices
- 4. **Conn. B**
Input for Conn. B from control buttons
- 5. **Conn. A**
Input for Conn. A from control buttons
- 6. **SD Card**
Input for SD Card (internal memory)
- 7. **USB1**
Input for USB Media Player
- 8. **HDM**
Input for HDMI sources
- 9. **PC**
Input for PC or VGA sources
- 10. **PC Audio**
Input for PC audio when PC input is connected
- 11. **Coaxial**
Output for digital audio signal (coaxial)

Control Buttons connections



Contents SWEDX AD-Screen

 Included items in SWEDX AD-Screen models:

		
2 x CR2025 Batteries	USB Ext. Cable	Power Cable
		
Remote Control	LED Screen	

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



CR 2025 Battery

CAUTION

The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



CR 2025 Battery

SWEDX AD-Screen Inputs

Inputs

1. AV

Input for audio/video sources

**Component and AV shares the same audio input*

2. YpBpR

Input for component sources (YpBpR)

3. Headphone

Output for headphone devices

4. Conn. B

Not used in AD-Screen Mode

5. Conn. A

Not used in AD-Screen Mode

6. SD Card

Input for SD Card (internal memory)

7. USB1

Input for USB Media Player

8. HDMI

Input for HDMI sources

9. PC

 
Input for PC or VGA sources

10. PC Audio

Input for PC audio when PC input is connected



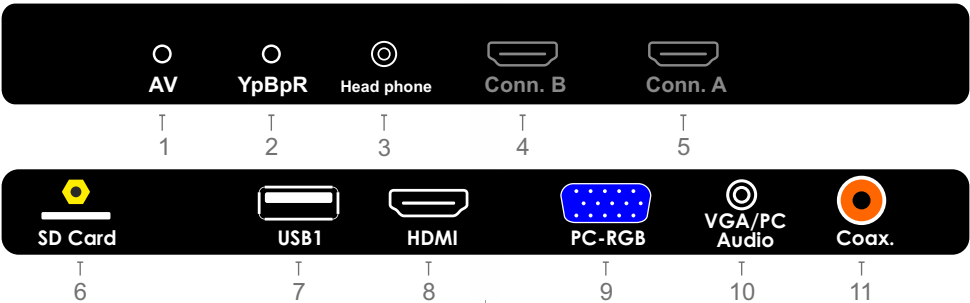


11. Coaxial

Output for digital audio signal (coaxial)



Contents SWEDX Photo Frame

 Included items in SWEDX Photo Frame models:

		
2 x CR2025 Batteries	USB Ext. Cable	Power Cable
		
Remote Control	LED Screen	

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



CR 2025 Battery

CAUTION

The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

 


CR 2025 Battery

SWEDX Photo Frame Inputs

Inputs

- 1. AV**
Input for audio/video sources
**Component and AV shares the same audio input*
- 2. YpBpR**
Input for component sources (YpBpR)
- 3. Headphone**
Output for headphone devices
- 4. Conn. B**
Not used in AD-Screen Mode
- 5. Conn. A**
Not used in AD-Screen Mode
- 6. SD Card**
Input for SD Card (internal memory)
- 7. USB1**
Input for USB Media Player
- 8. HDMI**
Input for HDMI sources
- 9. PC**
Input for PC or VGA sources
- 10. PC Audio**
Input for PC audio when PC input is connected
- 11. Coaxial**
Output for digital audio signal (coaxial)

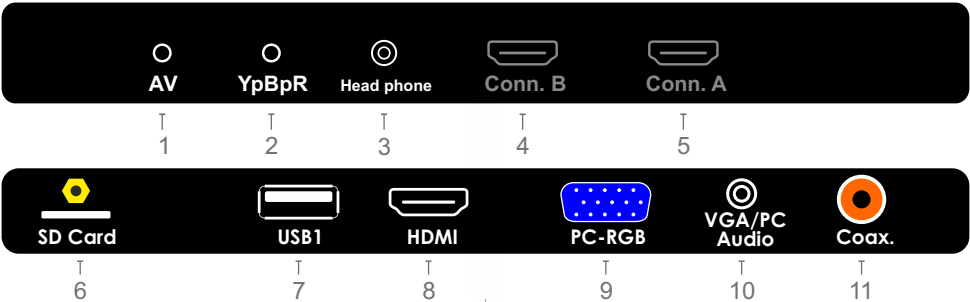


Remote control buttons

1. On/Off button
2. Number buttons for direct channel access
3. Display additional information
4. List TV-channels
5. EPG (Electronic Program Guide)
6. Navigation button *UP*
7. Navigation/adjust button *LEFT*
8. Menu display. In OSD sub-menu press to access previous menu
9. Available sources selection
10. Picture freeze
11. Volume increase
12. Volume decrease
13. Enter sleep mode in certain chosen time
14. Start/Pause play, Start/Paus time shift/alter Teletext mix
15. Stop play/activate Teletext
16. Fast forward/Teletext index
17. Fast backward/ Teletext cancel
18. Fast-text topic selection in Teletext *GREEN*
19. Fast-text topic selection in Teletext *RED*
20. Choose Audio/ language in DTV/USB media player
21. Aspect Ratio selection
22. Shortcut to USB
23. Shortcut to HDMI1,2,3
24. Mute the built-in speakers
25. Previous TV channel in DTV/TV
26. Display favorite channels list
27. Confirm/activate button
28. Navigation/adjust button *RIGHT*
29. Exit the OSD
30. **DOWN**
31. Next channel. When the

- channel list is displayed, it scrolls down to next page in the list
32. Previous channel. When the channel list is displayed, it scrolls up to previous page in the list
33. Instant Recording/ Teletext size selection
34. Display Recorded List/Hold Teletext
35. Previous Title/Display time in Teletext
36. Next Title and Reveal Teletext
37. Fast-text topic selection in Teletext *Yellow*
38. Fast-text topic selection in Teletext *Blue*
39. Activate subtitles in DTV/USB media player
40. Alter TV/Radio Channels mode
41. Shortcut to AV
42. Shortcut to DTV/TV

 Note: This remote control is used for several devices. Apply the functions which are compatible with the device you have purchased.

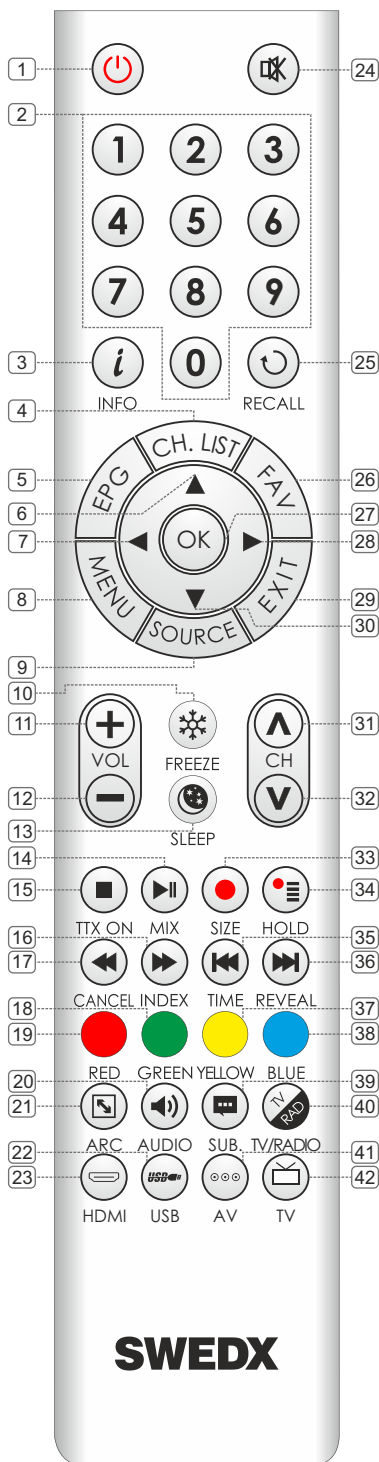

Main Operations

Turning On And Off



Press Power button on the remote control or the On/Off button on the control buttons. The product will turn on and will be ready to be used.



Select Source

Press Source button on the remote control. Then you can see the source list menu shown to the right.

Press Navigation Up/down button on the remote control to select the source and confirm by pressing Enter.

Input Source
AV
YPBPR
PC-RGB
HDMI
USB1
SD Card
OK

Volume Control

Press VOL+ / VOL- button on the remote control to adjust the volume level.

Press MUTE button on the remote control when you need to mute the sound.



OSD Menu Operation

- Press **MENU** button on the remote control to access the OSD Menu. Pressing the same button again will move you backward in the OSD structure.
- Press **ENTER** button to confirm/select.
- Use **LEFT & RIGHT** buttons to navigate or change the parameters of the current sub-menu.
- Use **UP & DOWN** buttons to navigate in the OSD Menu.
- Press **EXIT** button to exit the OSD Menu.



 
OSD Menu Structure

- OSD (On Screen Display) allows users to control or adjust various features and settings in accordance with his/her preferences.
 - Press the MENU button on the remote control to see the main OSD menu.




OSD Menu Operation:

- Main Menu: Press the MENU button on the remote control to enter the main OSD menu. First, choose Main menu item you need with the buttons ◀ & ▶.
To select a Main menu items, just press Enter or Navigation button ▼ on the Remote Control.
- Sub Menu: Each menu item has its own sub menu items to set.
- Sub Menu items:
 - A: If there is no value to adjust it means there is a sub menu which you can access by pressing Enter and modify the menu values. Select sub-menu item with ▲ & ▼ buttons on the remote control and press Enter button to enter the submenu or change the value.
 - B: If there is no ▶ part, the item has adjustable values. Use the ◀ & ▶ buttons to adjust the values.
 - C: If the sub-menu item is grey colored, it means this item is not available in the particular mode.

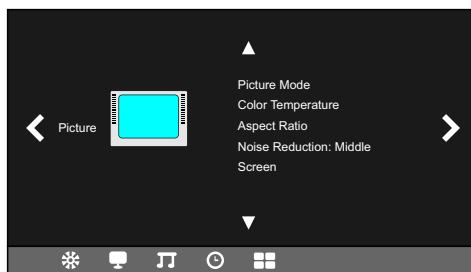

Menus in USB Mode

 When the device is in USB mode, the OSD Menus differ from OSD Menus in all other modes such as HDMI, AV, PC-RGB and YPBPR.

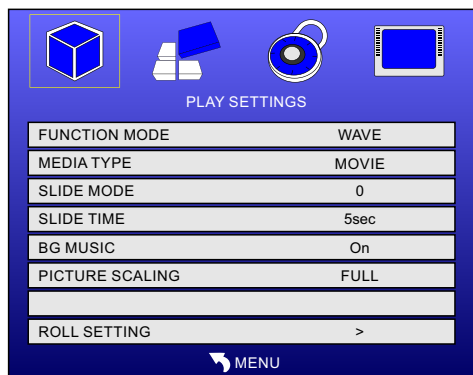

PLAY SETTINGS MENU

FUNCTION MODE

Option: Photo Frame, AD-Screen, Wave

Choose the function mode of the product. 3 function modes are available:

Refer to the correspondent chapter for function modes for details.

MEDIA TYPE

Options: Movie, Picture

This function is applicable in **Wave** mode.

Choose if the product will use movies or pictures to be displayed.

SLIDE MODE

Options: 0-20

The slide mode will decide the transition effect used when sliding pictures. 21 modes are available.

SLIDE TIME

Options: 5sec, 15sec, 30sec, 1min, 5min, 10min, 30min, 1hour, 3hours, 12hours, 24 hours.

The slide time will decide the time duration before next sliding occurs.

BG MUSIC

Options: On, Off

In Photo Frame mode, you can activate BG MUSIC to play audio in the background while displaying the images.

PICTURE SCALING

Option: Original, Full

Choose the picture scaling.

Original will display the image according to its resolution without scaling.

Full will Scale the image to full screen.

Important Notice

In order for the modifications in settings and functions to apply the device will restart automatically when changing the Function Mode. This will happen when you exit the OSD Menu.

ROLL SETTING

 
Options:

Roll Text: On, Off

Text Color: White, Yellow, Blue, Red, Black

BG Color: Yellow, Red, Blue, Transparent


Roll Speed: Low, Middle, High

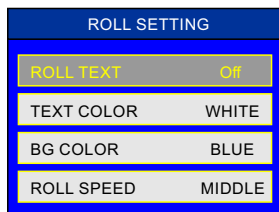

In all modes it is possible to display text rolling at the screen's bottom.

- Create a text file and label it **Telop.txt**
- Copy the file to the internal memory
- Activate Roll Text (ON)

 In the Roll Setting you can choose the text color, background color (or transparent) and the rolling speed using the options above.

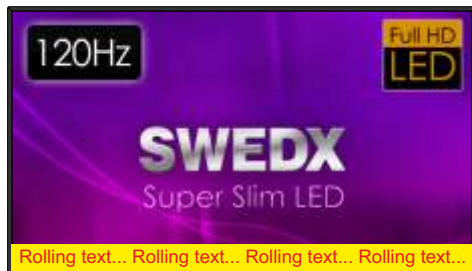

ADVANCED MENU

LANGUAGE

Option: English, Japanese, Chinese

Choose the OSD language

AUTO PLAY

Options: On, Off

In Photo Frame mode, choose to start displaying the picture automatically (On) or start displaying the pictures manually (Off).

REPEAT MODE


Options: All, Once, Cancel

In Photo Frame mode, choose to repeat the picture displaying, All for continuous repeating, Once for one time repeating, Cancel to not repeat the displaying.

PLAY LOG

Options: On, Off

 
When activated (On) a log file will be created containing information about the displayed files with time stamp

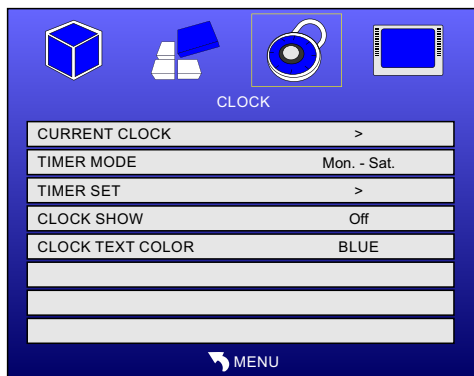

CLOCK MENU

The device is equipped with built-in battery to save the time information even if the device is disconnected from power source. The device is also equipped with advance timer functions with up to 5 timer sets.

 CURRENT CLOCK

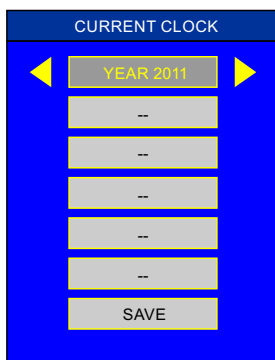

Set the current time in Year, Month, Hours, Minutes and Seconds. Setting correct time is essential in order to use the timer function.

TIMER MODE

Options:

Off

Once

Every Day

Mon.~Fri.

 
Mon.~Sat.

Sat.~Sun.

Sunday

The timer mode will define when the timer will be active. For example if you choose Every Day then the timer will be active turning On and Off the product daily according to the Timer Set settings.

TIMER SET

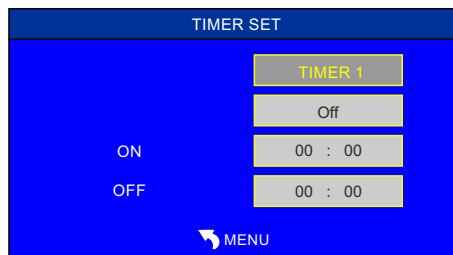

The timer set will define the time when the device will turn On and Off.

Up to 5 timer sets can be defined.

- Define the Timer sets according to the instructions below:
- Choose the Timer set (1-5)
- Choose to activate the current chosen set by turning it On
- Define the ON time in hours and minutes
- Define the OFF time in hours and minutes

CLOCK SHOW

Options: Off, Time, Date

The Clock Show will display the current time in the upper left corner of the screen.

Off: No time will be displayed

Time: The time will be displayed in the following format:

HH:MM

Date: The date and the time will be displayed in the following format:

 
YYYY MM DD HH:MM

CLOCK TEXT COLOR

Options: White, Black, Red, Blue, Yellow

Choose the color for the clock text.



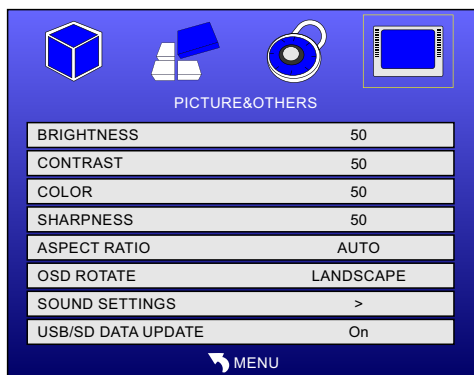

PICTURE&OTHER MENU

BRIGHTNESS

Adjust the brightness between 0-100.

CONTRAST

Adjust the contrast between 0-100.

COLOR

Adjust the color intensity between 0-100.

SHARPNESS

Adjust the sharpness between 0-100.

ASPECT RATIO

Options: Auto, 16:9, 4:3

Choose the aspect ratio for the displayed content.

OSD ROTATE

 
Options: Landscape, Portrait

Landscape will display the OSD menu in horizontal mode.

Portrait will display the OSD menu in vertical mode which is suitable in case of rotating the screen.



Landscape

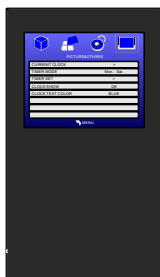

Portrait

USB/SD DATA UPDATE

Option: On, Off

The device can be equipped with Micro SD card to be used as internal memory. The Micro SD card is covered with a lock for protection against accidental or unauthorized removal.

This feature is also easy and convenient update of the content to be displayed.

To copy the new files to the internal memory follow the following steps:

- Activate the USB/SD Data Update (On)

- Create a TEXT file and label it **Autocopy.txt**, the file should be empty

- Copy the **Autocopy.txt** file and all other files you want to transfer to the Micro SD card (internal memory) to a USB flash memory

- Insert the USB flash memory to USB1 input

 
 
- Restart the screen (Power OFF and then Power ON)

- SD DATA UPDATE window will appear, choose YES to start the update procedure

- In the new windows choose YES to format the SD Card


- When the formatting is completed the device will start copying the files from the USB flash memory to the SD Card (internal memory)

- When the copying is completed deactivate the SD/USB Data Update by turning it Off



Menus in AV, YPBPR and HDMI mode

 PICTURE MENU

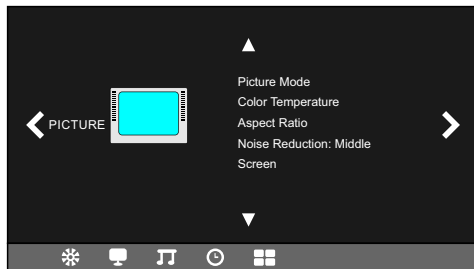

PICTURE MODE

In this menu you can choose the picture settings. Choose between 3 predefined settings (Standard, Mild, Dynamic) or define your own settings under the User mode. The values that can be adjusted are:

Contrast between 1-100

Brightness between 1-100

Color between 1-100

Sharpness between 1-100

Tint between 1-100 (only in NTSC signal)

COLOR TEMPERATURE

In this menu you can choose the color temperature settings. Choose between 3 predefined settings (Standard, Warm, Cool) or define your own settings under the User mode. The values that can be adjusted are:

Red between 1-100

Green between 1-100

Blue between 1-100

ASPECT RATIO

In this menu you can choose the aspect ratio settings. The following predefined aspect ratios are available:

Auto¹

4:3

16:9

Zoom1¹

Zoom2¹

Just Scan²

Panorama

Point to point²

1. Not available in PC-RGB mode.

2. Available only in HDMI mode.

NOISE REDUCTION

In this menu you can choose the settings for noise reduction. Choose between

Off

Low

Middle

High

Default

SCREEN

 
In this menu you can choose the screen settings when the device is in **PC-RGB** mode. The values that can be adjusted are:

Horizontal Position

Vertical Position

Size

Phase

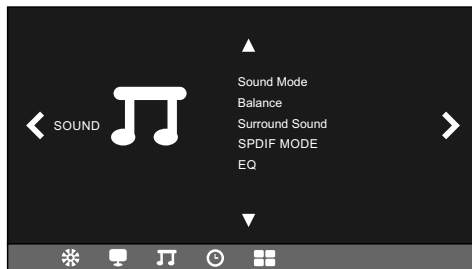

SOUND MENU

SOUND MODE

In this menu you can choose the sound settings. Choose between 4 predefined settings (Standard, Music, Movie, Sports) or define your own settings under the User mode. The values that can be adjusted are:

Treble between 1-100

Bass between 1-100

BALANCE

In this menu you can choose the sound balance between Left and Right speakers.

AUTO VOLUME

Not supported in this device

SURROUND SOUND

In this menu you can choose the surround sound settings. Choose between:

Off

Surround

SRS TrusSurround XT

SPDIF MODE

In this menu you can choose how the digital audio signal is sent out from the device through the COAX. (output 11). Choose between:

Auto

 
PCM (Pulse-code modulation)

EQ

In this menu you can adjust the balance between sound frequencies. You can adjust the following:

120Hz, 500Hz, 1.5KHz, 5KHz, 10KHz

TIME MENU

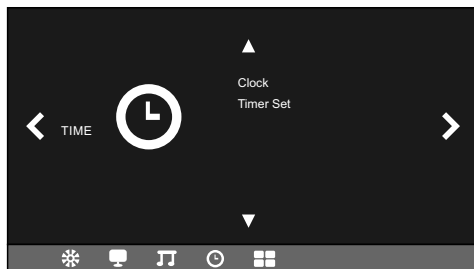

CLOCK

In this menu you can set the device's time. It is essential to set the correct time in order to use the timer function.

TIMER SET

Options:

Off

Once

Every Day

Mon.~Fri.

Mon.~Sat.

Sat.~Sun.

Sunday

The timer mode will define when the timer will be active. For example if you choose Every Day then the timer will be active turning On and Off the product daily according to the Timer Set settings.

The timer set will define the time when the device will turn On and Off.

Up to 5 timer sets can be defined.

● Define the Timer sets according to the instructions below:

 
● Choose the Timer set (1-5)

● Choose to activate the current chosen set by turning it On

● Define the ON time in hours and minutes

● Define the OFF time in hours and minutes

OPTION MENU

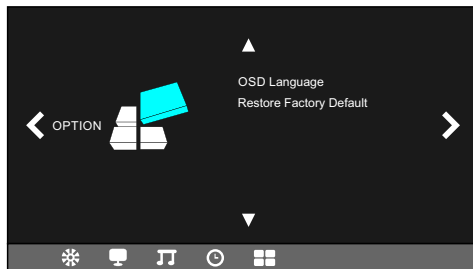


LANGUAGE

Choose the language for the OSD Menu.

RESTORE FACTORY DEFAULT

This menu will restore all settings to the factory settings and erase all adjustments made by the user. When using this option you will be asked for confirmation to restore the settings.

 Description of SWEDX Wave

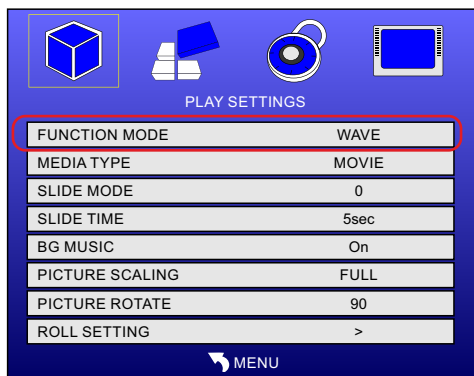

Wave is a new innovative way to attract audiences. It is a combination of a LED screen and 8 control buttons. Each button is associated with a video/image file stored on the Micro SD Card (internal memory)

Touching the button or waving the hand above the buttons will load and display the associated video/image automatically. When the video displaying is completed SWEDX wave will load the main video/image and display it repeatedly until a button is interacted.

Thanks to SWEDX Wave technology the buttons can also be placed behind any material such as, glass, fabric, wood etc. The interaction is still there creating Jaw-dropping effect.

SWEDX wave applies to wide range of business field such as exhibitions, banks, hotels, restaurants, travel agencies etc. In fact the list is endless of ideas of using SWEDX wave to display products and services and attract all kind of audiences and customers.

Activate Wave Mode:

To activate the device to function in Wave mode follow these steps:

Press **SORUCE**

Choose **SD Card**

Press **OK**

Press **MENU**

Choose **PLAY SETTINGS** menu

Choose **FUNCTION MODE**

Change with **ARROWS** or **OK** button to **WAVE**

Exit the **MENU**

SWEDX wave operations

1. Create 9 videos/images files and label it according the list below.

The main video/image file which is displayed and repeated continuously until a control button is interacted should be labelled

00.***

(*** is the file format which can be AVI, MPG or other supported video files, or JPG, GIF, PNG for image files (see the supported file list).

The other video files should be labelled as below

01.***

02.***

03.***

04.***

 
05.***

06.***

07.***

08.***

The video/image files are associated with the control buttons according to the drawing below

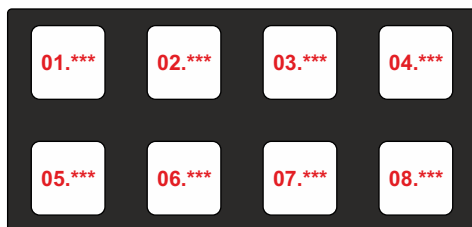

The video/image files must be copied to the **ROOT** of an USB Flash Memory.

While displaying a video/image associated to a control button you can **PAUSE** the displayed video/image by touching or wave above the associated button. To **reRESUME** displaying the video/image touch or wave above the same button again.

 
To display another video/image just touch or wave above any control button (it is not necessary to wait until the current video/image displaying is completed).

Description of SWEDX AD-Screen



In AD-Screen mode you can use the screen to display a combination of videos and images. The videos and images can be created in play lists. For the videos you can create a play list displaying several videos in predefined order. For the images the play lists will be displayed according to predefined duration time.

The layout is created by using KADE software (available for windows) or by creating an XML file. Below is the main interface for KADE software.

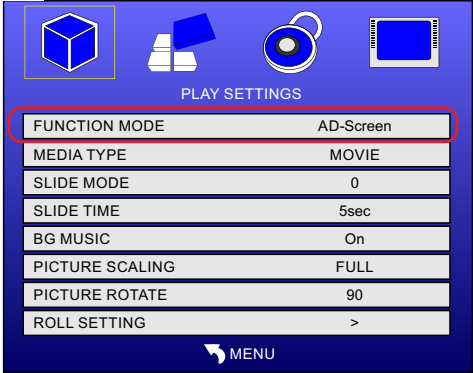


Description of KADE software



The software allows creating multiple windows and playlists in addition to background image, time, logo and marquee text. The project is finally saved to USB memory and inserted in the screen where it can be copied to the internal memory.

 1. Displays the main menu

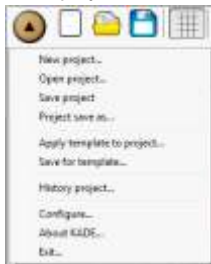

2. Create new project
3. Open project
4. Save project
5. Show/hide grid
6. Display projects history
7. Apply template to project
8. Add a new window
9. Delete selected window
10. Show all files in the library (source files)
11. Show video files in the library (source files)
12. Show image files in the library (source file)
13. Add a file to the library
14. Delete a file from the library
- A. Adjust the selected windows position and

size. The V button is to choose from predefined sizes.

B. Adjust the following:

Swift to vertical layout instead of horizontal layout

Add Background image

Show/hide logo

Show/hide time

The X button is to delete the background image

C. Add Marquee text and choose font color and background color and text speed

D. Create playlist for the selected window

Restrictions and features:

1. It is possible to add only 1 video window
2. The marquee text and time position and size are restricted in the software. It can be modified in the XML file created when saving the project. The marquee text file name must be

ScrollText.txt

3. Unlimited number of image windows can be added

On the next page an example of the XML file is shown.

An Example of the XML file

```
<?xml version="1.0" encoding="UTF-8"?>
<ADPLAYER>
  <PARAM vert="false" reve="false"></PARAM>
  <BACKGROUND visible="true" x="0" y="0" w="1366" h="768">297.jpg</BACKGROUND>
  <LOGO visible="false" x="0" y="0" w="100" h="60"></LOGO>
  <TIME visible="true" x="966" y="0" w="400" h="300"></TIME>
  <MARQUEE visible="true" x="0" y="707" w="1366" h="60" bgcolor="65535" color="10485760"
speed="0">ScrollText.txt</MARQUEE>
  <FILE_LIST>
    <P s="false">ScrollText.txt</P>
    <P s="true">camo-panel-600px.jpg</P>
    <P s="true">swedx-camo-grey-dark.jpg</P>
    <P s="true">swedx-camo-orange.jpg</P>
    <P s="false">swedx-camo-panel-background.jpg</P>
    <P s="true">swedx-camo-panel-image-1920x1080-red.jpg</P>
    <P s="true">DSCN3263.jpg</P>
    <P s="false">00.mkv</P>
    <P s="false">297.jpg</P>
  </FILE_LIST>
  <MAIN_WINDOW visible="true" x="51" y="120" w="742" h="528">
    <TRACK>
      <A interval="4" vol="50">00.mkv</A>
    </TRACK>
  </MAIN_WINDOW>
  <SUB_WINDOW conut="1">
    <WINDOW visible="true" x="835" y="40" w="458" h="554">
      <TRACK>
        <A interval="4" vol="50">swedx-camo-panel-image-1920x1080-red.jpg</A>
        <A interval="4" vol="50">swedx-camo-grey-dark.jpg</A>
        <A interval="4" vol="50">swedx-camo-orange.jpg</A>
        <A interval="4" vol="50">camo-panel-600px.jpg</A>
        <A interval="4" vol="50">DSCN3263.jpg</A>
      </TRACK>
    </WINDOW>
  </SUB_WINDOW>
</ADPLAYER>
```

Description of SWEDX Photo Frame



In Photo Frame mode you can use the screen to display a images. The following features are available:

- You can create a play list of images to be displayed
- You can choose the duration time for the images
- You can choose the transition effect when sliding the images
- You can choose to have background music
- You can choose to display marquee text
- You can choose to display date and time

To create a play list follow the steps below:

In the play list displayed on the screen mark the images you want to add to the play list by marking the image file and pressing OK on the remote control. When the image is marked a CHECK icon will appear to the left of the file name.



You can mark all images by pressing the GREEN button on the remote control.



 
 
You can delete all markings by pressing the RED button on the remote control.



When you have marked all images you want to add to the play list press the YELLOW button on the remote control to save the list.



Press PLAY button on the remote to start displaying the play list.

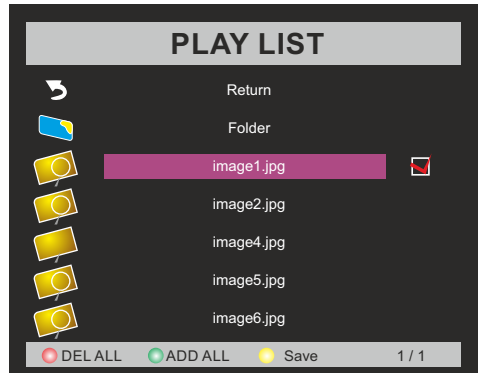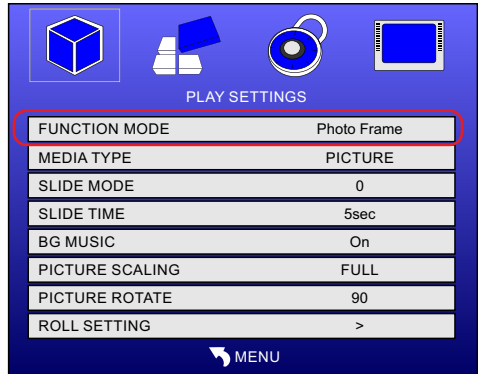

Warranty and Service

The following terms apply only to new "in the original carton" SWEDX products marketed and distributed by SWEDX, which are purchased and used by the original consumer purchaser.

Depending on the model, your terms and conditions may be different from those shown below, and this information is subject to change without prior notice. Unless specifically stated otherwise, used and reconditioned products that are resold have no warranty from SWEDX and are considered sold "AS-IS", however, the selling dealer may offer additional service options.

Warranty for SWEDX products:

Check with your dealer for the warranty period.

What the warranty covers:

SWEDX warrants your SWEDX display(s) against defects in material and workmanship during the warranty period from SWEDX factory delivery date shown in the shipping documents. If a product proves to be defective in material or workmanship during the warranty period, SWEDX will, at its sole option repair or replace the product with a similar product, provided the purchaser adheres to certain return authorization procedures and guidelines. SWEDX reserves the right to charge customer in case of warranty conditions not are fulfilled.

Who the warranty protects:

This warranty is valid only for the first purchaser.

What the warranty does not cover:

1. Any product which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - A. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - B. Repair or attempted repair by anyone not authorized by SWEDX.
 - C. Any damage of the product due to shipment.
 - D. Removal or installation of the product.
 - E. Causes external to the product, such as electric power fluctuations or failure.
 - F. Use of supplies or parts not meeting SWEDX specifications.
 - G. Normal wear and tear.
 - H. Any other cause which does not relate to a product defect.
3. Cosmetic damage by purchaser, such as markings, discoloration, scratches, dents, anti-theft devices markings, gouges or any

other defacement.

4. Physically damaged products by purchaser, such as broken PCB, Housing, damaged LED Module.
5. No Defect Found (product returned to SWEDX as defective but failure is not duplicated by SWEDX's test method.)
6. The product is not in accordance with the fault in the application
7. Timber is a lifelike natural material which can cause some little changes in the precision of the produced product such as small openings line beside the connecting point and some other small changes which are out of SWEDX control and don't make any effect for the product functionality.

Dead on Arrival (DOA)

If the product fails within the manufacturer's DOA period, a replacement product will be offered.

Before contacting us:

In many cases, your TV may not need repair. Before you contact us, please consult the troubleshooting section in your user's manual or SWEDX's FAQ web pages at <http://www.swedx.com> to see if you can easily remedy the problem yourself.

How to get service:

For information on obtaining warranty service, contact SWEDX dealer (the place where you bought your product) in first choice. If for any reason you can not contact your dealer, please contact SWEDX Customer Service by visiting <http://www.swedx.com>.

SWEDX technical support services:

During the period of product warranty, we support your basic configuration, setup and troubleshooting questions, and when required, we provide you with all instructions on how to return your product for repair. For support inquiries, please visit <http://www.swedx.com>.

SWEDX reserves the right to make final decisions regarding problem determination and the appropriate service option. Exchange units assume the remaining warranty of the original product. Please refer to your SWEDX Limited Warranty Statement for complete terms and conditions, as some models have other terms and conditions. Some limitations and restrictions apply and these programs are subject to change without prior notice.

Limitation of liability

If your SWEDX product fails to work as warranted above, your sole and exclusive remedy shall be repaired or replaced. SWEDX's maximum liability under this limited warranty is expressly limited to the lesser of the price you have paid for the product or the cost of repairing or replacement of any hardware components that malfunction in conditions of normal use. SWEDX is not liable for any damages caused by the product or the failure of the product to perform, including any lost profits or savings or special, incidental, or consequential damages. SWEDX is not liable for any claim made by a third party or made by you for a third party.

This limitation of liability applies whether damages are sought, or a claim made, under this limited warranty or as a tort claim (including negligence and strict product liability), a contract claim, or any other claim. This limitation of liability cannot be waived or amended by any person. This limitation of liability will be effective even if you have advised SWEDX.

SWEDX