

X8 TOTAL-BODY ELLIPTICAL CROSS-TRAINER

---

# ASSEMBLY and USER INSTRUCTIONS



*LifeFitness*

## CORPORATE HEADQUARTERS

5100 River Road  
Schiller Park, Illinois 60176 • U.S.A.  
847.288.3300 • FAX: 847.288.3703  
800.735.3867 (Toll-free within U.S.A., Canada)  
**Global Website: [www.lifefitness.com](http://www.lifefitness.com)**

## AMERICAS

### North America Life Fitness Inc.

5100 N River Road  
Schiller Park, IL 60176 U.S.A  
Telephone: (847) 288 3300  
Fax: (847) 288 3703  
Service Email: [commercialservicereply@lifefitness.com](mailto:commercialservicereply@lifefitness.com)  
Sales/Marketing Email: [commercialsales@lifefitness.com](mailto:commercialsales@lifefitness.com)  
Operating Hours: 7:00 am-6:00 pm (CST)

### Brazil Life Fitness Brasil

Av. Cidade Jardim, 900-Itaim  
Sao Paulo, SP  
01454-000  
BRAZIL  
SAC (800) 773 8282  
Tel: (+55) 11.3095.5200  
Fax: (+55) 11.3095.5201  
Service Email: [suporte@lifefitness.com.br](mailto:suporte@lifefitness.com.br)  
Sales/Marketing Email: [lifefitness@lifefitness.com.br](mailto:lifefitness@lifefitness.com.br)  
Operating Hours: 8:30 am-17:30 pm (BRT)

### Latin America & Caribbean\* Life Fitness Inc.

5100 N River Road  
Schiller Park, IL 60176 U.S.A  
Telephone: (847) 288 3300  
Fax: (847) 288 3703  
Service Email: [customersupport@lifefitness.com](mailto:customersupport@lifefitness.com)  
Sales/Marketing Email: [commercialsales@lifefitness.com](mailto:commercialsales@lifefitness.com)  
Operating Hours: 7:00am-6:00pm (CST)

---

## EUROPE, MIDDLE EAST, & AFRICA (EMEA)

### Netherlands & Luxemburg Life Fitness Atlantic BV

Bijdorpplein 25-31  
2992 LB Barendrecht  
THE NETHERLANDS  
Telephone: (+31) 180 646 666  
Fax: (+31) 180 646 699  
Service Email: [internationalservicesupport@lifefitness.com](mailto:internationalservicesupport@lifefitness.com)  
Sales/Marketing Email:  
[marketing.benelux@lifefitness.com](mailto:marketing.benelux@lifefitness.com)  
Operating Hours: 9.00h-17.00h (CET)

### United Kingdom & Ireland Life Fitness UK LTD

Queen Adelaide  
Ely, Cambs, CB7 4UB  
Telephone: General Office (+44) 1353.666017  
Customer Support (+44) 1353.665507  
Fax: (+44) 1353.666018  
Service Email: [uk.support@lifefitness.com](mailto:uk.support@lifefitness.com)  
Sales/Marketing Email: [life@lifefitness.com](mailto:life@lifefitness.com)  
Operating Hours:  
General Office: 9.00am - 5.00pm (GMT)  
Customer Support: 8.30am - 5.00pm (GMT)

### Germany & Switzerland Life Fitness Europe GMBH

Siemensstrasse 3  
85716 Unterschleissheim  
GERMANY  
Telephone: (+49) 89.31 77 51.0 (Germany)  
(+41) 0848 000 901 (Switzerland)  
Fax: (+49) 89.31 77 51.99 (Germany)  
(+41) 043 818 07 20 (Switzerland)  
Service Email: [kundendienst@lifefitness.com](mailto:kundendienst@lifefitness.com)  
Sales/Marketing Email: [kundenberatung@lifefitness.com](mailto:kundenberatung@lifefitness.com)  
Operating Hours: 9.00h-17.00h (MEZ)

**8758501 Rev A-1  
06/09**

**Austria**  
**Life Fitness Austria**

Vertriebs G.m.b.H.  
Dückerstraße 7-9/3/36  
1220 Vienna  
AUSTRIA  
Telephone: (+43) 1.61.57.198  
Fax: (+43) 1.61.57.198.20  
Service Email: kundendienst@lifefitness.com  
Marketing/Sales Email: kundenberatung@lifefitness.com  
Operating Hours: 9.00h-17.00h (MEZ)

**Spain**  
**Life Fitness IBERIA**

C/Frederic Mompou 5,1ª<sup>a</sup>  
08960 Sant Just Desvern Barcelona  
SPAIN  
Telephone: (+34) 936 724 660  
Fax: (+34) 936 724 670  
Service Email: info.iberia@lifefitness.com  
Sales/Marketing Email: info.iberia@lifefitness.com  
Operating Hours:  
9.00h-18.00h (Monday-Thursday)  
8.30h-15.00h (Friday)

**Italy**  
**Life Fitness ITALIA S.R.L.**

Via Crivellini 7/N  
37010 Affi Verona  
ITALY  
Telephone: (+39) 045.7237811  
Fax: (+39) 045.7238197  
ServiceEmail: assistenzatecnica@lifefitness.com  
Sales/Marketing Email: info@lifefitnessitalia.com  
Operating Hours: 8.30h -18.00h (CET)

**Belgium**  
**Life Fitness Benelux NV**

Parc Industriel de Petit-Rechain  
4800 Verviers  
BELGIUM  
Telephone: (+32) 87 300 942  
Fax: (+32) 87 300 943  
Service Email: internationalservicesupport@lifefitness.com  
Sales/Marketing Email: marketing.benelux@lifefitness.com  
Operating Hours: 9.00h -17.00h (CET)

**All Other EMEA countries &  
distributor business C-EMEA\***

Bijdorpplein 25-31  
2992 LB Barendrecht  
THE NETHERLANDS  
Telephone: (+31) 180 646 666  
Fax: (+31) 180 646 699  
Service Email: service.db.cemea@lifefitness.com  
Sales/Marketing Email: marketing.db.cemea@lifefitness.com  
Operating Hours: 9.00h-17.00h(CET)

---

**ASIA PACIFIC (AP)**

**Japan**  
**Life Fitness Japan**

Nippon Brunswick Bldg., #8F  
5-27-7 Sendagaya  
Shibuya-Ku, Tokyo  
Japan 151-0051  
Telephone: (+81) 3.3359.4309  
Fax: (+81) 3.3359.4307  
Service Email: service@lifefitnessjapan.com  
Sales/Marketing Email: sales@lifefitnessjapan.com  
Operating Hours: 9.00h-17.00h (JAPAN)

**China and Hong Kong**  
**Life Fitness Asia Pacific LTD**

Room 2610, Miramar Tower  
132 Nathan Road  
Tsimshatsui, Kowloon  
HONG KONG  
Telephone: (+852) 2891.6677  
Fax: (+852) 2575.6001  
Service Email: HongKongEnquiry@lifefitness.com  
Sales/Marketing Email: ChinaEnquiry@lifefitness.com  
Operating Hours: 9.00h-18.00h

**All Other Asia Pacific countries &  
distributor business Asia Pacific\***

Room 2610, Miramar Tower  
132 Nathan Road  
Tsimshatsui, Kowloon  
HONG KONG  
Telephone: (+852) 2891.6677  
Fax: (+852) 2575.6001  
Service Email: HongKongEnquiry@lifefitness.com  
Sales/Marketing Email: ChinaEnquiry@lifefitness.com  
Operating Hours: 9.00h-18.00h

# 1. INTRODUCTION

## 1.1 WELCOME / SAFETY / CAUTION

**Thank you for purchasing a Life Fitness Cross-Trainer. Before using this product, please read this user manual in its entirety to ensure that you have the knowledge to safely and properly operate all of the features of your Cross-Trainer. We hope you achieve the product experience that you expect, but if you do have any service issues, please go to the How to Obtain Product Service section which will provide information on obtaining product service.**

### FCC Warning - Possible Radio / Television Interference

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the user manual, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Class HB (Home): Domestic use. Not suitable for therapeutic purposes.



**CAUTION: Any changes or modifications to this equipment could void the product warranty.**

Any service, other than cleaning or user maintenance, must be performed by an authorized service representative. There are no user-serviceable parts.

**This Operation Manual describes the functions of the following products:**

### **Life Fitness Cross-Trainer: X8**

See Section 9, titled *Specifications* page in this manual for product-specific features.

Statement of Purpose: The Life Fitness Cross-Trainer is an exercise machine that combines low-impact elliptical pedaling with push/pull arm motion to provide an efficient, effective total body workout.



Health-related injuries may result from incorrect or excessive use of exercise equipment. The manufacturer **STRONGLY** recommends seeing a physician for a complete medical exam before undertaking an exercise program, particularly if the user has a family history of high blood pressure or heart disease; or is over the age of 45; or smokes, has high cholesterol, is obese, or has not exercised regularly in the past year. The manufacturer also recommends consulting a fitness professional on the correct use of this product.

If, at any time while exercising, the user experiences faintness, dizziness, pain, or shortness of breath, he or she must stop immediately.

## 1.2 TABLE OF CONTENTS

1	Introduction	1
1.1	Welcome/Safety/Caution	1
1.2	Table Of Contents	3
1.3	Important Safety Instructions	5
2	Assembly Instructions	9
3	Initial Setup	17
	Where To Place The Cross-Trainer // How To Stabilize The Cross-Trainer //	
	Powering Up The Cross-Trainer	
4	Main Features	19
	Mounting The Machine // Stride Lengths For Different Users // Accessories // Contact Heart Rate //	
	FlexPedal™ Shock Absorption System	
5	Activity Zone	21
5.1	Stride Length Functionality	22
	Key Press // Display Changes	
5.2	Resistance Level & Intensity Level Functionality	23
	Key Press // Upper Console Display Changes // Activity Zone Display Changes	
5.3	Total Body Trainer	24
	Advanced Console // Basic Console	
5.4	Leg Sculptor Mode Functionality	25
	Key Press // Display Changes	

6	Leg Sculptor™ Mode .....	.26
7	Activity Zone Settings Menu .....	.27
7.1	Navigating The Settings Menu .....	.27
	Entering The Settings Menu // Adjusting Settings Menu Options //	
	Scrolling Through Settings Menu Options // Auto Enter Feature // Exiting The Settings Menu	
7.2	Settings Menu Options .....	.29
	Audio // Sleep Mode // Contrast // Units // Language	
8	Service & Product Maintenance .....	.34
8.1	Troubleshooting .....	.34
8.2	Preventative Maintenance Tips .....	.38
8.3	How To Obtain Product Service .....	.39
9	Specifications .....	.40
10	X8 Warranty Information .....	.41

© 2009 Life Fitness, a division of Brunswick Corporation. All rights reserved. Life Fitness is a registered trademark of Brunswick Corporation. Any use of these trademark, without the express written consent of Life Fitness is forbidden.

## 1.3 IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the Cross-Trainer.



**SAFETY WARNING: The safety of the product can be maintained only if it is examined regularly for damage and wear. See Preventative Maintenance section for details.**

- Before using this product, it is essential to read this ENTIRE operation manual and ALL instructions. The Cross-Trainer is intended for use solely in the manner described in this manual.
- Always follow the console instructions for proper operation.
- Close supervision is necessary when used by or near children, invalids or disabled persons.
- Never insert objects into any opening in the Cross-Trainer. If an object should drop inside, carefully retrieve it. If the item is beyond reach, contact Customer Support Services.
- Never place liquids of any type directly on the unit, except in an accessory tray. Containers with lids are recommended.
- Do not use the Cross-Trainer outdoors, near swimming pools or in areas of high humidity.
- Keep all loose clothing, shoelaces, and towels away from the Cross-Trainer pedals.
- Keep the area around the Cross-Trainer clear of any obstructions, including walls and furniture.
- Use caution when mounting or dismounting the Cross-Trainer. While exercising, always hold onto the user arms or stationary handlebar.
- Never operate a Life Fitness product if it has been dropped, damaged, or even partially immersed in water. Contact Life Fitness Customer Support Services.
- Keep the power cord away from heated surfaces. Do not pull the equipment by the power cord or use the power cord as a handle.
- Do not run the power cord on the floor under or along side of the Cross-Trainer.



- Wear shoes with rubber or high-traction soles. Do not use shoes with heels, leather soles, cleats or spikes. Do not use the Cross-Trainer in bare feet.
- Do not tip the Cross-Trainer on its side during operation.
- Keep hands and feet away from all moving parts.
- To ensure proper functioning of this product, do not install attachments or accessories that are not provided or recommended by Life Fitness.
- Use this product in a well-ventilated area.
- Use this product on a solid, level surface.
- Make sure that all components are fastened securely.



**The heart rate hand pulse sensors provide an approximate heart rate value. The sensors are not medical devices and should not be used in any type of medical application.**

### **SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

**DANGER** - To reduce the risk of electrical shock:

- Always unplug this appliance from the electrical outlet immediately after using and before cleaning.



**SAFETY WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:**

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.

- Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- Do not carry this appliance by supply cord or use cord as a handle.
- Keep the cord away from heated surfaces.
- Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove plug from outlet.


**SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE.**

## GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**DANGER:** Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in the figure. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

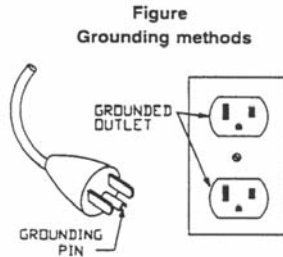

## 2. ASSEMBLY INSTRUCTIONS

### Parts List:




**12 MM BLACK PHILLIPS HEAD SCREW**




**8MM BLACK PHILLIPS HEAD SCREW**




**8MM SILVER PHILLIPS HEAD SCREW**

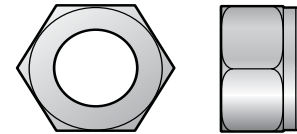


**M10 HEX NUT**

 

 
**12MM BLACK PHILLIPS HEAD SCREW  
(CONSOLE MOUNTING)**




**12MM SILVER PHILLIPS HEAD SCREW**

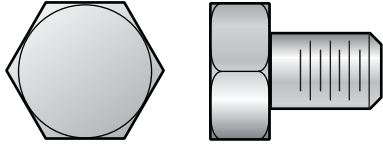


**M10 X 15MM SILVER HEX HEAD BOLT**

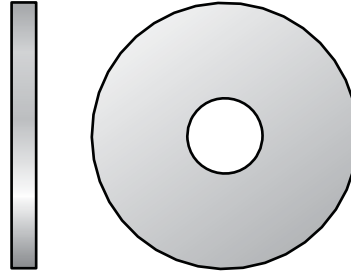

**FLAT WASHER 10MM ID**

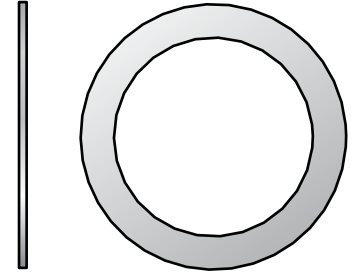


**LARGE FLAT WASHER**

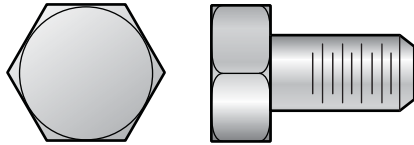

**M10 X 20MM SILVER HEX HEAD BOLT**



**M10 X 74MM SILVER HEX HEAD BOLT**

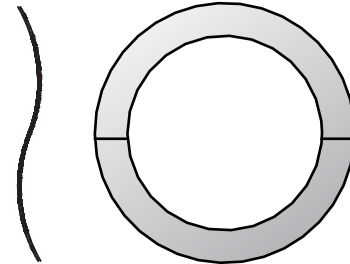

**WAVE WASHER**

## Tools Needed:

**17mm Socket Wrench, Phillips Screwdriver**

### Step 1 Packaging

**Parts:** None

Remove all packaging and place main components to the side of the box. Break box down in each of the four corners.


**NOTE:** Use care when removing the foam blocks that support the pedal arms. Follow the unpacking instruction sheet attached to the foam blocks.

### Step 2 Assemble the Stabilizers

**Parts:** Hardware Bag #1 (4, M10 x 15mm Silver Hex Head Bolts)

**Tools:** 17mm Socket Wrench

Assemble the stabilizer tubes (feet) (A) to the bottom base brackets (B) of the product using two M10 x 15mm Silver Hex Head Bolts (1) on each stabilizer tube. Both stabilizer tubes (feet) are identical.

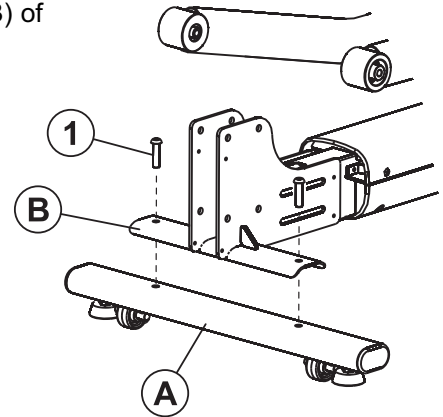

### Step 3 Assemble the Console Upright

**Parts:** Hardware Bag #2 (3, M10 x 74mm Silver Hex Head Bolts)  
(1, M10 x 20mm Silver Hex Head Bolt)

**Tools:** 17mm Socket Wrench


The console upright tube (C) is pre-assembled with one bolt so that you can simply lift the upright into place by pivoting upward. Hold the upright in place and install three M10 x 74mm Silver Hex Head Bolts (2) into the side of the main bracket (D). Install one M10 x 20mm Silver Hex Head Bolt (3) into the front of the bracket.

**CAUTION:** Do not pinch wires when assembling the upright.


### Step 4 Connect Base Wiring

**Parts:** None

Connect the two wires (E) at the base of the upright.

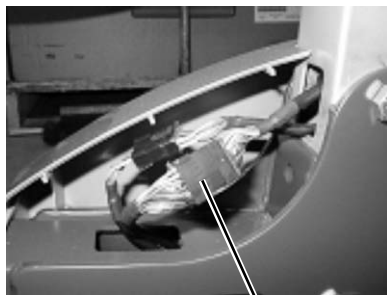

E

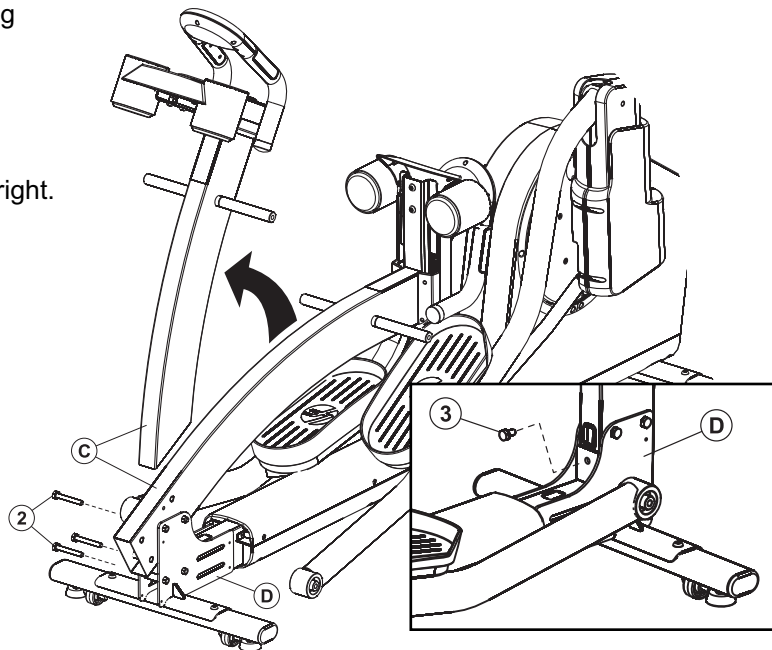

## Step 5 Assemble the Rocker Arms; Moving Arm Pivot Covers

**Parts:** Hardware Bag #3 (2, Wave Washers, 2 Large Flat Washers)  
(2, Flat Washers)  
(2, M10 x 20mm Silver Hex Head Bolts)  
(4, 8mm Black Phillips Head Screws)

**Tools:** 17mm Socket Wrench, Phillips Screwdriver


Slide one large flat washer (4) and one wave washer (5) onto the user right pivot shaft (F). Slide the washers fully over the pivot shaft until seated against the pre-installed stop ring (G).

Locate the user right rocker arm assembly (H) marked with an R. With the top handgrip facing the front of the units slide the right rocker arm assembly onto the user right pivot shaft until seated against the washers.

Secure the rocker arm assembly to the pivot shaft using one flat washer (6) and one M10 x 20mm Silver Hex Head Bolt (7). Tighten the bolt securely. Repeat the procedure for the left rocker arm assembly.

Attach the right side upper pivot covers (J) labeled with the letter "R" over the upright shaft. Snap the covers together and use two 8mm black Phillips head screws (8) to attach the covers. Repeat for left side.

**CAUTION:** There is a different left and right cover.

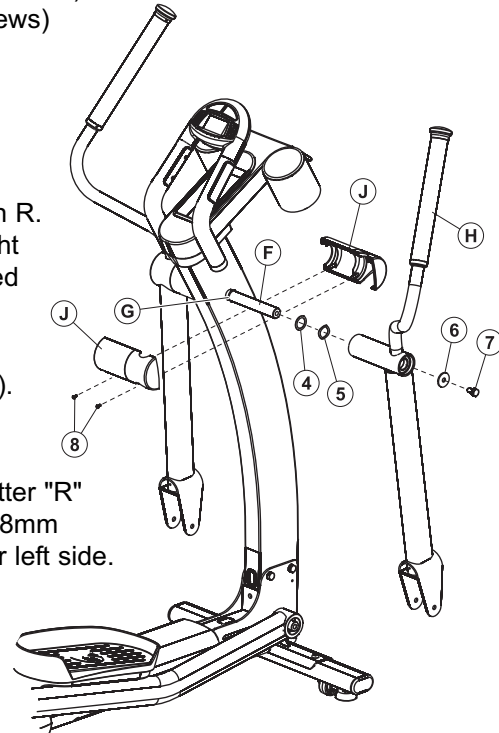



## Step 6 Assemble Moving Arms to Pedal Arms; Pedal / Moving Arm Joint Pivot Covers


**Parts:** Hardware Bag #4 (2, M20 x 74mm Silver Hex Head Bolts)  
(2, M10 Hex Nuts)  
(4, 8mm Black Phillips Head Screws)

**Tools:** 17mm Socket Wrench, Phillips Screwdriver

Lift the front end of the user left pedal lever (K) to meet the left rocker arm clevis (L). Secure the pedal lever to the rocker arm clevis using one M10 x 74mm Silver Hex Head Bolt (9) and one M10 Hex Nut (10). Tighten the bolt and nut securely. Repeat the procedure for the right pedal lever and rocker arm clevis.

Attach the left side lower pivot covers (M) over the moving arm/pedal arm pivot point. Snap the cover together over the moving arm/pedal arm pivot point and use two 8mm Black Phillips Head Screws (11) to attach. Repeat for right side.

**NOTE:** Left and right covers are identical.

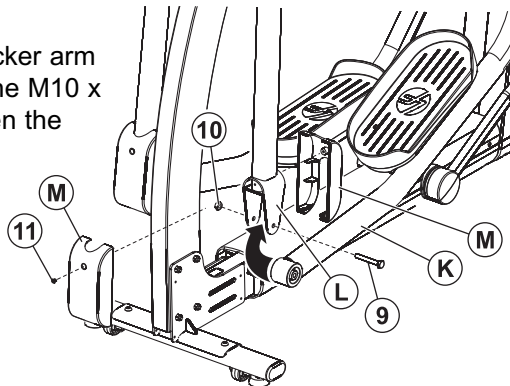



## Step 7 Assemble Front Base Shroud; Console Bracket to the Upright

**Parts:** Hardware Bag #5 (8, 12mm Silver Phillips Head Screws)  
(2, M10 x 15mm Silver Hex Head Bolts)

**Tools:** Phillips Screwdriver, 17mm Socket Wrench

Position the left side base shroud (N) over the metal bracket (O) and screw in with four 12mm Silver Phillips Head Screws (12). Repeat for the right side base shroud.

Slide the console bracket (P) into the upright. Use two M10 x 15mm Silver Hex Head Bolts (13) to attach the console bracket to the upright.

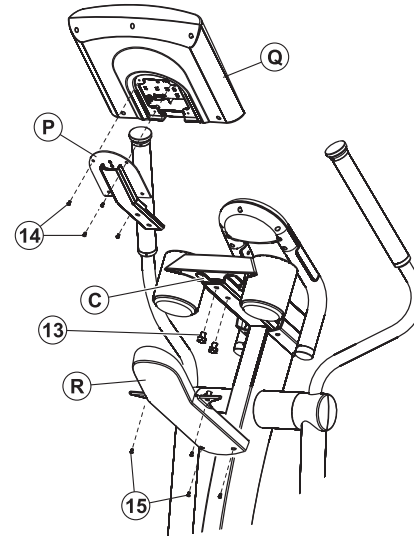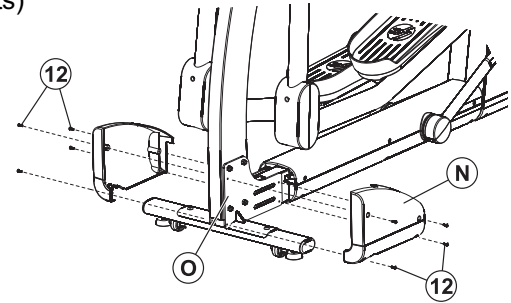

## Step 8 Connect all Console Wiring; Console to Console Bracket; Back Plastic Shell

**Parts:** Hardware Bag #6 (4, 12mm Black Phillips Head Screws)  
(4, 8mm Silver Phillips Head Screws)

**Tools:** Phillips Screwdriver

Position the console (Q) close to the console bracket (P) and follow the below instructions to connect all wiring.


*Plug cables into the back of the display console:*

1. Plug the 10-pin connector at the end of the upper wire harness into the 10-pin connector (10P) in the back of the display console. Make sure the connector snaps into place.
2. Plug the 3-pin connector at the end of the heart rate cable into the 3-pin connector (3P) in the back of the display console. Make sure the connector snaps into place.
3. Plug in the flat 6-pin (6P) connector for the Activity Zone.
4. Push excess cable(s) into the opening of the upright tube assembly.
5. Plug the spade connector attached to the console plate into the connector (GR) leading from the back of the display console.

Line up the four holes in the console bracket with the four holes in the back of the display console. Attach the display console using four 12mm Black Phillips Head Screws (14). Be careful not to pinch cables between the console and the console bracket. Be sure to get each screw started before fully tightening.

**NOTE:** To avoid stripping, do not overtighten the screws.

Attach the plastic shell (R) that covers the steel bracket in the back of the console using four 8mm Silver Phillips Head Screws (15).

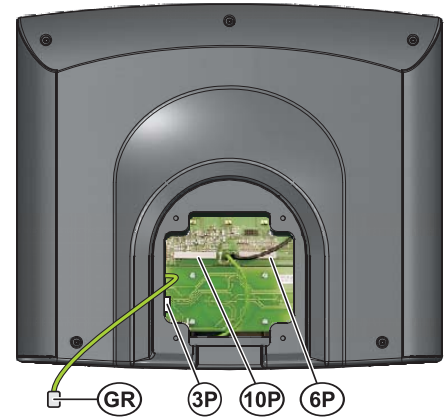

## Step 9 Plug In the Unit

**Parts:** Electric Cord

Plug the black cord into the back of the machine and into a household electrical outlet.

# 3. INITIAL SETUP

Read the entire User Manual before setting up the cross-trainer.

## WHERE TO PLACE THE CROSS-TRAINER

After following all safety instructions move the cross-trainer to the place where it will be used. See specifications for full dimensions if needed. The cross-trainer is equipped with front and rear wheels so that it is simple to push or pull the cross-trainer to its final destination. To use the wheels make sure that the front and rear stabilizers are twisted up far enough so that all wheels (A) can engage with the floor. Once the cross-trainer is properly positioned, allow enough space in the front of the cross-trainer for the movement of the pedals levers. Also be sure to allow space on the side so that it is easy to mount the cross-trainer from the side.

**CAUTION:** Make certain you have plenty of room for the swing of the moving arms. Test the cross-trainer at all stride lengths before finalizing its location.


**CAUTION:** Place the cross-trainer in a dry place. Do not place in highly humid areas, such as near swimming pools, as rust and corrosion may occur.

## HOW TO STABILIZE THE CROSS-TRAINER

Once the cross-trainer is positioned in the room, lower the levelers on the front and back stabilizers to contact the floor. All four wheels must be completely off the floor. The levelers will keep the cross-trainer fixed to the floor during use.


**CAUTION:** Do not use the cross-trainer without the levelers touching the floor.

After placing the cross-trainer where it will be used, check the stability. If there is even a slight rocking motion, or the unit is not stable, the levelers will need to be adjusted. Determine which leveler is not resting firmly on the floor. To adjust the levelers downward, twist the rubber portion of the leg counterclockwise. To adjust the levelers upward, twist the rubber portion of the leg clockwise.

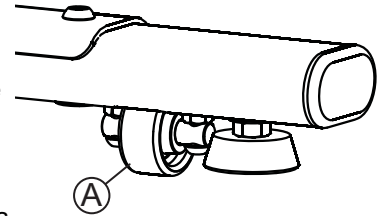


After adjusting the levelers, tighten the jam nuts (B) against the stabilizer to lock the levelers in place.

**Note:** A common noise source on the cross-trainer is the failure to have all four wheels completely off the floor and the jam nuts on the levelers tightened.

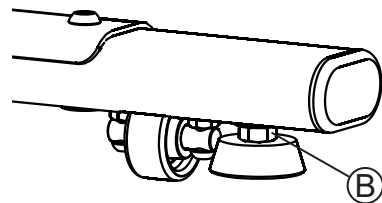

## POWERING UP THE CROSS-TRAINER

Your Life Fitness cross-trainer may come with either a U.S. power cord or one of several international power cords. Insert the appropriate power cord into the connector (C) on the back of the cross-trainer. Then insert the plug into the wall outlet. Make sure the cord is placed so it doesn't bind and will not be walked on. Turn the power switch to on. Once the unit is turned on the cross-trainer's stride length will auto-calibrate. Wait one minute to allow for the calibration to complete. Then check that both the main LCD display and activity zone LCD light up. If not, recheck the plug and the wall connections and make sure the wall outlet has power. If still not working properly, check the connections made in Steps 4 and 8.

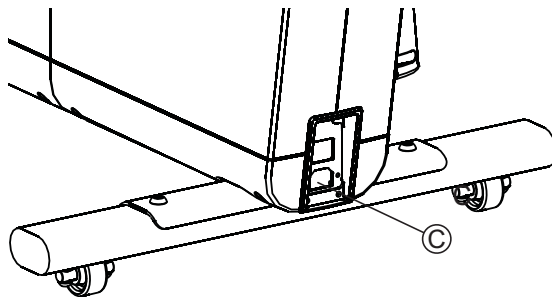

# 4. MAIN FEATURES

## MOUNTING THE MACHINE


When mounting the machine it is recommended that the pedal closest to you is in its lowest position. This can be done by pushing the arms to rotate the pedal until it is centered to the side of you at its lowest position. It is also recommended that the stride length is set to 18 inches. At 18 inches the pedal will be in its lowest position. If you are standing to the left side of the machine, when facing the console, place your left foot on the pedal closest to you and then swing your right leg over to the right pedal. Use the stationary handlebar to stabilize yourself.

## STRIDE LENGTHS FOR DIFFERENT USERS

The X8 has 7 different stride lengths from 18 inches to 24 inches. Users may utilize any of the stride lengths. Research has shown that shorter users may prefer a shorter stride length while taller users may prefer a longer stride length.

## ACCESSORIES

The X8 comes standard with two blue water bottle holders (D) and one blue accessory tray (E). All are easily removable and safe to place on the top shelf of a standard consumer dishwasher. The X8 console also includes a reading ledge (F) that can be used to place a book or magazine on the machine to better enjoy your workout.

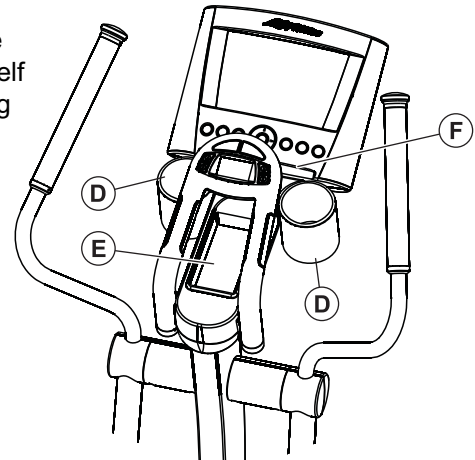

## CONTACT HEART RATE

The X8 includes hand pulse sensors on the stationary handlebar that are a built-in heart rate monitoring system. During a workout grasp the hand pulse sensors to monitor your heart rate. If your console comes equipped with a heart rate chest strap we recommend using it during workouts and using the hand pulse sensors to only to occasionally monitor your heart rate when not using the chest strap. In addition, to utilize heart rate controlled workouts the chest strap must be used. For the most accurate reading, use a comfortable grip. The console will show a heart rate reading after 15 to 20 seconds.

Hand pulse sensors can work differently with different body types. With some individuals it can be very difficult to extract a heart rate reading. Follow the below tips to improve the heart rate reading.

- Remove your hands from the heart rate sensors and wait for the heart rate display to clear. Grasp sensors again.
- Make sure hands are fully contacting the sensors.
- Dry hands periodically during use.
- Limit movement.
- Clean hand pulse sensors.

**Note:** The heart rate hand pulse sensors provide an approximate heart rate value. The sensors are not medical devices and should not be used in any type of medical application.


## FLEXPEDAL™ SHOCK ABSORPTION SYSTEM

The FlexPedal Shock Absorption System utilizes patented Life Fitness LifeSpring cushioning in the front of the pedal to provide you with extra comfort during workouts. This technology is the same cushioning technology used in all Life Fitness treadmill decks. The design intent of the pedal is to promote more ankle joint movement during stride push through to encourage a more natural feeling stride.



# 5. ACTIVITY ZONE

The X8 activity zone places the most used keys and display attributes closer to the user so that it is more convenient to make adjustments during a workout. Think of the activity zone as cruise control settings on your car's steering wheel. The controls are placed in a location that is easily reachable to make driving safer and more convenient or in this case to make exercise safer and more convenient. The activity zone includes UP/DOWN level keys, UP/DOWN stride keys, LegSculptor Mode, and Total Body Trainer Mode.

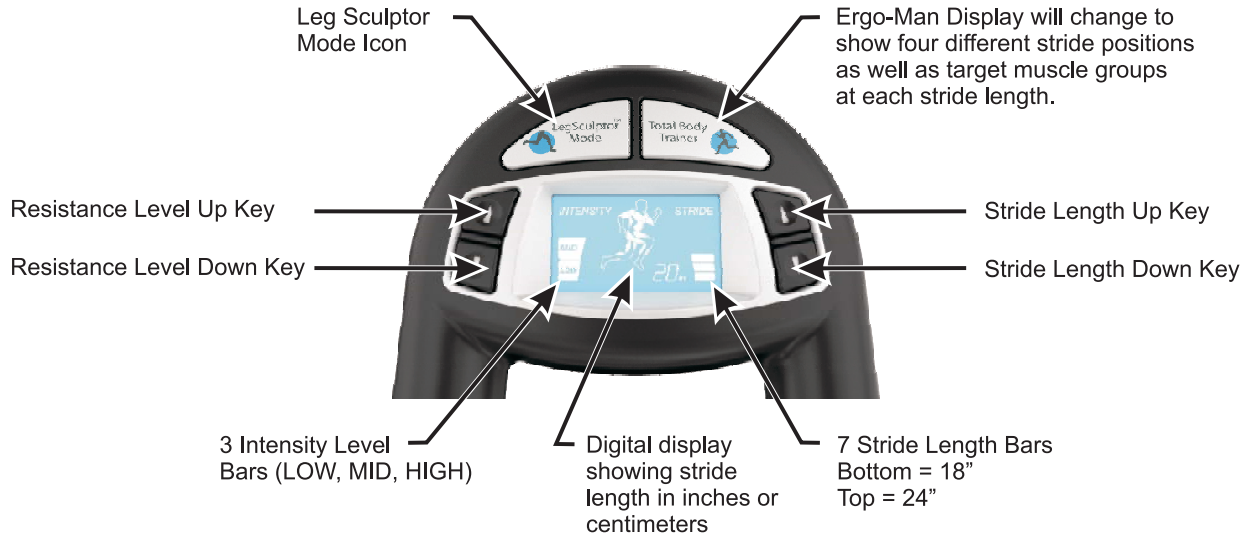



## 5.1 STRIDE LENGTH FUNCTIONALITY

### KEY PRESS


The stride up and down keys can be pressed any time the machine is on. The stride up and down keys are used to adjust the length of the stride from 18 inches to 24 inches. The stride length can be adjusted in one inch increments so there are 7 total adjustments (18", 19", 20", 21", 22", 23", 24").

**Note:** One key press is needed for each stride adjustment. Do not press and hold.



### DISPLAY CHANGES

When the stride is adjusted the activity zone display is changed in three separate areas. The first display change is digital stride length. This is where the numeric value for stride is displayed such as 18 inches. The second display change for stride length is the graphical bars located on the right side of the display. The bottom bar represents a stride length of 18 inches while the top bar represents a stride length of 24 inches. The third display change for stride length is the ergo-person. When the stride is adjusted the ergo-person's leg position change at certain stride ranges and the target muscle groups at that stride length blink. While all lower body muscles are engaged during exercise, specific stride length ranges better target specific muscle groups. At the shorter stride lengths of 18-19 inches the targeted muscle groups are the calf and quadriceps. At the mid stride lengths of 20-22 inches the targeted muscle groups are the quadriceps and hamstrings. At the longest stride lengths, 23-24 inches, the hamstrings and the gluteus are the targeted muscle groups.

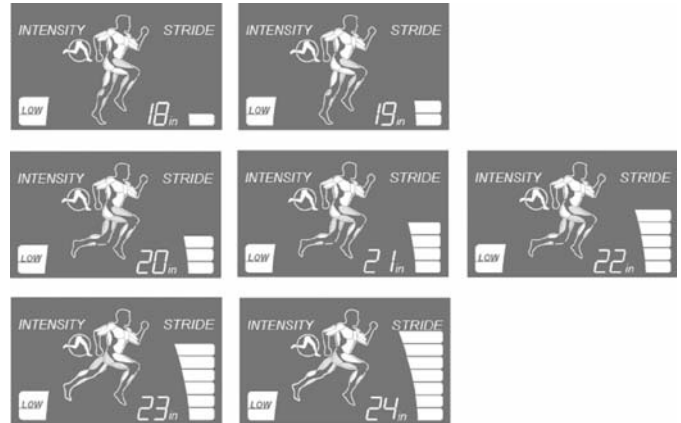

**Note:** The display will not change when pedaling forward or reverse. When pedaling forward the calf and quadriceps muscles are more active and when pedaling in reverse the hamstring and gluteus muscles are more active.

## 5.2 RESISTANCE LEVEL & INTENSITY LEVEL FUNCTIONALITY

### KEY PRESS

The resistance level up and down keys will ONLY function after a workout has been selected and started on the main console. The level keys control the actual brake resistance level (1-20) during a quick start or manual workout and an overall difficulty level (1-20 with corresponding ranges for each level) when in the Random, Hill, EZ Incline, and Sports Training programs.



### UPPER CONSOLE DISPLAY CHANGES

When the up/down level keys are pressed the digital reading for actual resistance level or difficulty level, depending on which program is selected, changes on the main console.

### ACTIVITY ZONE DISPLAY CHANGES

The activity zone has a separate and different level reading than the main console. The Intensity level is displayed on the activity zone and provides three readings that show a general intensity level of LOW, MID, or HIGH. The intent of this display is to provide you with a gauge to show your current workout intensity level.



## 5.3 TOTAL BODY TRAINER

The Total Body Trainer workout makes the most of the cross-trainer's total body workout capabilities by leading the user through a varied workout that exercises all major muscle groups.

### ADVANCED CONSOLE

For an upper-body workout that works all the muscles in the arms, the console directs the user to push and pull the handlebar arms at various times. The console will also vary the workout between the total body and the lower-body only workouts. The lower-body only workout allows the user to rest his or her hands on the stationary handlebar. The forward and reverse motions in a lower-body workout alternate allowing you to maximize the workout and use all leg muscles during a single exercise session.

### BASIC CONSOLE

For an upper-body workout that works all the muscles in the arms, the console directs the user to push and pull the handlebar arms at various times. The forward and reverse motions in a lower-body workout alternate allowing you to maximize the workout and use all leg muscles during a single exercise session.

**NOTE:** The Total Body Trainer workout is activated by pressing the Total Body Key on the Activity Zone after you have started a Hill, Random, Manual, EZ Incline, or Sports Training program on the main console. The Total Body Trainer workout cannot be started until the main console program has completed the Warm-Up phase. Follow the prompts on the main console display. Pressing the Total Body key again will deactivate the Total Body program but continue the original workout program started on the main console. The Total Body mode is exited automatically when the main console program enters the COOL DOWN phase.

## 5.4 LEG SCULPTOR MODE FUNCTIONALITY

### KEY PRESS

The Leg Sculptor Mode key is used to turn the mode on or off. It can be pressed at any time, although it is recommended to use the Leg Sculptor mode after a workout has been selected. See the Leg Sculptor Mode section for more detailed information.

**Note:** If you stop pedaling for 30 seconds, the Leg Sculptor mode will be deactivated.

### DISPLAY CHANGES

After the Leg Sculptor Mode is activated the activity zone display will show an icon of the lower body. When the mode is de-activated the icon will disappear.




# 6. LEG SCULPTOR™ MODE

Leg Sculptor is a mode designed to work all lower body leg muscle groups by automatically adjusting the stride length. The Leg Sculptor Mode key is located on the upper-left portion of the activity zone.

Press the Leg Sculptor mode key once to activate the mode. Press twice to deactivate the mode. The Leg Sculptor mode can be overlaid on any workout. It automatically adjusts the stride every two minutes by two inches. In this mode you will not be able to make manual stride length adjustments using the stride up/down keys.

**Note:** If you do not pedal or press a key for 30 seconds, the Leg Sculptor mode will automatically deactivate.

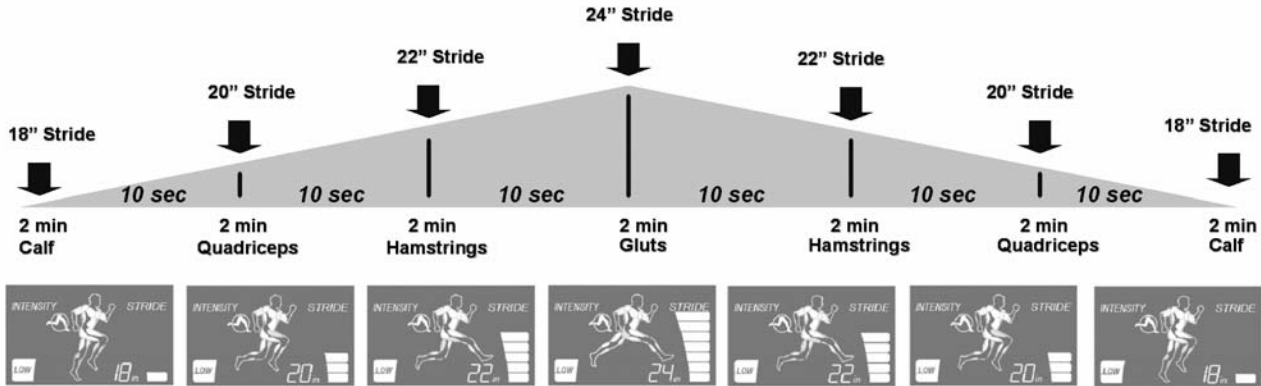

# 7. ACTIVITY ZONE SETTINGS MENU

The settings menu contains setup options to customize the use of your machine. The setup options include: Contrast (CO), Units (Un), Language (LA), and Audio (AU). Since the display does not have any messaging capability the abbreviations CO, Un, LA, and AU are used in the digital stride display area.

## 7.1 NAVIGATING THE SETTINGS MENU

### ENTERING THE SETTINGS MENU

To enter the settings menu make sure the activity zone is illuminated, but a workout is NOT in progress. Press and hold the Leg Sculptor Key for three plus seconds then press the Stride Down Key. The display will beep consecutively three times and display the text "settings" in the lower left corner.

### ADJUSTING SETTINGS MENU OPTIONS

To make adjustments to the settings menu options use the up and down stride length keys.

### SCROLLING THROUGH SETTINGS MENU OPTIONS

Press the Leg Sculptor key to accept a setting or value and move to the next settings menu option.

### AUTO-ENTER FEATURE

Auto-enter is always active in the settings menu. Auto-enter will automatically save and scroll to the next settings menu option after 20 seconds without a key press.

## EXITING THE SETTINGS MENU

Press the Leg Sculptor key to scroll through all the menu options. Press the Leg Sculptor key on the final settings menu option, Sleep (SL), to exit the Settings Menu. In addition, if there is no key press after 20 seconds in the Sleep (SL) option, the Settings Menu will be exited.

### Leg Sculptor Key

Used to save changes and scroll to the next setting option. Press Leg Sculptor key on the final menu option to exit the Settings Menu.



### Stride Up Key

Used to increase values or settings in the settings menu.

### Stride Down Key

Used to decrease values or settings in the settings menu. Press and hold the Leg Sculptor key for 3+ seconds then press the Stride Down key to enter the Settings Menu.

## 7.2 SETTINGS MENU OPTIONS

### AUDIO

The audio option allows you to turn the audio or beeps on or off for the Leg Sculptor key, Stride Down key, and Stride Up key. To turn the audio off for the Total Body Trainer key, Level Up key, and Level Down key you must turn the audio or beeps off on the main console. This is because the Total Body Trainer, Level Up, and Level Down keys cause the main console to beep and not the activity zone. If you want to turn all sound on/off make sure to turn the audio on/off on the main console and X8 activity zone display. See the main console user manual for steps on turning audio on/off on the main console. Follow the below instructions to turn audio on/off for the Leg Sculptor key, Stride Down key, and Stride Up key.

### AUDIO ADJUSTMENT INSTRUCTIONS


**Step 1.** Press and hold the Leg Sculptor Key for three plus seconds then press the Stride Down Key.

**Step 2.** The first option to appear should be Audio (AU).

To adjust the audio from ON to OFF or vice versa press the stride length up or down key. The bottom stride length level bar represents Audio ON and the top stride length level bar represents Audio OFF.

**Step 3.** To select the desired adjustments press the Leg Sculptor key once. This will save any changes you have made to audio and advance you to the next settings menu option.

**Step 4.** To exit the settings menu continue to press the Leg Sculptor key to scroll through all menu options. Upon pressing the Leg Sculptor key on the final menu option the settings menu will be exited.

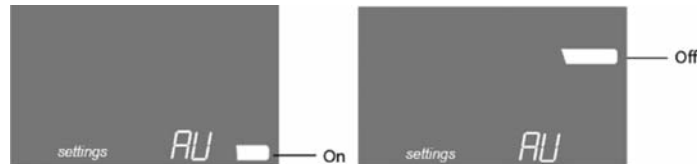



## SLEEP MODE

Sleep mode turns the activity zone backlight off. When sleep mode is turned ON the display lighting is programmed to turn off after 5 minutes with no pedaling or no key press. Once you decide to use the machine you can simply begin pedaling or press the stride up or stride down keys to wake the display and turn the LCD backlight on. When Sleep mode is turned off, the LCD backlight will remain illuminated unless the power supply is turned off.

### SLEEP ADJUSTMENT INSTRUCTIONS


**Step 1.** Press and hold the Leg Sculptor Key for three plus seconds then press the Stride Down Key.

**Step 2.** The first option to appear should be Audio (AU). To scroll to Sleep press the Leg Sculptor key once. Sleep (SL) should be displayed.

**Step 3.** To adjust Sleep from ON to OFF or vice versa press the stride length up or down key. The bottom stride length level bar represents Sleep ON and the top stride length level bar represents Sleep OFF.

**Step 4.** To select the desired adjustments press the Leg Sculptor key once. This will save any changes you have made to audio and advance you to the next settings menu option.

**Step 5.** To exit the settings menu continue to press the Leg Sculptor key to scroll through all menu options. Upon pressing the Leg Sculptor key on the final menu option the settings menu will be exited.

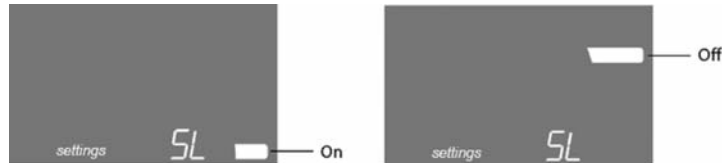

## CONTRAST

Contrast is the difference between the appearance of the on and off graphics of the LCD display. If the illuminated graphics are difficult to see or read the contrast can be adjusted in the settings menu. There are three contrast adjustments, LOW, MID, & HIGH. Follow the below instructions to adjust contrast.

### CONTRAST ADJUSTMENT INSTRUCTIONS

**Step 1.** Press and hold the Leg Sculptor Key for three plus seconds then press the Stride Down Key.

**Step 2.** The first option to appear should be Audio (AU). To scroll to Contrast press the Leg Sculptor key twice. Contrast (CO) should be displayed.

**Step 3.** The bars located to the left display the current contrast setting. If you would like to modify the contrast press the stride up or down key to adjust from the LOW, MID, and HIGH settings. The appearance of the display will slightly change with each adjustment.

**Step 4.** To select the desired adjustments press the Leg Sculptor key once. This will save any changes you have made to contrast and advance you to the next settings menu option.

**Step 5.** To exit the settings menu continue to press the Leg Sculptor key to scroll through all menu options. Upon pressing the Leg Sculptor key on the final menu option the settings menu will be exited.



## UNITS

The unit option allows you to change the stride length units from inches to centimeters or vice versa. Follow the below instructions to adjust units.

### UNIT ADJUSTMENT INSTRUCTIONS

**Step 1.** Press and hold the Leg Sculptor Key for three plus seconds then press the Stride Down Key.

**Step 2.** The first option to appear should be Au (Audio). To scroll to units press the Leg Sculptor key three times. Units (Un) should be displayed.

**Step 3.** To adjust the units from inches to centimeters or vice versa press the stride length up or down key. The display will toggle between "in" and "cm."

**Step 4.** To select the desired adjustments press the Leg Sculptor key once. This will save any changes you have made to units and advance you to the next settings menu option.

**Step 5.** To exit the settings menu continue to press the Leg Sculptor key to scroll through all menu options. Upon pressing the Leg Sculptor key on the final menu option the settings menu will be exited.



## LANGUAGE

The language option allows you to change the text for INTENSITY and STRIDE to the same translated terms in the German language. Follow the below instructions to adjust the language.

### LANGUAGE ADJUSTMENT INSTRUCTIONS

**Step 1.** Press and hold the Leg Sculptor Key for three plus seconds then press the Stride Down Key.

**Step 2.** The first option to appear should be Au (Audio). To scroll to units press the Leg Sculptor key four times. Language (LA) should be displayed.

**Step 3.** To adjust the language from English to German or vice versa press the stride length up or down key. The display will toggle between the English and German text.

**Step 4.** To select the desired adjustments press the Leg Sculptor key once. This will save any changes you have made to language and exit the settings menu.



# 8. SERVICE & PRODUCT MAINTENANCE

## 8.1 TROUBLESHOOTING

### No POWER

Check to see the power cord is fully plugged into the back of the cross-trainer and into the wall. Make sure the power switch is turned on and the power cord is fully seated into the back of the cross-trainer.

### HAND PULSE SENSORS NOT WORKING OR NOT ACCURATE

Hand pulse sensors can work differently with different body types. With some individuals it can be very difficult to extract a heart rate reading. Follow the below tips to improve the heart rate reading.

- Remove your hands from the heart rate sensors and wait for the heart rate display to clear. Grasp sensors again.
- Make sure hands are fully contacting the sensors.
- Dry hands periodically during use.
- Limit movement.
- Clean hand pulse sensors.
- You may need to wait longer for the heart rate to display.

**Note:** The heart rate hand pulse sensors provide an approximate heart rate value. The sensors are not medical devices and should not be used in any type of medical application.

**Warning:** The chest strap heart rate reading overrides contact heart rate.

## **STRIDE LENGTH ADJUSTMENT NOT WORKING**

Turn off the cross-trainer's power. Turn the power back on after 30 seconds and try the stride adjustment again.

## **STRIDE LENGTH IS AUTOMATICALLY CHANGING**

Check to see if the Leg Sculptor mode is turned on. When on, the Icon Leg Sculptor key is illuminated. The Leg Sculptor automatically adjusts the stride every 2 minutes during a workout. To turn the Leg Sculptor mode off press the Leg Sculptor key.

## **STRIDE ADJUSTMENT SEEMS LOUD**

Some noise is normal. The sound of the motors will vary depending on the load.

## **STRIDE LENGTH FEELS LONGER ON ONE SIDE**

Turn the unit off. Turn the unit on after 30 seconds and check to see if the stride length still feels longer on one side.

## **TOTAL BODY ARMS FEEL LOOSE**

Remove the moving arm pivot covers and check to make certain the bolt holding the total body arms in place is fully tightened. If the total body arms still feel loose, you may need to disassemble the total body arms and make sure all of the proper hardware from the assembly instructions was used.

## **ACTIVITY ZONE KEEPS TURNING OFF**

The activity zone is preset to turn the backlight off after 5 minutes in order to save power and LCD life. If you would like the display to always be turned on sleep mode can be turned off in the settings menu.

## **WHEN ACTIVITY ZONE TURNS OFF THE STRIDE CHANGES**

The stride will always return to the home position of 18 inches (46 cm) when entering sleep mode. This is so the next time you get on the cross-trainer it is at its lowest position. Sleep mode is a setting that turns the display backlight off to save power and LCD life. It is preset to 5 minutes. If you would like the display to always be turned on, sleep mode can be turned off in the settings menu.

## **WHEN ACTIVITY ZONE WAKES UP THE STRIDE CHANGES**

When the activity zone wakes up from sleep mode the stride length adjusts to the last stride position used before sleep mode was entered. Sleep mode is a setting that turns the display backlight off to save power and LCD life. It is preset to 5 minutes. The sleep mode can be turned off in the settings menu if you would like the display backlight to always be turned on.

## **ACTIVITY ZONE DISPLAYS E5**

One of the keys on the activity zone is stuck in the pressed-in position. Check to see if you can dislodge the Leg Sculptor, Stride Up, or Stride Down key. If the key is dislodged "E5" will disappear.

## **ACTIVITY ZONE DISPLAYS SETTINGS AND WON'T WORK**

You have accessed the settings menu. To exit the settings menu press the Leg Sculptor Key until settings has been exited.

## **ACTIVITY ZONE DISPLAYS STRANGE INFORMATION IN THE DIGITAL DISPLAY**

You may have accessed the settings menu or diagnostics menu. To exit both menus continue to press the Leg Sculptor key until the menu is exited.

## **NOISE FROM PEDALS**

Some noise from the pedals is normal. It will vary depending on the weight of the user. Check that the accessible hardware beneath the pedals are tight.

## **CAN'T FEEL THE PEDAL CUSHIONING**

The cushioning in the pedals is located beneath the front of the pedal. The pedals are designed to deflect a ½ inch. Depending on your weight the pedals will flex differently. It may be difficult to feel the deflection during a workout because of your movement.

## **START-UP RESISTANCE SEEMS VERY DIFFICULT**

Turn the unit off and then on again.

## **CAN'T FEEL A RESISTANCE CHANGE AT THE BEGINNING LEVELS**

The resistance curve of the cross-trainer is designed so that you can feel a greater difference in resistance at higher levels.

## **ERRORS E1 - E6**

Error codes E1 through E6 indicate an issue with the stride motor reaching the home position. Turn the unit off and then back on again to return the motor to its home position.



## 8.2 PREVENTATIVE MAINTENANCE TIPS

The safety of the cross-trainer can be maintained only if the equipment is examined regularly for damage or wear. If maintenance is required, keep the equipment out of use until defective parts are repaired or replaced. Pay special attention to parts that are subject to wear outlined in the Preventative Maintenance Schedule.

The following preventative maintenance tips will keep the cross-trainer operating at peak performance.

- Locate the cross-trainer in a cool, dry place.
- Clean the top surface of the pedals when needed.
- Use a 100% cotton cloth, lightly moistened with water or a mild liquid cleaning product, to clean the product. Other fabrics, including paper towels, may scratch the surface of the product. Do not use ammonia or acid-based cleaners. At no time should cleaner be applied directly to the machine.
- Long fingernails may damage or scratch the surface of the console or activity zone; use the pad of the finger to press the keys.

## 8.3 HOW TO OBTAIN PRODUCT SERVICE

1. Verify the symptom and review the operating instructions. The problem may be unfamiliarity with the product and its features and workouts.
2. Locate and document the serial number of the unit. The serial number plate is located on the front stabilizer, below the shroud.
3. Contact Customer Support Services via the Web at: [www.lifefitness.com](http://www.lifefitness.com), or contact the nearest Customer Support Services group (*see front pages of this manual for contact information*).

# 9. SPECIFICATIONS

Designed Use:	Home
Max User Weight:	400 lbs / 182 kilograms
Resistance System:	Eddy Current
Stride Length:	18 inches to 24 inches (41cm to 61cm) (Adjustable in one-inch increments)
Activity Zone User Controls:	Yes
Contact Heart Rate:	Yes
FlexPedal™ Shock Absorption System:	Yes
Accessories:	2 water bottle holders and 1 accessory tray
Power Supply:	120 VAC, 60 Hz, 12 Amps or 230 VAC, 50Hz, 6.3 Amps

## ASSEMBLED DIMENSIONS

Length	83 inches / 211 centimeters
Width	26 inches / 66 centimeters
Height	63 inches / 160 centimeters
Weight	250 pounds / 113 kilograms

## SHIPPING DIMENSIONS:

Length	81.5 inches / 207 centimeters
Width	20 inches / 51 centimeters
Height	32 inches / 81 centimeters
Weight	310 pounds / 141 kilograms

# 10. WARRANTY INFORMATION

## **WHAT IS COVERED:**

This Life Fitness consumer product ("Product") is warranted to be free of all defects in material and workmanship.

## **WHO IS COVERED:**

The original purchaser or any person receiving a newly purchased Product as a gift from the original purchaser.

## **HOW LONG IS IT COVERED:**

Residential: All electrical and mechanical components and labor are covered, after the date of purchase, as listed on the chart at the end of this section.

Non-Residential: Warranty void (this Product is intended for residential use only).

## **WHO PAYS SHIPPING & INSURANCE FOR SERVICE:**

If the Product or any warranted part must be returned to a service facility for repairs, Life Fitness will pay all shipping and insurance charges during the warranty period (within the United States only). The purchaser is responsible for shipping and insurance charges after the warranty has expired.

## **WHAT WE WILL DO TO CORRECT COVERED DEFECTS:**

We will ship to you any new or rebuilt replacement part or component, or at our option, replace the Product. Such replacement parts are warranted for the remaining portion of the original warranty period.

## **WHAT IS NOT COVERED:**

Any failures or damage caused by unauthorized service, misuse, accident, negligence, improper assembly or installation, debris resulting from any construction activities in the Product's environment, rust or corrosion as a result of the Product's location, alterations or modifications without our written authorization or by failure on your part to use, operate and maintain the Product as set out in your User Manual ("Manual"). All terms of this warranty are void if this Product is moved beyond the continental borders of the United States of America (excluding Alaska, Hawaii and Canada) and are then subject to the terms provided by that country's local authorized Life Fitness Representative.

## **WHAT YOU MUST DO:**

Retain proof of purchase (our receipt of the attached registration card assures registration of purchase information but is not required); use, operate and maintain the Product as specified in the Manual; notify Customer Service of any defect within 10 days after discovery of the defect; if instructed, return any defective part for replacement or, if necessary, the entire Product for repair. Life Fitness reserves the right to decide whether or not a product is to be returned for repair.

## **USER MANUAL:**

It is VERY IMPORTANT THAT YOU READ THE MANUAL before operating the Product. Remember to perform the periodic maintenance requirements specified in the Manual to assure proper operation and your continued satisfaction.

## **PRODUCT REGISTRATION:**

Register online at [www.lifefitness.com/registration](http://www.lifefitness.com/registration). Our receipt assures that your name, address and date of purchase are on file as a registered owner of the Product. Failure to return the card will not affect your rights under this warranty. Being a registered owner assures coverage in the event you lose your proof of purchase. Please retain your proof of purchase, such as your bill of sale or receipt.

## **HOW TO GET PARTS & SERVICE:**

Simply call Customer Service at 1-800-351-3737 or (+1) 847-288-3300, Monday through Friday from 8:00 a.m. to 5:00 p.m. Central Standard Time, and tell them your name, address and the serial number of your Product (consoles and frames may have separate serial numbers). They will tell you how to get a replacement part, or, if necessary, arrange for service where your Product is located.

## **EXCLUSIVE WARRANTY:**

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OF ANY KIND EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART. We neither assume nor authorize any person to assure for us any other obligation or liability concerning the sale of this Product. Under no circumstances shall we be liable under this warranty, or otherwise, of any damage to any person or property, including any lost profits or lost savings, for any special, indirect, secondary, incidental or consequential damages of any nature arising out of the use of or inability to use this Product. Some states do not allow the exclusion or limitation of implied warranties or of liability for incidental or consequential damages, so the above limitations or exclusions may not apply to you. Warranties may vary outside the U.S. Contact Life Fitness for details.

**CHANGES IN WARRANTY NOT AUTHORIZED:**

No one is authorized to change, modify or extend the terms of this limited warranty.

**EFFECT OF U.S. STATE LAWS:**

This warranty gives you specific legal rights and you may have other rights which vary from state to state.

**WARRANTY PERIODS:**

MODEL	LIFETIME	10 YEARS	7 YEARS	2 YEARS	1 YEAR
X8	Frame LifeSprings	Resistance System (Includes parts enclosed in flywheel - does not include servo motor)	Electrical Parts & Mechanical Parts (Base Unit)	Console (All LCD displays & circuit boards)	Labor



Life Fitness offers a full line of premier fitness equipment for the home.

TOTAL-BODY ELLIPTICAL CROSS-TRAINERS | TREADMILLS

LIFECYCLE® EXERCISE BIKES | GYM SYSTEMS

5100 N. RIVER ROAD, SCHILLER PARK, ILLINOIS 60176

LIFEFITNESS.COM