PicoDrive SIC USB2.0接続フラッシュメモリ

取扱説明書 Ver.1.20

●この度は本製品をお買い上げいただき、誠にありがとうございます。本製品を正しくご利用いただくため、本取 扱説明書をよくお読みください。



■対応OS

●Windows 7/Vista/XP(SP2以降/32bit版)/2000(SP4以降) ●Mac OS X(10.1.3以降)

■本製品の接続

●本製品はパソコンのUSBポートに接続して使用します。

■Windows 7/Vista/XP(SP2以降/32bit版)/2000(SP4以降)で使用する場合

- ●パンコンのUSBポートに本製品を接続すると、「マイコンピュータ」に「リムーバブルディスク」のアイコンが追加されます。
- ※OS標準ドライバで自動的に認識される為、ドライバインストールは不要です。
- ●本製品を取り外す場合は下記の手順に従ってUSBポートから取り外してください。 デスクトップ右下のタスクトレイから、本製品「USB大容量記憶装置デバイス」を選択して取り外してください。

■MacOSで使用する場合

- ●パンコンのUSBポートに本製品を接続すると、「デスクトップ」に「名称未設定」(またはNoName)のアイコンが追加されます。
- ※MacOSではOS標準ドライバで自動的に認識される為、ドライバインストールは不要です。
- ●本製品を取り外す場合は、アクセスランプが点滅していないことを確認し、本製品のアイコンをごみ箱にドラッグ&ドロップしてから取り外してください。

■セキュリティソフトについて

 ◆本製品内の情報をパスワードで保護するセキュリティソフトがご利用いただけます。 (Windows 7/Vista/XP(SP2/32bit版)/2000(SP4)のみ対応)
詳しくは、弊社ホームページの「ドライバのダウンロード」ページをご覧ください。 http://www.green-house.co.jp/download/index.html
※管理者権限でのみ使用可能です。
※セキュリティソフト使用時には、「ReadyBoost」機能は使用できません。

■安全にお使い頂くために必ずお守りください。



下記の注意事項を守らないと、使用者が死亡または重傷を負う可能性が想定される内容を示しています。

- ●本製品は、取扱説明書に記載のない分解や改造はしないでください。火災や感電、ケガの原因となります。
- ●風呂場など、水分や湿気が多い場所では、本製品を使用しないでください。火災になったり、感電・故障する恐れがあります。
- ●煙が出たり、異臭や異音がしたら、パソコン及び周辺機器の電源スイッチをオフにし、パソコン本体から外してください。
- ●本製品を落としたり、強い衝撃を与えたりしないでください。

<u>^</u>注意

下記の注意事項を守らないと、使用者が怪我をしたり、物的損害の発生が考えられる内容を示しています。

- ●濡れた手で本製品に触れないでください。
- ●静電気による破損を防ぐため、本製品に触れる前に、身近な金属に手を触れて、体の静電気を取り除くようにしてください。
- ●データの書き込み及び読み込み中にUSBポートから本製品を取り外さないでください。

画面上でデータ転送が終了しているように見える場合でも、アクセスランプが点滅している場合があります。 本製品をパソコン本体から取り外す際には、必ずアクセスランプが点滅していないことを確認してください。 データ転送中に本製品を取り外しますと、データの消失・破損する恐れがあります。データの消失・破損による損害については、弊社はいかなる 責任も負いかねますので、予めご了承ください。

使用・保管場所について

次のような場所での使用や保管はしないでください。

- ・直射日光の当たる場所
- ・強い磁界や静電気が発生するところ
- ・漏電または漏水の危険があるところ
- ・暖房器具の近くなどの高温になる場所
- ・振動の激しいところ
- ・平らでないところ
- ・温度や湿度がパソコンのマニュアルが定めた使用環境を越える、または結露するところ

■記載されている会社名、製品名は各社の登録商標または商標です。

■製品仕様

対応PC / 動作環境	USBインターフェース搭載のNEC PC98 NXシリーズ、PC/AT互換機(DOS/V)、PowerPC G3以降搭載のMacintosh
USB規格	USB2.0/1.1
データ転送速度	最大480Mbps(理論値)
重量	約11g
外形寸法	W65×D19×H8(mm)

[制限事項]

- ·本製品は対応OS以外での動作保証はいたしかねます。
- ・本製品は他のUSB機器のドライバ共存並びに併用に関する動作保証はいたしかねます。
- 本製品は省電力モード時の動作保証はいたしかねます。
- ・本製品を接続したままの起動および終了につきましては保証いたしかねます。
- ・本製品はマルチOS環境ならびにエミュレーション環境での動作保証はいたしかねます。
- ・USB1.1機器をUSB2.0対応のアダプタやハブで接続した場合、USB2.0機器をUSB1.1対 応ハブを介して接続した場合にはUSB1.1の 速度に限定されます。
- ・接続する機器側やOSの制限によりUSB1.1転送になる場合があります。

	株式会社グリーンハウス テクニカルサポート
TEL	03-5421-0580
	受付時間 10:00~12:00 13:00~17:00(土、日、祝日を除く弊社営業日のみ)
FAX	03-5421-2266
ホームページ	http://www.green-house.co.jp/

※受付時間は予告なく変更する場合がございます。ご確認は弊社ホームページにてお願いいたします。 ※サポートを受ける為にはユーザー登録が必要になります。弊社ホームページよりご登録お願いいたします。 ※ご使用上のご質問、お問い合わせは弊社ホームページ内のお問い合わせフォームよりお願いいたします。

保証期間:2011年10月まで

USB Flash Memory User's Manual

Please read this manual carefully before using the product.

-Warning-

- Do not take this device apart to pieces for repairing or altering.
- Do not wet this device or use it in a humid place like bathroom.
- In case children use this device, observation and instruction by an adult is required.
- When emission of smoke or stink from the device occurs, please stop using it.
- For attaching and detaching of this device, please follow the instruction in this brochure.

- Do not detach this device from computer during transmission of data, otherwise damage on the device or on data may occur.

-Notice-

- This device is designed and produced on the condition that the usage is limited in Japan.
- Keep this device from dropping and any impact.
- Steep change in temperature may wet the inside of the device with dew. In this case, please leave it in normal temperature till the dew disappears.
- Keep this device from magnetic force and static electricity.
- The specifications and design of this product shall be modified without notice.

-OS supported-

- Windows 7 / Vista / XP (SP2&SP3/32bit) / 2000(SP4)
- MAC OS X 10.1.3 and above

This product can work with the default driver in Windows OS and MAC OS X.

-How to Use-

Please uncap the device and plug the USB connector to an USB port of your computer in the right way. The product is available for use when the removable disk icon appears on computer.

-Unplug-

Please remove the device after you finish the work with it. In Windows, please click "Safety Remove Hardware" icon on task tray. Select "Eject USB Mass Storage Device". After "Safe to Remove Hardware" message appears, please remove the product from the

USB port.

In MAC OS, you can drag the removable disk icon and put into the trash box. This action performs the "eject" function. After the removable disk icon disappears, please remove the product from the USB port.

-Warranty-

The warranty for this product is applied only in Japan. No warranty is given to products used outside Japan. Valid by Oct 2011.

-Disclaimer-

We are not responsible for any damage, lost profits, and claim by a third party caused by using this product or unusable product.

We are not responsible for any damage caused by not observing the information in the manual.

Regardless of the cause, content, and degree of the damage, we are not responsible for any damaged or lost data when this product is used.

We are not responsible for any damage caused by improper use of our product with other products and software not involved with our company.

We are not responsible for any damage caused by fire, earthquake, a third party, other accidents, and intentional or accidental misuse by the customer even if our company was noticed of the possibility of the damage beforehand.

We are not responsible for any issues caused by the use of this product outside Japan.

GREEN HOUSE CO., LTD.

Customer support: support@green-house.co.jp