

USER MANUAL



Before operating the Monitor, please read this manual thoroughly and retain it for future reference.

MONITOR:




- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9

- 1.Indicator light
- 2.Power
- 3.MODE/MENU
- 4.▼/CH- DOWN/TV CHANNEL Negative decrease
- 5.▲/CH+ UP/TV CHANNEL Positive increase
- 6.◀/VOL- Left/ Volume decrease
- 7.▶/VOL+ Right/ Volume increase
- 8.ENTER TV MENU / ENTER
- 9.IR Window

Remark: (1) After cable connected { power off → indicator light on
} power on → indicator light off

(2) Press MODE/MENU key to enter TV/USB/SD/AUX IN switching or press MODE/MENU key and keep more than 2 seconds to enter "menu".

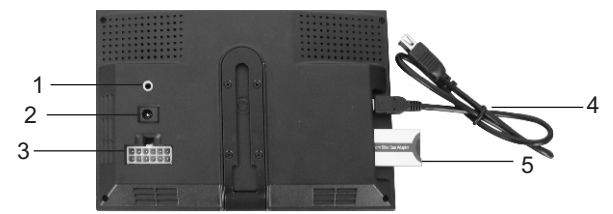


- 1.TV antenna In
- 2.Power In (-- ← +12V)
- 3.Special Cable In
- 4.USB In
- 5.SD/MMC/MS card In

Cautions


Cautions: For your safety, drivers shouldn't watch the monitor or operate the controls while driving.
 Warning: Check all local, state, and federal laws concerning video monitors in vehicles before installing. Many states have specific laws concerning the position of a monitor in a vehicle. Do not install in a position that the driver can watch video while driving for safety reasons.
 Note: When cold the monitor may appear dark, allow time for the vehicle to warm for the monitor to return to normal.

● Connection ●

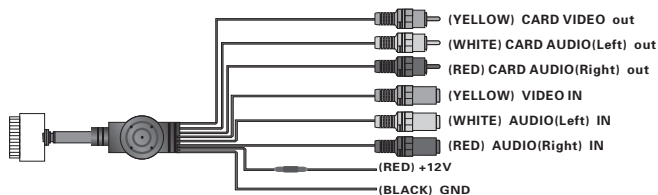

Remark: Only when you read card, they{VIDEO out,AUDIO(Left&Right)out} are available.

● Remote control ●

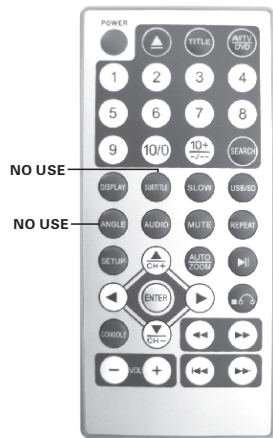

Remark: The ANGLE /SUBTITLE Key have no use.


● SPECIFICATIONS: ●

- Super Slim
- Type: Headrest TFT LCD Monitor (16:9)display
- 1 way AV input and 1 way AV output
- System: PAL&NTSC/SECAM(optional)
- Resolution: 480 x R.G.B x 234 dots
- Power supply: DC 12 V
- Built-in stereo Speaker
- Built-in TV tuner
- Built-in SD/USB interface (read MMC/MS/SD card)
- Play MP3/MP4/WMA/AVI/JPG/BIF/GIF
- Remote control, OSD menu;
- High resolution ,wide screen
- View angel range:(left/right)50°(top)40°(down)15°

● Operation ●

(1) MENU setting process


a.Press MODE/MENU key (in the monitor) and keep more than 2 seconds to enter "menu"or press CONSOLE key (in the remote) to enter "menu", the monitor will show as below

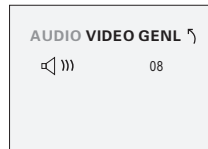

b. Use the ◀▶ button, adjust the three title "AUDIO VIDEO GENL"

c. Use the ▼▲ button, adjust desired level.

Remark: In the OSD of the "GENL", Use the ◀▶ button, adjust desired language – English, Chinese.

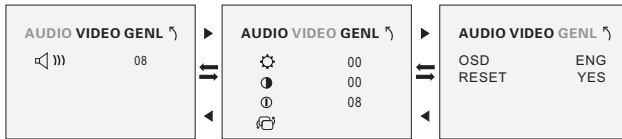

You can press ◀▶/▼▲ key to select item for setting.

(2) TV setting process

Press "ENTER" key to enter Reset selection mode, then press ▼▲ key to select item for setting.

RESET	
CHANNEL	18
FREQ	152.25
TV SOVND	PAL I
SAVE	YES
AUTO SEARCH	

accessories

(1) Switch function stand X 1

(2) USB switch cable X 1

(3) TV switch cable X 1

(4) Special cable X 1

(5) Remote control X 1