

MEGAPIX *Snapit*

IP 2.1MP Indoor Dome Camera

DWC-MD421D
DWC-MD421TIR



Before installing and using the MEGAPIX Camera, please read this manual carefully.
Be sure to keep it handy for future reference.

PRECAUTIONS

- Do not open or modify.
- Do not open the case except during maintenance and installation, for it may be dangerous and can cause damages.
- Do not put objects into the unit.
- Keep metal objects and flammable substances from entering the camera. It can cause fire, short-circuits, or other damages.
- Be careful when handling the unit.
- To prevent damages, do not drop the camera or subject it to shock or vibration.
- Do not install near electric or magnetic fields.
- Protect from humidity and dust.
- Protect from high temperature.
- Be careful when installing near the ceiling of a kitchen or a boiler room, as the temperature may rise to high levels.
- Cleaning: To remove dirt from the case, moisten a soft cloth with a soft detergent solution and wipe.
- Mounting Surface: The material of the mounting surface must be strong enough to support the camera.

FCC COMPLIANCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference, when the equipment is operated in a residential environment. This equipment generates, uses, and radiates radio frequency energy, and if it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications.

WARNING: Changes or modifications are not expressly approved by the manufacturer.

TABLE OF CONTENTS*


Introduction.....	4
Features.....	4
Inside the Box.....	5
Parts.....	6
Camera Control Board.....	7
Dimensions.....	8
Installation.....	9
Network Connection.....	9-10
Mounting the Camera.....	11-15
Storage Device Installation.....	16
Adjusting the 3-Axis Gimbal.....	17
MEGAPIX Camera Setup.....	18
Installing the IP Finder.....	18
Using IP Finder Software.....	19-20
Network Options.....	21
Camera Reboot.....	22
MEGAPIX Camera Web Viewer.....	23
Accessing the Web Viewer via Internet Explorer.....	23
Accessing the Web Viewer via Google Chrome, Mozilla Firefox and Safari.....	24
First & Second Stream.....	25
Export Image.....	26
Print Image.....	27
Panic Recording.....	28-29
MEGAPIX Camera Setup.....	30
Video.....	30-34
Event.....	35-38
Network.....	39-43
Record & Remote Backup.....	44-47
System.....	48-54
Specifications.....	55-56
Troubleshooting.....	57-60
Warranty.....	61
Limits & Exclusions.....	62

FEATURES*

- ONVIF Support (V1.02)
- Local SDHC Card Backup
- Sony 1/2.8" CMOS Sensor
- Highest Resolution 2.1 Megapixels
- 1080P (1920x1080) at 30fps
- 4x Auto-Focus 3.5~16mm Lens
- Triple Codec H.264, MPEG4, MJPEG
- Double Shutter WDR (Wide Dynamic Range) at 15fps Settings
- 70ft Range IR with Intelligent Camera Sync (MD421TIR)
- True Day and Night (MD421TIR)
- 3D-DNR (3D Digital Noise Reduction)
- Web Server Built-in
- Dual Streaming
- Programmable Privacy Zones (30)
- Mirror
- Remote Client Setup & Upgrade
- Digital Zoom
- FTP Upgrade Support
- Power over Ethernet [PoE] & DC12V
- UPnP Support

INSIDE THE BOX*

The following items are included with the MEGAPIXEL Camera

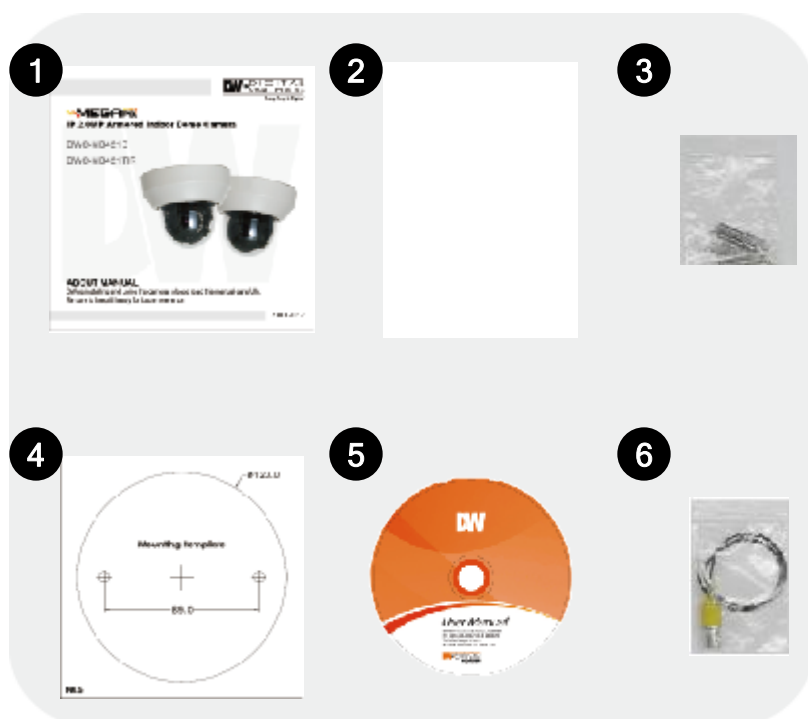


1. User Manual
2. Quick Start Guide
3. 2 Screws & 2 Dry Wall Anchors
4. Mounting Template
5. CD (Manual + Software)
6. Second Video Jack




7. Camera Module
8. Snapit Indoor Housing

PARTS & DESCRIPTIONS*

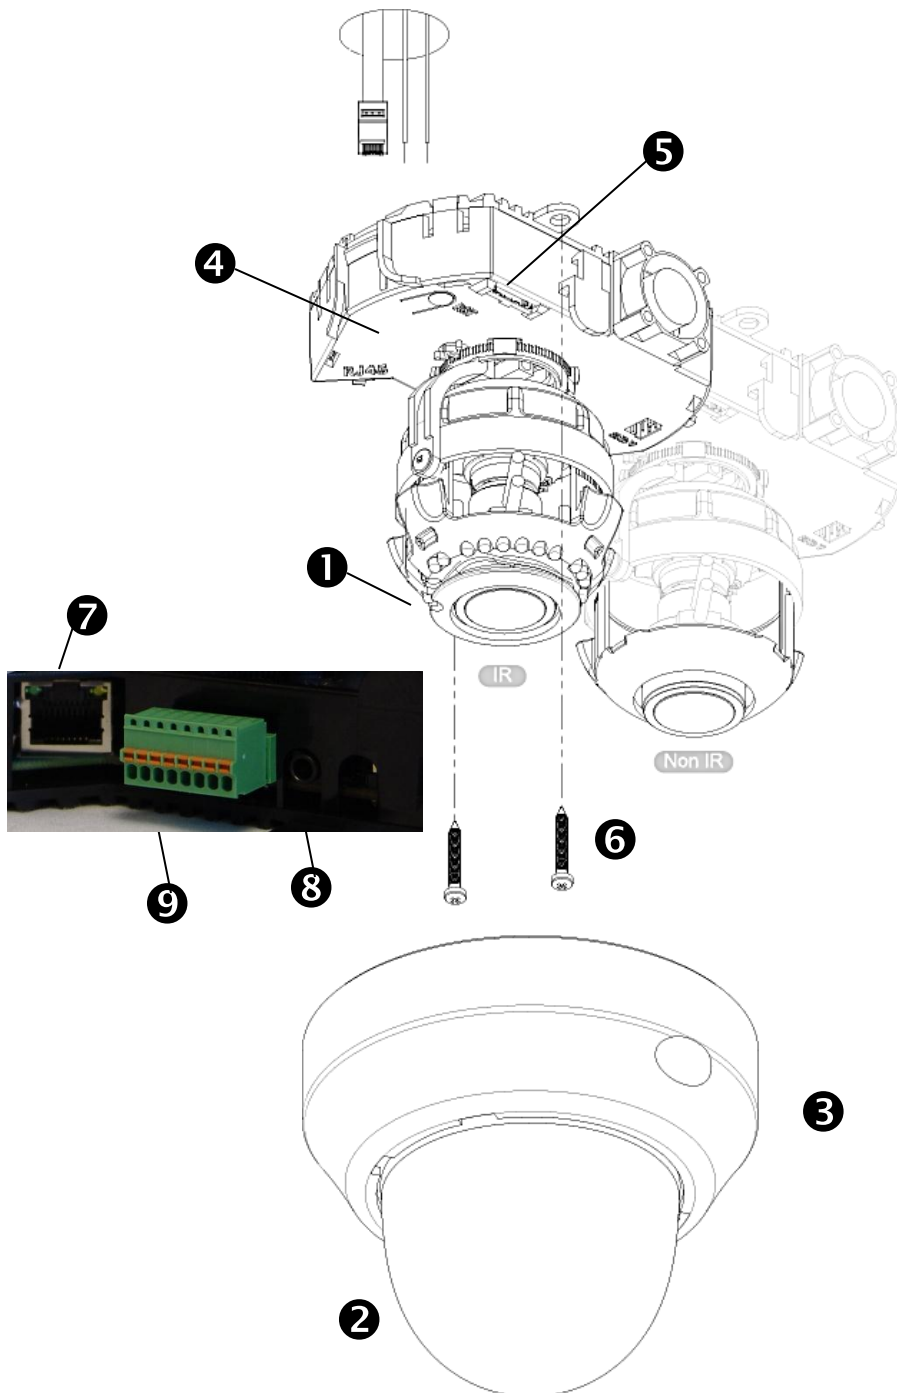




1. Lens
2. Bubble
3. Cover Dome
4. Camera Control Board
5. SD Card Slot
6. Mounting Screws
7. RJ45 Connector
8. Audio In/Out
9. Terminal Blocks (See page 7 for more information)

CAMERA CONTROL BOARD*

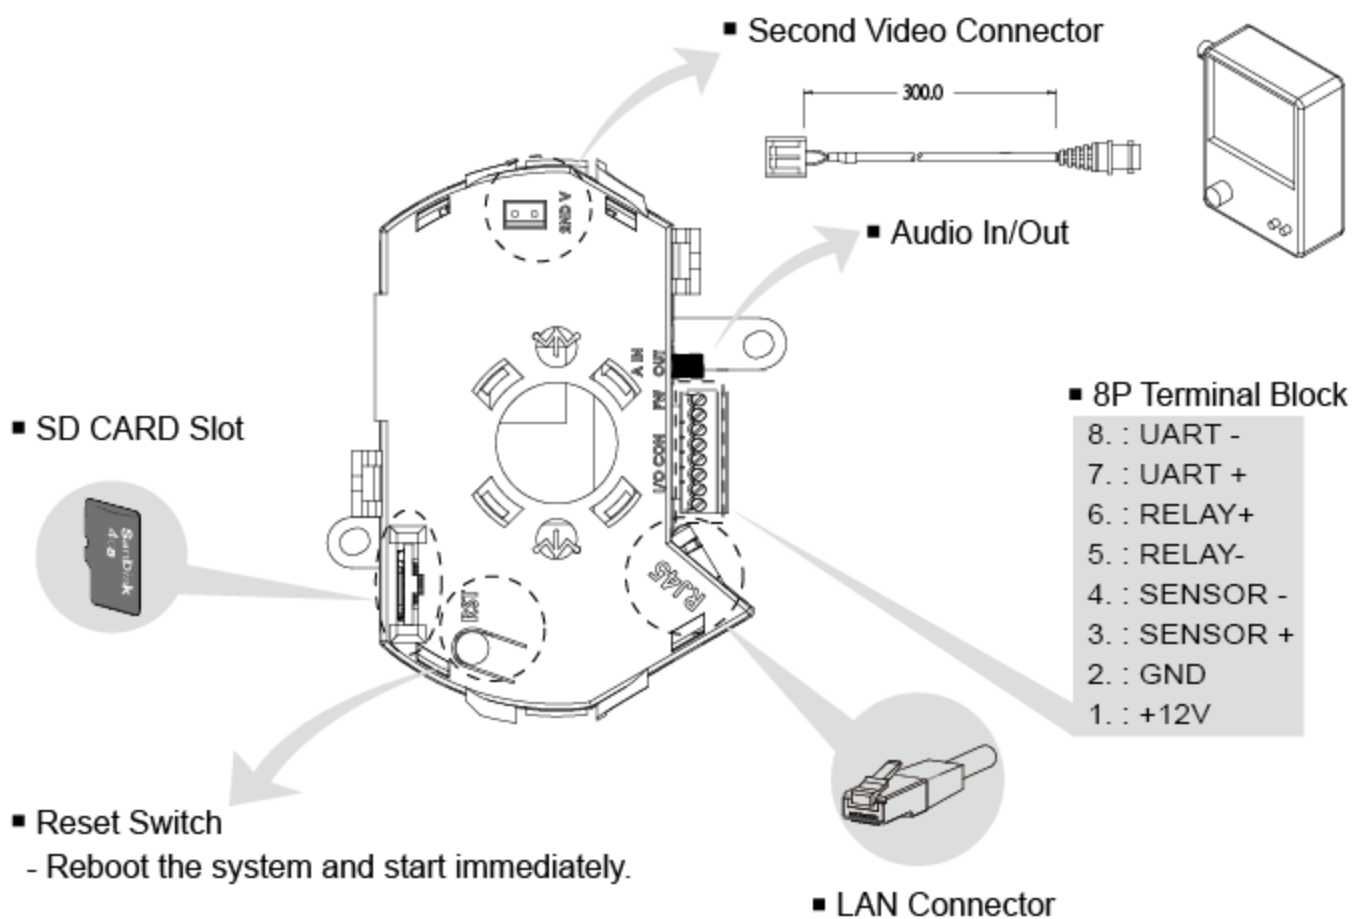

UART +/- is for debugging purposes only.

DIMENSIONS*

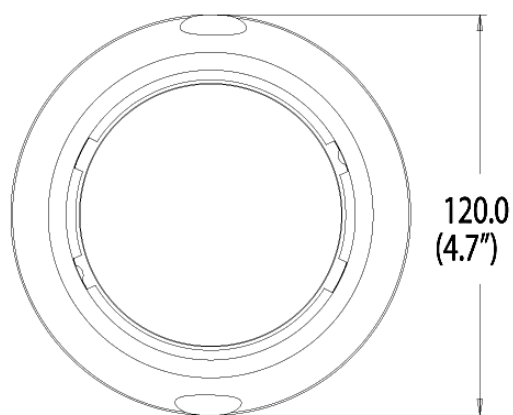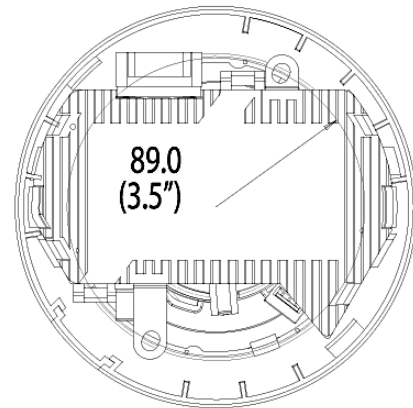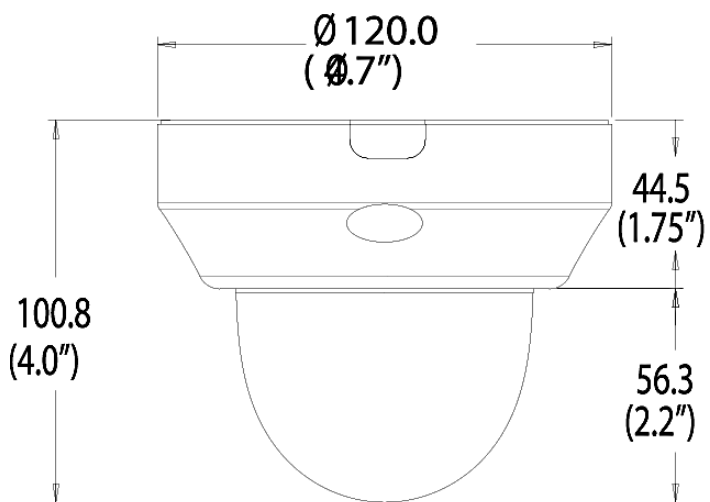


NETWORK CONNECTION*

Two Options

Use a PoE-enabled switch to connect data and power through a single cable and begin viewing and recording images instantly. A non-PoE switch will require an adaptor for power transmission.

1. Using a PoE-Enabled Switch


The MEGAPIX Camera is PoE-Compliant, allowing transmission of power and data via a single Ethernet cable. PoE eliminates the need for the different cables used to power, record, or control the camera. Follow the illustration below to connect the camera to a PoE-enabled switch using an Ethernet cable.

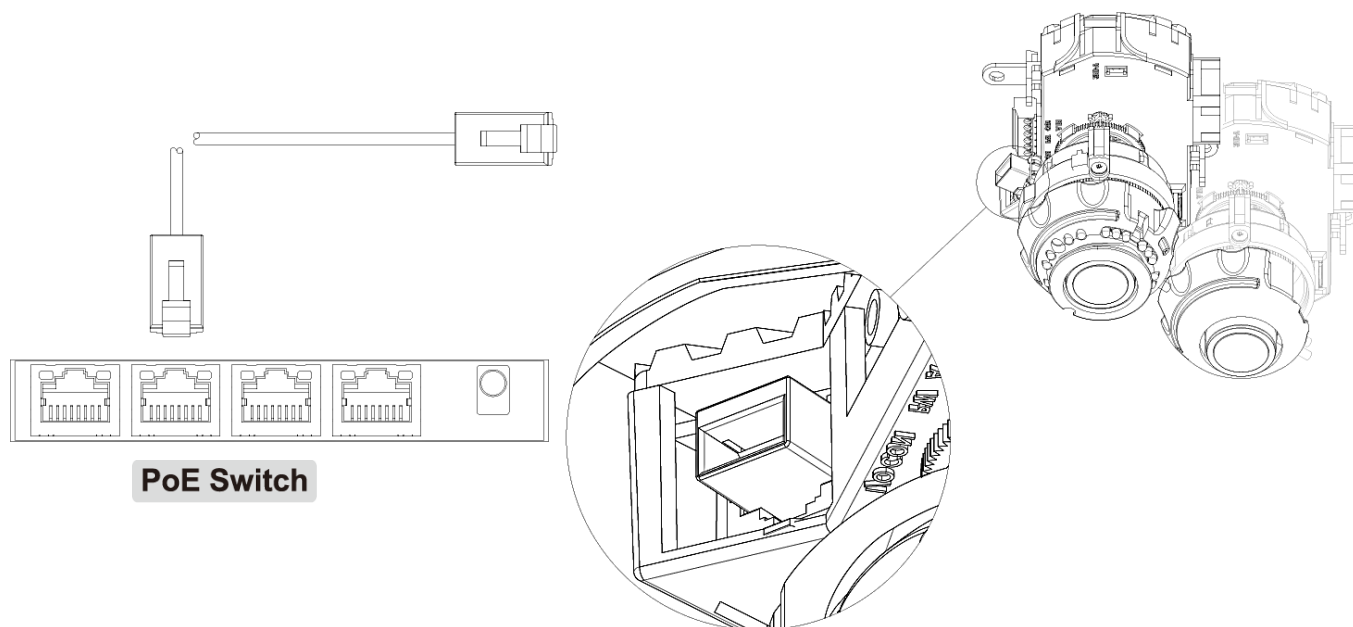

NETWORK CONNECTION*

2. Using a Non-PoE Switch

If a PoE-enabled switch is not used, use a power adaptor for power transmission and non-PoE switch for data transmission. Follow the illustrations below to connect the camera without a PoE-Enabled Switch.

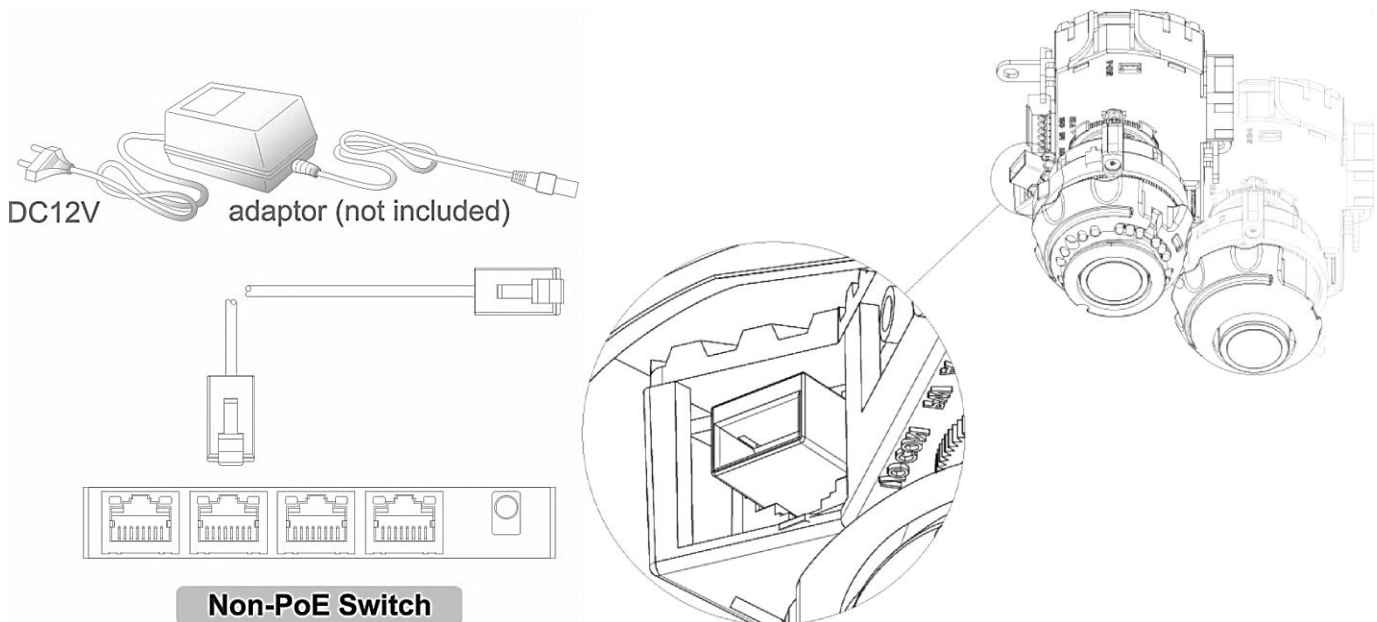



INSTALLATION*

Snapit Easy Installation

To remove the camera's protective bubble dome, hold the camera and squeeze on both sides of the cover dome to loosen the hold on the camera module.

While squeezing, hold the camera module and gently remove it from the bubble dome.


If the camera doesn't snap out easily, try squeezing the cover dome a little tighter.

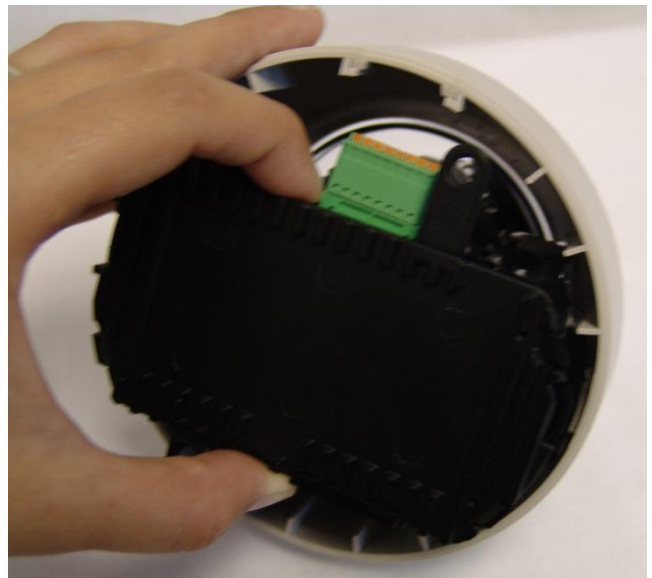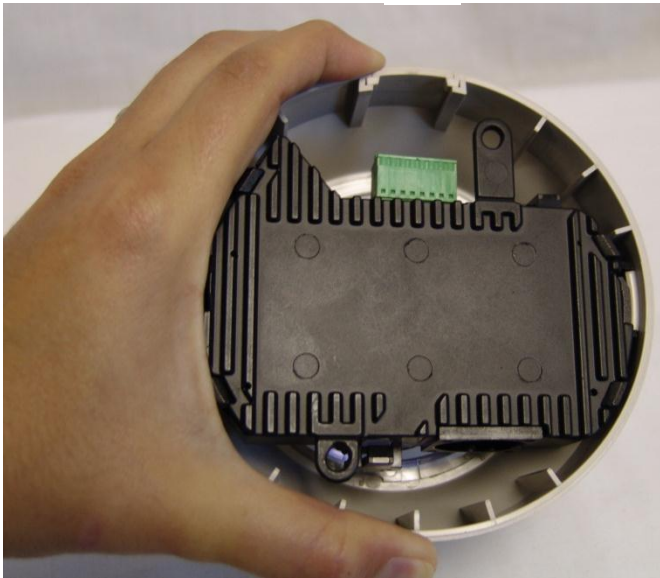


INSTALLATION* **Snapit Easy Installation 123**

Snapit Easy Installation


The Snapit easy installation is a unique Digital Watchdog technology that allows you to install the camera in three easy steps.

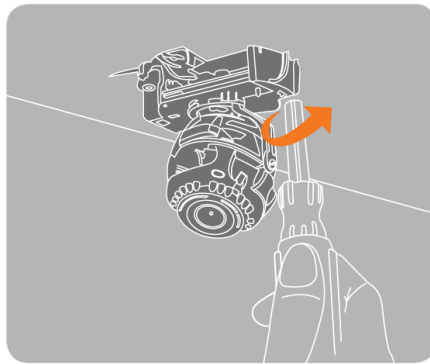

1 Two Screw Installation

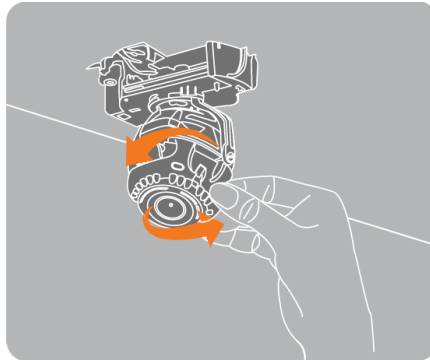

2 Adjustment

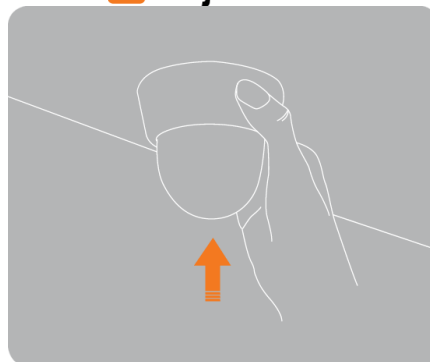


3 Snap It

INSTALLATION*




1. Use the camera's mounting template or your camera to mark the holes as required.
2. Drill holes into the drywall and insert the drywall mounts into the holes.
3. Pull wires through and make connections. Connect the RJ45 to a CAT5 cable or a power adaptor. Refer to **"Network Connection"** for further explanation.

INSTALLATION*

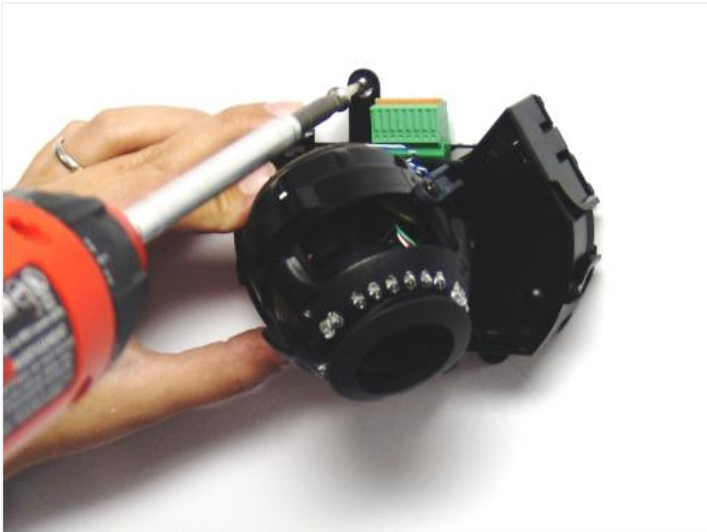


1. Mount the camera to the wall or ceiling, using the screws provided with the camera.

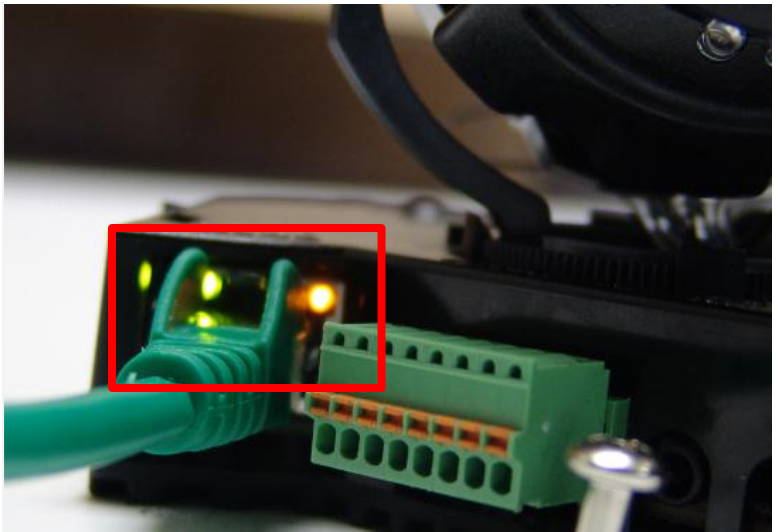

2. Check the LED light. Green light flickers for booting. Red light turns on when booting is complete.



3. Adjust the camera's position using the 3-Axis Gimbal.

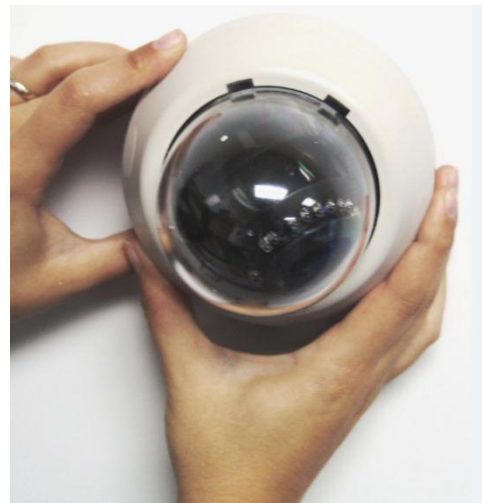

4. Snap the cover dome back over the camera to complete the installation.

INSTALLATION*

How to Snap the Cover Dome over the Camera Module

To snap the cover back into place, align the small indentation in the cover dome with the RJ45 connector in the camera module as seen below.




INSTALLATION*

Storage Device

The MD421 MEGAPIX Cameras offer the option of local emergency backup in case of network loss.


To install the SD card:

1. Locate the SD card slot in the back of the camera module.
2. Insert the SD card in the slot and push it down, until you hear a 'click' sound.
3. To remove SD card, press the SD card down until you hear a 'click.' The SD card will eject from the slot.
4. When you are complete, go to the camera's web viewer. (See page 44 for more information)

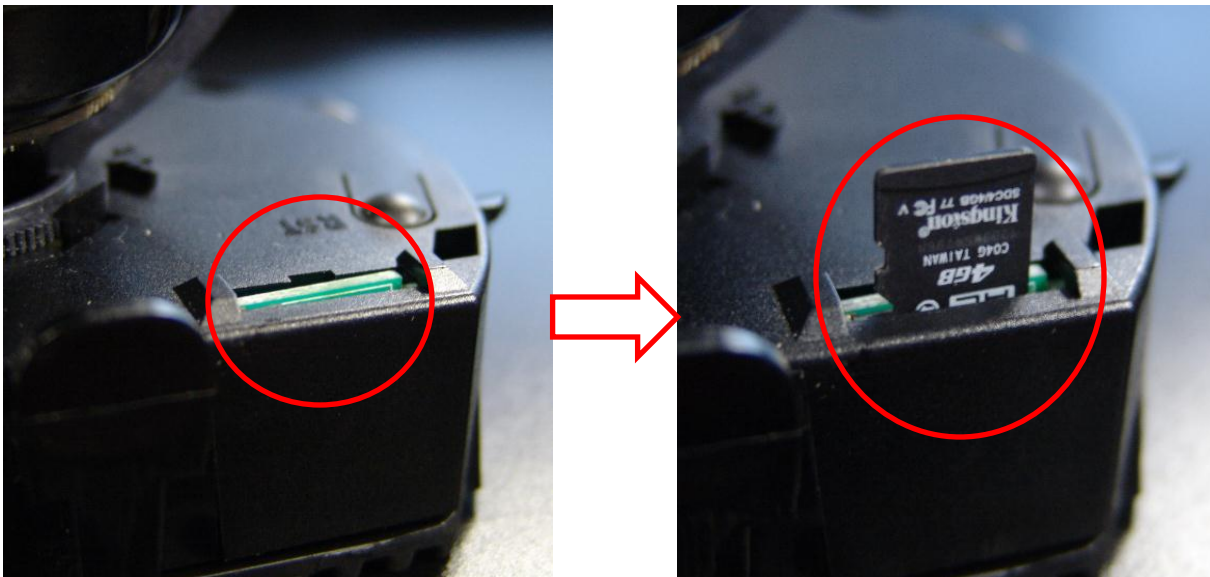


ADJUSTING THE 3-AXIS GIMBAL*


The Gimbal mechanism yields maximum rotation and placement as shown below.

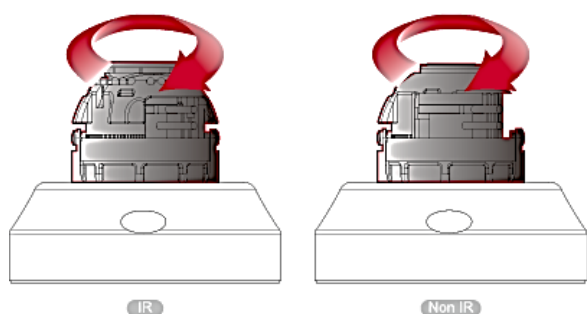


1 Rotation 360°

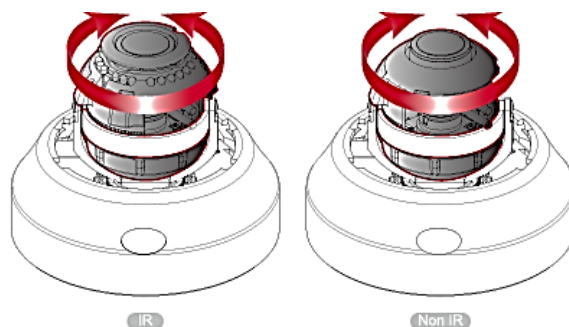

2 Panning 360°

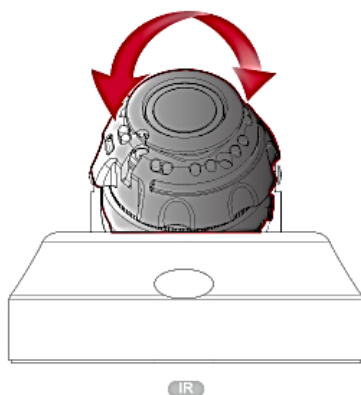

3 Tilting 82° IR LED

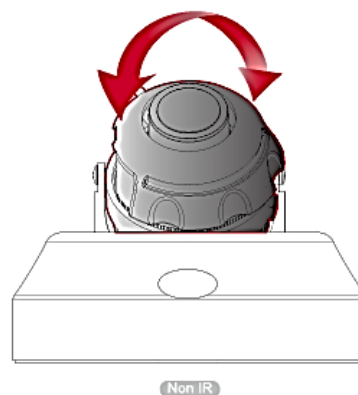

3 Tilting 90°


Do not over rotate the lens. Doing so will damage the camera lens module.

IP FINDER SOFTWARE*

Installing IP Finder Software

IP Finder searches for all the available Digital Watchdog devices currently connected to your network.

1. Install **IP Finder** to find the MEGAPIX camera on your local network. The software can be found on the included User Manual CD. Run **IP Finder** and install onto your PC.
2. When setup is complete, launch **IP Finder**.
3. To find your MEGAPIX camera, click the **Search** button. Your MEGAPIX camera will appear as "**DWC-MD421D**".
4. Select the desired device and select **Web Connect** to access the camera directly via Internet Explorer.

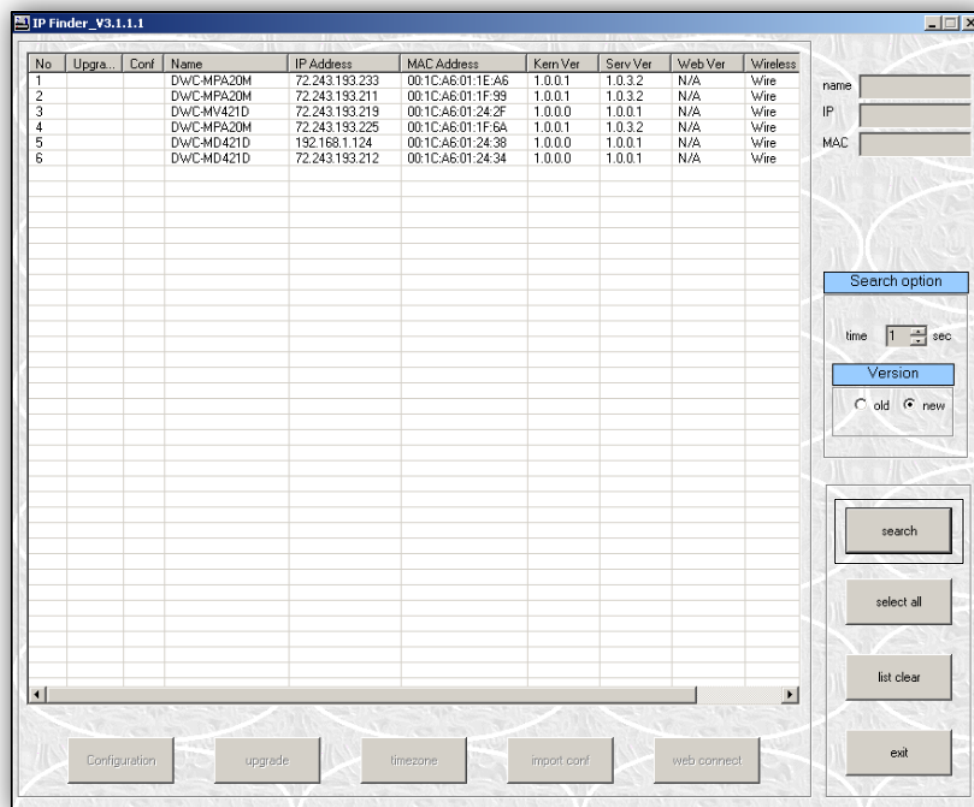


*Be sure to install the IP Finder to a computer located on the same network segment (Subnet Mask) as the MEGAPIX camera.

IP FINDER SOFTWARE*

Using IP Finder Software

Use IP Finder to change the basic settings of your MEGAPIX camera or to connect to your MEGAPIX camera.

1. **Configuration:** Change the device's connection type and/or IP address information. Please see the next page for further explanation.
2. **Upgrade:** Upgrade the device's firmware.
3. **Time Zone:** Change the time zone.
4. **Import Config:** Import setup configuration for a specific device.
5. **Web Connect:** Connect to the MEGAPIX camera through Internet Explorer.

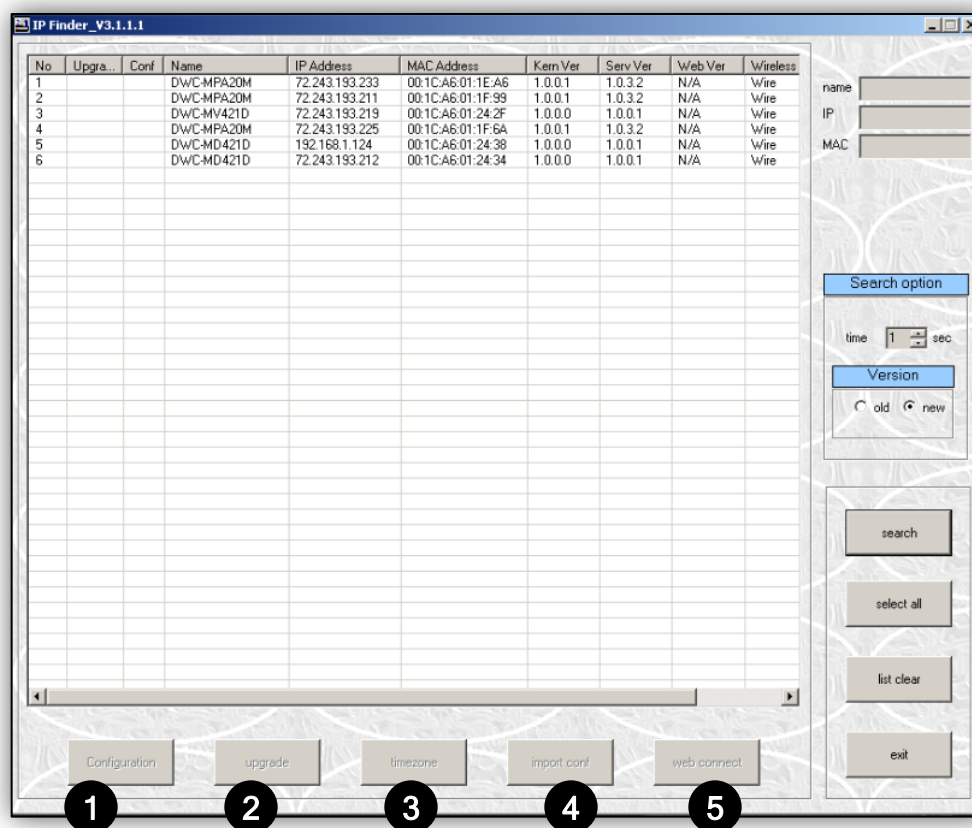


IP FINDER SOFTWARE*

Using IP Finder Software

Use IP Finder to set the connection type and the IP address information for your MEGAPIX camera.

1. **DHCP:** Select DHCP to access the camera within the same internal network.
2. **PPPoE:** Use this option when using WAN service. To use WAN service, a User ID and Password from your internet service provider is required.
3. **Static IP:** Select Static to connect to the camera from an external network.
4. **Use DDNS:** Check this option to use DDNS service.
5. **Port:** Displays the port numbers that are required for communication. User can use IP Finder to change other basic settings for the MEGAPIX camera. (The menu will be different depending on the model.)

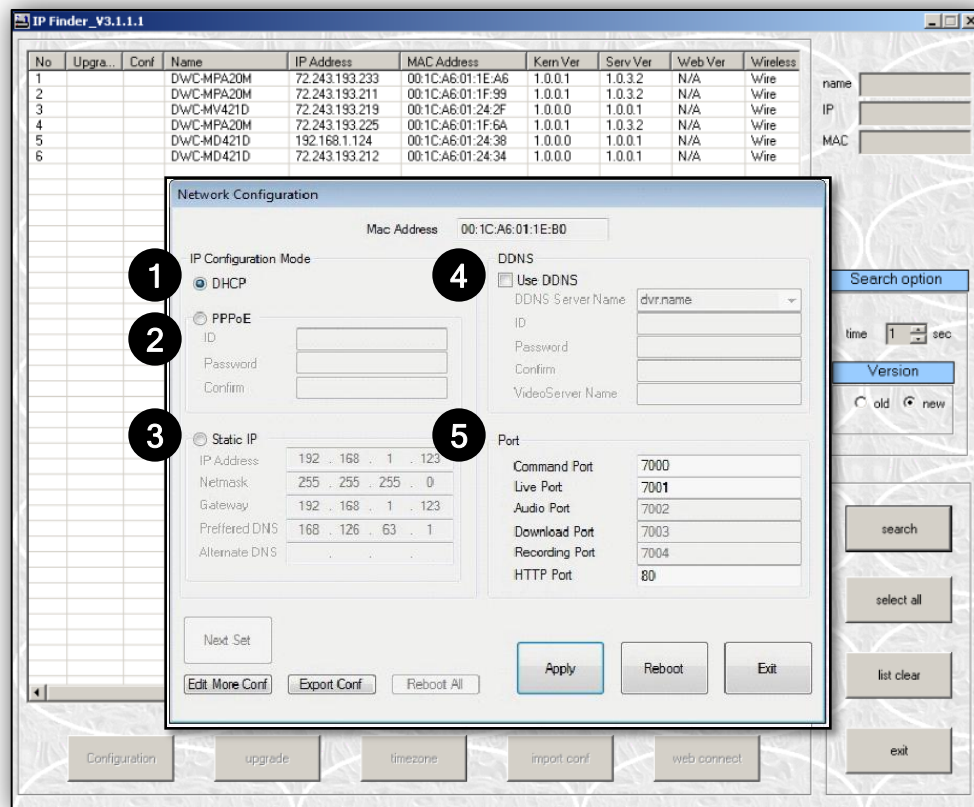

*If you decide to change the camera's IP, write down the camera's MAC Address for identification in the future.

IP FINDER SOFTWARE*

DHCP

The Dynamic Host Configuration Protocol (DHCP) is a network configuration protocol that allows a device to configure automatically according to the network it is connected to.

If your network supports DHCP, and your MEGAPIX camera is setup as DHCP; then once you search for your camera using IP Finder, the search results will display your MEGAPIX camera with already set network settings that correspond to your network requirements.

Static

Static IP addresses are recommended when using a network that does not support DHCP. If Static is selected, then you must manually enter all the network settings for your MEGAPIX camera that would correspond with your network. Static IP addresses are recommended if you want to setup your device to be accessed externally via the internet. For each setup of the camera to a static IP address, it is recommended that you first setup the camera to DHCP, allow it to configure itself according to your network, and then change the settings to a static IP address.

1. To set your MEGAPIX camera to static, highlight the desired device from the search results list, and click on Configuration. In the new setup window, make sure static is selected.
2. Enter the following information: **IP Address**, **Netmask**, **Gateway**, **Preferred DNS**.
3. Click **Apply** and **System Reboot** to save all changes.

DDNS

Dynamic Domain Server is a feature that allows you to use a URL instead of an IP address to access your MEGAPIX camera. The feature is optional, for it may require subscription and payment.

1. To use the DDNS feature, check the box next to **Use DDNS**.
2. Select the server you wish to use. *Some servers may require subscription and payment.
3. Enter the desired **Hostname**.
4. If applicable, enter the **User ID** and **Password**.
5. Click **Apply** and **System Reboot** to save all changes.


CAMERA REBOOT*

Resetting the Camera

Pressing the reset button on the camera's control board for five (5) seconds will initialize all environmental variables to factory default. Previous setup for IP default, time, etc. will be deleted. If a system's IP address is lost, reset the camera back to factory default.

The following are the default network settings.

IP Mode	DHCP
IP Address	192.168.1.123
Subnet Mask	255.255.255.0
Gateway	192.168.1.123
Base Port	7000
HTTP Port	80

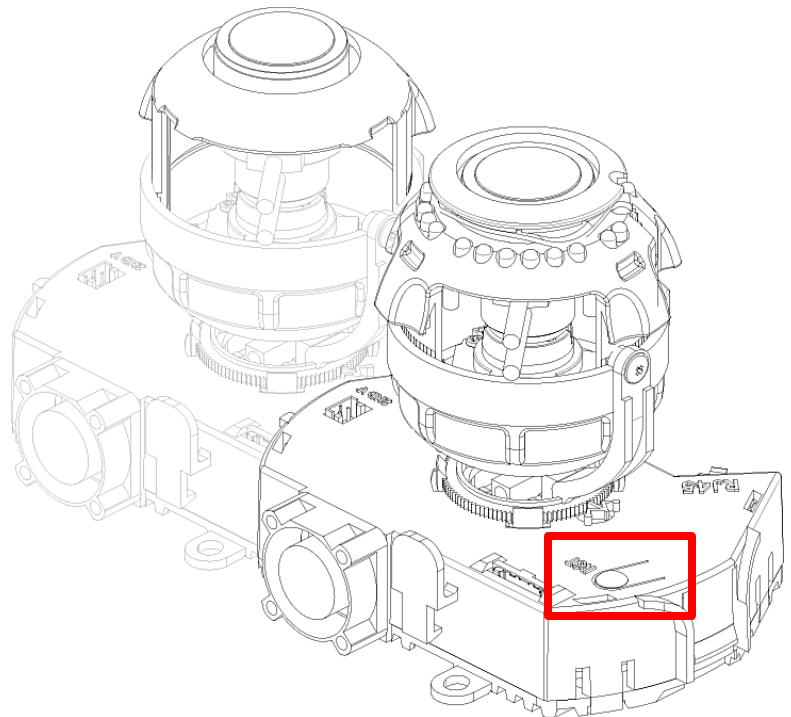


*Frequent use may cause system error.

WEBVIEWER*

Remote Video Monitoring Via Internet Explorer

Monitor and configure the MEGAPIX camera through a built-in Webviewer.

1. Type the IP address of the camera on the Internet Explorer window.
Example: `http://192.168.1.123` (Factory Default)
2. Enter Username and Password
Username: admin | Password: admin
3. The web browser will ask to install Active-X Control. Once it has been installed, Internet Explorer will display video images from the camera.

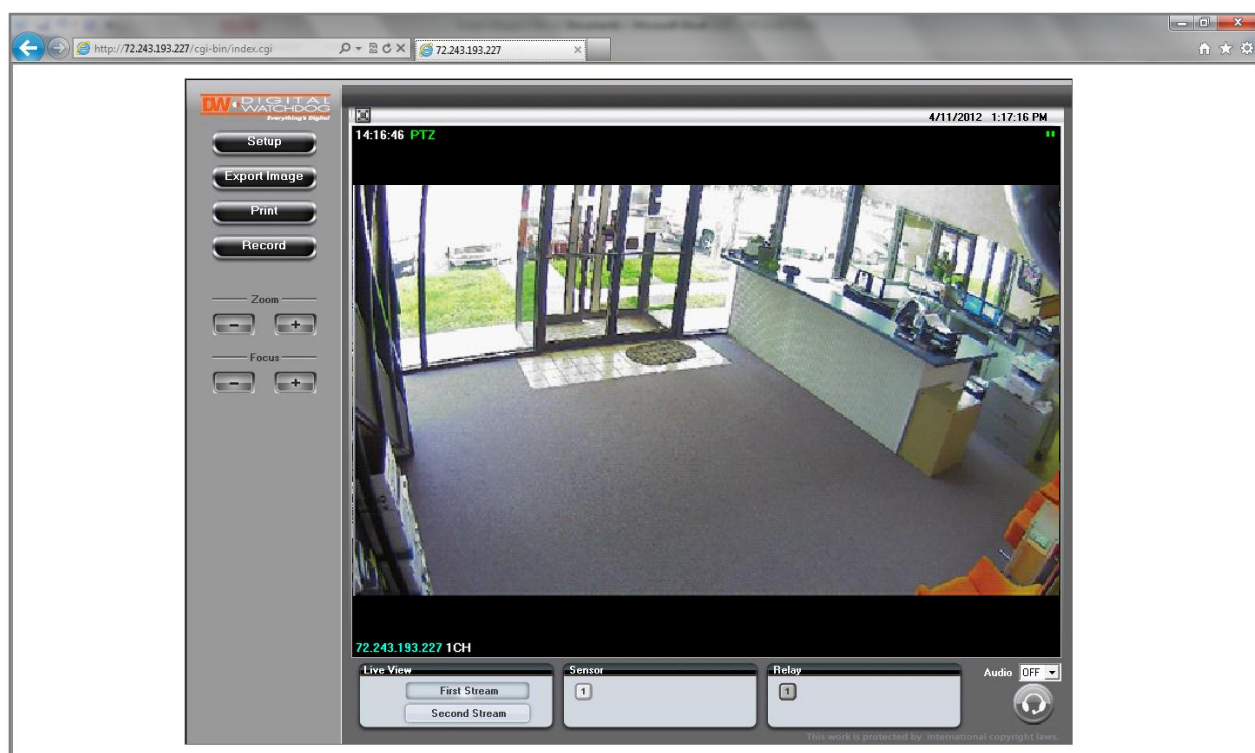

WEBVIEWER*

Remote Video Monitoring Via Chrome, Firefox, or Safari

You can view your MEGAPIX camera using web browsers other than Internet Explorer. To do so, at least one of the streams of the camera must be set to the codec (Compression Type) MJPEG.

1. Open Google Chrome, Mozilla Firefox, or Apple Safari Web Browser.
2. Enter the IP camera's IP address. NOTE: If the first stream is set to H.264; then a video will not be displayed on the GUI.
3. Click the Setup button. Then go to Video & Audio > Stream Settings.
4. Modify one of the two (2) streams to the codec MJPEG.
5. When you are finished modifying the streams, click Apply to make sure all changes have been saved and your camera has been rebooted.
6. Exit the screen to return to the camera's main page.
7. At the bottom of the page, select the stream you set as MJPEG. The camera will start streaming video.

The screenshot displays the 'web setup' interface of a MEGAPIX camera. At the top, there are tabs for 'web setup' and 'remote backup'. On the left, a sidebar menu lists categories: 'Video & Audio' (expanded), 'Event', 'Network', 'Record', and 'System'. Under 'Video & Audio', 'Stream Settings' is selected. The main area is titled 'Stream Settings' and contains two sections: 'First Stream' and 'Second Stream'. Each section has a table of settings with fields for Name, Resolution, Compression Type, Data Transfer Speed, Framerate, and MJPEG Quality. The 'First Stream' is currently set to H.264, while the 'Second Stream' is set to MJPEG. At the bottom, there are 'Apply' and 'Reload' buttons.

Stream Settings	
First Stream	
Name :	1CH
Resolution :	1920x1080 (16:9)
Compression Type :	H.264
Data Transfer Speed :	4000 [1800 ... 8000] Kbps
Framerate :	30 (fps)
MJPEG Quality :	Normal
Second Stream	
Name :	2CH
Resolution :	960x544 (16:9)
Compression Type :	MJPEG
Data Transfer Speed :	4000 Kbps
Framerate :	30 (fps)
MJPEG Quality :	Normal

Apply Reload


WEBVIEWER*

Display Screen > First Stream & Second Stream

Configure two stream settings for monitoring and recording.

On the main monitoring page, user can view the camera with the First Stream settings or the Second Stream settings. Below the display screen, click on the First Stream and Second Stream buttons to view the different camera settings.

- To setup Stream Settings, refer to page 30.

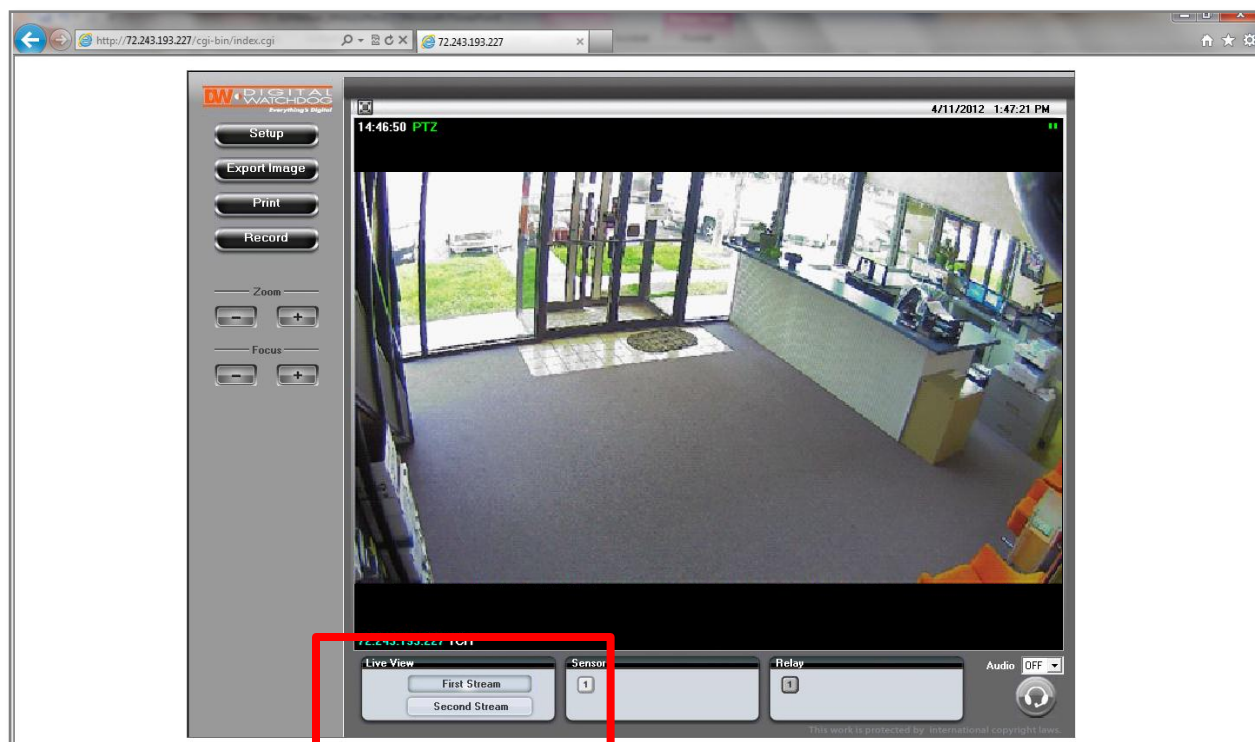


WEBVIEWER*

Display Screen > Export Image

Export a screenshot of current live video to your computer.

1. Select the Export Image button. A 'Save As' window will appear.
2. Select the folder you wish to Save in and type a File Name.
3. Click 'Save' and the screenshot will be saved.

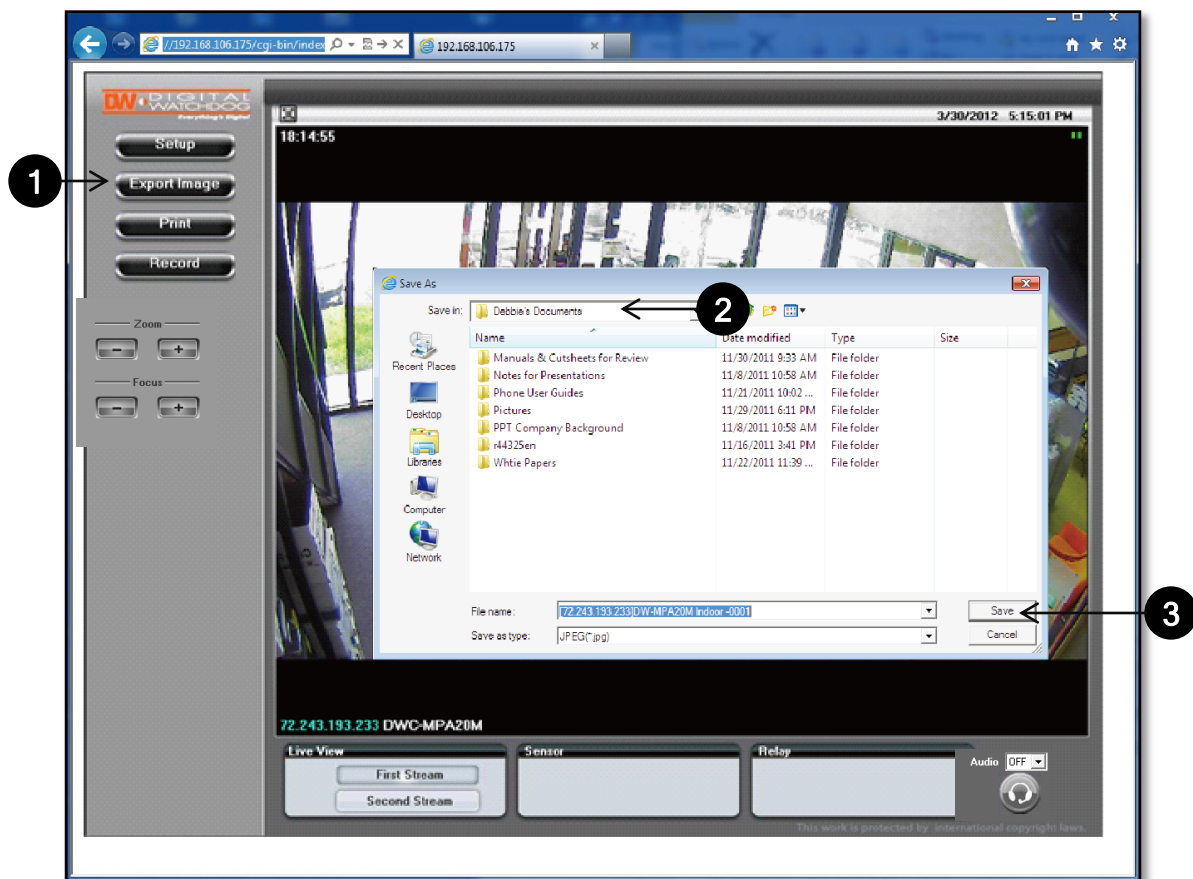


*Image can only be saved as a JPEG file by default .

WEBVIEWER*

Display Screen > Print Image

Print a screenshot of the current live video.

1. Select the Print button. The Print Preview window will appear.
2. Adjust the orientation of the screenshot: portrait or landscape, facing left, right, up, or down.
3. Zoom in on a portion of an image prior to printing.
4. Select the scale of how the image will be printed on the page: Original Size, Fit to Paper, or 50-200%.
5. To print information about the screenshot, select View Title.
6. To add a memo for the screenshot, select Page Option.
7. Go to Printer Setup to select the printer and manage printer properties.
8. Select Print to print the page, or Close to cancel the print.

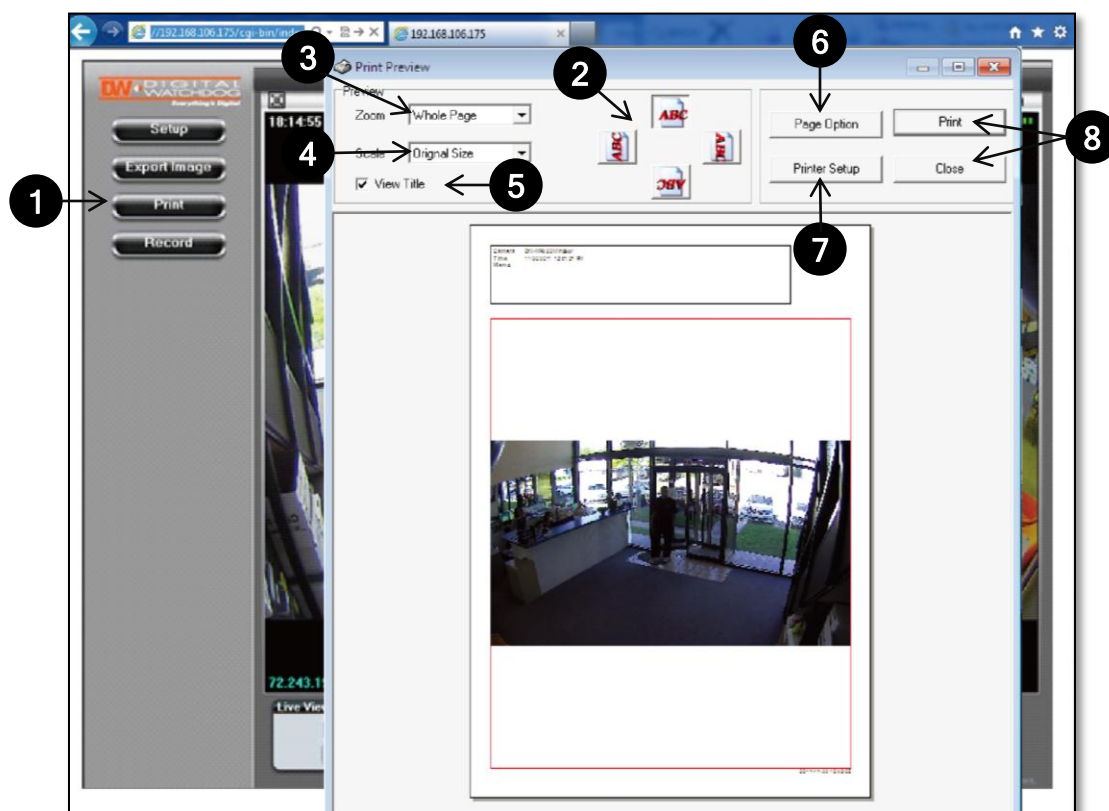


WEBVIEWER*

Display Screen > Record

Instantly record live video to your local drive.

To Setup Instant Recording

1. Select the Record button.
2. Indicate where you want the videos to be saved.
3. Setup the duration of the instant recording. You can record up to 120 seconds of live video.
4. When setup is complete, click OK to save changes or Cancel to cancel any changes.

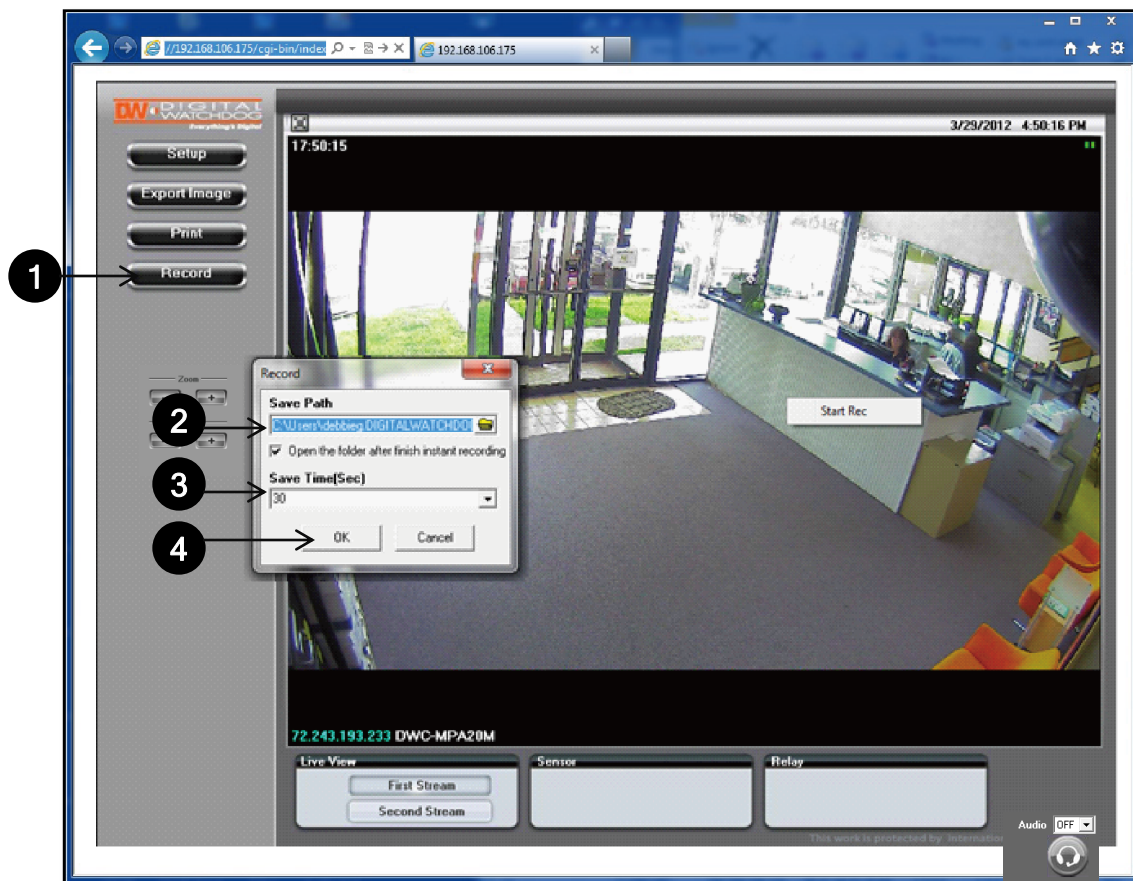


WEBVIEWER*

Display Screen > Record

Instantly record live video to your local drive.

To Start and Stop Instant Recording

1. To Start, right-click anywhere on the display screen.
2. Select Start Rec. The icon on the top right of the screen will change to **INSTANT**.
3. To Stop, right-click anywhere on the display screen.
4. Select Stop Rec. The video will be displayed in the designated folder when recording is complete.

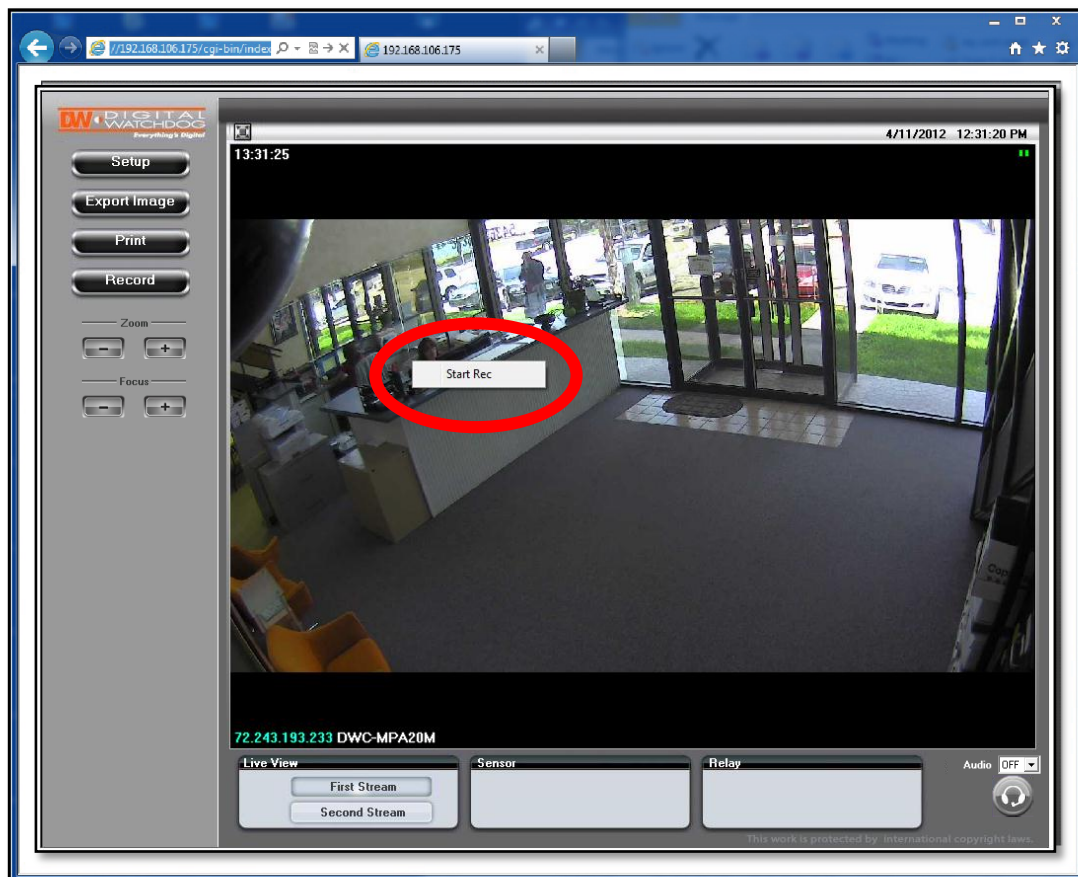


WEBVIEWER*

Display Screen > Setup > Video & Audio > Stream Settings

The Recommended Stream Settings are indicated on the image to the left. This is also the factory default settings.

1. Name: Set a distinguish name to each stream to identify each.
2. Resolution: Set Resolution for each stream. The better the resolution of the video, the more bandwidth it will require to stream images.
3. Compression Type (Codec): Select the type of compression to use when outputting the video.
4. Data Transfer Speed: Set encoding bitrate if H.264 and MPEG4 compression type is selected.
5. Framerate: Select from 0fps to 30fps.
6. MJPEG Quality: Set MJPEG image quality. This is only available when the compression is set to MJPEG. The higher the quality, the more bandwidth will be required to stream the image.
7. Select Apply to save changes.

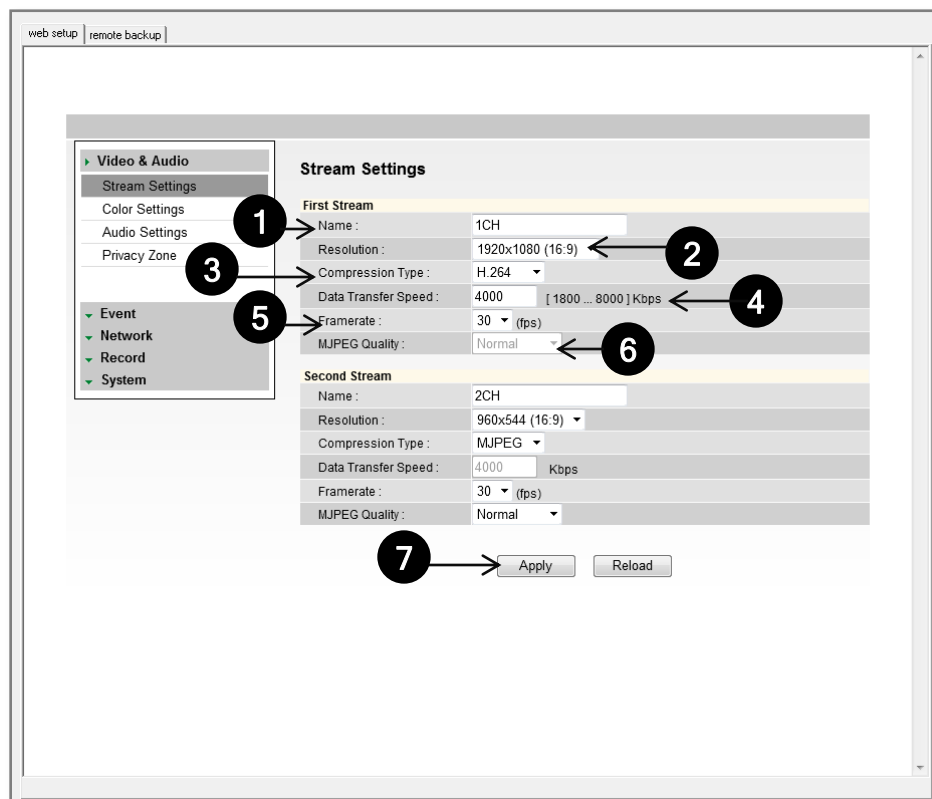

WEBVIEWER*


Display Screen > Setup > Video & Audio > Color Settings

Initially, the factory default settings will appear; however, you may customize the Color Settings for your MEGAPIX camera.

White Balance: Mode - Also known as Color Balance. This gives the camera a reference to “true white.” Select from Auto, Auto_H, Auto_L, Preset, or Manual.

Auto Exposure: Set Brightness, Shutter Mode, Digital Slow Shutter, Shutter Speed, AGC Gain, and BLC Mode.

1. Brightness: Select from 0 (darkest) to 20 (brightest).
2. Shutter Mode: Set the amount of light allowed in the video manually or automatically.
3. Digital Slow Shutter: Recommended in low light conditions. Turn On (2x, 3x, 4x) or Off.
4. Shutter Speed: Select the speed the camera's shutter will operate—1/30, 1/60, or 1/120.
5. AGC Gain: Maximum light gain settings in low light conditions. Select from 0 (least light) to 20 (most light).
6. BLC (Back Light Compensation) Mode: This setup allows the camera to process an image that is harshly silhouetted against a bright light source. Turn On or Off.
7. Select Apply to save changes.

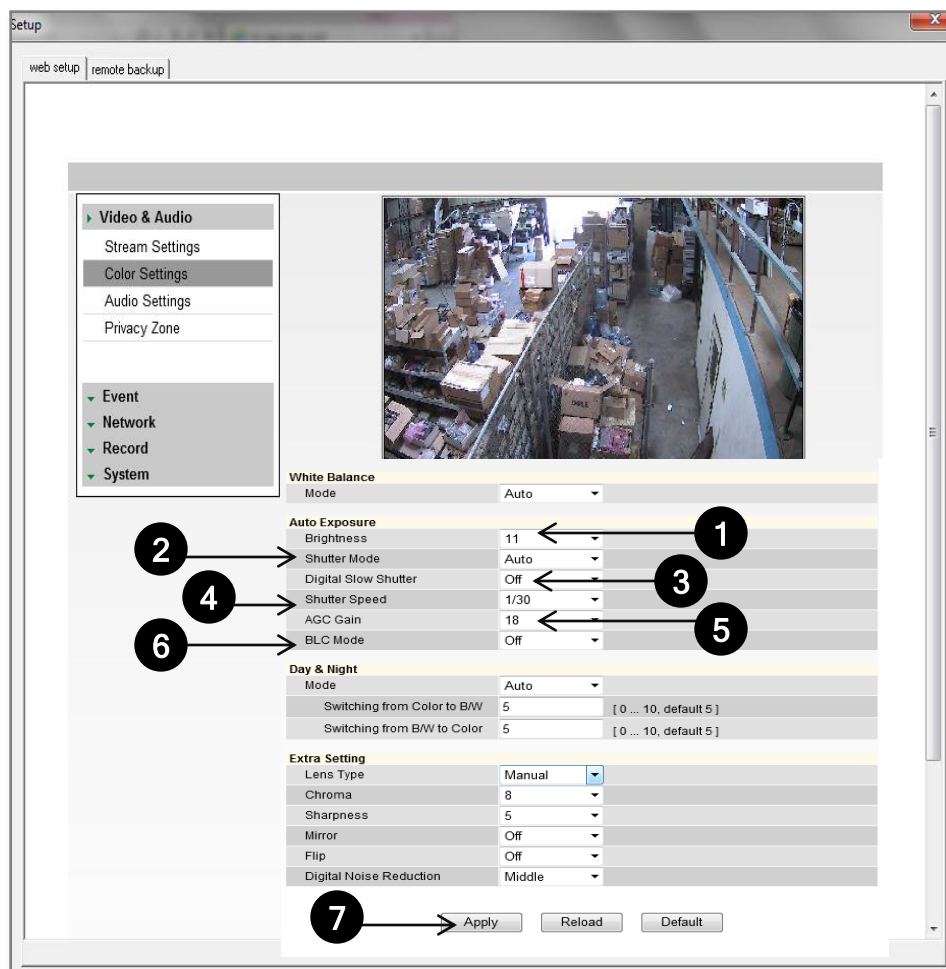

WEBVIEWER*

Display Screen > Setup > Video & Audio > Color Settings

Initially, the factory default settings will appear; however, you may customize the Color Settings for your MEGAPIX camera.

Day & Night: Set the mode to Night (B/W), Day (Color), or Auto. If set as Auto, set a desired Color to B/W Level and B/W to Color Level.

1. Switching from Color to B/W: Select from 0~10. The higher the number, the less darker the environment will have to be for the camera to switch from color to B/W.
2. Switching from B/W to Color: This number should always be lower than the number set from Color to B/W.

Extra Settings: Set Lens Type, Chroma, Sharpness, Mirror, Flip, and Digital Noise Reduction.

3. Lens Type: Set the camera to indoor/ outdoor lighting environment. Select Manual, DC, or AF.
4. Chroma: Affect the quality of the color in the image. Select from 0~20. The higher the number, the brighter the color in the video.
5. Sharpness: Select sharpness from 0~10 of the image.
6. Mirror/ Flip: Select On or Off to mirror the image from left to right, or flip it upside down.
7. Digital Noise Reduction: Control the level of noise in the image. Select from Off, Low, Middle, or High.
8. Select Apply to save changes.

The screenshot shows the 'Color Settings' interface in the Webviewer. It is divided into two main sections: 'Day & Night' and 'Extra Setting'. The 'Day & Night' section has a 'Mode' dropdown set to 'Auto'. Below it are two sliders: 'Switching from Color to B/W' and 'Switching from B/W to Color', both set to 5. The 'Extra Setting' section includes 'Lens Type' (Manual), 'Chroma' (8), 'Sharpness' (5), 'Mirror' (Off), 'Flip' (Off), and 'Digital Noise Reduction' (Middle). At the bottom are 'Apply', 'Reload', and 'Default' buttons. Numbered callouts 1 through 8 point to specific elements: 1 points to the 'Switching from Color to B/W' slider, 2 to the 'Switching from B/W to Color' slider, 3 to the 'Lens Type' dropdown, 4 to the 'Chroma' slider, 5 to the 'Sharpness' slider, 6 to the 'Mirror' and 'Flip' dropdowns, 7 to the 'Digital Noise Reduction' dropdown, and 8 to the 'Apply' button.

Day & Night	
Mode	Auto
Switching from Color to B/W	5
Switching from B/W to Color	5



Extra Setting	
Lens Type	Manual
Chroma	8
Sharpness	5
Mirror	Off
Flip	Off
Digital Noise Reduction	Middle

Buttons: Apply, Reload, Default

WEBVIEWER*

Display Screen > Setup > Video & Audio > Audio

- Connect speaker/microphone wires (not included) to your camera and a monitoring device (ex.: PC computer).
1. On the Display Screen in your Webviewer, go to Setup, Video & Audio, and finally, Audio. Adjust settings to your preference.
 - a) Audio Input: Set Gain (0-5).
 - b) Audio Output: Set Buffering Time & Volume (0-5).
 - c) Network Transfer: Select Transfer Audio regardless of video.
 - d) Select Apply to save changes.
 2. On the Display Screen, change Audio (in the bottom left corner) from OFF to 1. This will enable you to hear external audio.
 3. To transfer audio to the camera, select the 'headset' button beneath Audio.

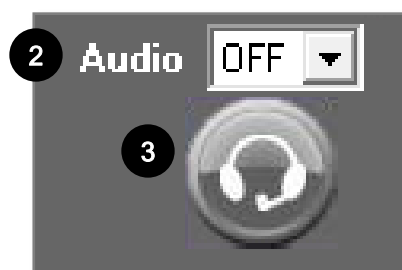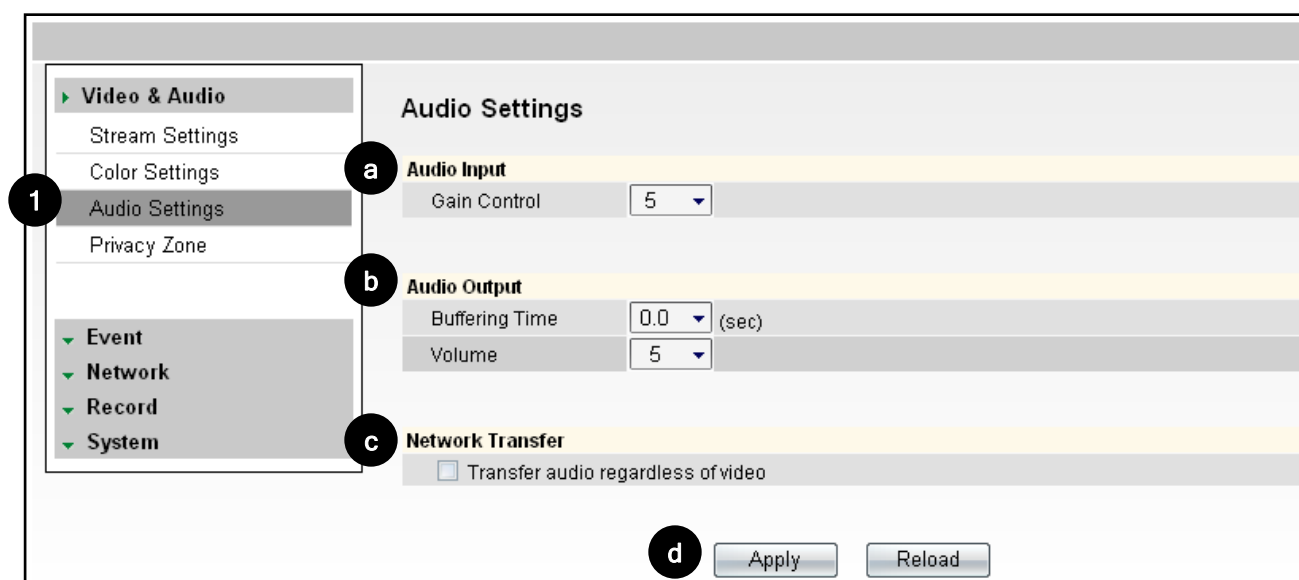

WEBVIEWER*

Display Screen > Setup > Video & Audio > Privacy Zone

The MD421 cameras offer up to 30 privacy zone settings. To set Privacy Zones:

1. Change Mode to On. Click Apply. By default, all 30 privacy zones will be displayed.
2. Select the color of the zone and transparency of the color from the drop down list. Click Apply.
3. Select the zones you want to view and/or modify. Use the Show All button to display all 30 privacy zones, or Hide All to deselect them and select only a single privacy zone. After selecting the privacy zone you want to modify, click Apply.
4. Set the zone's size and location using the grid lines. In Local Settings, select the zone you want to modify, then select the position: Horizontal Position: 0~57; Vertical Position: 0~31; Width: 0~60; Height: 0~34.

Click Apply after each modification to make sure the size and position match your requirements.

The screenshot shows the Privacy Zone configuration interface. It features a video feed at the top with a grid overlay. Below the video feed are two main sections: Global Settings and Local Settings.

Global Settings:

- Mode:** Off (dropdown menu)
- Color:** Cyan (dropdown menu)
- Transparency:** 4 (dropdown menu)
- Display Zone:** A grid of 30 checkboxes (1-30) for selecting privacy zones. A 'Show All' button is located below the grid.

Local Settings:

- Zone:** Zone 1 (dropdown menu)
- Horizontal Position:** 12 (dropdown menu)
- Vertical Position:** 2 (dropdown menu)
- Width:** 3 (dropdown menu)
- Height:** 3 (dropdown menu)

Buttons: 'Apply' (next to Mode, Color, Transparency), 'Show All' (below Display Zone), 'Apply' (next to Zone), and 'Reload' (at the bottom).

Numbered callouts (1-4) point to the following elements:

1. Mode dropdown menu
2. Color dropdown menu
3. Display Zone grid
4. Zone dropdown menu in Local Settings

WEBVIEWER*

Display Screen > Setup > Event > Motion Detection

web setup | remote backup

Video & Audio

Event

Motion Detection

Motion Area

Sensor Settings

Emergency Alarm

Network

Record

System

Motion Detection Settings

☒ Use Motion	
Sensitivity	Middle
Dwell Time	5 sec
Relay	1
Duration	5 sec

Apply

Reload

The Motion detection feature allows the MEGAPIX camera to detect motion and trigger an alarm. To set the camera to send e-mail notifications for every motion triggered alarms, see PAGE 50.

1. Check the Use Motion box.
2. Sensitivity: Select from Low, Middle, or High.
3. Dwell Time: When a motion is triggered, the camera can be set to record for a certain period of time. Dwell Time can be set up to 900 seconds.
4. Relay: Select None or 1.
5. Duration: select how long after motion is detected the camera will record video. Select from 0~900 seconds.
6. Select Apply to save changes.


To setup specific areas of the camera's view to motion detection, please see the next page.

WEBVIEWER*

Display Screen > Setup > Event > Motion Area

The Motion detection feature allows the MEGAPIX camera to detect motion and trigger an alarm. To set the camera to send e-mail notifications for every motion triggered alarms, see PAGE 50.

1. Hold left mouse button and drag the mouse pointer to select the motion area, or use Set All button to select the entire screen.
2. Select Clear All to deselect the selected motion areas.
3. Select Apply to save changes.

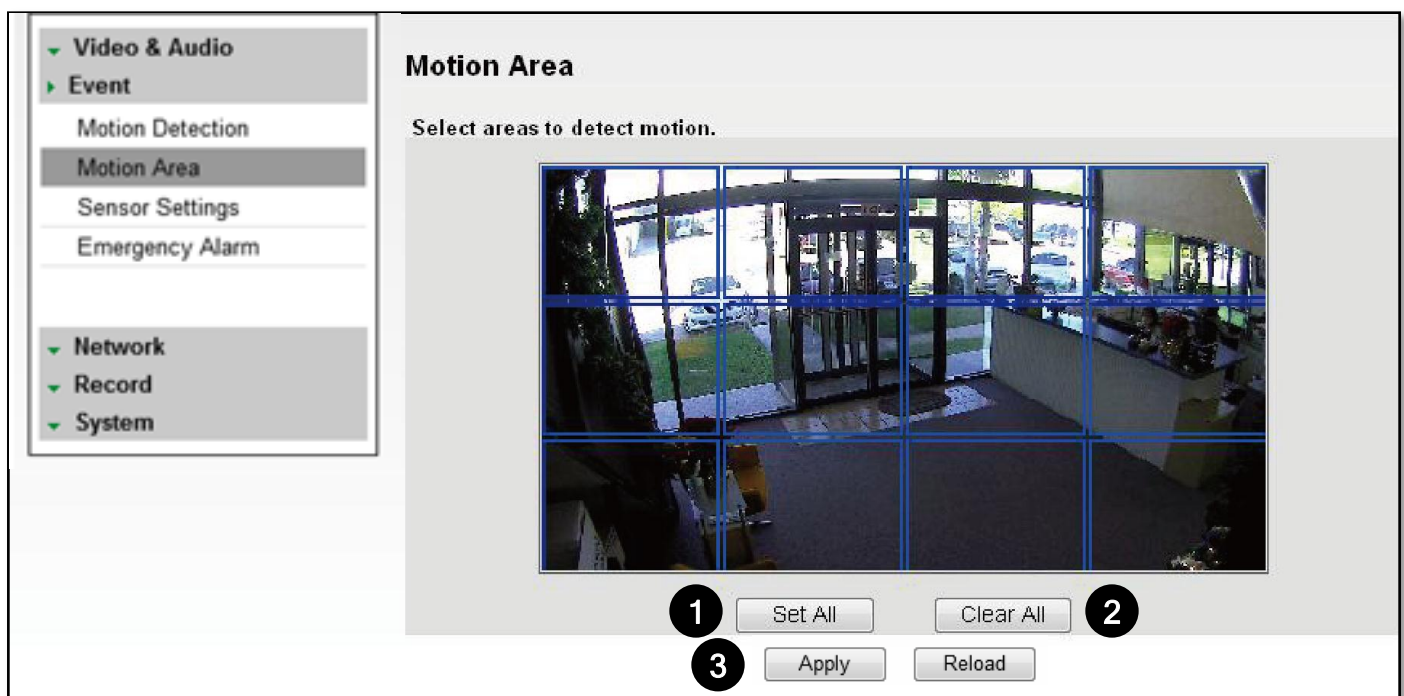

WEBVIEWER*

Display Screen > Setup > Event > Sensor Settings

To Use Sensor

1. **Sensor:** Select sensor type(NO/NC) and check sensor number. To use relay out, check relay number and set time to activate.

NO(Normal Open) : Sensor is activated when it closes. (Example: Door is normally opened. Alarm is triggered when door closes.)

NC(Normal Close) : Sensor is activated when it opens. (Example: Window is normally closed. Alarm is triggered when window opens.)

2. **Relay Activity:** To use Relay Activity, select USE and set time to activate.

3. Select Apply to save changes.

Sensor Settings

1 **Sensor**

Use	Type	Dwell(sec)	Camera	Relay	Dur(sec)
☒ 1	☒ NO ☐ NC	0	None	1	0

2 **Relay Activity**

Use	Name	Activity Time
☐ 1		0 : 0 ~ 0 : 0

3

WEBVIEWER*

Display Screen > Setup > Event > Emergency Alarm

Send alarm triggered information to predefined destination (i.e. remote client software).

1. **Site Information:** Site Name, Transmission Settings, and Video Duration for the video that will be sent when motion is detected.
2. **Emergency Alarm Recipient List:** Enter the IP address and the Port for the remote site(s) to which you want to send the video. You can set up to five different servers. You must set same port to get EA data.
3. **Event for EA:** Select which type of even will trigger the alarm – Motion or Sensor.
4. Select Apply to save changes.

Emergency Alarm

1 Site Information

Site Name

Transmission Settings ☒ First Stream ☐ Second Stream

Video Duration sec

2 Emergency Alarm Recipient List

	IP	Port
Server1		0
Server2		0
Server3		0
Server4		0
Server5		0

3 Event for EA

Camera1 ☒ Motion ☒ Sensor

4

WEBVIEWER*

Display Screen > Setup > Network > Network Settings

1. IP Mode: Select the type of IP address for the camera.
DHCP: IP is assigned automatically.
PPPoE: Select this option when you use WAN service. To use WAN service, you will need a Username and Password from your Internet Service Provider.
Static IP: Enter IP information on existing field if you decided to give the camera a static (fixed) IP address.
2. DNS: Enter Primary DNS and Secondary DNS.
3. IPv6 Mode: IPv6 offers a new 128-bit address system. You can use it to use an Automatic address generated by the network, or you can manually enter a Static address.
4. MAC Address: Displays the camera's MAC (Mobile Access Control) Address.
5. PORT: Displays all the ports necessary for network communication.
6. Reboot your system to apply the changes to your camera. To Reboot, select Apply. A dialogue box will appear, select OK. System will automatically restart and may take up to 20 seconds to reboot.

The screenshot shows the 'Network Settings' page in a web browser. On the left is a sidebar menu with categories: Video & Audio, Event, Network (selected), Record, and System. Under 'Network', the sub-items are Network Settings, Dynamic DNS, Communication Protocol, Access Permission, and OnVIF. The main content area is titled 'Network Settings' and contains several sections:

- IP Mode:** Labeled with a circled '1'. It has three radio buttons: DHCP, PPPoE, and Static IP (which is selected).
- DNS:** Labeled with a circled '2'. It has fields for Primary DNS (168.126.63.1) and Secondary DNS.
- IPv6 Mode:** Labeled with a circled '3'. It has three radio buttons: Not Use (selected), Auto, and Static.
- MAC Address:** Labeled with a circled '4'. It shows the address 00:1C:A6:01:04:38.
- PORT:** Labeled with a circled '5'. It contains a table of ports:

Command Port:	7000	Live Port:	7001
2Way Audio Port:	7002	Web Port:	80
Recording Port:	7004		
- Buttons:** At the bottom, labeled with a circled '6', are 'Apply' and 'Reload' buttons.

WEBVIEWER*

Display Screen > Setup > Network > Dynamic DNS

If you do not use a public IP address, DDNS provides you to connect on WAN. DDNS allows you to connect to the MEGAPIX camera with a URL address instead of an IP address. DDNS automatically redirects traffic to your IP address every time it changes.

1. To use DDNS, select the Use DDNS checkbox.
2. Select one of the DDNS System Names from the drop down list.
3. Enter Username & Password. The Username & Password must be registered at the DDNS site.
4. Enter Host Name.
5. Reboot your system to apply the changes to your camera. To Reboot, select Apply. A dialogue box will appear, select OK. System will automatically restart and may take up to 20 seconds to reboot.

The screenshot shows the 'Dynamic DNS' configuration interface. On the left is a sidebar menu with categories: 'Video & Audio', 'Event', 'Network', 'Record', and 'System'. Under the 'Network' category, the following options are listed: 'Network Settings', 'Dynamic DNS' (highlighted), 'Communication Protocol', 'Access Permission', and 'OnVIF'. A callout '1' points to the 'Dynamic DNS' option. The main content area is titled 'Dynamic DNS' and contains a section labeled 'DDNS'. Within this section, there is a checkbox labeled 'Use DDNS'. Below it are four input fields: 'System Name' (containing 'dvr.name'), 'Username', 'Password', and 'Hostname'. Callouts '2', '3', and '4' point to the 'System Name', 'Username', and 'Hostname' fields respectively. At the bottom of the form, there are two buttons: 'Apply' and 'Reload'. A callout '5' points to the 'Apply' button.

WEBVIEWER*

Display Screen > Setup > Network > Communication Protocol

Current Protocol displays the current selected protocol.

1. To change the Protocol, select one of the three options—TCP, UDP, or Multicast.
2. If you select Multicast, enter the Multicast IP and Multicast Port.
3. Reboot your system to apply the changes to your camera. To Reboot, select Apply. A dialogue box will appear, select OK. System will automatically restart and may take up to 20 seconds to reboot.

The screenshot shows the 'Communication Protocol' configuration page in the Webviewer interface. On the left is a sidebar menu with categories: Video & Audio, Event, Network, Record, and System. Under the 'Network' category, the following options are listed: Network Settings, Dynamic DNS, Communication Protocol (which is highlighted), Access Permission, and OnVIF. The main content area is titled 'Communication Protocol' and contains the following fields:

Current Protocol :	TCP
Protocol :	☒ TCP ☐ UDP ☐ Multicast
Multicast IP :	
Multicast Port :	0

Below the fields are two buttons: 'Apply' and 'Reload'.

Numbered callouts indicate the steps:

- 1: Points to the 'Multicast' radio button in the 'Protocol' field.
- 2: Points to the 'Multicast IP' and 'Multicast Port' input fields.
- 3: Points to the 'Apply' button.

WEBVIEWER*

Display Screen > Setup > Network > Access Permission

Use the Access Permission page to allow or block specific IP addresses to connect to the camera.

1. Select Allow All to allow anyone to connect to this camera. If Allow All is selected, the Allowed IP List and Blocked IP List will be ignored.
2. To allow only a specific list of IP addresses to connect to this camera, select Allow. Enter an IP Address and click the Add button.
3. To block a specific list of IP addresses from connecting to this camera, select Block. Enter an IP Address and click the Add button.


The screenshot displays the 'Camera Access Permission' configuration page. On the left is a sidebar menu with categories: 'Video & Audio', 'Event', 'Network' (expanded), 'Record', and 'System'. Under 'Network', the options are 'Network Settings', 'Dynamic DNS', 'Communication Protocol', 'Access Permission' (highlighted), and 'OnVIF'. The main content area is titled 'Camera Access Permission' and includes the instruction: 'Allow and block specific IP addresses that can access your IP cameras.' Below this, there are two radio button options: 'Allow All' (selected, indicated by a blue dot) and 'Allow' (unselected). A red circle with the number '1' points to the 'Allow All' option. Below the radio buttons, there are two sections. The first section, labeled 'Allowed IP List', has a red circle with the number '2' pointing to its header. It contains an 'IP' input field, an 'Add' button, and a 'Delete' button. The second section, labeled 'Blocked IP List', has a red circle with the number '3' pointing to its header. It also contains an 'IP' input field, an 'Add' button, and a 'Delete' button. At the bottom of the page are 'Apply' and 'Reload' buttons.

WEBVIEWER*

Display Screen > Setup > Network > OnVIF

OnVIF is the Open Network Video Interface Forum.

1. To use OnVIF, check Enable.
2. Set the Service Port to "8032."
3. Select On or Off for WS-Security.
4. Select desired Options from the list.
5. Select On or Off for WS-Discovery (Web Services Dynamic Discovery).
6. Select On or Off for Verify Service Address.
7. Select Apply to save changes.

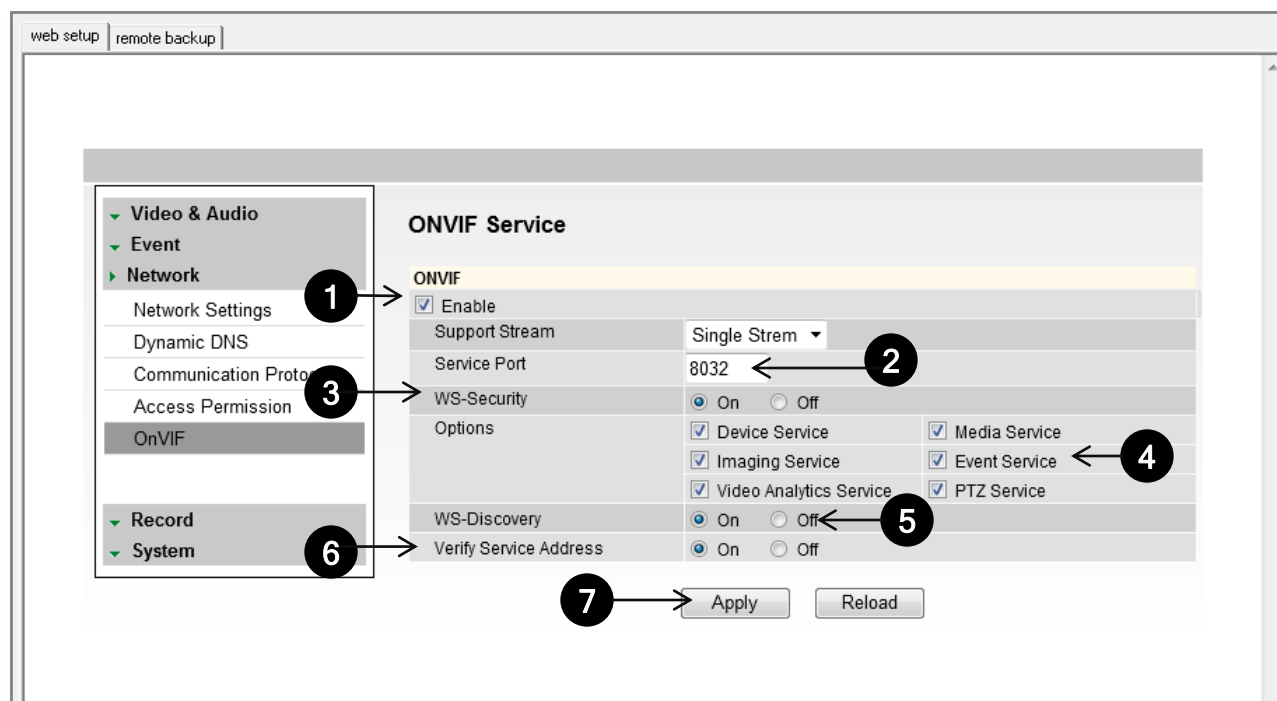

WEBVIEWER*


Display Screen > Setup > Record > Storage Device

1. Click the icon Load Device Information to find the SD card connected to the camera.
2. The system will display all storage devices currently connected to the camera.
3. To activate the SD card to start recording, select Record Start.
4. To stop the SD card's recording, select Record Stop.

Recording Information

5. This section displays the first and last recorded data available on the selected SD card.

SD card records video from second stream. To modify recording quality, please see page 30, Stream Settings.

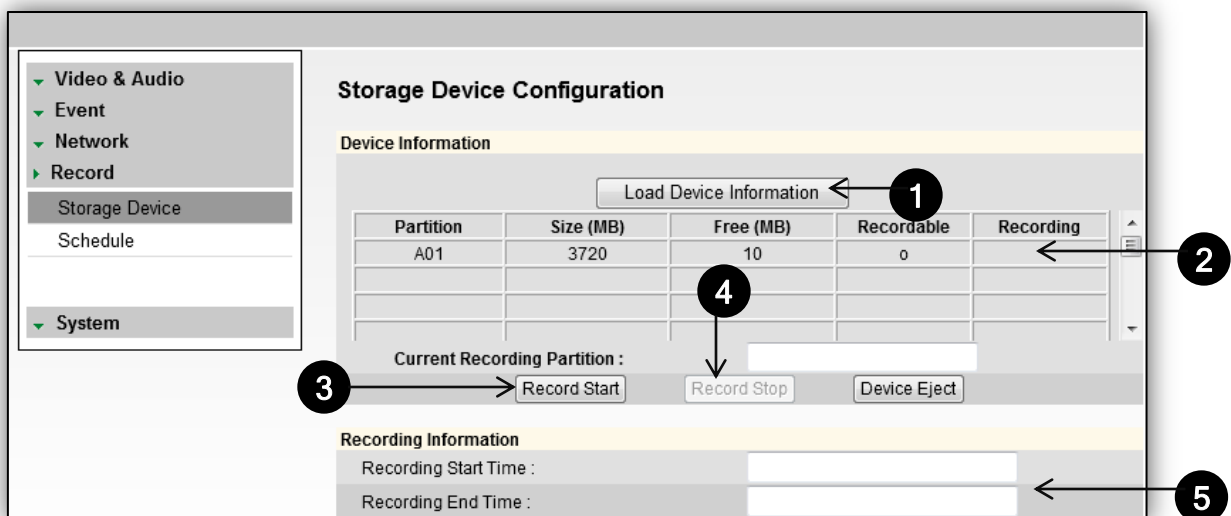

IMPORTANT: The SD card recording function operates as an emergency recording, designed to record video from the camera only when there is a network loss. If you connect to the camera via the web viewer or an NVR, the SD card recording will stop.

WEBVIEWER*

Display Screen > Setup > Record > Schedule

The recording schedule applies to the SD card's emergency recording. When the camera detects a network loss, it will start recording backup video to the SD card based on the schedule setup.

Video Schedule

1. Set recording schedule daily or weekly. Default is daily setting. It only saves single day's setting without changing to 'Multi Day Mode.'
2. Select the type of recording: Continuous (Cyan), Motion (Yellow) & Sensor (Red). Recording type displays on each block by its color.
3. To set a specific recording schedule, select Set below the schedule.
4. Click next to the recording mode (example: motion) and hold. Drag your mouse over the hours you want to set for motion recording. The recording mode will be applied to the hours you selected when you release the mouse's right-click.
5. To remove scheduled recording for a specific day, select clear and press the box for which you want the recording removed. The box will now appear white.
6. Select Apply to save changes.

The screenshot shows the 'Recording Schedule' configuration page. On the left is a sidebar with a tree view containing 'Video & Audio', 'Event', 'Network', 'Record', 'Storage Device', 'Schedule', and 'System'. The 'Record' section is expanded, and 'Schedule' is selected. The main area is titled 'Recording Schedule' and contains a 'Video Schedule' section. This section has a row of checkboxes for days of the week (Sun, Mon, Tue, Wed, Thu, Fri, Sat), with 'Sun' checked. To the right of these is a 'Single Selection' button. Below the day checkboxes is a grid of 24 columns representing hours (00 to 23). Three rows are visible: 'All' (cyan), 'Continuous' (cyan), 'Motion' (yellow), and 'Sensor' (red). The 'Motion' row is currently selected. Below the grid are two radio buttons: 'Set' (selected) and 'Clear'. Below this is a 'Recording Control' section with three rows: 'Pre-Alarm Time' (5 sec), 'Motion Post-Alarm Time' (5 sec), and 'Sensor Post-Alarm Time' (5 sec). At the bottom of the main area are two checkboxes: 'Overwrite' (checked) and 'Key Frame Only' (checked). At the very bottom are 'Apply' and 'Reload' buttons. Numbered callouts point to specific elements: 1 points to the 'Single Selection' button; 2 points to the 'Motion' row in the schedule grid; 3 points to the 'Set' radio button; 4 points to the 'Schedule' item in the sidebar; 5 points to the 'Clear' radio button; and 6 points to the 'Apply' button.

WEBVIEWER*

Display Screen > Setup > Record > Schedule

The recording schedule applies to the SD card local recording. When the camera detects a network loss, it will start recording backup video to the SD card based on the schedule d setup.

Recording Control

5. **Pre-Alarm Time:** Save previous image of event for duration of time.
6. **Motion Post-Alarm Time:** Save images after motion events for duration of time.
7. **Sensor Post-Alarm Time:** Save images after sensor events for duration of time.
8. **Overwrite:** If selected, once the SD card is full, new video will be recorded over older data.
9. **Key Frame Only:** If selected, the SD card will record only Start and End Key Frame, the main frames in the series. This option is recommended when if you have limited storage space.
10. Click Apply to save changes.

The screenshot shows the 'Recording Schedule' and 'Recording Control' sections of a web interface. On the left is a sidebar menu with options: Video & Audio, Event, Network, Record (selected), Storage Device, Schedule, and System. The 'Recording Schedule' section includes a 'Video Schedule' table with days of the week and hours (00-23). The 'Recording Control' section contains input fields for 'Pre-Alarm Time', 'Motion Post-Alarm Time', and 'Sensor Post-Alarm Time', each set to 5 seconds. Below these are checkboxes for 'Overwrite' and 'Key Frame Only', both of which are checked. At the bottom are 'Apply' and 'Reload' buttons. Numbered callouts 5 through 10 point to specific elements: 5 points to the Pre-Alarm Time input, 6 to the Motion Post-Alarm Time input, 7 to the Sensor Post-Alarm Time input, 8 to the Overwrite checkbox, 9 to the Key Frame Only checkbox, and 10 to the Apply button.

Video Schedule	
	Sun Mon Tue Wed Thu Fri Sat
All	00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23
Continuous	[Yellow cells]
Motion	[Yellow cells]
Sensor	[Red cells]

Recording Control

Pre-Alarm Time: 5 sec

Motion Post-Alarm Time: 5 sec

Sensor Post-Alarm Time: 5 sec

☒ Overwrite ☒ Key Frame Only


Apply Reload

WEBVIEWER*

Display Screen > Setup > Remote Backup Tab

The MD421 MEGAPIX Series allows you to backup your SD card locally to your computer without the need to remove it from the camera.

1. Go to the Remote Backup Tab in the camera's Setup menu.
2. On the calendar, select the date for remote backup.
 - a. Days with recorded data will be indicated in BOLD.
 - b. Hours with recorded data on them will be indicated by the pink line in the time bar.
3. Select the Backup Start Time and Backup End Time.
4. Select the Target Drive. The Target Drive is where the remote backup will be saved.
5. You can also use the interactive time bar.
 - a. Right-click on the time you want to set as Start Time.
 - b. Left-click on the time you want to set as End Time.
 - c. The time frame you have selected will appear in BLUE.
6. Select Backup Start. To cancel a backup in progress, select Backup Cancel.

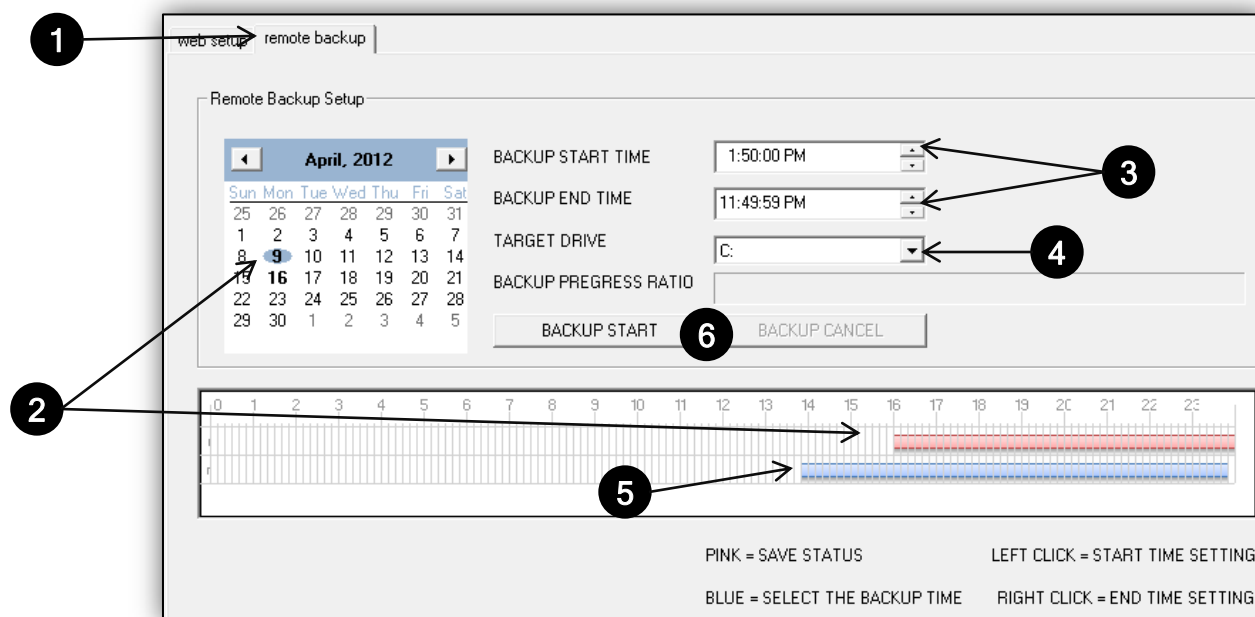

WEBVIEWER*

Display Screen > Setup > System > Upgrade

Upgrade the MEGAPIX camera with an upgrade file.

1. **System Version:** Shows the current version of the camera.
2. **Manual Upgrade:** To upgrade system firmware, you have to contact manufacturer and get the upgrade file first. Go to www.Digital-Watchdog.com and select Support tab.
 - a. Browse file and select the file.
 - b. Press Upgrade button. A dialogue box will appear. Select OK. System will automatically reboot.
3. **FTP Upgrade:**
 - a. Server Address: FTP Server IP address
 - b. Port: Default is 21.
 - c. User ID: FTP Server Log in ID.
 - d. Password: FTP Server Log in Password.
 - e. Directory: Upgrade File Path.
 - f. Action: Select Check Upgrade to display the Upgrade File list.
 - g. Status: Display progress of the Upgrade.
 - h. If camera detects an upgrade, a dialogue box will appear. Select OK. System will automatically reboot.

The screenshot shows the 'System Upgrade' section of the Webviewer interface. On the left is a sidebar menu with options: Video & Audio, Event, Network, Record, System, Upgrade, Date&Time, Email Notification, User Access, System Information, Logs View, and Factory Default. The 'System' menu item is selected, and the 'Upgrade' sub-item is highlighted. The main content area is titled 'System Upgrade' and contains three sections: 1. 'System Version' showing Camera Firmware: 4.0, Kernel Version: 1.0.0.0, and Server Version: 1.0.0.1. 2. 'Manual Upgrade' with fields for Kernel Upgrade, Server Upgrade, and Upgrade Status, each with a 'Browse...' button and an 'Upgrade' button. 3. 'FTP Upgrade' with fields for Server Address, Port (default 21), User ID, Password, and Directory, followed by an 'Action' dropdown set to 'Check Upgrade' and a 'Status' field. At the bottom are 'Apply', 'Reload', and 'System Reboot' buttons. Numbered callouts 1, 2, and 3 point to the 'System Version', 'Manual Upgrade', and 'FTP Upgrade' sections respectively.

WEBVIEWER*

Display Screen > Setup > System > Date & Time

Set date and time information.

1. Insert the Date and Time. Select the type of Format for your time.
2. Select your Time Zone.
3. To synchronize with the NTP Server, select the option and type the NTP Server Address.
Example: pool.ntp.org.
4. Select Apply to save changes.

Date&Time

Date :	2012 / 4 / 13	(YYYY/MM/DD)
Time :	9 : 37 : 1	(HH:MM:SS)
Format :	24 HRS	
Timezone :	(GMT) Casablanca, Monrovia	

☐ Synchronize with NTP server

NTP Server Address

4 Apply Reload

WEBVIEWER*

Display Screen > Setup > System > E-mail Notification

Send an e-mail notification when an event is triggered.

1. Select Use Event Mail option. Select Event Type.
2. Enter SMTP Server information. Example: smtp.gmail.com.
3. Enter Username and Password.
4. Enter Sender E-mail.
5. Add the E-mail(s) you wish to send the notifications to.
6. Select Apply to save changes.

The screenshot shows the 'Event and Alarm Email Notification' configuration page. On the left is a sidebar menu with options: Video & Audio, Event, Network, Record, and System (highlighted). Under 'System', there are links for Upgrade, Date&Time, Email Notification (highlighted), User Access, System Information, Logs View, and Factory Default. The main content area is titled 'Event and Alarm Email Notification'. It contains a checkbox 'Use Event Mail' (callout 1) and a row of event type checkboxes: Sensor, Motion, Relay, Reboot, and Upgrade. Below this are input fields for 'SMTP Server:' (callout 2), 'Username:' (callout 3), 'Password:' (callout 3), and 'Sender E-Mail:' (callout 4). There is an 'E-Mail List:' section with a text input field (callout 5) and 'Add', 'Modify', and 'Delete' buttons. At the bottom, there are 'Apply' and 'Reload' buttons (callout 6).

*Email Notifications do not support TSL/SSL option. Notifications are TEXT only.

WEBVIEWER*

Display Screen > Setup > System > User Access Control

To add a new user:

1. Enter Username and Password.
2. Select a Permission type.
 - a) Super: Administrator
 - b) Operator: View and Edit Video and Event Settings Only
 - c) Viewer: View Only
3. Click Add.
4. Select Apply to save changes.

To modify a user, select the user from the User List, and click Modify.

To remove a user, select the user from the User List, and click Remove.

User Access Control

User Registration

Username :

Password :

Permission : ☒ Super ☐ Operator ☐ Viewer

User List

Username	Permission
admin	Super
guest	Viewer

*The maximum number of users who can be added to the User List is twenty.

WEBVIEWER*

Display Screen > Setup > System > System Information

System Information will display all the current camera settings: System Version, Time Information, Network Information, and Stream Information.

▼ Video & Audio

▼ Event

▼ Network

▼ Record

▶ System

Upgrade

Date&Time

Email Notification

User Access

System Information

Logs View

Factory Default

System Information

System Version

Camera Firmware	4.0
Kernel Version	1.0.0.0
Server Version	1.0.0.1

Time Information

Timezone	(GMT) Casablanca, Monrovia
NTP Server	Not Use

Network Information

IPv4 Mode	Static (72.243.193.227)
DNS	168.126.63.1
IPv6 Mode	Not Use
MAC Address	00:1C:A6:01:24:38
Port	
Command	7000
Live	7001
Web	80
Dynamic DNS	Not Use
Communication Protocol	TCP

Stream Information


First Stream	
Name	1CH
Resolution	1920 x 1080
Compression Type	H264
Data Transfer Speed	4000 Kbps

WEBVIEWER*

Display Screen > Setup > System > Logs View

User can view detailed logs for system and/or events triggered and recorded in the camera.


1. To view, select the type of report you want to view: System, Event, or System & Event.
2. Select View.
3. The system will generate a report up to 140,000 bits of data.
 - For events to record, make sure the camera is set to record when an event, like motion detection, is triggered. See PAGE 35 for information on how to set motion detection for the MEGAPIX camera.

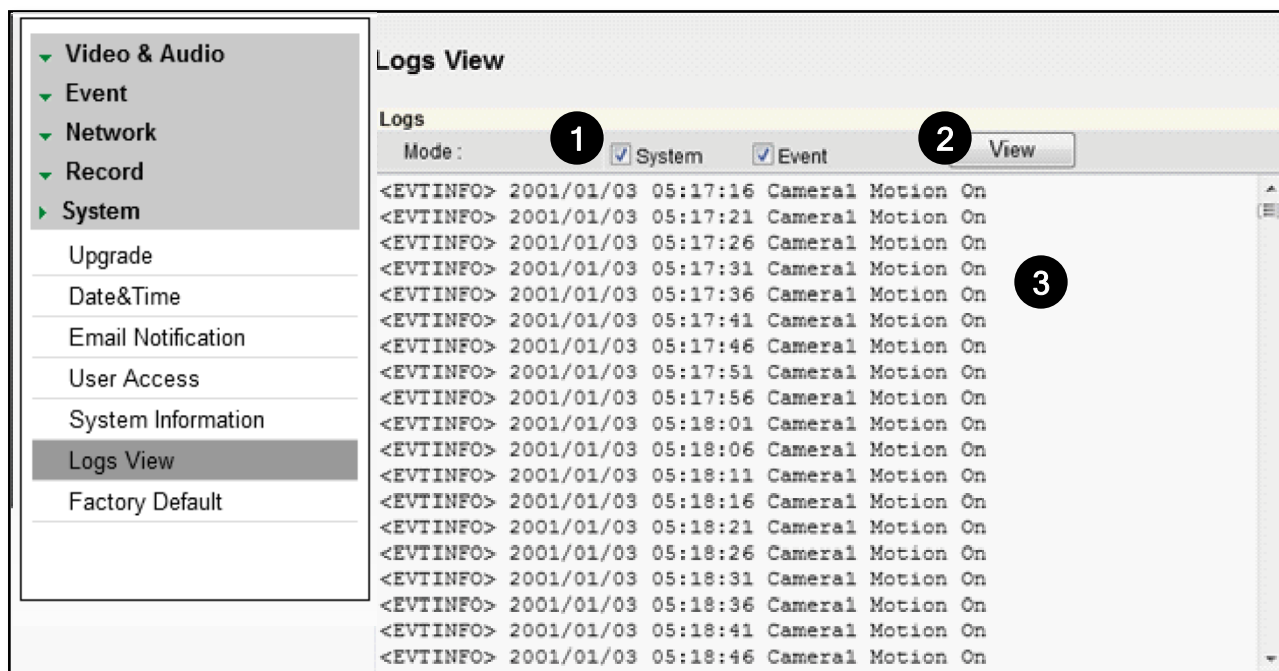

WEBVIEWER*

Display Screen > Setup > System > Factory Default

When you select Factory Default, a dialogue box will appear. If you click OK, all camera settings will erase and reformat to the factory default settings.

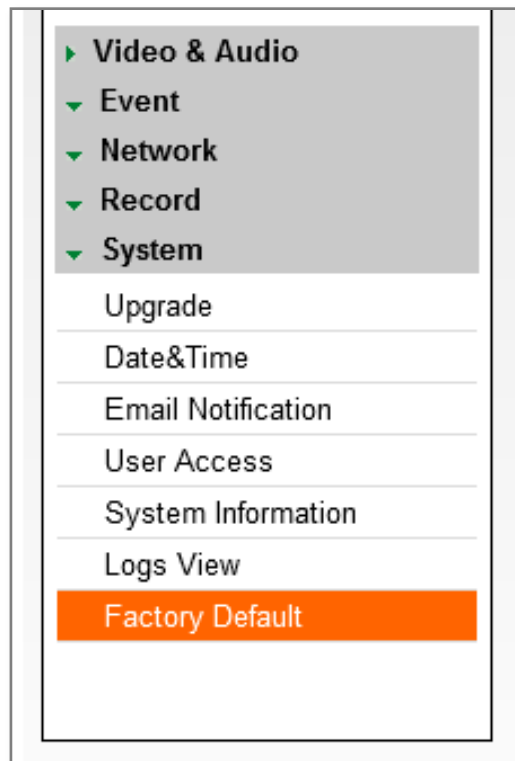

*Factory Default will erase all your saved camera settings.

SPECIFICATIONS*

IMAGE	
Image Sensor	1/2.8" CMOS Sensor
Total Pixels	2010 (H) X 1109 (V)
Minimum Scene Illumination	F1.2 (30IRE): 0.5 Lux (Color) F1.2 (30IRE): 0.01 Lux (B/W)
LENS	
Focal Length	3.5~16mm
Lens Type	Auto Focus
OPERATIONAL	
Brightness	0~19
Shutter Mode	Auto/ Manual
Digital Slow Shutter	Off/ 2X/ 3X/ 4X
Shutter Speed	1/30, 1/60/ 1/120
Auto Gain Control	0~20
Back Light Compensation	Off/ On
Day and Night	Auto/ Day (Color)/ Night (B/W)
Lens Mode	Manual/ DC/ AF
Chroma (Color Quality: Hue, & Saturation Settings)	0~20
Sharpness	0~10
Mirror & Flip	Off/ On
3D- Digital Noise Reduction	Off/ Low/ Middle/ High
Privacy Zone	Off/ On (30 Programmable Zones)
Motion Detection: Sensitivity	Low/ Middle/ High
RS232	Console Cable
Audio Communication	Two-Way
Digital Zoom	8X Digital Zoom
Sensor	1 Input/ 1 Output Built-In
Remote Backup	Up to 24 HR Backup to Local Directory
Recording Schedule Setup	Continuous/ Motion/ Sensor/ Pre- & Post- Alarm

SPECIFICATIONS*

NETWORK

LAN	802.3 Compliance 10/100 LAN
Video Compression Type	H.264, MPEG4, MJPEG (Super Fine ~ Low)
Resolution	1920X1080 (16:9) ~ 320X240 (4:3)
Frame Rate	Up to 30fps at All Resolutions
Stream Capability	Dual-Stream at Different Rates and Resolutions
IP	IPv4, IPv6
Protocol	TCP/IP, HTTP, DHCP, PPPoE, ICMP, ARP, RARP, RTSP, NTP, UDP, Multicast
Maximum User Access	20 Users
Memory Slot	Local SDHC Card Backup
ONVIF Conformance	Yes
Web Viewer	Supported OS: Windows XP, Windows Vista, Windows 7, MAC OS Supported Browser: Internet Explorer, Google Chrome, Mozilla Firefox, Safari
Video Management Software	NxMS/ Pivot

ENVIRONMENTAL

Operating Temperature/ Humidity	-10°C ~ 55°C (14°F ~ 131°F)
Operating Humidity	Less than 90% (Non-Condensing)
Storage Temperature	-20°C ~ 70°C (-4°F ~ 158°F)
Other Specifications	CE, FCC, RoHS

Electrical

Power Requirement	DC 12V, PoE (IEEE802.3af Class 3)
Power Consumption	IR OFF: 7.2w, 600mA
	IR ON: 18.64W, 720mA

Mechanical

Housing Material	Plastic
Dimensions	108 X 96.8 mm (4.25 X 3.8 in)
Weight	0.507 lbs

TROUBLESHOOTING

Before sending your camera for repair, check the following or contact your technical specialist.

I can't find my MEGAPIX camera on the IP Finder software.

- Is the PoE cable connected properly?
Make sure cable is tightly connected at both ends. It should make a “click” sound when connected properly.
Make sure cable is intact and there are no cuts or exposed wires.
- If Yes, are the camera's LED lights turned on and blinking?
The camera's LED lights indicate that the camera is powered on. Blinking LED lights indicate that the camera has finished booting up and is transmitting data.
- If Yes, is the internet working properly?
Make sure you can connect to the internet with other devices on the network (ex. your computer). Your internet could be temporarily down.
- If Yes, if using a power adaptor, does it meet camera's power requirements?
Power Requirements: DC12V (5.16W, 430mA/ 9.96W, 830mA with LED ON), PoE Ports (Class 3, less than 12.95W)
- If Yes, if using PoE Switch, is it connected to a proper internet outlet and operating properly?
Make sure the PoE Switch is connected to a router/modem and the ports that have devices connected to them have a green LED on.
- If Yes, is the computer on the same network as the MEGAPIX camera?
Camera and computer should be connected to the same router. Contact your network administrator if you have more than one network available.
- If Yes, try pinging the IP camera's default IP address 192.168.1.123.
From your desktop, go to Start > Programs > Accessories > Command Prompt. Type “ping 192.168.1.123” and press Enter. If you get the message “Request timed out,” camera is not connected. Camera is connected if you get data.
- If Yes, try connecting the camera to a differ port in the PoE Switch.
That specific Switch Port may be damaged or currently not working properly.
- If Yes, try resetting the camera to default settings.
Press the reset button on the control board and hold for 5 seconds. The camera will return to factory default with default IP address 192.168.1.123. If your network supports DHCP, the camera will be found using the IP Finder software with an IP address that matches your network's requirements.

TROUBLESHOOTING

Before sending your camera for repair, check the following or contact your technical specialist.

I can't connect to my MEGAPIX camera through the Web Browser.

- Are the camera's LEDs on and blinking?
The camera's LED indicates the camera is On. If the LED blinks, the camera has finished booting up and is transmitting data.
- If Yes, is the internet working properly?
Make sure you connect to the internet with other devices on the network (ex. your computer). Your internet could be temporarily down.
- If Yes, is the computer on the same network as the IP camera?
Camera and computer should be connected on the same router. Contact your network administrator if you have more than one network available.
- If Yes, try pinging the MEGAPIX camera's IP address as it appears on the IP finder.
From your desktop, go to Start > Programs > Accessories > Command Prompt. Type "ping" followed by the camera's IP address; then, press Enter. If you get the message "Request timed out," camera is not connected. If you get data back, that means the camera is connected.
- If Yes, try connecting the camera, to a different port in the PoE Switch.
That specific Switch Port may be damaged or currently not operating properly.
- If Yes, check your security settings on your internet browser.
Try adding the camera's IP address to the trusted sites list in your Internet Options. *Setup may vary depending on the browser you use.

TROUBLESHOOTING

Before sending your camera for repair, check the following or contact your technical specialist.

I can't see the live video of my MEGAPIX camera.

- Are you trying to view the camera's video from an Internet Explorer browser?
Make sure you have the minimum PC requirements to view the MD421D/TIR camera. *See below for more information.
- If Yes, did you install ActiveX files?
When you connect to your MEGAPIX camera for the first time, your browser will ask you to install ActiveX. Make sure your Web Browser's security settings do not block pop-up windows and allows ActiveX files to be installed and used. *Setup may vary depending on the browser you use.
- If Yes, verify nothing is blocking the camera's lens.
- Are you trying to view the camera's video from a different browser than Internet Explorer (ex. Google Chrome, Mozilla Firefox, MAC Safari)?
- If Yes, at least one of the streams of the camera must have codec (Compression Type) set to MJPEG.
Go to the camera's setup menu. Select Stream Settings. Select one of the streams and change its codec to MJPEG. Click Apply to save changes. Go back to live screen and at the bottom of the screen, select the stream you have set to MJPEG. Live video will start streaming to your web browser.

Web Viewer Specifications

- Minimum Requirements for PC

CPU	Intel P4 2.0GHz Dual Core
RAM	More than 1GB
HDD	200 GB Required for Saving Clip Image
OS	Microsoft Windows XP or Higher
Resolution	Higher than 1024X768

TROUBLESHOOTING

Before sending your camera for repair, check the following or contact your technical specialist.

Setting the IP Address for your PC


Dynamic Host Configuration Protocol (DHCP) is the default setting for the camera.

If the MEGAPIX camera is connected to a DHCP network and the camera's IP Configuration Mode is set to DHCP, the server will automatically assign an IP address to the camera. If the camera is using DHCP, the default IP address will be 192.168.1.123, and the default subnet mask will be 255.255.255.0.

The MEGAPIX camera can also connect to the web viewer using a static IP address. This will allow you to set your own IP address manually.

Setup the Network Protocol on your PC.

1. Go to Network icon on your PC.
2. Right-click and select Properties.
3. Double-click Local Area Connection.
4. Click Properties.
5. Double-click Internet Protocol Version.
6. Select "Obtain an IP address automatically" to set the computer to a dynamic IP address, or select "Use the following IP address" to set the computer to a static IP address.
7. If the option "Use the following IP address" has been selected, setup the IP address as 192.168.1.XXX. The last three digits should be a number between 1 and 254.

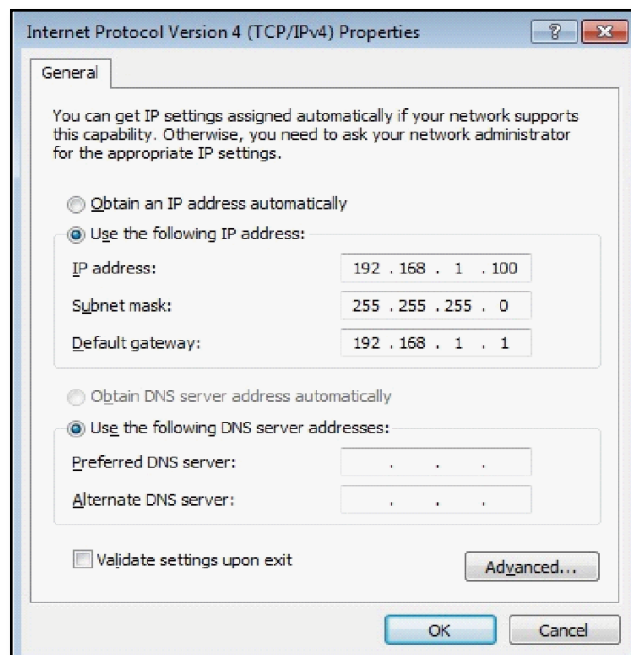

WARRANTY INFORMATION*

Digital Watchdog (referred to as “the Warrantor”) warrants the Camera against defects in materials or workmanships as follows:

Labor: For the initial two (2) years, one (1) year for IR LED, from the date of original purchase if the camera is determined to be defective, the Warrantor will repair or replace the unit with new or refurbished product at its option, at no charge.

Parts: In addition, the Warrantor will supply replacement parts for the initial two (2) years, one (1) year for IR LED.

To obtain warranty or out of warranty service, please contact a technical support representative at 1-866-446-3595 Monday through Friday from 8:30AM to 8:00PM EST.

A purchase receipt or other proof of the date of the original purchase is required before warranty service is rendered. This warranty only covers failures due to defects in materials and workmanship which arise during normal use. This warranty does not cover damages which occurs in shipment or failures which are caused by products not supplied by the Warrantor or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set-up adjustments, improper antenna, inadequate signal pickup, maladjustments of consumer controls, improper operation, power line surge, improper voltage supply, lightning damage, rental use of the product or service by anyone other than an authorized repair facility or damage that is attributable to acts of God.

LIMITS & EXCLUSIONS*

There are no express warranties except as listed above. The Warrantor will not be liable for incidental or consequential damages (including, without limitation, damage to recording media) resulting from the use of these products, or arising out of any breach of the warranty. All express and implied warranties, including the warranties of merchantability and fitness for particular purpose, are limited to the applicable warranty period set forth above.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights from vary from state to state.

If the problem is not handled to your satisfaction, then write to the following address:

Digital Watchdog, Inc.
ATTN: RMA Department
5436 W Crenshaw St
Tampa, FL 33634

Service calls which do not involve defective materials or workmanship as determined by the Warrantor, in its sole discretion, are not covered. Cost of such service calls are the responsibility of the purchaser.





5436 W Crenshaw St, Tampa, FL 33634

PH: 866-446-3595 | FAX: 813-888-9262

www.Digital-Watchdog.com

technicalsupport@dwcc.tv

**Technical Support Hours: Monday-Friday
8:30am to 8:00pm Eastern Standard Time**