


Package Contents

1. Prestigio EBook Main Unit
2. Warranty Card
3. USB Cable
4. Quick Guide
5. Earphone

Introduction

1. Power on/off
2. Confirm
3. Upward/Volume up
4. Downward/Volume down
5. Previous Page/Track
6. Next Page/Track
7. Music Mode
8. Mode Button
9. Return/Cancel Button
10. Zoom in/out Button
11. Page Up Button
12. Page Down Button
13. Led Indicator
14. Numeric Button
15. Reset Button
16. Headphone Jack
17. Micro USB Jack
18. TF-flash Slot

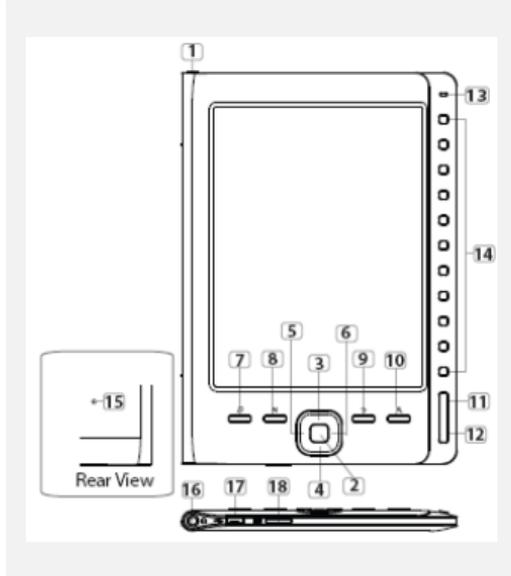

Getting Started

1. Charge

- It takes approximately 4 hours to fully charge the device normally.
- Connect the host PC USB port and the device with the USB cable provided for charge.
- Please recharge the device as soon as possible when the battery is in low-power level.
- When charging on VISTA/WIN7, do NOT operate the device.

2. Power On / Power Off

- Press and hold power button to turn on/off the device.

3. Restoration

- Reset the device by pressing reset button when device fails to start up or function properly.

4. Using a TF-flash card (Not Included)

- It supports TF-flash card inserted through TF-flash slot.

Basic Operation

Press and hold the power button to turn on the device. It will automatically enter the main menu comprised of 7 sections, that is, **Reading History, Book, Music, Picture, File Explorer, System Settings** and **User Manual**. Use the directional pad to select the desired section and press Confirm Button to enter. Or press **Numeric Button** directly to enter.

1. Reading History

- Press **Confirm Button** or **Numeric Button** to enter **Reading History List** and review the files read before.
- Press **Up/Down Button** of directional pad to select the desired files and press **Confirm Button** to enter. Or press **Numeric Button** directly to enter. Press **Return/Cancel Button** to return.
- Press **Zoom Button** to zoom in/out of contents on screen. Press **Page Up/Down Buttons** or directional pad to skip to the desired page.
- Press button **M** to enter submenu. Press directional pad to select the desired function and press **Confirm Button** to enter. Or press **Numeric Button** directly to enter.
- At the interface of **Reading History List**, press **Previous Button** to delete the history information. Highlight **YES** and press **Confirm Button** to confirm. Press **Return/Cancel Button** directly to cancel.

Note:

If files were saved on the TF-flash card ever, they are still displayed in "Recent Files List" even if the SD card has been removed. But the files cannot be opened if the SD card is removed.

2. Book

It supports 6 kinds of formats, including .txt, .html, .pdb, .fb2, epub, epdf, etc. Please make sure it is **NOT** a DRM protected file, which cannot be read by the E-reader.

- Use directional pad to select the desired file and press **Confirm Button** to enter. Or press **Numeric Button** directly to enter. Press **Page Up/Down Buttons** or directional pad to skip to the desired page.
- At the interface menu of **Book**, press button **M** to enter search function.
- During text playback, press **Zoom Button** to zoom in/out of contents on screen. Press directional pad or **Page Up/Down Buttons** to skip to the desired page.

Note:

Zoom window only displays at .pdf file format.

- Press button **M** to enter the **Book** submenu. Seven different options, that is, Page Jump, Add Bookmark, Open Bookmark, Delete Bookmark, Display Mode, Browser Mode and Flip Time, are available within this section. Press **Confirm Button/ Numeric Button** to enter and press **Return/Cancel Button** to return the text mode.

Note:

The function only applies to .txt, .html, .pdb, .fb2, .epub file formats.

- During text playback, manually rotate the device 90° counterclockwise / clockwise to display text horizontally.

Note:

The function only applies to .txt, .html, .pdb, .fb2, .epub file formats.

3. Music

- It supports MP3, AAC, WMA, OGG, FLAC, WAV files format only.
- At interface menu of **All Music**, use directional pad to select the desired file and press **Confirm Button** to enter. Or press **Numeric Button** directly to enter. Press button **M** to enter search function.
- During music playback, each button of directional pad functions respectively as follows.

Left button: To go to previous option / Rewind

Right button: To go to next option / Fast forward

Up button: To increase volume

Down button: To decrease volume

- During music playback, press button **M** to enter the **Music** submenu. There are 4 different kinds of play mode, that is, Repeat Mode, Play Mode, EQ Sel and MSEQ, to create various playback qualities.

- During music playback, press **Return/Cancel Button** to enter background music mode, in which you can use the device with playing music. To end this mode, press button **Music Mode** to enter the interface of music playback and press **Confirm Button** to pause.

Note:

The player supports background music mode, in which music playback must be setup first. The function only applies to .txt, .html, .pdb, .fb2, .epub file formats.

4. Picture

- The device only supports .JPEG and .BMP file formats. All other file formats will not be displayed on purpose.
- At interface menu of **Photos**, use directional pad to select the desired file and press **Confirm Button** to enter. Or press **Numeric Button** directly to enter. Press button **M** to enter search function. Press **Page Up/Down Buttons** to skip to the desired page.
- During photo playback, press button **M** to enter the submenu where 2 browse modes are available.

5. File Explorer

- Select file of Flash or SD Card and Press **Confirm Button** to enter. Or press **Numeric Button** directly to enter.
- Use the directional pad to select the desired file or press **Page Up/Down Buttons** to skip to the desired page. Press **Confirm Button** to enter.

6. System Settings

Use directional pad to cycle through between 8 different options such as Language, Time, Calendar, Recent File Settings, Screen Refresh Mode, Auto Shut Down Settings, Restore Defaults and System Information. Press **Confirm Button** or **Numeric Button** to enter and press **Return/Cancel Button** to return.

7. User Manual

An electronic version of the printed manual which can be read on the device is provided. At main menu screen, highlight **User Manual** and press **Confirm Button** or **Numeric Button** to enter.

Technical Specifications

Display	6 inch E-Ink Display, 800x600 pixels
Storage memory	Built in memory: 2GB supports Micro SD/SDHC up to 32GB (FAT format)
Media File Format supported	Ebook: txt, pdb, pdf, epub, fb2, html Audio: mp3, wma, wav, ogg, flac Photo: jpg, bmp
Battery life	4000 pages (approx: 20 hours)
Charging Power	DC 5.3V, 1.5A
Minimum system requirement	Windows XP, Vista, 7 Mac OS 10x
Physical properties	Dimension: 172.5 x 120.6 x 9 mm (approx) Weight: 169.2g (approx)

Technical Support and Warranty

Please refer to www.prestigio.com for technical support and included warranty card for warranty information.

Disclaimer

We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any errors or omissions. Prestigio reserves the right to make any changes without further notice to any products herein.