



Assembly Guide



E3600HRT
COMMERCIAL UPRIGHT FITNESS BIKE

Assembly Guide


E3600HRT COMMERCIAL UPRIGHT FITNESS BIKE

To avoid possible damage to this Fitness Bike, please follow these assembly steps in the correct order. Before proceeding, find your new Fitness Bike's serial number located on the front axle tube, and enter here:

Refer to this number when calling for service, and enter this serial number on your Warranty Card and in your own records. Be sure to read your Owner's Guide before using your new Fitness Cycle.


If any parts, hardware or tools are missing, please call 1.800.335.4348, Extension 12

NOTE: It is recommended that you apply grease to the threads of each screw as you assemble your Fitness Bike to prevent loosening and noise. Also, during each assembly step, ensure that ALL screws are in place and partially threaded in before completely tightening any ONE screw.

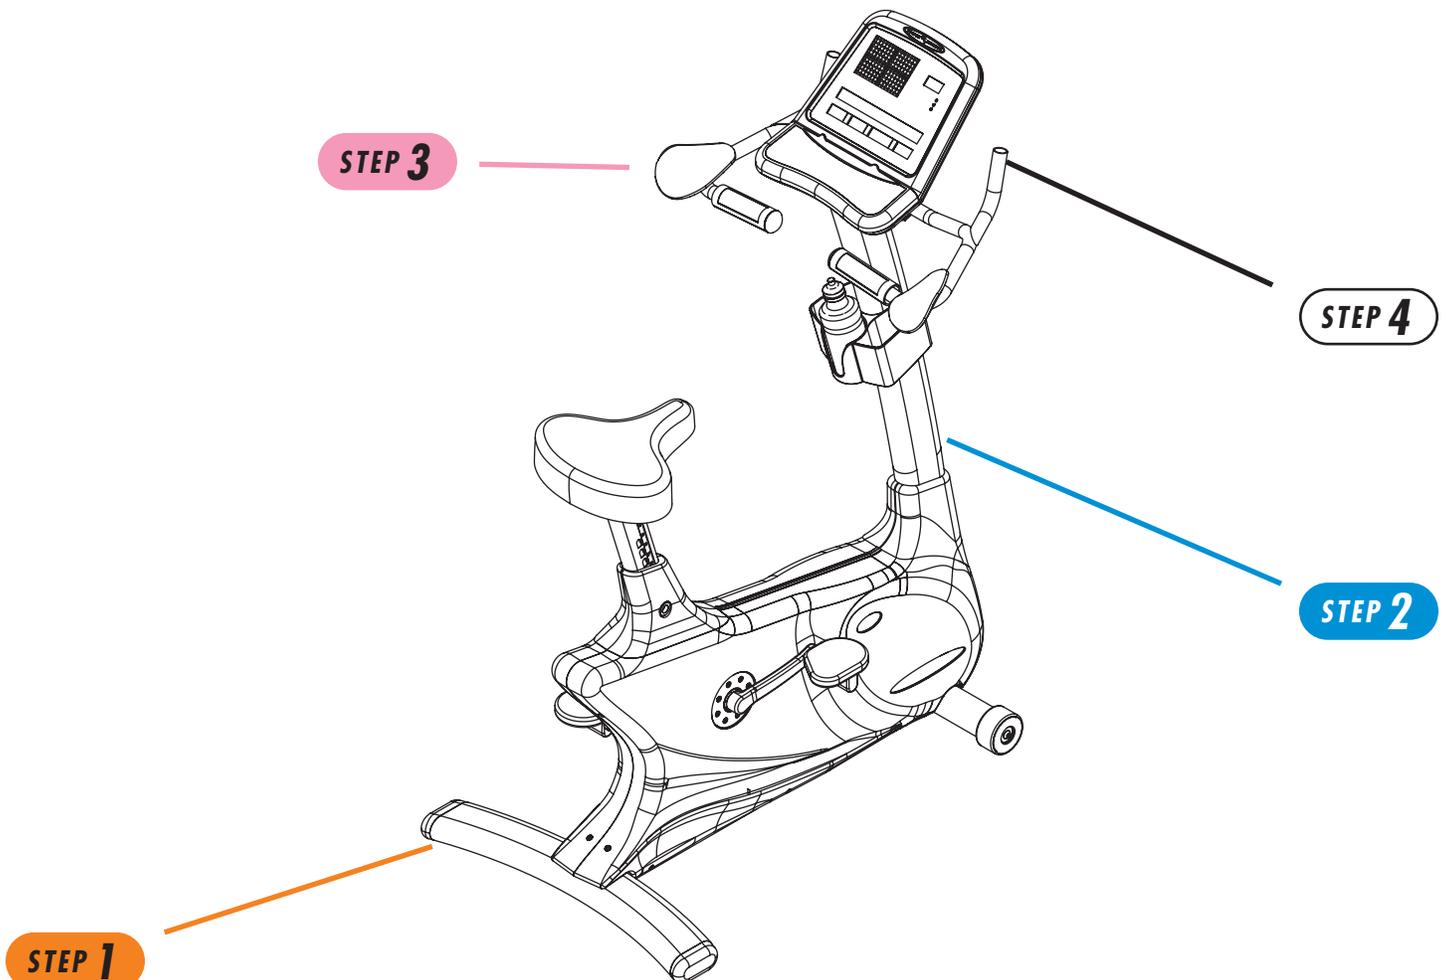


TOOLS & PARTS INCLUDED


5mm Allen Wrench

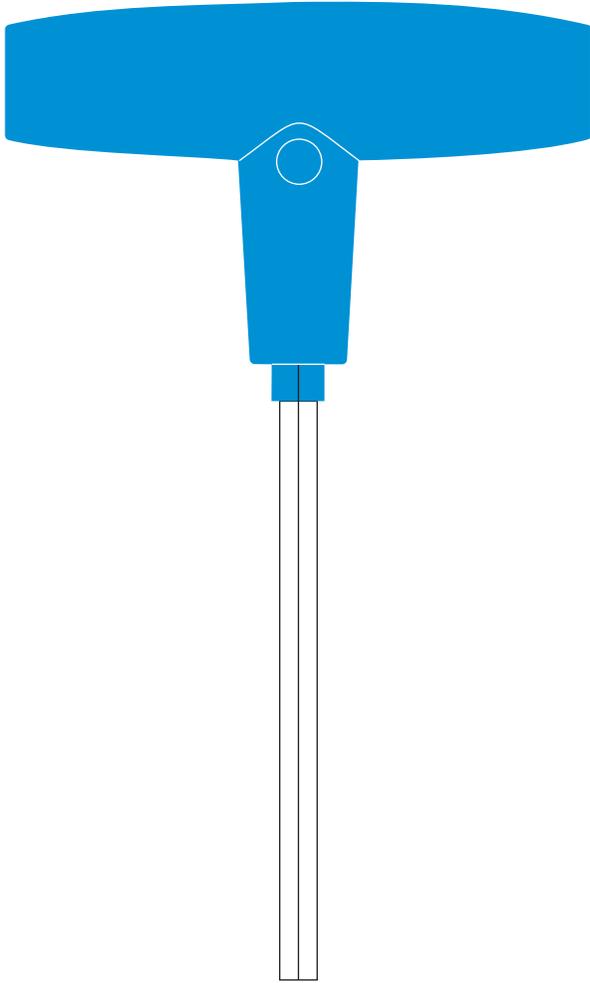

Screwdriver

 

15mm Pedal Wrench

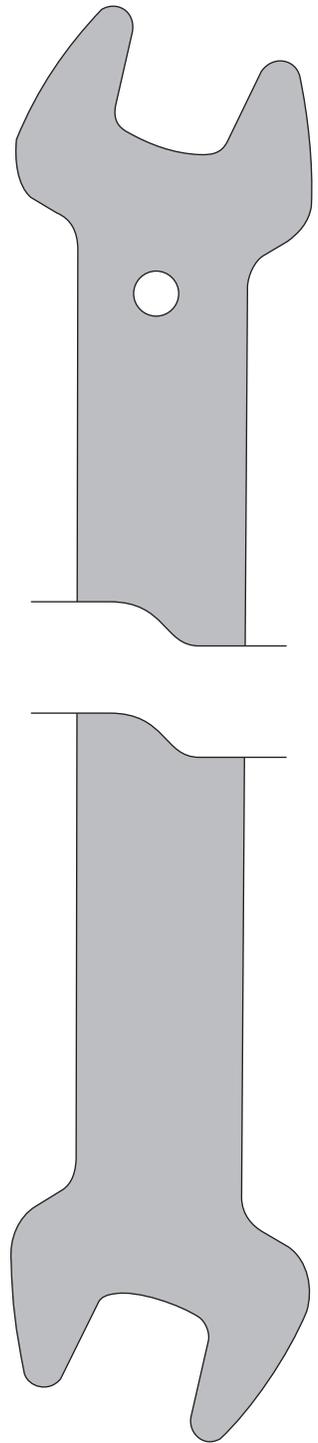


PARTS BOX


Console Mast Cover
Water Bottle & Cage
Color-coded Hardware Bags
Owner's Guide
Assembly Guide
Warranty Card
Heart Rate Chest Strap

HARDWARE INCLUDED


ORANGE BAG

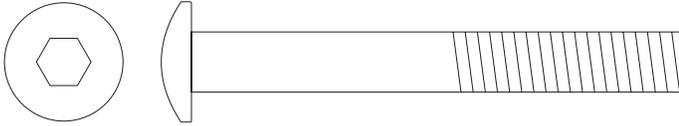

M8 x 65L Screw
Quantity: 2

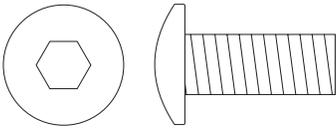


M8 x 20L Screw
Quantity: 2

 


M8 Lock Washer
Quantity: 4

PINK BAG

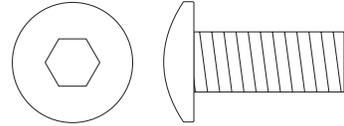


M8 x 20L Screw
Quantity: 2

 


M8 Lock Washer
Quantity: 2

BLUE BAG

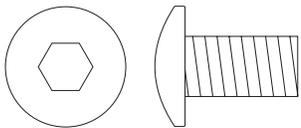


M8 x 15L Screw
Quantity: 7

 

M8 Lock Washer
Quantity: 6


STEP 1**ORANGE BAG**

- Install the rear foot with four lock washers (M8), two inside screws (M8x65!), and two outside screws (M8x20!). Tighten with the 5mm Allen wrench.

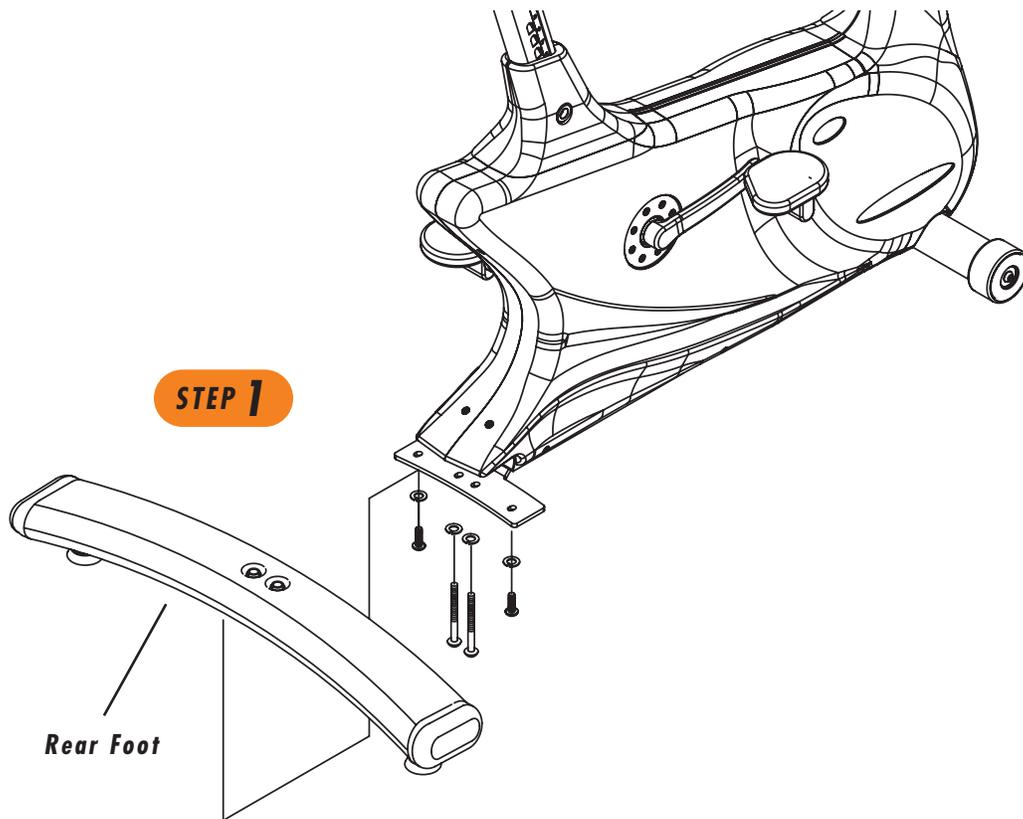

STEP 2**BLUE BAG**

- Slide the console mast boot onto the console mast.
- Unfold the wire harness located in the console mast frame bracket. Connect it to the wire tie coming from the bottom of the console mast. Pull the wire tie and wire harness up through the top of the console mast while simultaneously sliding the mast into the frame bracket.
- Secure the mast to the frame using six lock washers (M8) and six screws (M8x1.5L). Tighten with the 5mm Allen wrench. Place the seventh screw (M8x1.5L) in the rear of the frame bracket and tighten until snug.
- Slide the console mast boot down and snap it into place on the side cover.
- Remove the nuts (M8) from the bottom of the seat. Attach the seat to the seat post with the nuts you just removed. Tighten with the 15mm wrench.

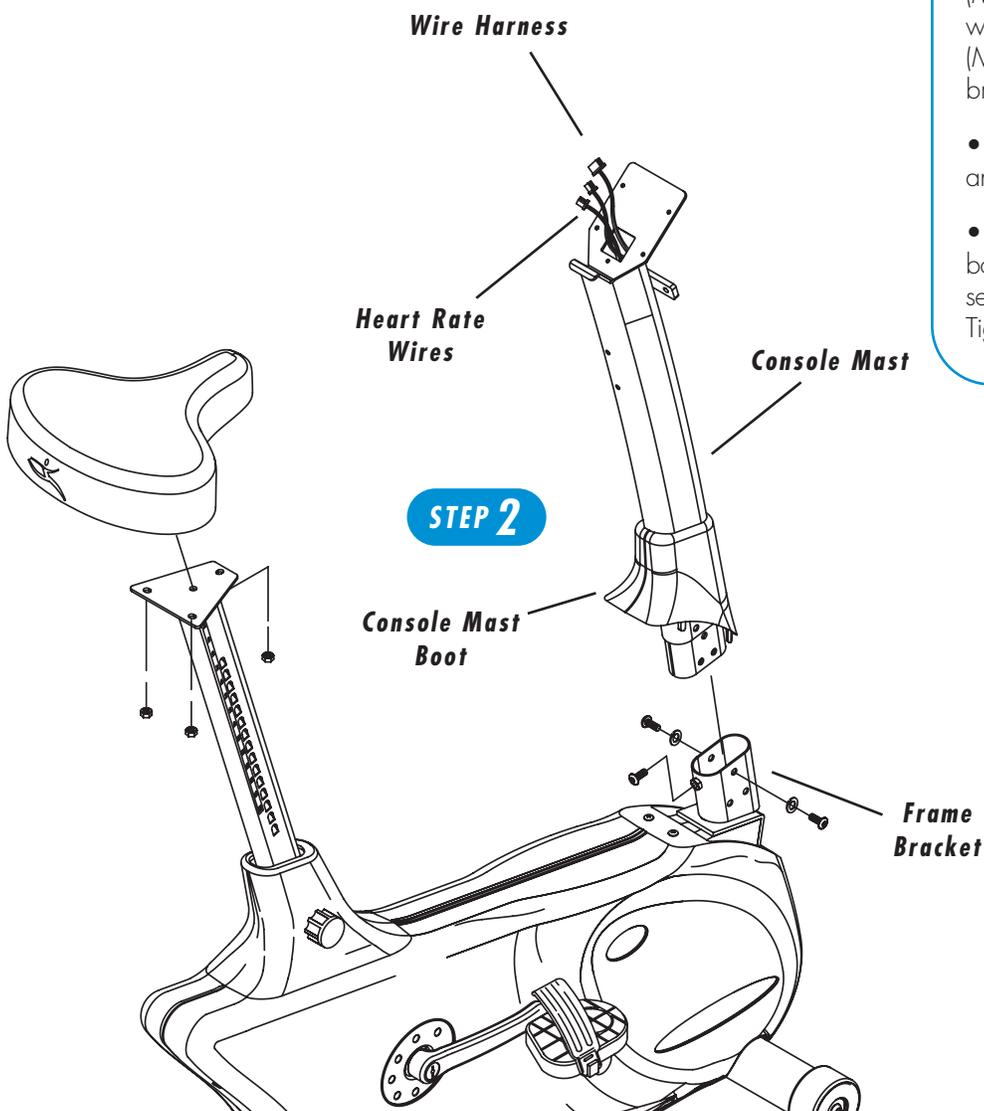



STEP 3

PINK BAG

- Feed the heart rate wires of the handlebar through the small hole located in the front of the console mast. Pull these wires up through the hole at the top of the console mast. Attach the handlebar to the console mast using two lock washers (M8) and two screws (M8x20L). Tighten with the 5mm Allen wrench.

STEP 3

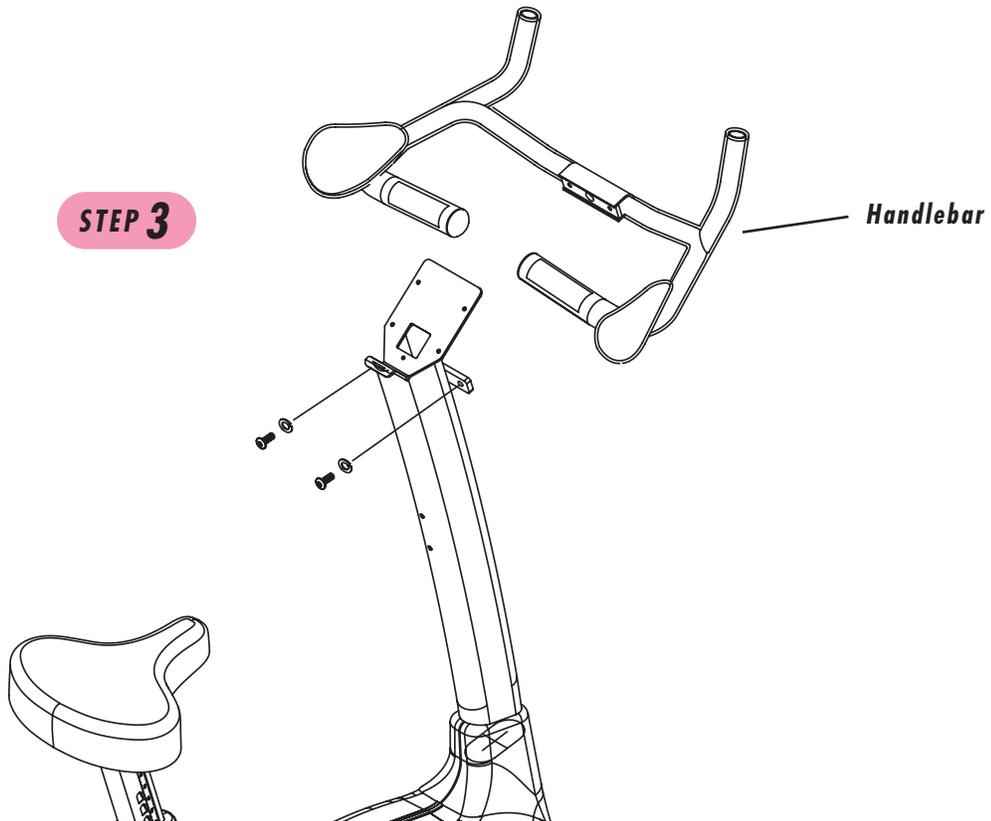


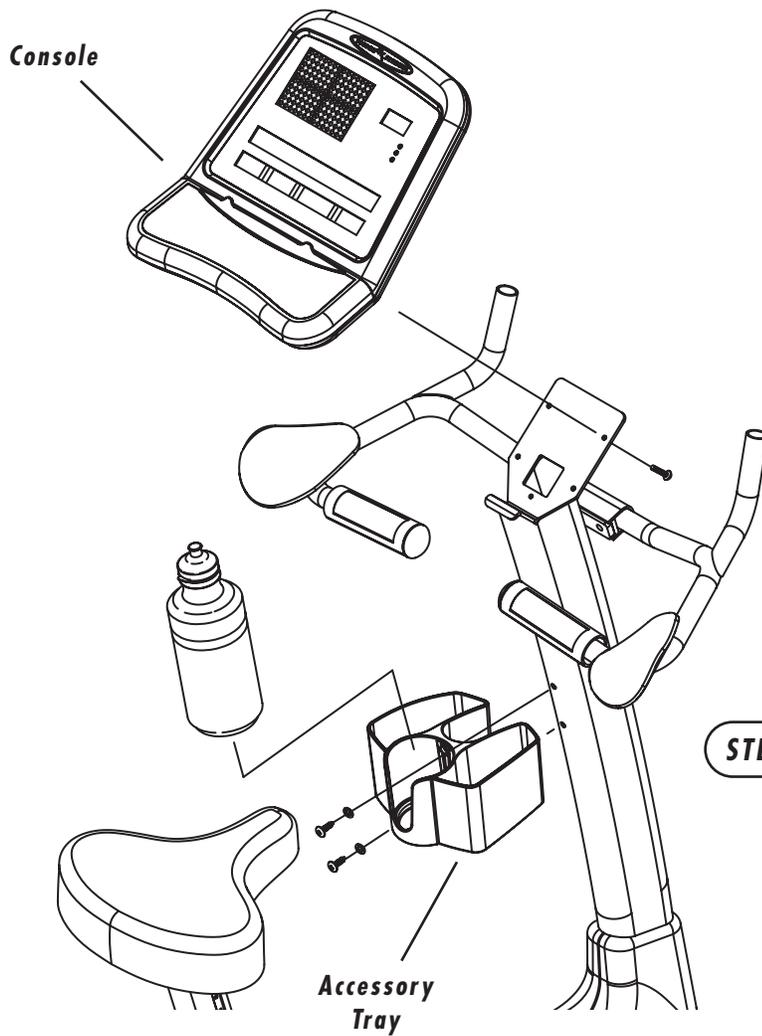STEP 4**CONSOLE****STEP 4**

- Remove the four mounting screws from the back of the console with the screwdriver. Make sure the 9-Volt battery is plugged in and in place on the back of the console. Plug-in the wire harness and the two heart rate wires to the back of the console. Attach the console to the console mast with the four screws removed earlier in this step.

- With the screwdriver, remove the two screws located half way up the console mast. Attach the accessory tray to the console mast with the two screws. Insert the water bottle.

VISION FITNESS®

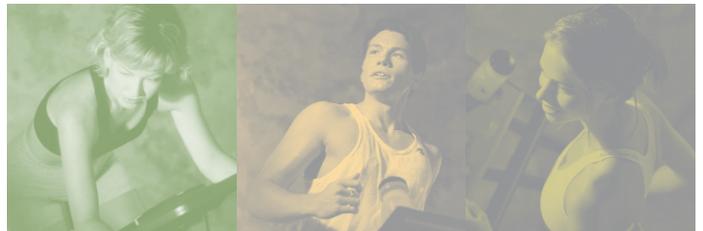

500 South CP Avenue • P.O. Box 280 • Lake Mills, WI 53551
 toll free 1.800.335.4348 • phone 1.920.648.4090 • fax 1.920.648.3373
www.visionfitness.com

©2004 Vision Fitness. All Rights Reserved. 6.04 Part #Z36CB39-AG
 AG18.21PRD
 REV2