

# Wireless Bluetooth Speaker

 


Model WS-701A


## Instruction manual

### Quick Start Guide


#### Speaker overview: top

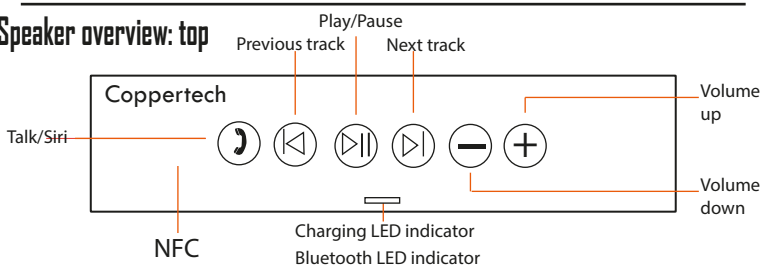

#### Speaker overview: back

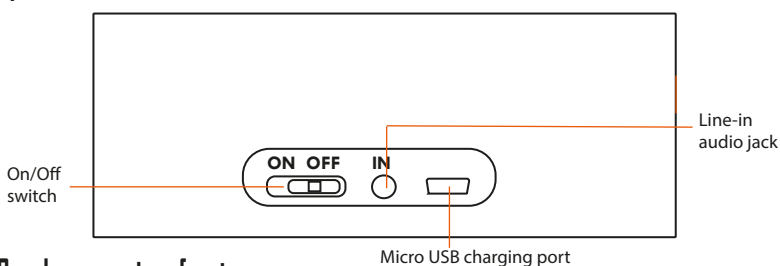 

#### Speaker overview: front

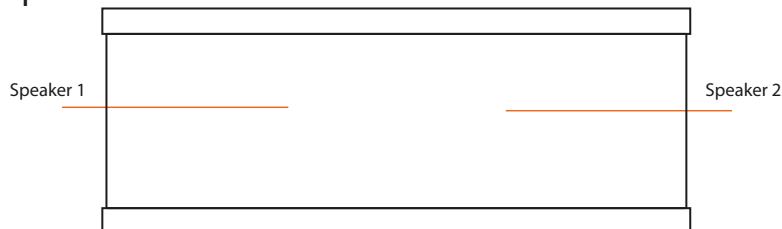 

### Charging your speaker

To obtain optimum power capacity, the speaker should be charged using the provided USB cable in your packaging box. To charge the unit plug the USB cable to the USB port on the back of the speaker. Charging starts when the unit that is turned off is connected and the charging LED indicator lights up in red. Charging is completed in about 4-5 hours and the indicator goes off.

### Connecting with a Bluetooth device

Turn on your speaker by switching the button on the back of the unit to "On", the LED lights should alternate between shining red and blue. This signal means that the speaker is in "pairing mode". Perform the pairing procedure on the Bluetooth device to detect this speaker. When a list of detected devices appears on the display of the Bluetooth device, select "WS701A". Once paired successfully, the Bluetooth LED indicator lights will turn blue and blink twice every 3 seconds.

### Connecting with a smartphone by Onetouch (NFC)

If using a device that is NFC (Near Field Communication) enabled, turn on NFC, then simply touch the speaker on the right side where the NFC chip lies to make a connection.

### Listening to music

Start playback on the Bluetooth device, and adjust the volume. Set the volume at an appropriate level on the connected device, and adjust the volume with the VOL -/+ buttons on the unit. To switch to the previous or next song simply press the Previous and Next button on the speaker. This will switch to the previous/next song in the playlist of the Bluetooth device. Press the Play/Pause button on the speaker to start or pause songs.

### Making a call/Receiving a call

You can use the WS-701A as a portable speakerphone for incoming calls when connected wirelessly via Bluetooth. To answer a call, press the TALK button and talk as you would with your device if it was on "speakerphone". The built in microphone will pick up your voice just like a phone. To end a call, press the TALK button again. To refuse a call, double press the TALK button. You can re-dial the last number called by double pressing the TALK button.

### Using SIRI

When the speaker is connected to an iPhone/iPad via Bluetooth, press and hold the TALK button for 3 seconds to activate the Siri function on iPhone/iPad. Then talk to the speaker after hearing the "Siri" sound. Please note that iPhone/iPad may not be able to recognize human speech when the speaker is being used in a noisy environment. Siri may not work if iPhone/iPad is not connected to the internet. When the Siri conversation is finished, the speaker will continue playing audio.

### AUX input

To play audio using the audio cable, plug the cable from the audio device to the "IN" jack on the back of the speaker.

### Battery status on iPhone et iPad

When the speaker is connected to iPhone/iPad via Bluetooth, the battery status of the speaker can be displayed on the top of the iPhone/iPad screen, after the Bluetooth symbol. Please note that the battery status icon can be vertical or horizontal, depending on the Bluetooth device and its operation system.

### Specifications

Bluetooth compliant.....	Bluetooth 3.0
Dimensions.....	6 cm x 16,3 cm x 4,3cm
Weight.....	0,330 kg
Speaker driver.....	stereo, 40MM, 40hm
Speaker output.....	5W*2
Operating Frequency Range.....	2.4GHz-2.48GHz
Battery capacity.....	1000mAh
Battery life .....	Up to 10 hours(depending on the volume and audio content)
Battery charging time.....	4-5 hours
Operating temperatures.....	0°C to 45°C
Bluetooth transmission distance.....	Up to 10 meters, measured in open space. Walls and structures may affect range of device.
Battery Charging voltage.....	5V(1A)
Working voltage.....	3.3--5V
Interface.....	Bluetooth, 3.5MM audio line-in & line-out jack, Micro USB charging port

## Important safety information

Please read these instructions and follow these instructions. Heed all warnings.

### WARNINGS:

- To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.
- Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard.
- Do not place any naked flame sources, such as lighted candles, on or near the apparatus.
- The apparatus not be exposed to excessive heat such as sunshine, fire or the like.
- Do not dismantle, open or shred the apparatus.
- Do not subject battery pack to mechanical shock.
- In the event of a leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- The speaker gives its best performance when it is operated at normal room temperature (20°C +/- 5°C).
- The speaker needs to be charged before use. Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.
- Keep the apparatus out of the reach of children.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Do not clean the speaker when it is being charged. Always unplug the charger first before cleaning the speaker.
- Do not leave your speaker in direct sunlight for extended periods of time.
- Do not use abrasive cleaners to clean your speaker because this could cause scratches or damage.
- Do not bring your speaker in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your speaker unless otherwise specified in this User Manual. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your speaker yourself.
- Do not attempt to replace the battery of the speaker. It is built-in, and not changeable by users.
- Use only the USB charging cable supplied in the accessories package to charge the speaker, from the USB port of computer.
- Observe all signs and displays that require an electrical device or RF radio products to be switched off in designated areas.

## Warranty


12 month from the date of purchase.

Covers manufacturing defects.

For warranty service contact: [contact@coppertech.fr](mailto:contact@coppertech.fr)

## The package includes:

- Coppertech® Bluetooth speaker WS701A
- USB charging cable
- 3.5mm audio cable

 This product is in compliance with essential requirements and other relevant provisions of Directive 1999/5. The complete Declaration of Conformity is available at [contact@coppertech.fr](mailto:contact@coppertech.fr)

## FCC NOTICE

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions;

- 1.This device may not cause harmful interference, and
- 2.This device must accept any interference received, including interference that may cause undesired operation.

## FCC CAUTION

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.