

This document hosted by
OldWillKnottScales
~ ~ CLICK HERE ~ ~
to visit us the next
time you need a scale!

Proscale Luxe 600 User Manual

KEY PAD FUNCTIONS

* ON/OFF

Press and quickly release to turn the scale on
Press and hold to turn off the scale

* ZERO / TARE

Press tare to reset the scale to zero. Tare can be used for eliminating the weight value of an empty container. Place an empty container on the scale and press TARE. Then place the items to be weighed in the container. Tare is also used as **MEMORY**. Simply place items to be weighed on the tray, press TARE then remove the items. The weight of the items will be displayed as a negative value and remain on the display in memory for easy reading.

NOTE: When all weight is removed from the weighing tray, the tared value of a container will be displayed as a negative number. Depress tare again to return the to zero.

* MODE

Unit (mode) selection: Press and release the key once to change weight unit You can select g (grams), oz (ounces), dwt (pennyweight) or gn (grains).

* CAL

This button can be used to calibrate the scale as outlined in the calibration instructions.

The Proscale LUXE has a retractable display and a protective tray cover that can also be used as a weighing cup. To use, simply turn the cover upside down and place it on the weighing platform.

Although the PROSCALE is designed to be extremely durable with extra overload protection built into the case, It's important that you never overload or drop/shock the scale. Scales are delicate instruments and unlike Cellular phones, scales have delicate sensors that determine how much an item weighs. If you drop or shock your scale, these sensors "feel" the shock and are sometimes destroyed. This happens with all digital scales. We design our scales to be as resistant to shock or drops as possible, however there is no way for us to protect 100% against load cell or sensor damage. A well-treated scale will provide years of reliable and accurate weighing. However an abused scale will only work until it's sensors are damaged.

For more information or more troubleshooting visit

www.proscale.net

OPERATION

If your scale ever performs slowly, inaccurately, or shows the battery icon please replace the batteries.

Battery Operation:

- 1) Two "AAA" button batteries are required.
- 2) To install batteries:
 - a) Release the battery cover by pressing in at the opening.
 - b) Place batteries into battery compartment aligned correctly - be sure the polarity is correct
 - c) Replace battery cover.

DO NOT USE EXCESSIVE FORCE AND DO NOT PRESS ON THE TRAY

- 3) The scale is now ready for battery operation.

*Remove the batteries if you plan to store the scale for longer then 14 days

(Advanced users only) CALIBRATION

IMPORTANT: This scale was professionally factory calibrated before shipment and does NOT need to be recalibrated by the end user. However, if you wish to recalibrate your scale we provide these instructions for calibration: Repeat calibration if the scale ever shows Out2. Incorrect calibration can occur if you do not follow the steps exactly. If your scale does not perform accurately, please try replacing your batteries before you calibrate. You will need a 300gram weight or set of weights to calibrate this scale. *NOTE: if you do not have access to a 300g weight you can purchase one at your local store or in emergency situations you can use coins or weights (ie 60 US Nickels = 300g) as a 300g weight..*

- 1) Place the scale on a Flat, very stable surface and power it ON
- 2) Press and hold the "CAL" key for 5-10 seconds until CAL shows on the display, then release the key, the display will show 0.0
- 3) Press the CAL key again, and wait for the display to flash 300.0
- 4) Gently place a 300 gram weight on the scale.
- 5) Press the CAL key, the display will show PASS and then return to normal weighing mode.

Calibration is complete. Remove the weight and turn the scale Off.
If these instructions do not work for your scale please visit our website www.proscale.net for the most updated calibration instructions.

NOTE: if after calibration your scale does not read accurately, this indicates calibration error and the calibration process should be repeated more slowly.

PROSCALE LUXE 600 V2

MANUAL & OPERATION GUIDE

PLEASE READ COMPLETE INSTRUCTIONS BEFORE USE

Thank you for purchasing the PROSCALE. With normal care and proper treatment it will provide years of reliable service. Please read all operating instructions carefully.

KEEP THE FOLLOWING POINTS IN MIND:

* If the display becomes locked, shows OUT2 or is inaccurate please recalibrate the scale.

* Do not Overload (exceed the capacity) of the scale including the weight of any trays or bowls combined with objects you may be weighing. Overload or Dropping/shocking the scale could damage the scale and void your warranty.

* Allow sufficient warm up time. Turn the scale On and wait several seconds to give the internal components a chance to stabilize before weighing.

* The cleaner the environment the better. Dust, dirt, moisture, vibration, air currents and proximity to other electronic equipment can all cause an adverse effect on the reliability and accuracy of your scale.

* Handle with care. Gently apply all items to be weighed onto tray top. Although this scale is designed to be quite durable, avoid rough treatment as this may permanently damage the internal sensor and void your warranty.

* Avoid lengthy exposure to extreme heat or cold, your scale works best when operated and stored at normal room temperature. **Allow the unit to acclimate to any major temperature change for at least one hour before use.**

***Place the item to be weighed on the platform, after the stable weight is displayed remove the item immediately. This will prolong the longevity and accuracy of this weighing instrument..**

.** Do not operate near an in-use cell phone, cordless phone, radio, computer or other electronic device. These devices emit RF and can cause unstable scale readings. If your scale ever performs poorly, try moving the scale to a different room or location. This is a very precise scale - the display may seem to wander or jump when weighing. This is due to air currents or vibrations. Stable weighing is achieved when the display remains fixed for 3 seconds.

FEATURES

* **Power Up Segment Test:** When first turning the unit on, all segments of the display will appear as shown below. This display will remain for approximately 3 seconds and then reset to zero. The display may also change brightness during this time and show a blank screen for a moment before 0.0 appears
=8.8.8.8.8. >

Stable Reading Indication: This is a very precise scale - the display may seem to wander or jump when weighing. This is due to air currents or vibrations. Stable weighing is achieved when the display remains fixed for 3 seconds. An indicator will show in the top left corner of the screen.

* **Overload:** When an applied load exceeds the capacity. "OuER" will appear on the display. Remove excessive load immediately. The unit may return to normal operation. **!Remember: You can permanently damage the scale and void your warranty by overloading it!**

* **Negative Value:** Any tared value will be displayed as a negative number once all weight is removed, press TARE or cycle the power to re-zero the scale.

* **Auto off:** An auto shut off feature is provided to conserve battery power. The unit will automatically turn off after approximately 30 seconds of inactivity.

PROSCALE TROUBLESHOOTING & OPERATION NOTES:

1) If the Display ever becomes locked showing "Out2, please recalibrate the scale as outlined in the manual

2) If the Display ever becomes locked on 8888, OuER, LLLL, or EEEE, this indicates that the scale was shocked, dropped or otherwise damaged and the delicate weighing sensors have been damaged. You can try recalibrating the scale (If the sensor has not been hurt too badly it will work again after recalibration). Otherwise you will have to follow the warranty instructions that came with your scale.

3) If the display is faint or the scale won't power on, this often indicates low batteries. However sometimes it also may indicate a serious zero mark error. This means when you turn the scale on, it can't determine what zero is (a slight zero mark error will cause situation #2 above) Thus, if new batteries do not fix this error the scale will have to be sent to us for replacement under our warranty program.