

# GRACO®

## Convertible Entertainer® 2-in-1 Activity Center

### OWNER'S MANUAL

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

Dear Customer,

Please fill in the model and serial numbers above from the label under the tray of your new Entertainer® activity center.



**Model 4650**

### Congratulations on your purchase of a Graco® Entertainer® activity center!

Graco is the recognized leader in the design and manufacture of quality baby products. We believe your new Graco® Entertainer® activity center is a wise choice, promising many hours of enjoyment for your baby.


Before using your activity center, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you to use your activity center properly.

### Customer Satisfaction


Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak to Graco about your product, please contact our **Customer Service Department at 1-800-345-4109** or visit our Internet website, [www.gracobaby.com](http://www.gracobaby.com). Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.

**⚠ WARNING**


**Failure to follow instructions could result in injury or death.**

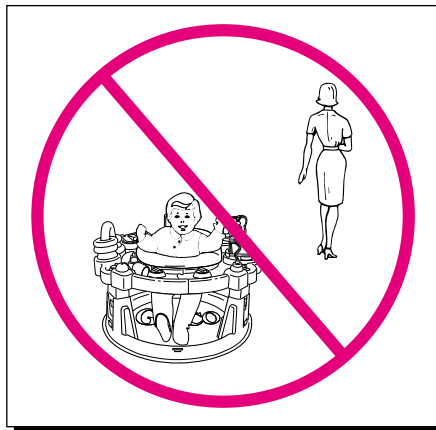


Never leave child unattended. Always keep child in view while in product.

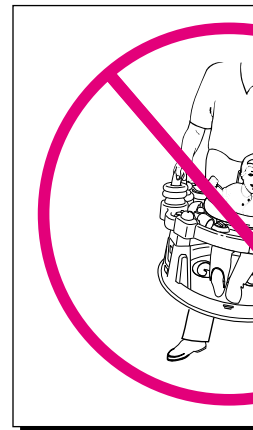

Never lift or carry the child in it.

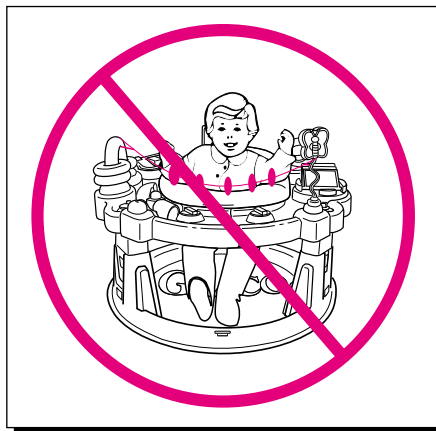

Strings can cause strangulation! DO NOT place items with a string around your child's neck, such as hood strings or pacifier cords. DO NOT suspend strings over the activity center or attach strings to toys.

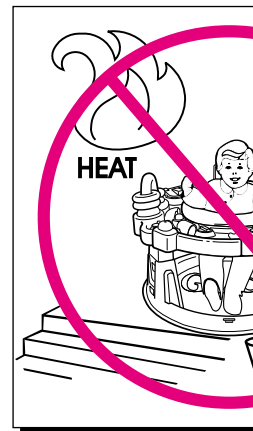

Product may gradually heat up. Keep the floor as child plays. Movement of product may cause child to fall. Child stays away from area such as stairs, pools, sources of heat, etc. else that may injure child. Use near stairs.

**THIS PRODUCT REQUIRES ADULT ASSEMBLY.**

**READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF THIS PRODUCT.** If you experience any difficulties, please contact the Customer Service Department.


**KEEP INSTRUCTIONS FOR FUTURE USE.**

**IN CLOSED-TRAY INFANT MODE**, this product is for use only by a child who is unable to sit upright unassisted but unable to walk, weighs less than 30 pounds and is less than 32 inches tall. **IN OPEN-TRAY TODDLER MODE**, this product is for use only by a child who is able to walk.

**EXCESSIVE EXPOSURE TO SUN OR HEAT** could cause fading of the product's color.

**DO NOT USE THIS PRODUCT** if it is damaged or broken.


**Follow these warnings and the assembly could result in serious injury or death.**

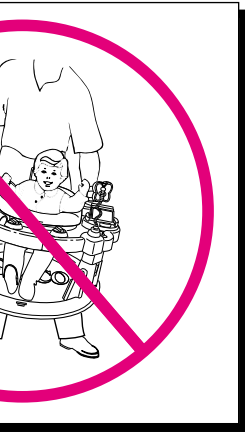


Do not use product in closed-tray infant mode with a child who can tip over or climb out of product.



Do not use product in closed-tray infant mode with a child who can tip over or climb out of product.

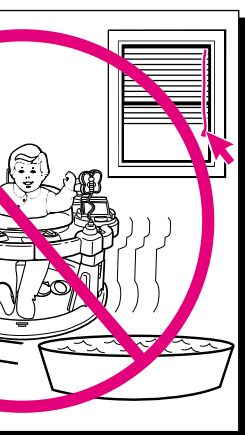

To avoid tipovers, place product on flat, level floor/ground. Adjust legs to same height so that the tray is level before placing child in product.

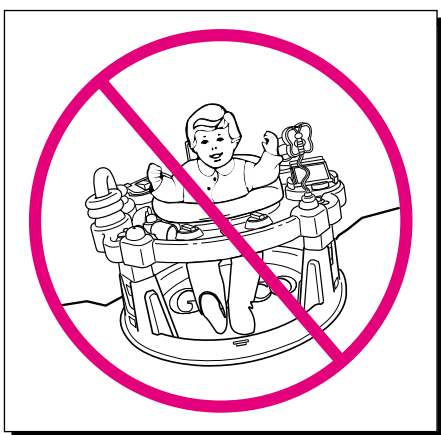

To avoid tipovers, place product on flat, level floor/ground. Adjust legs to same height so that the tray is level before placing child in product.

**FOR ADDITIONAL IMPORTANT INFORMATION**, please see the Helpful Hints and Care and Maintenance sections in these instructions.







**FOR ADDITIONAL IMPORTANT INFORMATION**, please see the Helpful Hints and Care and Maintenance sections in these instructions.

Do not use in open-tray toddler mode unless legs are set to lowest position.

## PARTS LIST

CHECK that you have all the parts listed below BEFORE assembling. If any parts are missing, call Customer Service at 1-800-345-4109 or visit our Internet website, [www.gracobaby.com](http://www.gracobaby.com). THIS PRODUCT REQUIRES ADULT ASSEMBLY.

Tool required: Phillips screwdriver

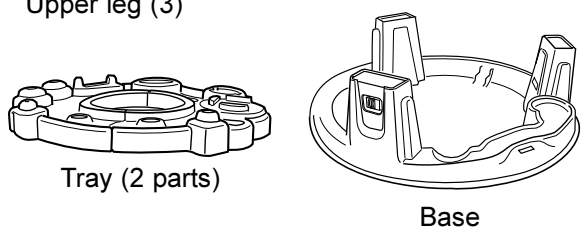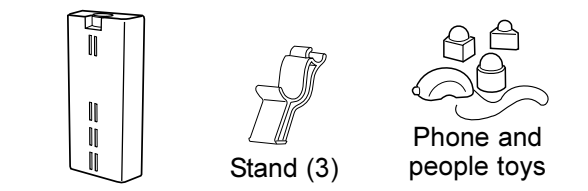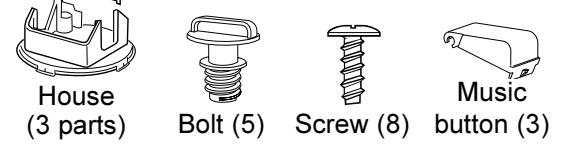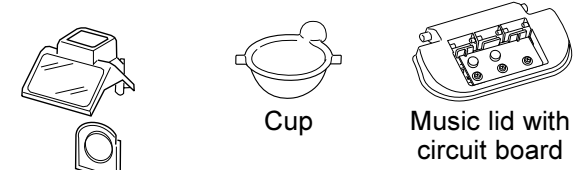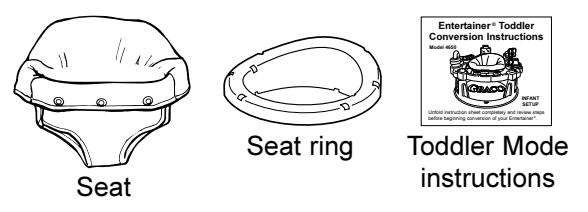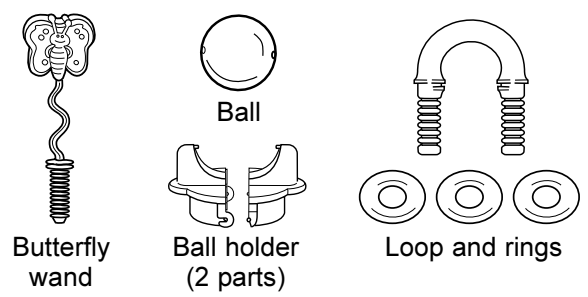


# To Assemble Your Convertible Entertainer® Activity Center

## Step 1.


Position three stands under base as shown, and push down on base until stands snap in place.

Stands can fold flat under base to permit rocking.

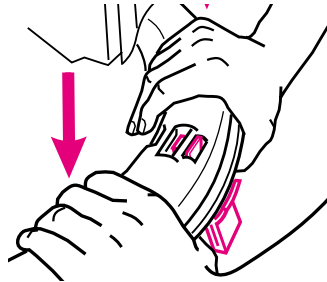


## Step 2.

With notch at bottom of upper leg as shown, push in the button on front of each lower leg and insert an upper leg section until it snaps into one of three heights for infant use. Set all three legs to same height.

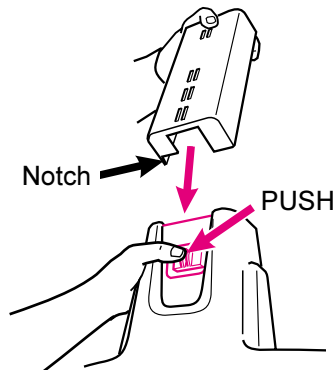


## Step 3.

Turn two halves of tray upside down. Put the end of tray with an "A" printed on it inside the end with a "B". Fasten ends "A" and "B" to each other with four Phillips head screws. Do not overtighten screws.

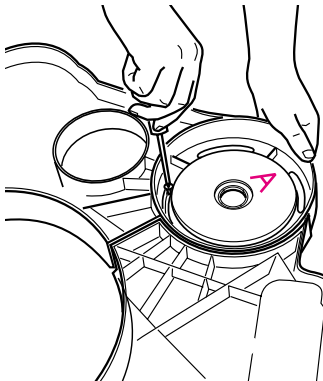


**Snap** the other two ends of tray together so it forms a closed circle in the center of the tray.

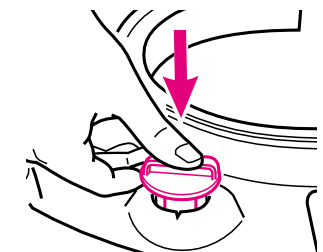

## Step 4.

Turn tray right side up. Push five large plastic bolts into the five holes as shown until they snap in place.

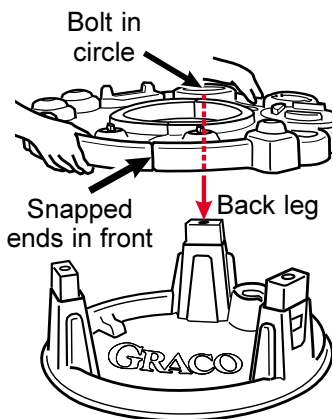

## Step 5.

Place tray on top of legs so that **snapped ends of tray are in front of the Graco® name on the base**, and bolt in circle at back of tray goes into back leg on the base. Align other two bolts with holes in the legs. Fasten all three bolts. **Check** that bolts are secure by pulling up on tray.


## Step 6.

Place folded Toddler Unit Conversion Instructions into clear plastic seat pocket.




## Step 7.

Put cloth seat inside the seat ring as shown. Toddler Unit instructions must face high side of seat ring as shown.

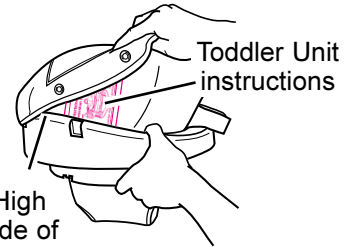


Attach seat to the seat ring by wrapping top edge of seat around seat ring. Under the seat ring, snap the grommets onto the pegs as shown. Tuck the **seam** on both sides of the cloth seat between the **outside** of the ring and the plastic partitions as shown.

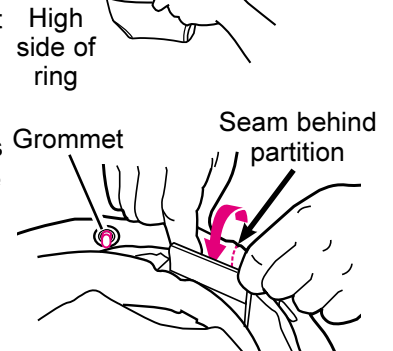

**Check that edge of cloth seat does not cover wheels or partitions.**


## Step 8.

Turn the seat over and push seat down into the seat ring.

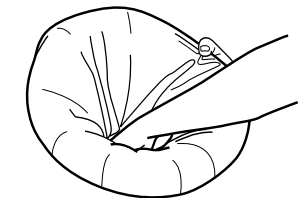


## Step 9.

Snap the seat ring onto the tray. Push down all around seat to make sure it is completely snapped onto the tray. Seat must turn freely.

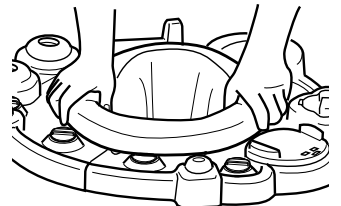


## Step 10.

Refer to illustration below to attach toys to tray. Detailed assembly instructions follow.

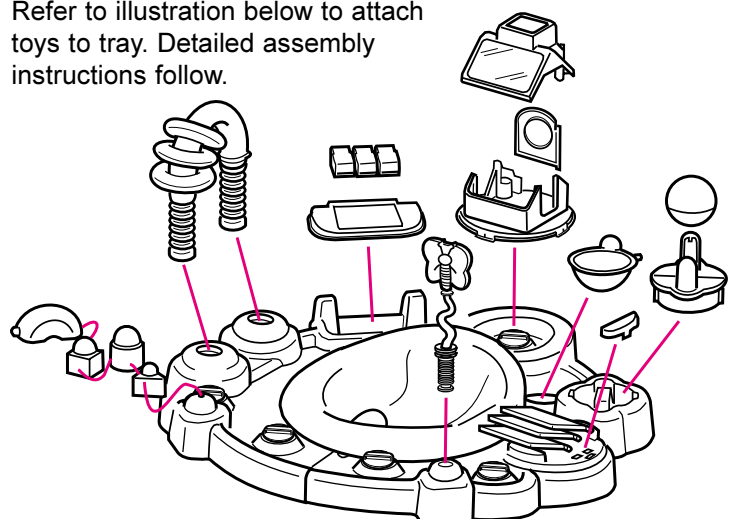


1. Thread cord attached to dog phone through the two holes found on each of the three people figures. Insert end of cord into small hole on tray as shown.

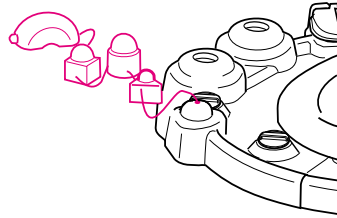


Tie a knot under the tray to hold cord in place.


2. Push three rings past the bumps onto the ring loop, and insert ends of ring loop into the two holes in tray as shown. **Push down firmly until loop snaps in place.**

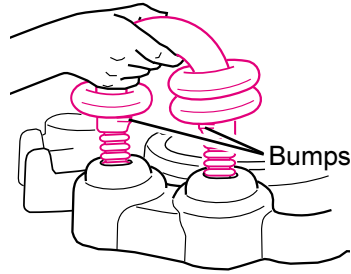


3. Remove and **immediately discard** the plastic pull tab on the printed circuit board.

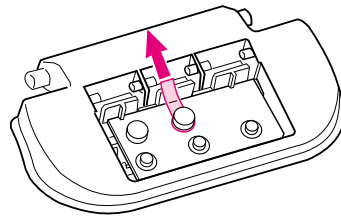


Attach three music buttons over circuit board in music lid. For each button, first put front end of button into lid so tooth fits into slot in lid, then push down back of button so it snaps onto pegs. **Check that both front and back of each button are snapped in place.**

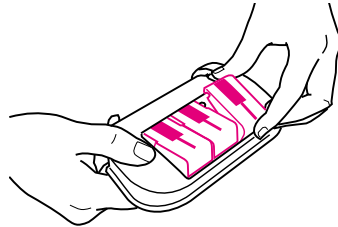


Snap pegs of lid into holes at both sides of the storage compartment in tray.

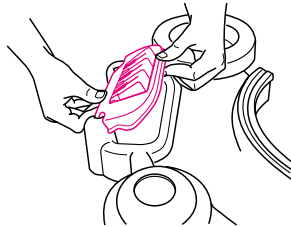


4. Assemble the house. Put lower pivot pin of door into hole in house base. Align roof over base so upper pin of door fits into hole at side of doorway. Holding pieces together, turn assembly upside down, locate the four screw holes, and fasten with four screws. Do not over-tighten screws.

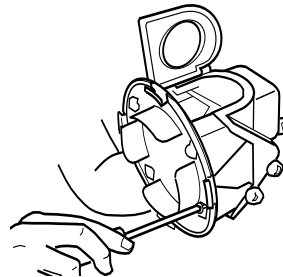


After house is assembled, align house over round ends of tray halves so mirror faces center of tray. Insert base of house into the four slots, and turn clockwise until house is latched to tray.

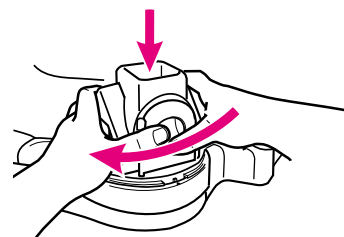


5. Align cup over largest hole in tray so cup handle is next to the house. Snap pins of cup into holes in tray.

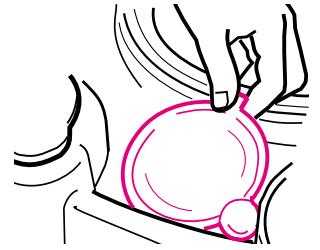


6. Snap together the two halves of ball holder as shown. Spread ends apart and attach ball by inserting two pins on ball holder into holes in ball.

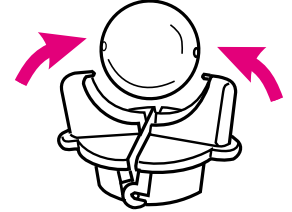


Holding ball/ball holder assembly together, push holder down into tray as shown until it snaps in place.

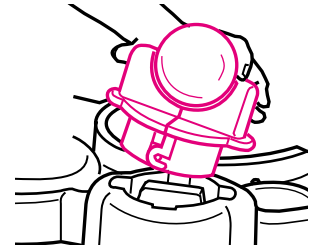


7. Cut out the double-sided pictures from included artwork, or use your own pictures. Insert a picture into smaller half of each clear plastic page, then snap small and large halves together.

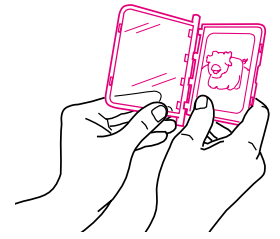

Insert one peg of each page into one of the three holes in tray as shown. Insert other peg into corresponding hole in plastic page retainer. Snap retainer into slots in tray.

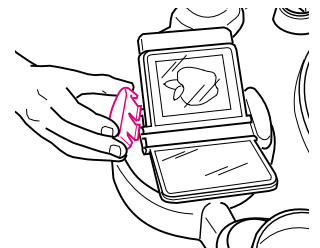

To open pages to replace pictures, insert a coin into the center slot and pry it open as shown.

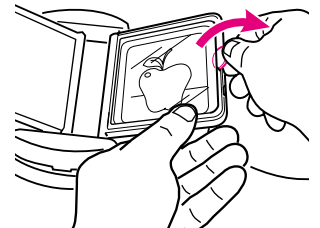

8. Push end of butterfly wand firmly into remaining hole on tray as shown until it snaps in place.




## To Adjust the Seat Height

**▲ WARNING** Do not adjust height while child is in activity center.

### Step 1.

Press in the buttons on each leg to adjust seat to desired height.

**▲ WARNING** For your child's safety, all three legs must be set to the same height. Tray must be level.

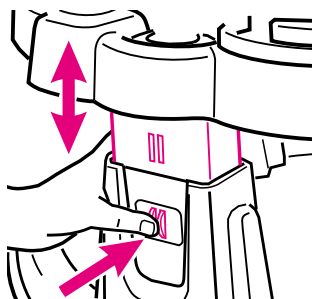

### Step 2.


After adjusting height of the seat, **CHECK** that your child's feet can rest completely on the floor of your activity center. Tray should not be too high or too low. Remove child and readjust height if necessary.



Tray at proper height



TRAY TOO HIGH

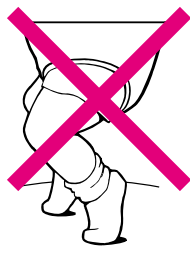

TRAY TOO LOW

## To Convert Your Convertible Entertainer® for Toddler Use

When your child is able to walk, you can convert your Entertainer® into the toddler mode. This open tray arrangement, along with changing the toys to allow new activities, can give your child a whole new play experience.

### A. Change base and tray


#### Step 1.

From top of seat, reach through the leg openings as shown and pull plastic tabs (also found at back and front of seat) slightly inward while lifting seat to remove.




#### Step 2.

Turn house/mirror toy so that rib on base of house (see closeup) lines up with arrow on tray. Lift house to remove.

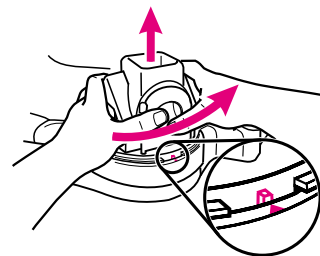



#### Step 3.

Unscrew the three large plastic bolts attaching tray to legs. Do not try to pull bolts out of tray. Remove tray from legs.

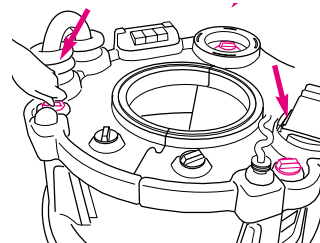

#### Step 4.



Underneath tray, pull back finger latch where the two halves of tray meet. While holding latch, lift right side of tray up to release it from left half. Pull tray open.

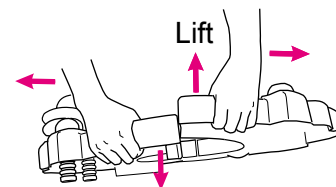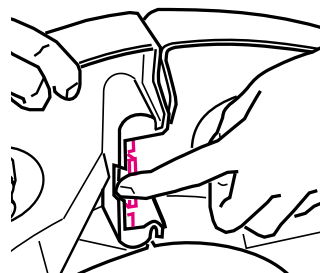

#### Step 5.

For each leg: (1) push and hold in the leg button; (2) push leg down to the **lowest** position. (Top of inner leg section **must** be slightly below top edge of outer leg.)

**▲ WARNING** Tipping or fall hazard. Do not use in toddler mode unless legs are set to lowest position.

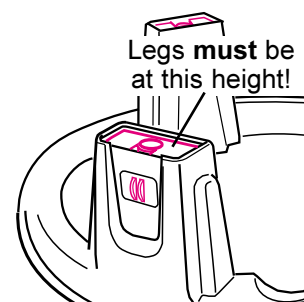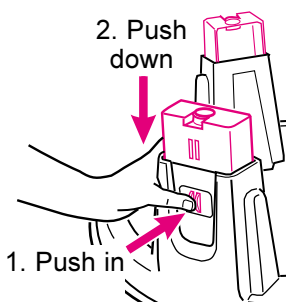


#### Step 6.

Place open tray over base so Graco® name is seen through opening in trays as shown. Align bolts over holes in legs.

Starting with bolt under the house, partially tighten all bolts (to allow alignment), then fully tighten.


**Be sure bolts are tight. Pull up tray at each bolt to make sure it is attached to leg.**

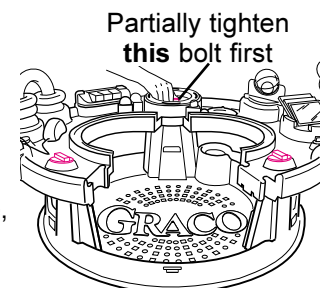

## B. Convert toys for toddler use


### Step 1.

**House:** Replace on tray with mirror facing outside of unit. Turn base counterclockwise to fasten it to tray.

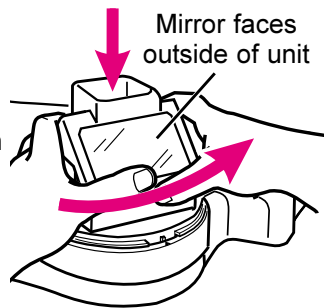


### Step 2.

**Shape toys:** Untie string under tray and remove them. (Shapes fit into different openings in house.) Replace string, attached only to phone, and retie again under tray.

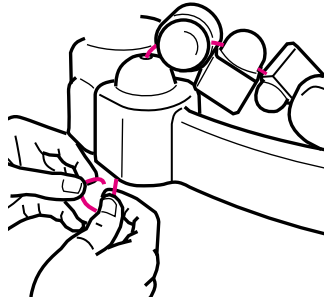


### Step 3.

**Ring loop:** Remove by pulling ends slightly apart under tray and pushing loop up. Remove rings. Turn loop upside down. From underside of tray, insert ends of loop back into holes and push up until peg ends snap in place. Put rings onto pegs.

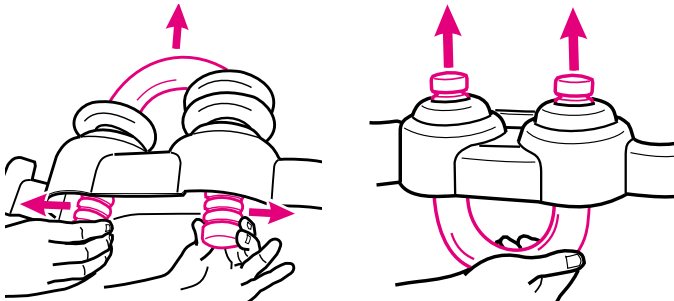


### Step 4.

**Cup:** Reach underneath tray, wrap fingers around cup, and squeeze toward you with both hands to release pivot pin of cup from hole in tray. Turn cup around so handle is away from house as shown, and reattach to tray. Cup now can pivot to drop ball onto ball track beneath.

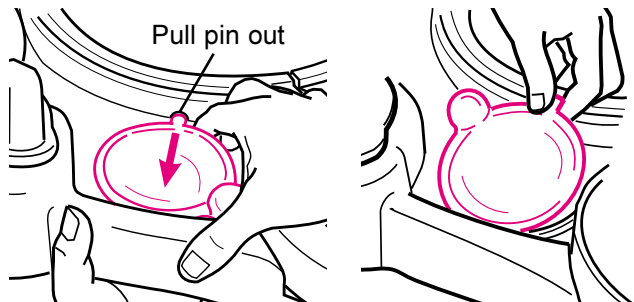


### Step 5.

**Ball holder:** Squeeze latches under tray to release ball holder.

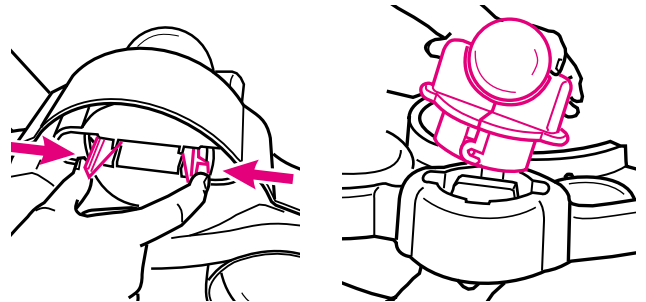

Pull ball holder out of tray. Open ball holder to remove ball. Put ball into cup. Turn ball holder upside down and reinsert into tray as a cup holder. Push it all the way down onto tray.

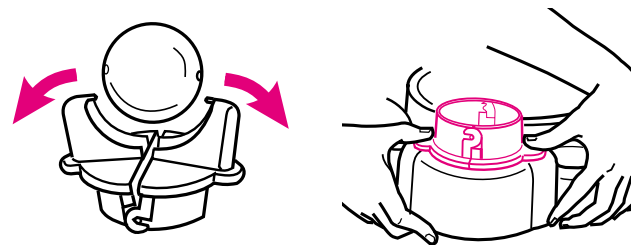


### Step 6.

**Wand:** Pull up on **handle** of butterfly wand to detach it from tray for toddler to play with. **Do not pull butterfly off handle.**

### Step 7.

**Seat:** Store in a safe place, not exposed to sun or heat, in case you wish to convert back to an infant setup in the future.

Your Entertainer® should now look like the open-tray toddler mode below.

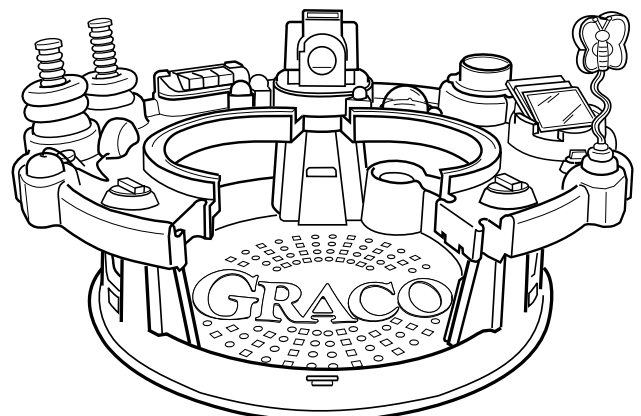

## Replacement Parts

### Instructions for ordering activity center parts:

Complete form below. Your model number **MUST** be included on the form to ensure proper replacement parts. **Your model number can be found on a sticker on the bottom of the tray. Payment must accompany your order.**

Parts List:	Price:*
Dog phone and people toys .....	\$ 5.00
Loop and rings .....	\$ 5.00
Music lid and buttons .....	\$ 7.00
House with mirror .....	\$ 6.00
Cup .....	\$ 5.00
Ball and ball holder .....	\$ 5.00
Pages (set of 3) and page retainer .....	\$ 6.00
Butterfly wand .....	\$ 5.00
Stands (set of 3) .....	\$ 5.00/set, n/c for 1
Cloth seat .....	\$ 15.00
Plastic bolts (set of 5) and screws .....	\$ 5.00
Seat ring and bearings .....	\$ 10.00
Complete tray unit (no toys) .....	\$ 25.00
Complete base unit (no toys) .....	\$ 20.00

\* Prices subject to change without notice.

### IF YOU NEED HELP

If you have any questions or if you need any part not listed, please call toll-free:

**1-800-345-4109**

or visit our Internet website, [www.gracobaby.com](http://www.gracobaby.com).

Return the form below with payment to:  
**GRACO CHILDREN'S PRODUCTS INC.**  
**CUSTOMER SERVICE DEPARTMENT**  
**P.O. BOX 100, MAIN STREET**  
**ELVERSON, PA 19520**

## CARE AND MAINTENANCE

**FROM TIME TO TIME CHECK YOUR ACTIVITY CENTER** for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Use only Graco® replacement parts.

**REMOVABLE CLOTH SEAT** may be machine washed in lukewarm water on delicate cycle and drip-dried. **DO NOT MACHINE DRY. NO BLEACH.**

**TO CLEAN FRAME**, use only household soap or detergent and warm water. **NO BLEACH.** Use only a damp cloth to clean the music buttons.

<b>Model No. (required)</b>	<b>SHIP TO:</b>
_____	_____
<b>Serial No. (required)</b>	Name
_____	_____
<input type="checkbox"/> Dog phone & people	Address
<input type="checkbox"/> Loop & rings	_____
<input type="checkbox"/> Music lid & buttons	City, State, Zip
<input type="checkbox"/> House with mirror	_____
<input type="checkbox"/> Cups	( )
<input type="checkbox"/> Ball & ball holder	Telephone
<input type="checkbox"/> Pages & page retainer	_____
<input type="checkbox"/> Butterfly wand	
<input type="checkbox"/> Stands	<input type="checkbox"/> Check enclosed
<input type="checkbox"/> Cloth seat	(payable to Graco Children's
<input type="checkbox"/> Plastic bolts & screws	Products Inc.)
<input type="checkbox"/> Seat ring and bearings	<input type="checkbox"/> Charge to credit card:
<input type="checkbox"/> Complete tray unit	<input type="checkbox"/> Visa
<input type="checkbox"/> Complete base unit	<input type="checkbox"/> MasterCard
	<input type="checkbox"/> Discover
Subtotal: _____	
Shipping & handling*: _____ \$5.00	Account #: _____
6% sales tax (PA only): _____	Expiration date: _____
Total: _____	Signature: _____
* \$15.00 outside the continental U.S.	