

# TVOC Instrument User Manual V3.1



Register your instrument online to receive your Extended 2 Year Warranty. See page 24 for details.

TVOC Instrument User Manual Part Number: 849215

# **Declaration of Conformity**

Manufacturer: Ion Science Ltd, The Way, Fowlmere, Cambridge, SG8 7UJ, UK

**Product:** TVOC

**Product Description:** An intrinsically safe fixed continuous monitor comprising of a photo-ionisation

detector for detecting and measuring volatile organic compounds with a 4-20mA

output

**Directive 94/9/EC** ATEX

**Identification:** II 2G Ex ia IIC T4 (-20°C  $\leq$  Ta  $\leq$  +50°C)

Notified Body: Baseefa Ltd, 1180, Buxton, UK

**Identification:** II 3G Ex nL IIC T4 (-20°C  $\leq$  Ta  $\leq$  +50°C)

Ion Science Ltd Self certified EC Type Examination Certificate(s)

Baseefa05ATEX0277 latest supplement Baseefa05ATEX0277/2 issued 24<sup>th</sup> November 2008

IECEx BAS 06.0057 latest revision no.1 issued 20<sup>th</sup> November 2008

Ref Baseefa Cert Report 05(c)0423, 06(c)0614, 08(c)0578

Ionscience09ATEX002 Examination certificate issued 3<sup>rd</sup> September 2009

Ref Ion Science Cert Report 849237, 849242

**Standards** 

BS EN 60079-0:2006 Electrical Apparatus for Potentially Explosive Atmospheres – General Requirement

BS EN 60079-11:2007 Explosive Atmospheres - Equipment Protection by Intrinsic Safety 'i'

BS EN 60079-15:2007 Explosive Atmospheres - Equipment Protection by other means 'n'

BS EN 61010-1:2001 Safety requirements for electrical equipment for measurement, control and

laboratory use – General requirements

Directive 2004/108EC Electrical Equipment – Electromagnetic Compatibility (EMC)

EN61000-6-3:2007 Class 1 (light industrial and domestic) Electromagnetic Compatibility (EMC) Generic

standards. Emission standard for residential, commercial and light industrial

environments

EN50270:2006 Electromagnetic compatibility. Electrical apparatus for the detection and

measurement of combustible gases, toxic gases or oxygen.

**Other Standards** 

BS EN ISO 9001:2000 Quality Management Systems – Requirements

BS EN 13980:2002 Potentially Explosive Atmospheres – Application of Quality Systems

On behalf of Ion Science Ltd, I declare that, on the date this product accompanied by this declaration is placed on the market, the product conforms to all technical and regulatory requirements of the above listed directives.

Name: Mark Stockdale Position: Technical Director

Signature: Date: 20<sup>th</sup> November 2009

<u>Contents</u>							Page	
1 - Statements							5	
2 - Introduction to 1	rvoc						6-7	
3 - Packing List							8	
4 – TVOC Set up							9-10	
Selector pins							9	
Cycle times							10	
5 - Installation							11-14	
Location							11	
Cable requirem	ents.						11	
Mounting							12	
Power requiren	nents						12	
Non In	trinsica	lly Safe	e (IS) app	lication	ns .		12	
Intrins	ically Sa	afe (IS	) applicati	ions.			13	
Initial o	calibrati	ion					14	
6 - Operation .							15-16	
Start up.							15	
Cycle times							15	
LED's .							16	
Selector pins				•			16	
Calibration mod	de						16	
7 - Calibration							17-19	
Calibration rou	tine						17	
Setting the zer	Ο.			•			17	
Setting the gas	tolerar	nce					18	
Setting the spa	ın						18	
Display lamp lit	fe						18	
8 - Maintenance							20-22	
Cleaning and re							20	
Fuse rupture a			nt .				22	
Lamp warranty							22	
9 – Instrument Warı	ranty a	nd Se	ervice			•	23	
10 - Diagnostics			•			•	24-25	
11 – Spare parts			•				26	
12 - Technical Speci	ficatio	ns					27	
13 - Update Log							28	

## 1 Statements

# **Responsibility for use**

TVOC detects a large range of gases, which are potentially dangerous from both a poisoning and/or an explosive perspective. TVOC has a number of selectable features allowing the detector to be used in a variety of applications. Ion Science Ltd can accept no responsibility for the incorrect adjustment of features that cause harm or damage to persons or property. It is the users' responsibility to respond appropriately to the readings delivered.

#### Warning

- 1. Substitution of components may impair intrinsic safety and result in unsafe conditions.
- 2. For reasons of safety, TVOC must only be operated and serviced by qualified personnel.
- 3. Please read and understand this user manual fully before installing, operating or servicing TVOC.

# **Quality assurance**

TVOC has been manufactured in compliance with ISO9001:2000, which ensures that the equipment supplied to our customers has been designed and assembled reproducibly, from traceable components, and leaves Ion Science calibrated to stated standards.

# Disposal

Dispose of TVOC and its components in accordance with all local and national safety and environmental requirements. This includes the European WEEE (Waste Electrical and Electronic Equipment) directive. Ion Science Ltd offers a take back service. Please contact us for more information.

#### **Contact Ion Science Ltd**

#### **UK Head Office**

Ion Science Ltd The Way, Fowlmere Cambridge SG8 7UJ UK

Tel: +44 (0)1763 207206
Fax: +44 (0) 1763 208814
Email: info@ionscience.com
Web: www.ionscience.com

#### **USA Office**

Ion Science Americas LLC 35 Crossroad Waterbury VT 05676 USA

**Tel:** +1 802 244 5153 **Fax:** +1 802 244 8942

Email: info@ionscience-americas.com

Web: www.ionscience.com

#### **German Office**

Ion Science Messtechnik GMBH Laubach 30 Metmann-Neandertal 40822 GERMANY

Tel: +49 2104 14480 Fax: +49 2104 144825 Email: info@ism-d.de Web: www.ism-d.de

# 2 Introduction to TVOC

to produce the equivalent to Isobutylene.

TVOC is a fixed continuous monitor for the detection and measurement of total volatile organic compounds, which can be dangerous from both a poisoning and explosive perspective. Total VOC's are detected using PID (Photoionisation Detection) technology.

TVOC has a number of user selectable features which define its operation and will be application dependent. The user can define the detection ranges or 0.01 - 10ppm, 0.1 - 100 ppm or 1 - 1,000 ppm (Default); detection units, either ppm or  $mg/m^3$ ; and the duty cycle time i.e. the frequency that the instrument takes a measurement. Duty cycles are explained in more detail on page 10, TVOC set up, and page 16 Operation.

**IMPORTANT:** TVOC can be calibrated on alternative gases to Isobutylene however to ensure TVOC remains within specification, the correct concentration for the alternative gas must be chosen. Example: Benzene gas has a response factor of 0.5 which means only half as much concentration is required

The ideal gas / concentrations used to set the calibration SPAN are shown below:-

	Lower limit	Upper limit	Upper limit		
10 ppm range	8 ppm	12 ppm	Isobutylene equivalent		
100 ppm range	90 ppm	110 ppm	Isobutylene equivalent		
1,000 ppm range	90 ppm	110 ppm	Isobutylene equivalent		

# How to calculate alternative concentration of gases for gases other than Isobutylene:-

	Ideal response	Res	Response factor		Ideal calibration gas	
	for Isobutylene				concentration	
Benzene	100	Х	0.5	=	50 ppm	
Isoprene	100	Χ	0.7	=	70 ppm	
Isobutylene	100	Χ	1.0	=	100 ppm	
Carbon Disulphide	100	Χ	1.4	=	140 ppm	
Ethyl Acrylate	100	Χ	2.0	=	200 ppm	

For other gas response factors please refer to the Ion Science web site or contact Ion Science Ltd. http://www.ionscience.com/GasSearch/tabid/87/Default.aspx

**WARNING:** Ignoring these guide lines may result may result in calibration failure, loss of resolution or loss of range.

The default settings of TVOC are:

Detection range – 0.1 – 1000 ppm

Units - ppm

Duty cycle - 5 seconds ON / 55 seconds OFF

TVOC gives a continuous 4 - 20 mA output which can be integrated into a DCS control system to give an indication of VOC levels in the operating environment.

In addition to the 4-20 mA output TVOC has an LCD display showing gas concentration and 4 colour LED's. LED functions are as follows:

Green - is an indicator of TVOC's working status

Red - is the fault indicator

Yellow x 2 - are calibration status indicators

Please see page 19Calibration for more information on LED status.

# 2 Introduction to TVOC

For installation requirements please refer to Pages 11 and 28 of this manual. Before attempting an installation, please fully read and understand this user manual, and for hazardous area (IS) installations please also refer to the TVOC ATEX or IECEx certificate for further details.

The TVOC safety rating permits its deployment in all hazardous areas of the quoted (or less demanding) rating. For detail please refer to the marking on your instrument (found on the front main label). As of 1<sup>st</sup> of October units will be manufactured with two protection concepts applied by separate certifications. Intrinsic safety (ia) and Non sparking (nA). All units manufactured up to that date will only have intrinsic safety.

- a) Intrinsic Safety (ia) permits the deployment in areas where explosive gases (of group IIA, IIB and IIC) are intermittently present (zone 1) with an ambient temp range of -20°C to 50°C. Intrinsically safe installations will require the use of safety barriers and appropriate wiring.
- b) Non sparking (nA) permits deployment in areas where explosive gases (of group IIA, IIB, IIC) are unlikely but possible (Zone 2) with ambient temp range of -20°C to 50°C. Non sparking installations do not require safety barriers however the maximum working voltage should be strictly adhered to as a matter of safety. As no safety barriers are required there is complete flexibility on the implementation of 3 wire system.

TVOC does require regular calibration onsite please see page 19 Calibration for information. TVOC calibration mode is accessed via a magnetic read switch system.

# **3** Packing List

All items of equipment shipped by Ion Science Ltd are packed in suitable containers and enclosed in a shock absorbing filling which affords a considerable degree of protection against physical damage.


Contents should be carefully removed and checked against the packing list. Any discrepancies between the contents and the packing list must be reported to Ion Science Ltd within 10 days of receipt of shipment. Ion Science cannot be held responsible for shortages not reported with in the period.

# **Standard TVOC instrument**

<u>Item</u>	Description	Qty		
1.	TVOC instrument	1		
2.	Cable gland M20 ATEX Ex e	23.	Blanking plug M20 ATEX	1
4.	TVOC Manual	1		

# **TVOC Calibration Tool Kit**

<u>Item</u>	Description	Qty
1.	Calibration magnet	1
2.	Calibration adaptor	1
3.	Calibration connector	1
4.	Aspirator	1
5.	Carbon filter	1
6.	Allen keys	1

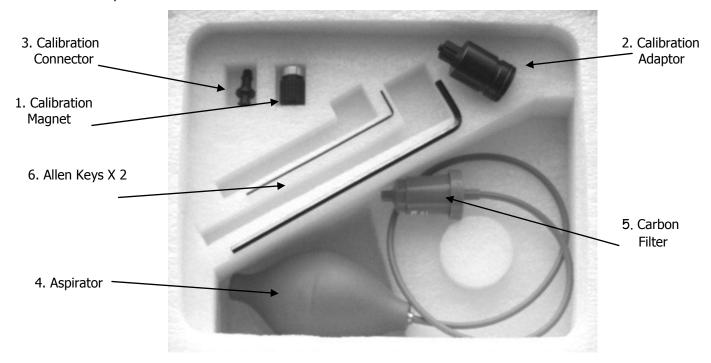

# 4 TVOC Setup

#### **4.1 Selector Pins**

TVOC has a number of settings that can be selected by the user via a row of 4 selector pins mounted on the reverse side of the main PCB. Diagram 4.1 shows the location of the functional selector pins labelled - A, B, C & D.

The selector pins absence or presence determines the chosen setting.

TVOC is shipped with all 4 selector pins fitted as shown in diagram 4.2.

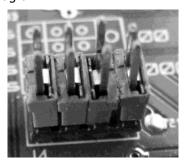


Diagram 4.2

Diagram 4.3 demonstrates the removal of 1 selector pin.

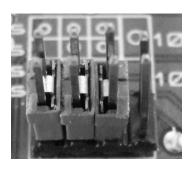


Diagram 4.3

The following table shows the selector pin combinations and the corresponding function.

	<ul><li>✓ = Selector pin fitted</li><li>Selector pin</li></ul>		x = Selector pin removed			
Α	В	C	D	Range	Displayed units	
~	<b>~</b>	~	<b>✓</b>	1000	ppm (Default)	
•	<b>✓</b>	X	<b>✓</b>	100	ppm	
✓	X	<b>✓</b>	<b>✓</b>	10	ppm	
✓	<b>✓</b>	<b>✓</b>	X	2280	mg/m <sup>3</sup>	
✓	✓	X	X	228	mg/m³	
~	x	~	X	22.8	mg/m <sup>3</sup>	

Selector pin 'B' and 'C' selects the ranges - 10ppm, 100ppm or 1,000ppm Selector pin 'D' selects the units - ppm' or ' $mg/m^3$ 

Selector pin 'A' - Fault output range

NOTE: During an Alarm condition (F1 or F2) the output will drop to either 3.5 mA or 2.0 mA.

Jumper 'A' fitted = 3.5 mA during an alarm condition Jumper 'A' removed = 2.0 mA during an alarm condition.

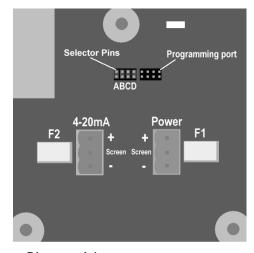


Diagram 4.1

# 4 TVOC Setup

**IMPORTANT:** if the 10ppm range is selected the TVOC will require a calibration using 10ppm Isobutylene before use. (See the calibration section of this manual)

NOTE:

- \* TVOC is shipped with all selector pins fitted as standard
- \* TVOC only reads the selector pin settings when power is connected. Always ensure power is disconnected from TVOC before changing setting or carrying out maintenance.
- \* Never place selector pins on the programming port connector.
- \* Ensure static build up is discharged before touching components.
- \* IF the jumper selection is not a recognised option then error F4 will occur. To recover switch the instrument off perform the correct jumper selection and switch the instrument back on.

# 4.2 Duty Cycle

The TVOC has a variable duty cycle whereby the lamp is ON for 5 seconds and then OFF for a user set period between 0 to 5 minutes in 1 second increments. The 4-20 mA output is updated at the end of each cycle. As standard the TVOC duty cycle is 1 minute – the lamp is ON for 5 seconds and OFF for 55 seconds. The lamp OFF time is fully adjustable by the user. Please see page 16of this manual for full instructions.

# 5 Installation

#### 5.1 Location

There are many variables involved in defining the optimum location for a gas detector. Obvious though it may sound, the most important rule is:

A detector will not detect gas unless gas actually reaches the detector.

TVOC should be mounted in the location most likely to detect gas.

- TVOC must be mounted vertically with the sensor underneath the case. This avoids dust and debris blocking the access to the detector cell.
- Mount TVOC higher if detecting VOC gases that are lighter than air or lower if detecting VOC gases that are heavier than air (but never on the floor). This should maximise detection.
- Mount TVOC in an area that has good air circulation. Restricting natural air current may result in delayed detection.
- Never mount TVOC in direct sunlight or over a heat source such as a radiator. This may cause TVOC to exceed its certified working range.
- Do not mount TVOC where it's subjected to rain fall, water, aerosols, mist or heavy condensation.
- Mount TVOC's in areas that are easily accessible for servicing.
- Percentage variations in the composition of air (78% Nitrogen, 21% Oxygen and 1% Argon) may affect the detected signal.

# Please refer to the technical specifications of the instrument in page 28 of this manual before beginning a TVOC installation.

## **5.3 Cable and gland requirements**

The Screw terminal sockets for connecting wires in the TVOC accept wires of  $0.5 \text{mm}^2$  to  $2.5 \text{mm}^2$  C.S.A.

Screened cables for both power and signal out are necessary to achieve EMC compliance. Cable screens must be terminated at both ends for them to be effective in achieving electromagnetic compatibility (EMC). The screens should be terminated to the TVOC enclosure using EMC compatible cable glands. It is important for an EMC compatible gland to make electrical contact to the enclosure. This is usually done using a serrated washer or EMC lock nut that bites through the paint making electrical contact. EMC lock nuts have been provided. These locknuts are orientation specific the points should be facing against the case in order to cut through the pain during tightening.

Two M20 ATEX cable glands and one ATEX blanking plug have been supplied as standard to ease installation in most circumstances. These parts will not be appropriate for all applications so they should be used at the discretion of the installation engineer. It is recommended that the manufacturer's instructions are followed for the gland and blanking plug installation. The M20 blanking plug has been included to enable installations using a single entry cable (for example a three wire system) to be implemented.

While ion science can not recommend the cable gland suitable for every application the following information may be useful to the installation engineer for the selection of the appropriate cable gland.

- For ATEX Ex i (intrinsically safe) operation using safety barriers, the only requirements on the cable glands are that they are better than IP20 rated. This may seem extraordinary however where the power is safely limited to the TVOC it is intrinsically safe so does not rely on the prevention of dirt or moisture into the enclosure.
- For ATEX Ex n the Cable glands must be ATEX rated (Ex e, Ex n or Ex d) and at least IP54.

# **5** Installation

# 5.2 Mounting

Dimensions for mounting TVOC and connector locations are given in General Assembly drawing 5.2.1 below.

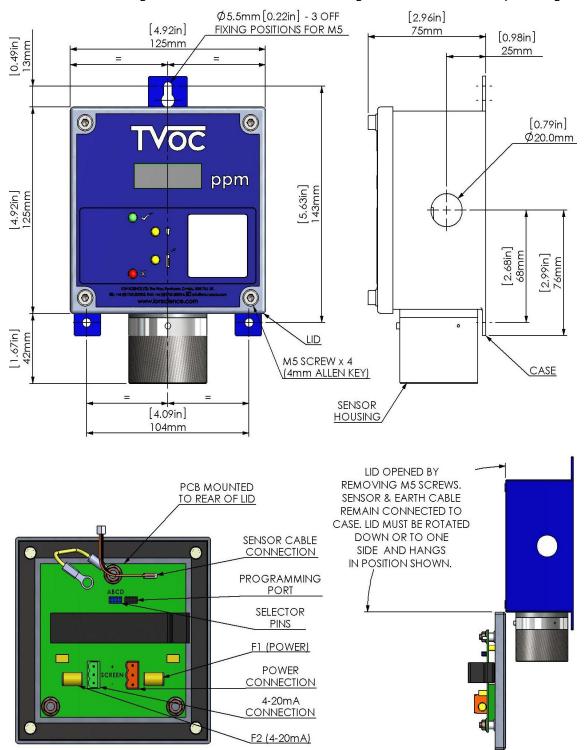


Diagram 5.2.1

# **5** Installation

NOTE: The TVOC case can be used as a template when marking out fixing holes but do not drill

through the fixing holes.

# **5.4 Power requirements**

5.4.1 Non ATEX applications:

Input power 5 - 28Vdc. 80mA max. (0.5mm² to 2.5mm² C.S.A.)

4-20mA power 8-35Vdc. 22mA (0.5mm² to 2.5mm² C.S.A.)

#### 4 Wire System


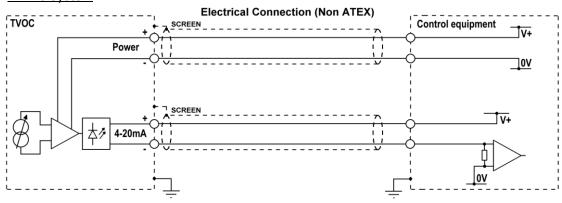


Diagram 5.4.1

# 3 Wire System

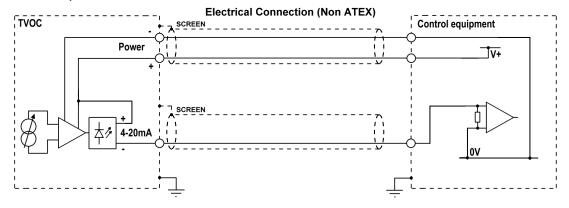

## 5 Installation

#### WARNING!

The label on the enclosure details the IS and nA certifications. The appropriate section of the ATEX label should be covered up or blocked out to reflect the type of installation. For Non ATEX applications the label should be covered completely. For ATEX zone 2 applications with out safety barriers the ia certification details should be blanked out. For Zone 1 or 2 IS applications with safety barriers the nA certification details should be covered.

This will prevent safety discrepancies and or mis-use in the future should the equipment be moved or the site be re-defined as a hazardous area.

5.4.2 ATEX nA (Non sparking) applications for Zone 2 areas only: Entry parameters

Input power 5 to 24Vdc 80mA max 4-20mA power 8-35Vdc, 22mA

For information only please see ATEX certificate before installation

The wiring of ATEX nA systems is identical to the wiring showing for non ATEX applications. The only difference is the requirements to ensure that the power supplied used provides 24v or less in normal operation.

5.4.3 Intrinsically Safe (IS) applications: Entry parameters

For information only please see ATEX certificate before installation

Ion Science Ltd suggest using the following Zener Barriers for IS approved applications. Use competent installation engineers and ask them for installation and application advice.

## **POWER SUPPLY:** Suggested barriers for INLET power supply

<u>Manufacturer</u>	Manufacturers pt no.	Type	Cable length estimate
Pepperl+Fuchs	Z715	Zener barrier	~ 1115 meters
Pepperl+Fuchs	KFD0-SD2-EX1.1065	Galvanic isolator	~ 1217 meters
MTL	7715P+	Zener barrier	~ 772 meters
Stahl	9901/01-158-270-101	Zener barrier	~ 500 meters
Stahl	9143/10-156-065-10	Galvanic isolator	

#### **SIGNAL OUTPUT:** Suggested barriers for 4-20mA OUTLET

<u>Manufacturer</u>	Manufacturers pt no.	Туре
Pepperl+Fuchs	Z728	Zener barrier
Pepperl+Fuchs	KFD2STC4-Ex1	Galvanic isolator
MTL	MTL7787	Zener barrier
MTL	MTL5042	Galvanic isolator
Stahl	9001/01-280-110-141	Zener barrier
Stahl	9160/13-11-11	Galvanic isolator

#### NOTE

- All cable lengths are estimated for zone 1 IIC installation of the equipment
- Using 1mm<sup>2</sup> C.S.A conductor S.T.P cables with capacitance per meter of 250pF/m, L/R ratio of 25uH/ $\Omega$  conductor resistance at 20°C of  $18.4\Omega$ /km.
- Calculation assumes cables are at 50°C.

# **WARNING!** Intrinsically Safe (IS) applications

- Units should not be powered using non IS power supplies prior to installation in an IS application.
- If non IS power is supplied the unit will require inspection by Ion Science Ltd or an Ion Science Approved Service Centre prior to installation in an IS application.
- TVOC fuses may not be replaced in the field.
- If a fuse is blown TVOC will require inspection by Ion Science Ltd or and Ion Science Approved Service Centre before it is used in an IS application

# **5** Installation

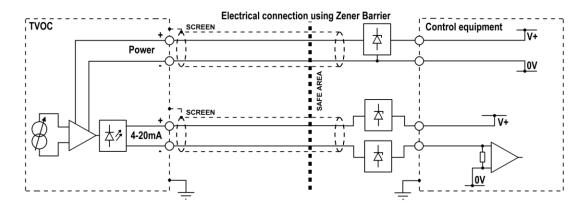


Diagram 5.4.3.1 4-wire Control equipment sensing 4 – 20 mA on return line

#### **Notes:**

 For intrinsically safe installations, the enclosure may be opened while the system is live, provided the work is undertaken by competent personal and suitable safety precautions are taken. This overrides the warning on the enclosure label.

#### 5.5 Initial calibration

TVOC is calibrated at Ion Science before dispatch using 100ppm Isobutylene. However if you wish to calibrate your TVOC once it is installed Ion Science recommends that the TVOC is left to run on its chosen settings (see page 9TVOC Set up) for 24 hours before an initial calibration is carried out, to allow the instrument to settle into the working environment.

# 6 Operation

## 6.1 Start Up

After electrical power is connected, TVOC runs through a 'Start up' routine, which lasts for approximately 1 minute. During this 'Start up' routine TVOC demonstrates the following characteristics:


- \* The LCD screen displays the software version number
- \* The GREEN LED flashes
- \* The 4 20 mA output is set to 4 mA (0.0 ppm)

NOTE: If the 0-10ppm range is selected the TVOC will require calibration using 10ppm Isobutylene before user (See the calibration section of this manual)

During this 'Start-up' time the user can adjust the lamp OFF time as referred to on page 10. This time can be adjusted from 0 to 5 minutes in 1 second increments.

#### 6.2 Cycle times

To extend PID lamp life and the time between servicing, TVOC includes a variable duty cycle, (see section 4.2) whereby the lamp is switched ON and OFF. The length of time between servicing and calibration is increased where longer OFF times are selected. However the length of time between servicing also depend on ambient air quality, the higher VOC concentration detected by the instrument then the shorter the time between servicing.

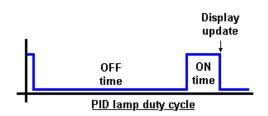

#### 6.2.1 Adjusting the lamp OFF time

There are two stages to adjusting the lamp OFF time. The first stage adjusts the seconds (0-59) and the second stage adjusts the minutes (0-5). To adjust the lamp OFF time the magnetic switch must be activated during the 'Start-up' time.

NOTE: Please read this entire procedure <u>before</u> attempting to adjust the lamp OFF time.

1 – During the 1 minute 'Start up' routine place the calibration magnet over the top right hand corner of the Ion Science logo. *Two numbers on the LCD screen will flash.* 



- 2 This indicates the lamp OFF time in seconds.
- 3 Placing the calibration magnet back over the logo will cause the number to role between 0 and 59 seconds. Remove the magnet when the desired time is displayed.
- 4 After 5 seconds the display will show another two numbers and flash.
- 5 This indicates the lamp OFF time in minutes.
- 6 Again place the calibration magnet over the logo to rotate the numbers between 0 and 5 minutes. Remove the magnet when the desired time is displayed.



- 7 After 5 seconds the entire output frequency is displayed.
- 8 After a further 5 seconds the set frequency will be set in the TVOC memory.
- 9 TVOC then continues through the standard start-up routine.



If you are unhappy with the update frequency you have set you can adjust the time by placing the calibration magnet over the logo during the 5 seconds after the total time has been shown (point 8 above).

**NOTE:** The total duty cycle time includes the 5 seconds lamp ON time. Therefore if you wish your total duty time to be approximately 2 minutes set the lamp OFF time to 1 minute 55 seconds.

At the end of the 'Start up' routine TVOC will enter the selected monitoring routine.

# 6 Operation

#### 6.3 LED's

The GREEN LED indicates TVOC's working status

ON Indicates the PID lamp is OFF Flashing Indicates the PID lamp is ON

The RED LED indicates Fault status

ON Indicates TVOC cannot function correctly. The 4-20mA output drops

to 3.5mA.

URGENT attention is required.

Flashing Indicates the TVOC cannot function but a reading is being

attempted

The Yellow Zero LED indicates during normal operation

ON Last calibration zero level was outside expected limits

(The instrument will operate normally with the previous calibration)

The Yellow Span LED indicates during normal operation

ON Last calibration zero level was outside expected limits

(The instrument will operate normally with the previous calibration)

last calibration carried out was outside expected limits. The instrument will continue

working but service is required.

Please see Section 7 Calibration for YELLOW LED status.

#### 6.4 Selector pins

TVOC has a range of options that are selected via the selector pins on the back of the main PCB (please see page 9TVOC Set up).

The options are shown below with the defaults highlighted in bold:

**1-1000ppm** or 0.01 - 10 ppm or 0.1 - 100 ppm

**ppm units** or mg/m³ units

#### 6.5 Calibration mode

TVOC calibration mode can be accessed using the calibration magnet supplied in the TVOC calibration tool kit (Part number: A-845214).


To enter calibration place the magnet over the top right of the Ion Science Logo until the state changes (i.e. an LED illuminates and/or the display changes).

Ensure the magnet is withdrawn away from the magnetic switch by at least 1 cm once a change has occurred.

# 6.6 Calibration gases

TVOC has three (3) ranges that can be selected however the 0-10ppm range requires the instrument is calibrated by the user before use. The 0-100ppm and the 0-1000ppm ranges can initially run using the Factory calibration carried out during the instruments manufacture, however because the 0-10 ppm range is more sensitive and more susceptible to environmental and system tolerances the instrument must be calibrated before use.

If the 0-10 ppm range is selected TVOC will display the following screen to indicate that a calibration is required before it can be used. Follow the calibration instructions before use.

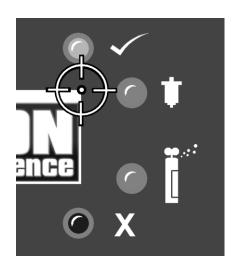



# 7 Calibration

#### 7.1 Calibration routine

Ion Science recommends calibrating TVOC after any maintenance or lamp cleaning is carried out and on a 3 monthly basis to ensure TVOC is working to specification.

NOTE: Please read this entire calibration procedure <u>before</u> attempting a calibration.

TVOC calibration has 4 stages:

1. Setting the ZERO (Using clean gas via carbon filter)

2. Setting the gas tolerance (1 - 200 ppm Isobutylene on 0-100 ppm and 0-1000 ppm ranges)

(1 - 100 ppm Isobutylene on the 0-10ppm range)

3. Setting the SPAN (Using the SPAN gas)



GREEN STATUS LED


**ZERO LED** 

**SPAN LED** 

**FAULT LED** 

# 7.2 Setting the ZERO

- 1 Place the calibration magnet over the top right hand corner of the Ion Science logo to enter calibration mode. *The ZERO LED will illuminate and the GREEN STATUS LED will extinguish.*
- 2 Remove the calibration magnet
- 3 Insert the calibration adaptor into the sensor cap, attach the carbon filter to the calibration adaptor. The carbon filter should be attached to the hand aspirator.
- 4 Again place the calibration magnet over the logo. *The ZERO LED will flash, during this stage TVOC displays a direct milivolt (mV) output from the PID sensor.*

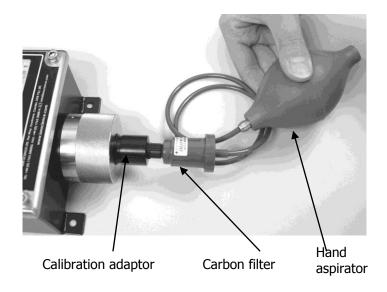

# **7** Calibration

5 - Slowly and repeatedly squeeze the hand aspirator to push clean air through the carbon filter and past the PID sensor. The ZERO LED will stop flashing after approximately 2 minutes.

6 – Now remove the equipment except for the calibration adaptor.

NB during the Zeroing process the mV reading on the display must reduce to below 30 mV to pass the ZERO calibration stage.

An acceptable ZERO calibration level will result in the illumination of the GREEN LED. An unacceptable ZERO calibration level will result in the illumination of the RED LED. Should this occur the TVOC will not proceed to the gas tolerance setting and return to normal operation the previous calibration levels will be used. The Yellow zero LED will be illuminated to indicate the failure to set a zero calibration level.

## 7.3 Setting the gas tolerance

1 – Now, again place the calibration magnet over the corner of the logo - The GREEN or RED LED will be extinguished and the numeric display will start to flash.



2 - If the 0-10ppm range is selected you will be able to adjust between 1.0 ppm and 100ppm, for both the 100 ppm and 1000 ppm ranges a tolerance of between 1 and 200 ppm can be selected. Leaving the magnet in position will cause the displayed number to cycle through the tolerance, remove the magnet when the displayed value matches that stated on the Calibration gas bottle. Should you miss the desired reading quickly reapply the magnet to continue scrolling through the numbers and remove the magnet at the desired figure.


The selected number will be recorded 5 seconds after the removal of the magnet when the display stops flashing. The display will initially show 90, should this be the desired figure remove the magnet straight away.

# 7.4 Setting the SPAN

1 - Connect the SPAN gas to the calibration connector then the connector to the adaptor. Do not over tighten the Luer fitting; only a ¼ turn is required.

Switch on the gas supply and then place the magnet over the logo.

The SPAN LED will flash and TVOC will display the direct millivolt (mV) output from the PID sensor. Now remove the magnet.

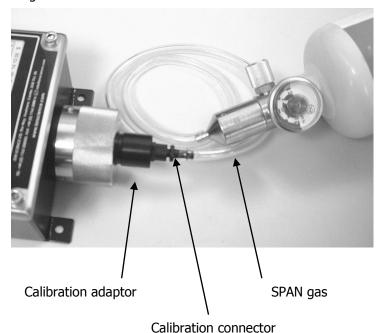

- 2 The SPAN LED will stop flashing after approximately 2 minutes.
- 3 Turn off the gas and disconnect the equipment

# 7 Calibration

NB during the span measurement process the mV reading of the span must be greater than the zero level to pass the ZERO calibration stage.

An acceptable SPAN calibration level will result in the illumination of the GREEN LED. An unacceptable SPAN calibration level will result in the illumination of the RED LED. Should this occur the previous calibration levels will be used when the instrument returns to normal operation. The Yellow span LED will be illuminated to indicate the failure to calibrate the span.

Now place the magnet over the logo corner to return to normal monitoring routine. The GREEN LED will start flashing as TVOC starts its cycle with a lamp ON cycle.

If either the ZERO and/or SPAN levels where outside acceptable levels the RED LED will flash until an acceptable calibration has been carried out.

Unacceptable calibration levels will NOT be used, TVOC will default to the previously stored acceptable calibration factor.

#### NOTE:

- \* Always check the accuracy of your calibration by checking readings from TVOC when it is running normally using the ZERO filter and SPAN gas.
- Accuracy of calibration is the responsibility of the person carrying out the calibration. If in doubt seek advice.
- \* TVOC must be calibrated after lamp/cell cleaning or general maintenance.

NOTE: Causes of contamination and error in signal:

- \* Changes in air pressure when detecting ppm concentration
- Variation in Oxygen and / or Argon beyond ambient levels.
- \* Variation in ambient moisture content.

# 8 Maintenance

# Cleaning / replacing the lamp

TVOC has been designed to ensure servicing is quick and easy:

- 1. Before servicing *TVOC*, disconnect the electrical power supply.
- 2.Remove the Locking Screw from the Metal Sensor Cap using the Allen Key supplied within the Calibration tool kit. (Calibration tool kit part number A-849214)


#### **WARNING:**

Failing to remove the locking screw before unscrewing the *Sensor Cap* will damage the sensor holder.

- 3. Unscrew the sensor Cap to access the *PID sensor*.
- 4. Remove the *PID Sensor* by withdrawing it from the *Sensor Housing*. Only light force is required

#### **WARNING:**

Do not twist the PID Sensor while it is within the Sensor Housing

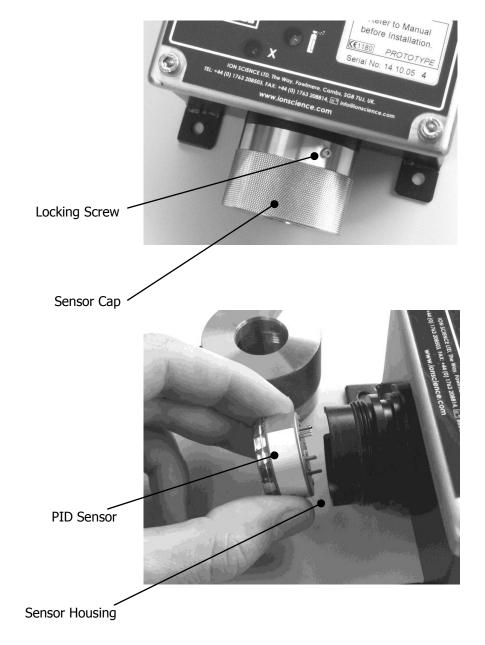

# 8 Maintenance

5. The *PID Cell's Metal Spring Cover* can be pulled off using moderate force. The *Electrode Stack* and *PID Lamp* can then be removed by holding the *PID Cell* upside down.

# **WARNING**:


Ensure the *Electrode Stack* and *PID Lamp* fall onto a soft surface such as a piece of tissue. This will avoid damaging the parts as they fall out and avoids finger contact with the *PID Lamp* window.

6. Clean the PID Lamp using Alumina Powder loaded onto a cotton bud.
Rub the Cotton Bud / Alumina power on the PID Lamp Window using a circular motion until a light audible squeak can be heard.


#### NOTE:

Contamination of the *Lamp Window* can considerably reduce the detection capability of the *PID Cell*, even when the contamination is not visible.

Cleaning of the lamp should be carried out on a regular basis depending on the duty cycle of the *PID Lamp* and the environment.

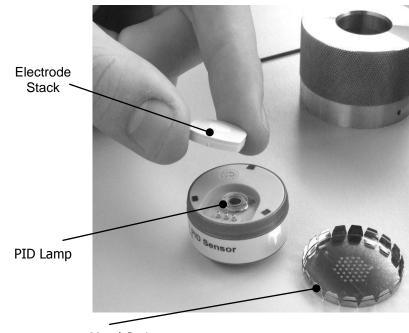

Metal Spring Cover

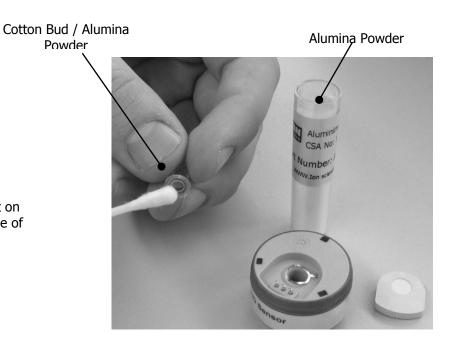

# 8 Maintenance

The amount of humidity and quality of the ambient air will directly affect the time between servicing.

#### **WARNING:**


Leaving contamination on the lamp window can cause irrecoverable damage to the PID Lamp.

7. *The Electrode Stack* should be inspected for visible signs of contamination, if contamination can be seen the Stack it must be replaced. (*The Electrode Stack* part number 1/EA-02)

#### Reassembly:

- 8. Place the clean PID Lamp into the PID Cell avoiding finger contact with the Window.
- 9. Refit the Electrode Stack with the electrical pin holes and electrode wire racing down.
- 10. Refit the *Metal Spring Cover*.
- 11. Ensure the *Electronic*Pins of the PID Cell are at the 12 o'clock position before inserting the PID Cell.

  The PID Cell should insert into the connectors easily, if significant resistance is felt, remove the cell and check alignment before reinserting.

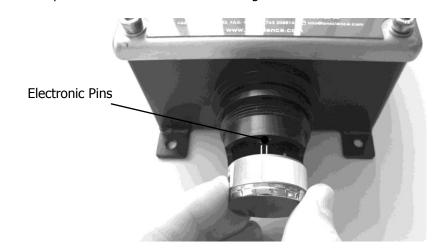

#### **WARNING:**

Irreparable damage will be caused by forcing the PID into the Sensor Holder if not correctly aligned.

NOTE: Always calibrate TVOC after servicing is carried out.

#### **Fuse rupture and replacement**

TVOC has a 125 mA BASEEFA certified fuse to provide intrinsically safe protection when the unit is installed in hazardous areas.

This fuse may ruptures for example due to over voltage or a current surge, if this is the case replacement is different depending upon the application being Intrinsically Safe or not.

For Intrinsically Safe (IS) applications the unit must be inspected and have the fuse replaced by Ion Science Ltd or an Ion Science Approved Service Centre. The intrinsically safe rating is not maintained if the fuse is simply replaced.

For Non Intrinsically Safe (Non IS) applications the fuse may be replaced by an equivalent rated fuse and operation tested by qualified engineering personnel.

# **Lamp Warranty Statement**

Please note: The standard warranty period for a 10.6 PID lamp is one year, providing that the default duty cycle for lamp pulsing is used (55 seconds lamp off, 5 seconds lamp on.)

# 9 Instrument Warranty and Service

#### Warranty

Standard Warranty can be extended to up to 2 years on the TVOC when registering your instrument via our website: www.ionscience.com/instrument-registration

To receive your Extended Warranty, you need to register within one month of purchase (Terms and Conditions apply). You will then receive a confirmation email that your Extended Warranty Period has been activated and processed.

Full details, along with a copy of our Warranty Statement can be found by visiting: <a href="https://www.ionscience.com/instrument-registration">www.ionscience.com/instrument-registration</a>

#### **Service**

Ion Science is pleased to offer a number of service options on our TVOC product range that allow you to choose the instrument cover that best suits your needs.


At Ion Science we recommend that all of our gas detection instruments be returned for service and factory calibration once every 12 months.

Contact Ion Science or your local distributor for service options in your area.


Find your local distributor by visiting: www.ionscience.com

# 10 Diagnostics

#### Below are two conditions your TVOC can be in when it is working correctly:

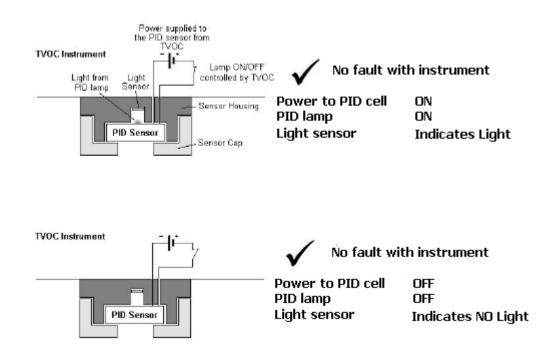

The two conditions shown below are of the instrument in an error state with potential checks/cures for these faults:

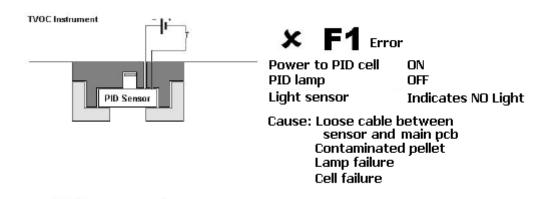

If an F1 error occurs when the instrument is first switched on there may not be an issue. The instrument needs to be left on for a few cycles to see if the lamp strikes on its own. If `F1' is still on screen after 5 minutes then look at the information below


The first thing to check is to make sure the red cable between the sensor PCB and the main PCB is securely plugged in. If the red cable is gripped inside the case it can be pushed into the sensor housing using the rigidity of the cable to make sure the connector is fully plugged in. Then the connector on the main PCB should also be checked. The build standard has been improved to pot the senor cable into the sensor housing (so that it cannot come loose) and provide improved strain relief at the Main PCB connection. Where this has been done a an F3 diagnostic has been added to the software (see F3 section below) that indicates if the sensor cable has become disconnected at any point. All instruments built with serial numbers newer than 10-01790 will have this improvement.

# 10 Diagnostics


The notes below will require some TVOC spares:

Next thing to try is to replace the pellet with another one if available and switch the instrument on to check (remembering that the instrument should be left on for a few minutes if F1 appears straight away). If the instrument still shows this error then the lamp should be replaced if available and then the PID cell should be replaced after if it is still not cured.

If you do not have any spare pellets, lamps or PID cells then you will need to contact Ion Science for some assistance if the problem remains after the instrument has completed a few minutes of run cycles and the cable has been checked. Or alternatively if the problem remains after you have tried replacement parts.

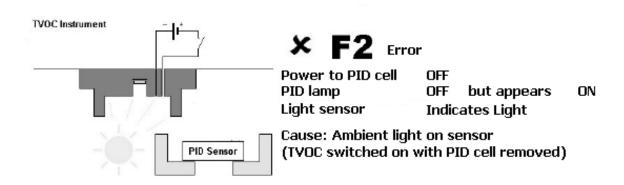

The F2 error occurs when the lamp appears to be illuminated yet power is removed from the PID cell, TVOC checks the PID lamp status using a light sensor. Running TVOC with the sensor or the sensor cap removed will result in an F2 error. Light reflecting on to the PID sensor from shiny surfaces can also cause the F2 error to occur.

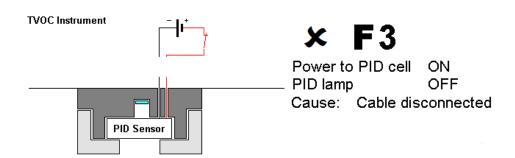

The F3 error occurs in current build standard instruments when the cable is disconnected. Instruments with serial numbers earlier than 10-01790 will not indicate an F3 error if the cable is disconnected an F1 error will be displayed instead and the diagnostics associated with F1 errors above should be performed.

If an F3 error occurs then check the cable is properly connected to the main PCB. If not push it fully home.

# F4 errors

The F4 error occurs when a jumper selections without a functional meaning has been implements. Review the jumper selection in conjunction with section 4 TVOC set up.

# 11 Spare parts

Part	Description	Part number
Calibration tool kit	Calibration magnet, Calibration adaptor, Calibration connector, Zero gas aspirator, Carbon filter, 2 x Allen keys.	A-849214
Flow adaptor	Replaces the standard Sensor Cap (Allows an external pump to be fitted)	849218
Fixed bump adaptor	Replaces the standard Sensor Cap (Allows an external pip connection)	849217
PID Lamp cleaning kit	Alumina powder and cotton buds	A-31063
Span Gas kit (100ppm)	100ppm Isobutylene (103Liters) and Flow Regulator in a carry case	A-845213
Span Gas kit (10ppm)	10ppm Isobutylene (103Liters) and flow Regulator in a carry case	849230
PID Cell	Replacement PID Sensor	1/EO-2
Carbon filter	User for ZERO span	A-31057
Calibration magnet	User to step through calibration	A-849219
Electrode stack		1/EA-02
PID lamp		A-833227

# 12 Technical Specifications

PID Sensor With fence electrode technology

**Lamp type** 10.6eV (Krypton)

**TVOC Ingress protection** IP65 **Sensor Ingress protection** IP54

**Range** 0 - 10 ppm  $(0 - 22.8 \text{ mg/m}^3)$ 

0 - 100 ppm (0 - 228 mg/m<sup>3</sup>) 0.- 1,000 ppm (0 - 2280 mg/m<sup>3</sup>)

**Non IS applications** Input power  $5 - 28 \text{ Vdc. } 65 \text{ mA } (0.5 \text{mm}^2 \text{ to } 2.5 \text{mm}^2 \text{ C.S.A.})$ 

4 - 20 mA power  $8 - 35 \text{ Vdc. } 22 \text{ mA } (0.5 \text{mm}^2 \text{ to } 2.5 \text{mm}^2 \text{ C.S.A.})$ 

**ATEX (safe) approval** II 2 G EEx ia IIC T4 (-40  $^{\circ}$ C  $\leq$  Ta  $\leq$  50 $^{\circ}$ C) (IS for zone 1 & 2)

**Certificate number IS applications**Baseefa05ATEX0277
Entry parameters

For information only please see ATEX certificate before installation

**Zener Barriers:** Ion Science Ltd suggest using the following Zener Barriers for ATEX / IS approved applications. Ask your installation engineers for installation and application advice.

Manufacturer Manufacturers part number

Pepperl+Fuchs Z715 MTL 7715P+

Stahl 9901/01-158-270-101 Pepperl+Fuchs KFD2-SD-Ex1.17

ATEX (Non sparking) approval II 3 G EEx nA IIC T4 (-40  $^{\circ}$ C  $\leq$  Ta  $\leq$  50  $^{\circ}$ C) (nA for zone 2 only)

**Dimensions** Weight

Height 181mm (7.11") Instrument 1.3kg (2.9 lb) Width 124mm (4.882") Packed 1.47kg (3.2lb)

Depth 72.6mm (2.859")

**Display** 7 Segment, 4 Digit LCD. 4 Colour LED's

**Response** Sensor T90 < 5sec

TVOC updates the output once every 2 minutes, 5minutes or 10 minutes

**Accuracy** 0 - 100 ppm or 0 - 10 ppm +/- 2%

100 - 1,000 ppm +/- 5%

**Linearity** 0 - 100 ppm >98% **Calibration** Magnetically accessed

ZERO = Carbon canister

SPAN = 100 ppm Isobutylene +/- 10%

**Temperature** Operation: -20°C to +50°C (-4°F to 122°F)

**Humidity** 0 - 95% RH (non condensing)

**EMC:** Screened cables are required to achive the light industrial immunity levels.

# **Update Log**

Manual Version	Amendment	Date updated	Instrument Firmware	PC Software
TVOC V2.1	Diagram 5.2.1 updated on page 11	31/3/08	V3.09	N/A
TVOC V2.2	Diagram updated on page 15	21/4/08	V3.09	N/A
TVOC 2.3	Declaration on conformity change only	27/11/08	V3.09	N/A
TVOC 2.4	Log added to back of manual	09/01/09	V3.09	N/A
TVOC 2.5	Diagnostics added and P&F barrier changed	20/02/09	V3.09	NA
TVOC 2.6	TVOC firmware modified to allow customers to calibrate using an alternative concentration. Aldo improved the description of the F2 fault condition. (P6, P17, P24)	22/07/09	V3.10	N/A
TVOC 2.7	TVOC ATEX certification to allow zone 2 installation without safety barriers. (P12, P13, P26)	1.09.09	V3.10	N/A
TVOC 2.9	Inclusion of Cable gland in kit, so addition of details regarding cable gland selection and use  Change to EMC details as result of testing	23.3.10	V3.10	AR10008 AR90024
TVOC 3.0	Warranty Cover updated Declaration of Conformity updated Contents page updated Instrument Warranty and Service updated	22/07/10	V3.10	AR10008 AR90024
TVOC 3.1	Addition of fault output level on page 9, Calibration fault LED indication changed on Page 20, 22,23	07/08/10	V3.25	AR10053
TVOC 3.1	Addition of F3 and F4 fault to diagnostics section pages 27, 28, & 29. Additional notes in TVOC setup, selector pin section page 11	08/09/10	V3.25	AR09033
TVOC 3.1	Addition wire C.S.A areas accepted on pages 14 & 30 Mounting diagram 5.2.1 on page changed to general assembly drawing	06/10/10	V3.25	AR10017