

Table of Contents

*Introduction.....	page 1
*Device description.....	page 2
*Front view.....	page 2
*Navigation button view.....	page 3
*Bottom view.....	page 3
*Power management.....	page 4
*General Operation.....	page 4
*Main Menu.....	page 5
*Browser History.....	page 6
*eBook.....	page 6
*Music.....	page 8
*Video.....	page 11
*Photo.....	page 12
*Voice Recording.....	page 13
*Setting.....	page 15
*Document Management.....	page 17
*Connect eBook to the computer.....	page 17
*Manage files.....	page 17
*Inserting Micro SD card.....	page 17
*Taking care of your E Reader.....	page 17
*Maintenance and Attention.....	page 18
*Firmware upgrade.....	page 18
*Technical specification.....	page 19
*Troubleshooting.....	page 19

Thank you for purchase iview-700EB-T 7” Color E-Reader. We suggested you to read through this user manual to have better understanding before using this device. All pictures and graphics display below are simulated and are not intended to specify included application or content. Technical information and specification are subject to change without notice.

Notes:

1. If the player can not power on for the first time, please charge it via USB cable till the battery indicator is full.
2. Please handle this reader with care to prevent screen damage.
3. Please do not remove the built in battery when device is in charging mode.
4. Built in battery is replaceable however this need to be done by manufacturer. Please contact manufacturer by phone or email.
5. Please contact manufacturer if you encounter problem with the device. Do not intend to disassemble the device by yourself.

Special Features:

This E Reader has multifunction and is compatible with below format:

- *E Book: TXT, EPUB, PDF, FB2, HTML
- *Audio: MP3, WMA, WAV, ACC, ECT
- *Photo: JPEG
- *Video: AVI, RMVB, MPEG2
- *Voice Recording: ACC

Accessories:

 
We includes below accessories together with this device. Please contact manufacturer is you are missing some part:

- *Leather Carrying Bag
- *USB Cable
- *AC Power Adaptor


Device Description

FRONT VIEW


- [1] **Home/ESC button:** When you are prompted to select or enter, press this button to cancel the operation; sub-interface, or to exit the current interface and return to the previous.
- [2] **Prev/Next Page:** press this button to open the Previous/Next page.
- [3] **Navigation /Menu:** Navigation button is a 4 way control button (left, right, up, down; Menu button is menu and confirm).
- [4] **Zoom in/out :** zoom in / out of the JPEG file. Also increase or decrease the font size of the E book content.
- [5] **Rotate:** Use this function to rotate your E Book either in horizontal or vertical view.
- [6] **3.5 mm Earphone Jack:** Connect your earphone for your private enjoyment (earphone not included).
- [7] **USB Port:** use USB cable to charge the device and to connect to computer to transfer your contents.
- [8] **Micro SD card reader:** Compatible with Micro SD/SDHC up to 16GB memory
- [9] **Play/Pause:** Press this button to Start / Pause play the music or recording by MIC.
- [10] **Power button:** Press the button 3-5 Seconds to power on/off the device.
- [11] **Volume +:** press the UP button to increase the volume when playing music.
- [12] **Volume -:** press the DOWN button to reduce the volume when playing music.
- [13] **Reset On/Off switch:** This is located on the back of the device next to card reader. This is to reset the device back to factory original default. You might use this key when you encounter some minor problem with the device.
- [14] **Speaker:** 0.5W audio output
- [15] **TFT LCD Display Screen:** 7" in diagonal

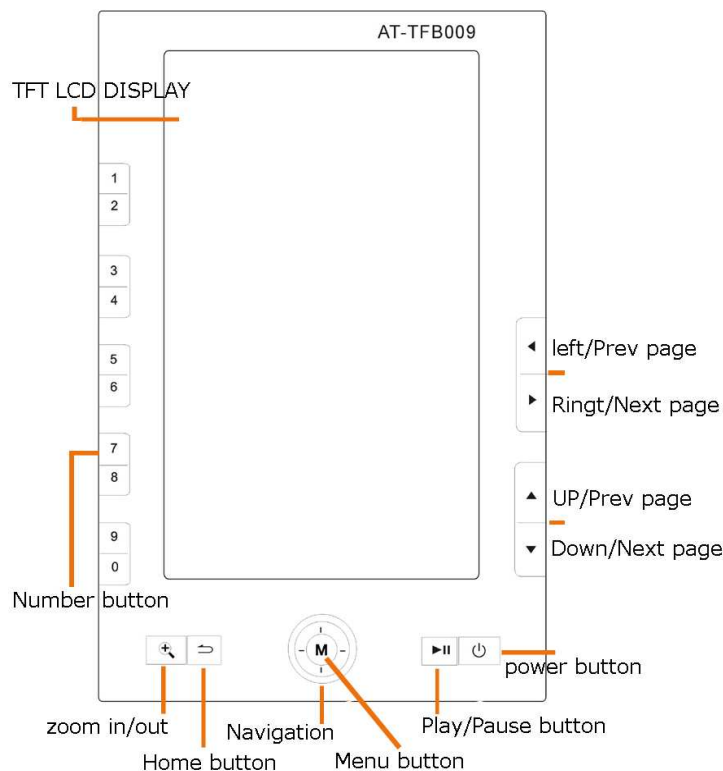

NAVIGATION BUTTON VIEW

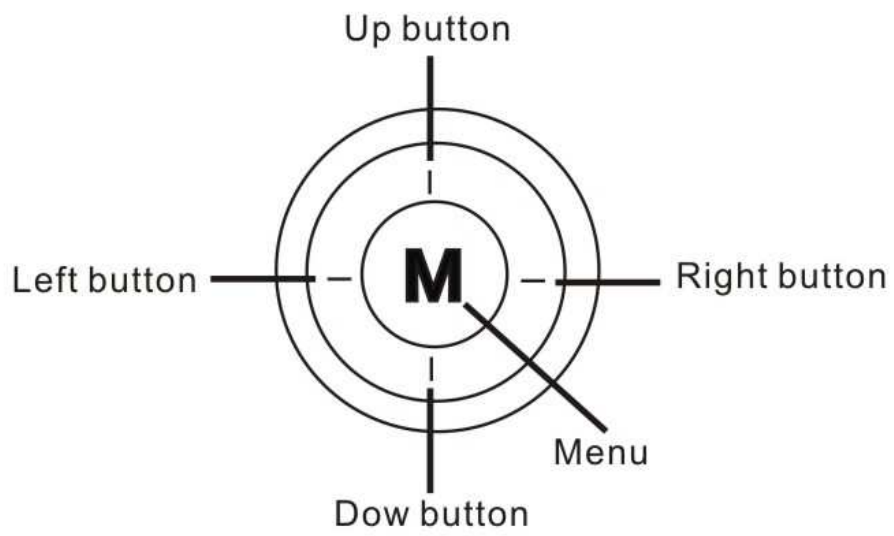 

BOTTOM VIEW

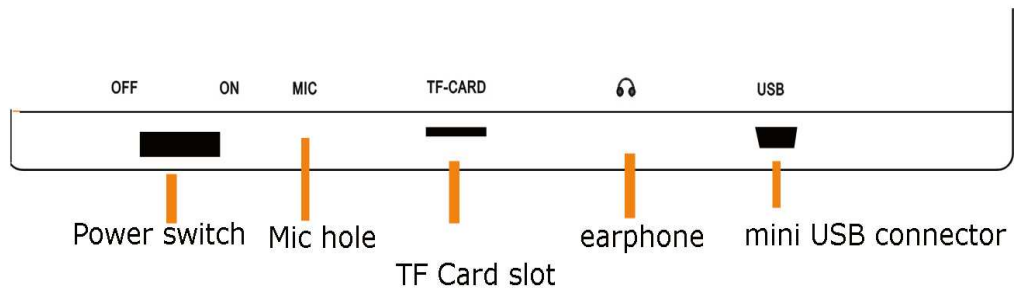 

Power Management

Charging the battery

The e-book's battery has been partially charged at the factory. The battery indicator is located on the upper right hand side of the Main menu when you turn on the device. The battery indicator is a graphic that shows the power left in the battery. If you find the battery indicator has less than 2 bars, please charge the device via USB cable to AC adaptor or to computer.

Please unplug the USB cable once the device is fully charged.

Charging via USB data cable to the computer.

1. Connect to your computer via USB data cable. Go to "Safely Remove Hardware" icon located at the bottom of windows task bar then left click it , it will safely remove your USB massive storage device.
2. Now the device goes to USB charging mode, and you will see a charging battery icon displays on your e-book reader's screen.

Please note if you charge the device via computer, normally it will take longer time compare to via AC adaptor. Again please do not remove the battery when the charging is in process.

Replacing the Battery:

This device includes a Lithium polymer rechargeable battery (3.7V 2000mAh). Shall you in need of replacing the battery, please contact manufacturer and DO NOT intend to do so by yourself. This process only can be done by manufacturer's technician.

General Operation

Power ON/OFF the device:

 
1. Slide the Power On/Off switch to on, press and hold the Power button for 5 seconds and release the button to turn on.
2. To turn OFF the device; press and hold the Power button for 5 seconds to turn off this device. We recommend to slide the Power On/Off switch to OFF if you do not plan to use this device for certain time

Button operation:

1. The Navigation button: Use the "< > keys" to select the left/right/up/down direction.
2. Confirm / Enter: Selected items press the "M" key to enter the currently selected function or refurbish screen.
3. ESC: press the "Home/ESC" button to return to the previous screen.


Main Menu

This interface shows all features of this device as follows: "Browser History", "eBook", "Music", "Video", "Photo", "Record", "Explorer", "settings" Select the desire function, then enter.

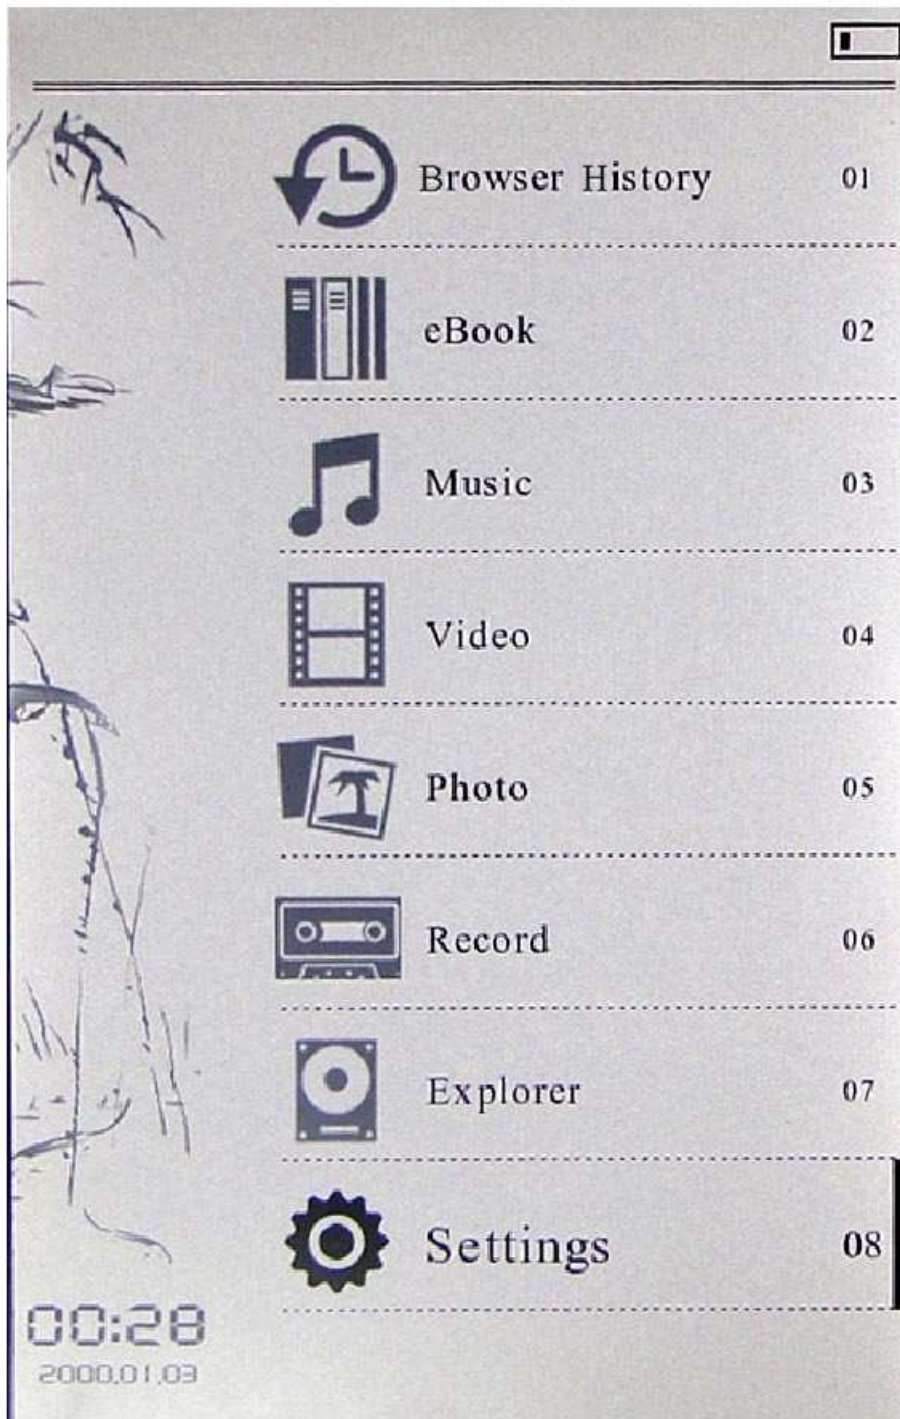

Browser History

 Display the file recently browsed, move the Navigation keys to select a book press "M" button to enter, it will go to the last page you read on the selected book.

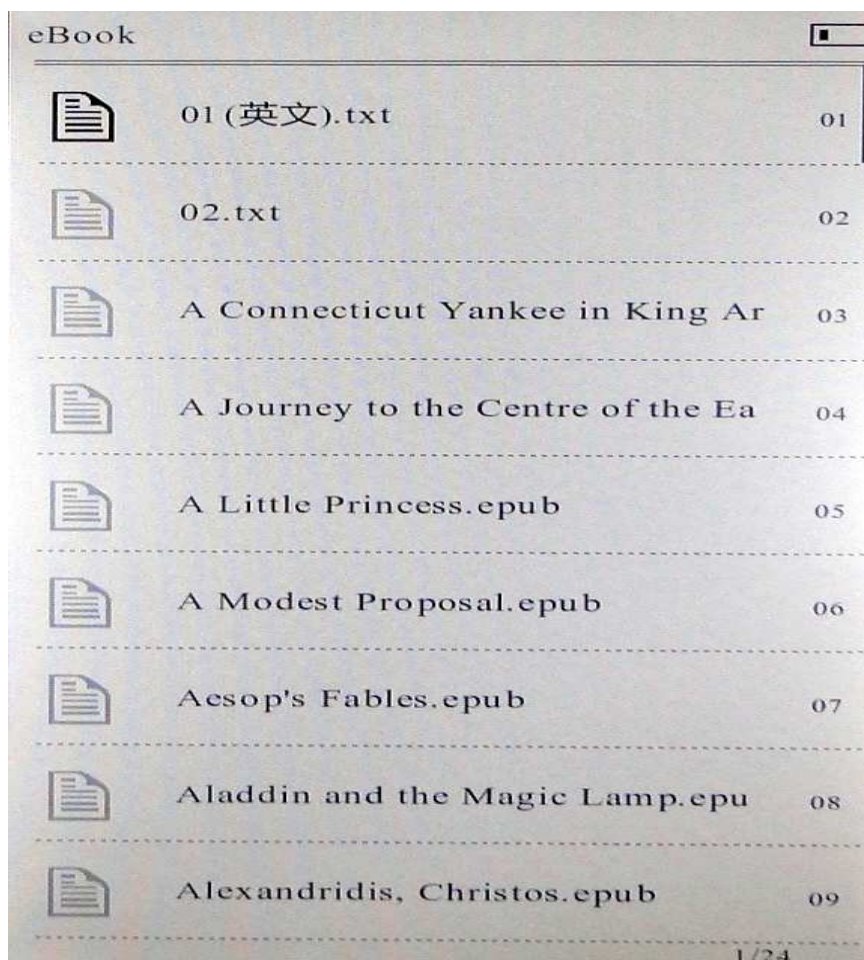

File Name	Page Number
01 (英文).txt	01
02.txt	02
A Connecticut Yankee in King Ar	03
A Journey to the Centre of the Ea	04
A Little Princess.epub	05
A Modest Proposal.epub	06
Aesop's Fables.epub	07
Aladdin and the Magic Lamp.epu	08
Alexandridis, Christos.epub	09

1/24

Note: If the files are in the Micro SD card, read recently are deleted, the records will continue to be retained in the "Browser history" list however you can not open them.

eBook

 
 
Compatible Format: EPUB, FB2, HTML, PDF AND TXT

Selecting the Book: Select the desire book then click "M" button to start reading its content.

Previous/Next Page: You can use these buttons to "turn" the page. You can also use up and down in Navigation control to do the same task.

Page Jump, Save Mark, Load Mark, Del Mark, Browser Mode

When in eBook mode, you can press "M" button to enter "Page Jump", "Save Mark", "Load Mark", "Del Mark", "Browser Mode", "Flip Time", "Brightness", "Set color".

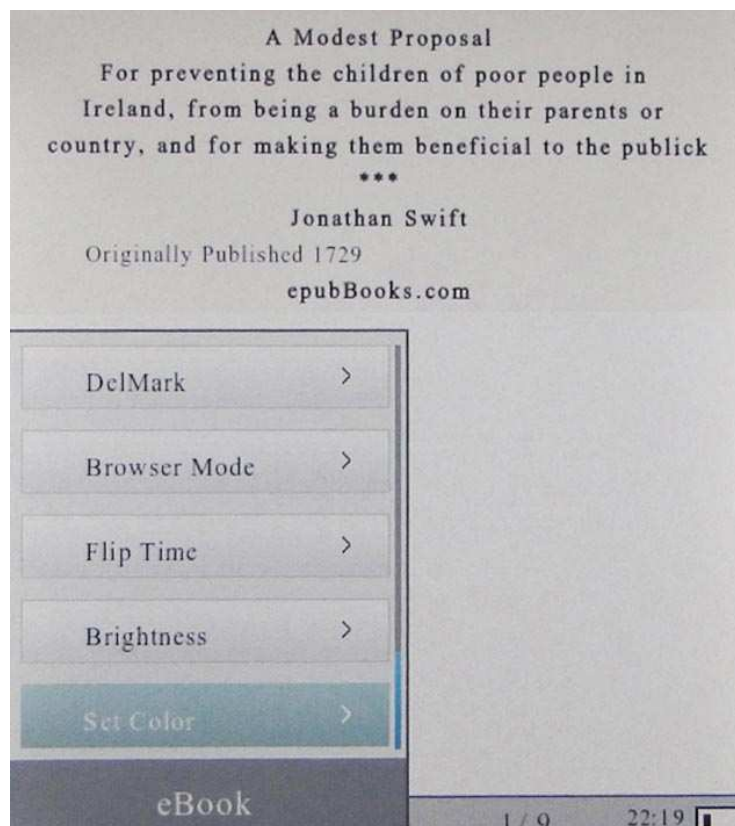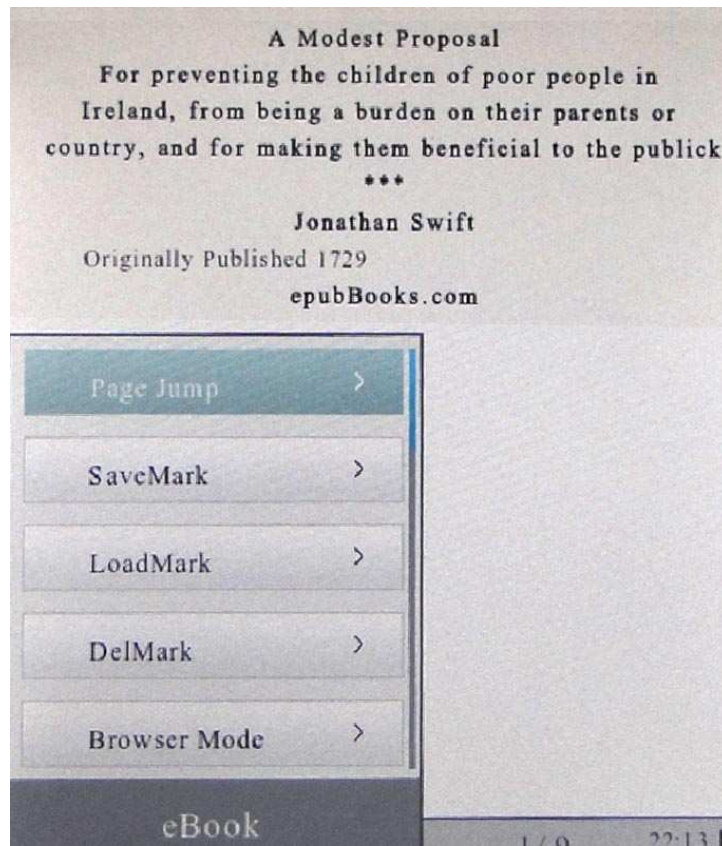

Page Jump: Press the “M” key then select “page Jump”. Press the “M” button again then key in the desire page number and press “M” to go to that specific page.

Bookmarks: This feature allow you to go to certain page of certain book by just selecting it from the bookmark list.

Save a bookmark: When in eBook mode, press the "M" button then select “ save mark" and press “M” again to add the current page as a bookmark.

Load a Bookmark: When eBook mode, press "M" button then select "Load Mark " and press “M” again to open the saved bookmark list. Select the desire bookmark and press “M” key.

Delete a bookmark: When eBook mode, press the "M" button then select "Del mark"; a list of saved bookmark will pop out. Please select the one you wish to delete then press “M” key to confirm.

Bookmark capacity: This device allow up to 8 saved bookmark. When it reach its limit, the newly saved bookmark will overwrite the oldest bookmark.

Zoom: Press this key to change the font size. There are 3 different font size: Small, Medium and Large.

Rotate: When in eBook mode, you can rotate the screen either horizontally or vertically for your convenience by pressing this rotate button.

Browser Mode: There are two browser: "Auto Mode" and “Manual Mode”.

Flip Time: There are five flip time to select: 10Sec, 15Sec, 20Sec, 25Sec, 30Sec.

Brightness: There are five level brightness to select, you can select the desire comfortable brightness.

 
Set Color: There are five colors to select, you can select the comfortable color word to read.

Music Mode

Open the audio files list in the main menu, select the desire audio file then press "M" to play mode. You can add in audio file by connecting to your computer via USB cable and

just drag your desire audio files and paste into this device. This device supports MP3、

WMA, WAC, ACC and ECT format. This device allow you to listen to your audio file while reading the E book or browsing the photo or menu.

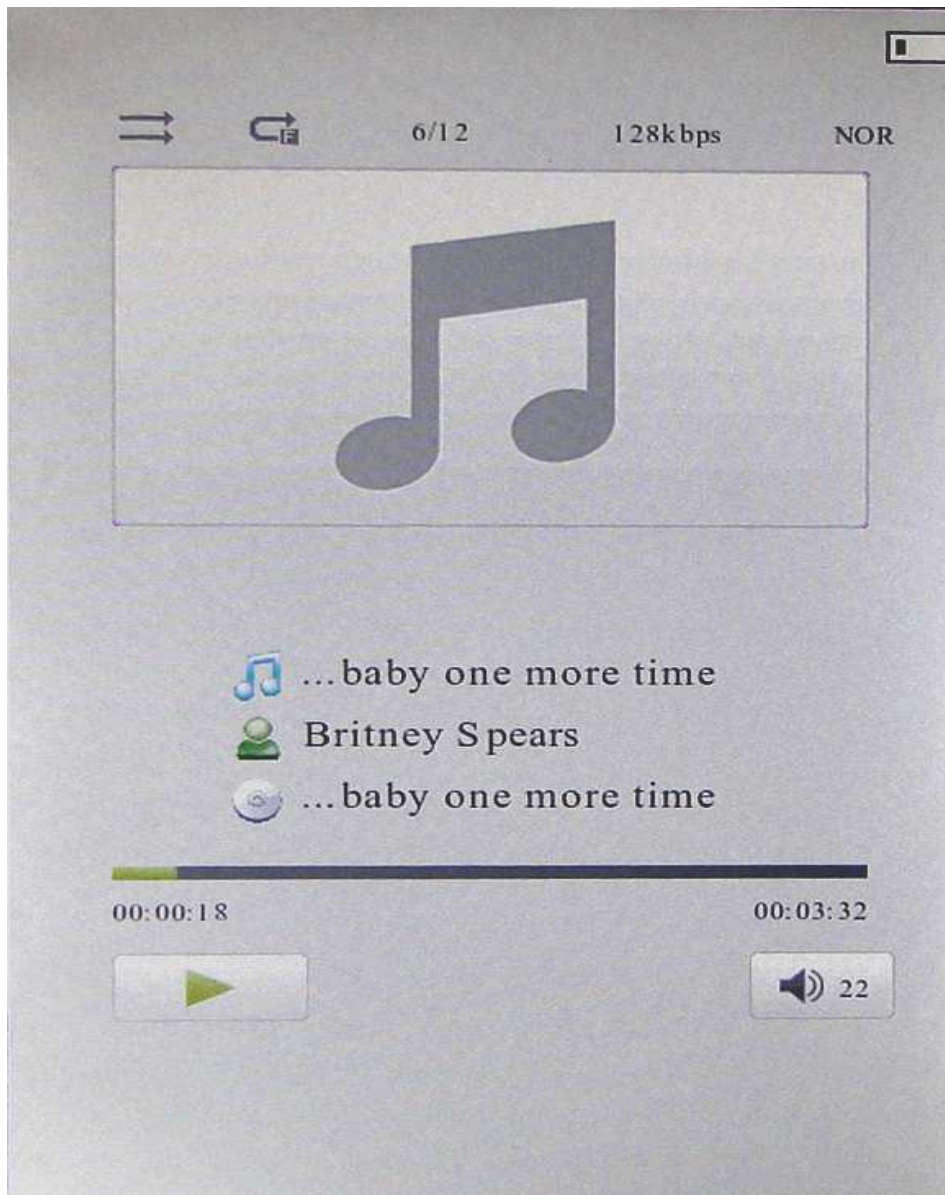


Adjusting the volume: Press the "Up/Down" key at the Navigation or Up/Prev page, Down/Next page key to adjust the volume.

Play/Pause: Press the "Play / Pause" key to pause or continue play.

Forward / Backward/Previous/Next: Press and hold "left direction" key to backward the music and "right direction" key to forward the music. Press and release "left direction" key to go to previous audio file and "right direction" key to go to next audio file.

 Music play mode: There are five audio playing mode: "Repeat Mode", "Play Mode", "MS EQ", "EQ Sel" and "User EQ setup". When in Music mode, press "M" then select desire mode that you wish to made adjustment.

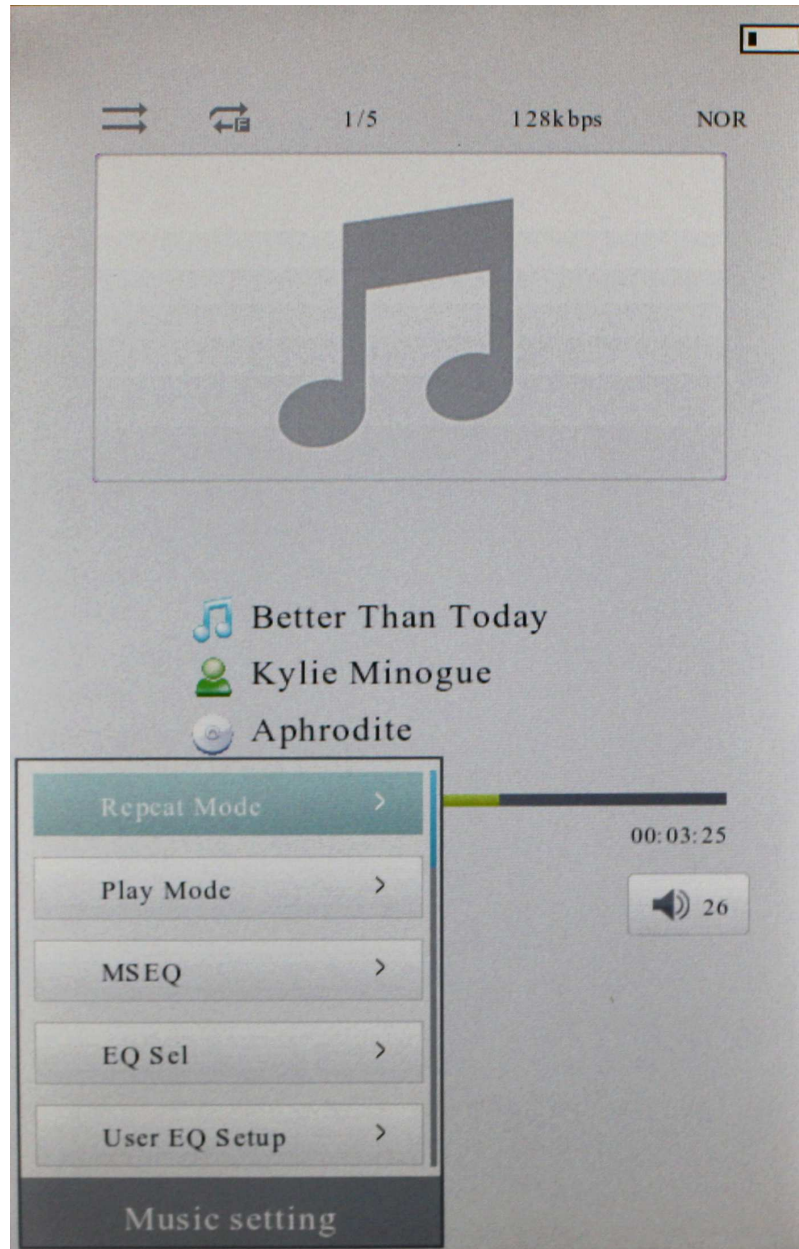

Video

Go to “Video” and press “M” key to enter the Video mode. This device AVI, RMVB and MPEG2 video format.



Subtitle language: When in video playing mode. If subtitles are available from your video file, press the "M" button then press Subtitle Language to make change.

Select Time play: Press the "M" button then select “time play”, you can change the time to play.

Full screen: Press the "M" button then select “Full Screen” to change the screen display. There are three mode: “Full screen”, “Normal” and “Original”.

Brightness: There are five level of brightness, you can select the comfortable brightness.

Photo

Go to Photo and press "M" button to enter Photo mode. This device support JPEG and BMP image format.

Photo previous and Next: Press the "left / right" navigation keys to go to Previous or Next photo.

Photo Rotation: Press the "Play/Pause" key to rotate the photo in counter wise sequence.

Zoom in / out: Press these key to zoom in or out of photo.

Note: some large size files require more time to rotate than the small size files. And it also require more time to load the photos into the photo viewer.



Voice Recording

 
Select the "Record" in the main menu, click "M" button to enter the voice record mode.



How to start the Recording:

Press the "Play/Pause" button to start the recording, press it again to pause the recording, press the "HOME" to stop the recording.

After you done with the recording you will be prompted to ask if want to save into the device. Please select "YES" or "NOT" by pressing the "M" key.

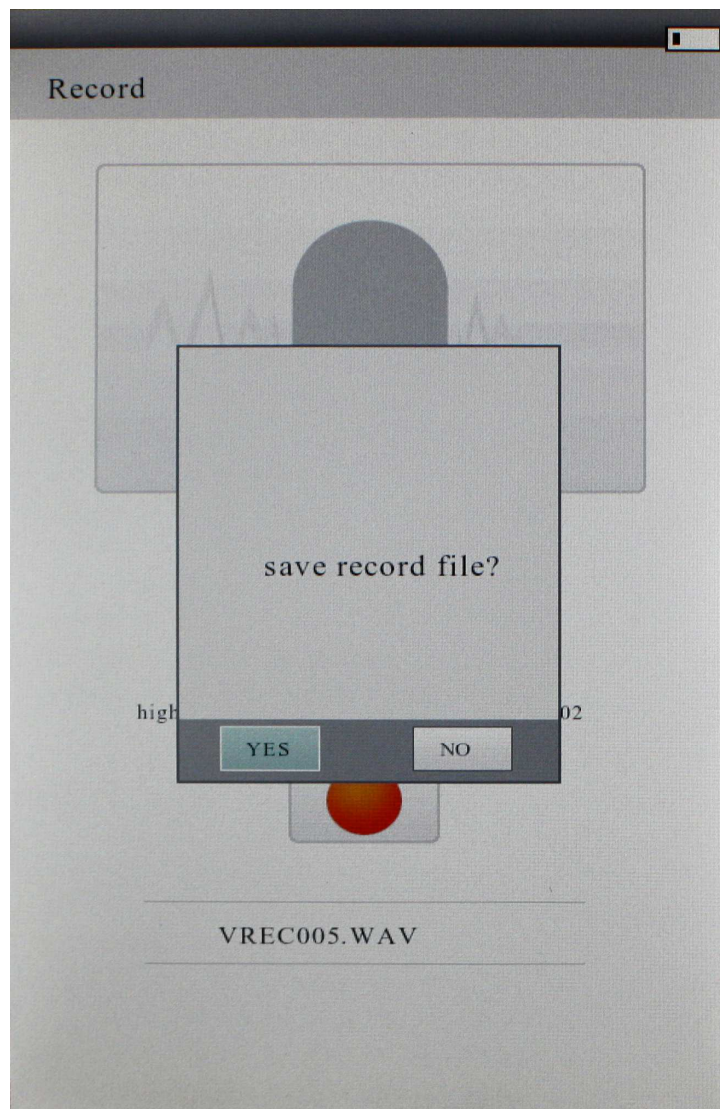


Record Playback Function:

1. Go to main menu and select "Music", press "M" to go to "Musci Menu".
2. Select "Record" and press the "M" button to go to "Recorded" file list.
3. Select the desire recorded file then press "M" to start playback.

Settings

 Select "Settings" from main menu then click "M" button to enter the system settings mode. It includes following sub-menu: "Display Settings", "System Settings", "language", "System Information", "Auto-shut time", "Time ", "Calendar".

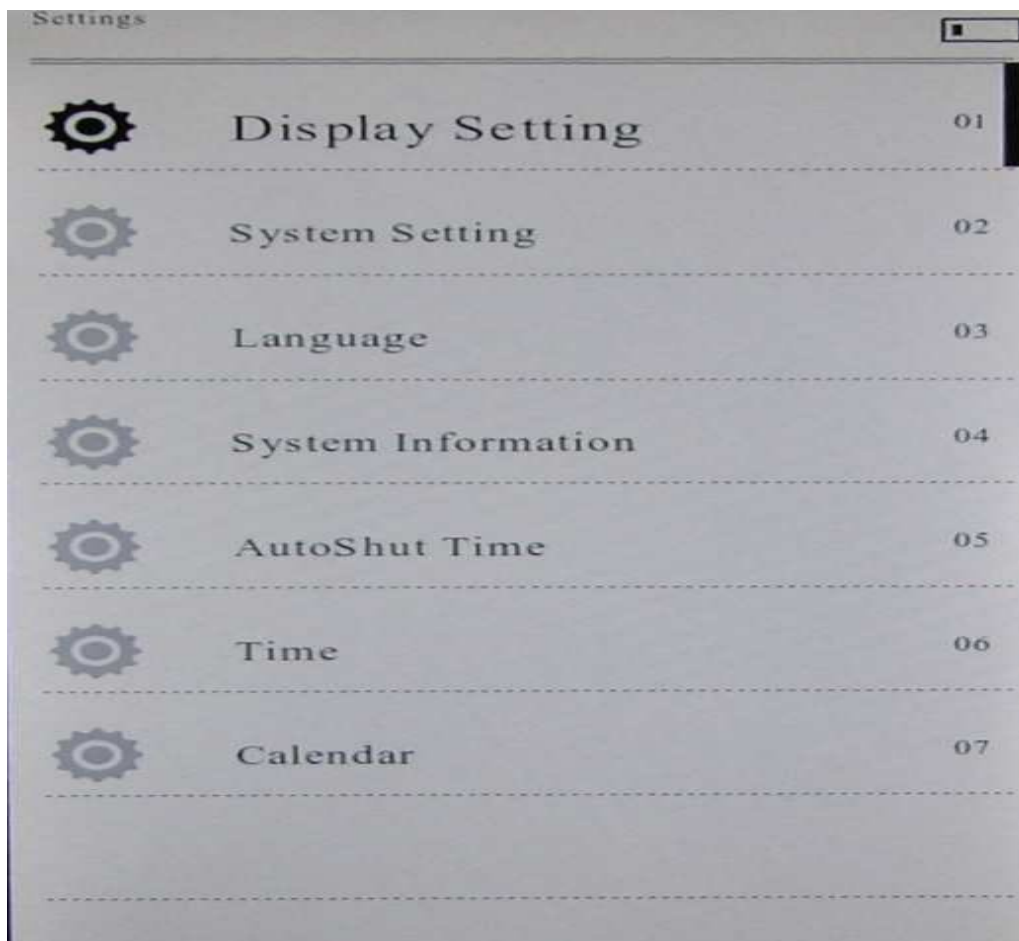

Display setting: Select the "Display Settings", click "M" button to open the Display settings Menu.

1. To select the "**Light time**", it will be display "5 Seconds", "10 Seconds", "15 Seconds", "20 Seconds", "30 Seconds" and "Always On". Please select the desire time and press "M" to confirm.

2. There are 5 levels of "**Brightness**". Please select desire Brightness level then press "M" key to confirm.

System setting: Select the "System Settings", click "M" button to go into the system settings menu.

1. Select "**Restorable**" to restore your system to factory default settings. Please make sure to back up all the data in the device before doing so.

2. To select the "Key Lock Time ", it will be display "10Secords ", " 30Secords ", " 5 Minutes ", "10 Minutes ", " No Locking "; To select the time or " No Locking " and click " M " button to change the key locking time.

Language Settings: This device provides several On Screen languages: English, Chinese, Deutsch, Portugues, French, Spanish, and other languages. Please on system setting menu select "language" then select desire language and press "M" key to confirm.

System Information: It displays version information of the device, product brands, company names, Software version, Memory Size and other information.

Automatic shutdown time: There are five automatic shutdown time: 3 minutes, 5 minutes, 10 minutes, 15 minutes and 20 minutes. Please select desire time and press "M" key to confirm.

Time Settings: Display the current system's time information. You can change the "HH" hour and "MM" minutes by "Up/Down/Left/Right" direction key, select "YES" to confirm the change.

Date Settings: Display the current system's date information. You can change the "YY" year, "MM" month and "D" days by "Up/Down/Left/Right" direction key, select "YES" to confirm the change.

Calendar: Select the "Calendar" then click "M" button to enter.

Document Management

Connect e-book to the computer

Please connect this device to your computer via USB data cable. This reader will auto turn on and the screen will show "USB Connection", and your computer will identify this reader as a Removable Disk after the connection is completed. Your computer will show 2 Removable disk for this device: One is for Built in internal memory of this device and the other is for Micro SD card(not included) if you have insert one.

Manage files

After the device is properly connected to your computer, you can select the removable disk in the "My Computer" and start transfer, copy or delete file in between this device and your computer.

Inserting a Micro SD card(Not included)

You can expand the memory of this device(up to 16GB) by inserting a micro SD or SDHC card(its also call TF card). First power off the device then insert a micro SD card and turn the device back on.

Note about the use of Micro SD card:

If your device is encounter a problem identifying your inserted Micro SD card, please turn off the device, pull the memory card out and reinsert it again. VERY IMPORTANT: Please make sure to turn the power off when pulling the memory care and/or inserting the memory card. Also DO NOT reset the unit when your memory card is inserted into the device.

Taking Care of your E Reader : This E reader is designed to be light, compact and durable. However since it's an electronic device and must be treated and maintain carefully:

Putting unnecessary pressure on it or striking the device against other objects can cause damage. In order to avoid damage to your E Reader, please:

- Keep the device covered when you are not using it. This will protect the screen from being scratched or damaged in any way.
- Do not drop, crush, bend, or apply excessive force onto the device.
- Do not expose this device to moisture, extreme temperature or any harmful conditions.
- Clean the device by wiping with a soft, dry cloth. Do not use harsh chemicals.

Maintenance and Attention

Please DO NOT intend to repair or disassemble this reader but to contact manufacturer shall your device encounter the below

1. The device subjects to spill or foreign liquid objects falling into the device.
2. The device got wet by rain or water.
3. The device got damaged by falling.
4. There are obvious overheating.
5. The implementation of the correct operation, but the product still can not work properly.

Firmware Upgrade

We will upload any firmware onto our website: www.iviewus.com shall it need any firmware upgrade in the future. You can also download the user manual and/or any other instruction related to this E Reader.

The proper environment when using this reader

The appropriate temperature for this device is between 32 to 120 F (0-50 degrees Celsius). Beyond this temperature range, the screen display will deteriorate, so the user should avoid using outdoors in the winter.

Please do not place this device in the environments of moisture, dust, or high temperature.

Avoid causing extrusion of the device

Please do not shake severely, squeeze or impact this device, and avoid imposing too much pressure on the screens and device.

We recommended that you put the device in the leather case we provided in the package for better protection.

Avoid plugging objects into the Device

Do not place any object in the gaps or other opening space they are used to provide ventilation and heat dissipation. These openings can not be blocked or hidden.

TECHNICAL SPECIFICATIONS

Size: 9.13 x 6 x 0.6 inches (201 x 132 x 12.8 mm)

Weight: 0.40 lb (170g) (battery included)

Screen Size: 7" TFT Color LCD,

Resolution: 800 x 480 pixels

Storage Memory: 32MB RAM, 2GB Flash

Processor: ARM 400MHz

Communication Ports: USB Client (v2.0) - Mini USB connector,
Micro SD card slot

Audio outputs: 3.5mm stereo earphone jack, built in speaker.

Battery: Rechargeable built-in Li-Polymer battery (2000 mAh)

Peripherals: USB synchronization cable

Operating System: Android

Software Suite: Multi-format eBook reader

Supported image formats: JPG, GIF, PNG

Supported sound format: WAV, WMA, MP3....

Supported Video formats: AVI, RMVB, MOV.MP4...

Supported TXT format: TXT, EPUB, FB2, PDF, HTML

Power Source: 5V--2A

Power Consumption: <5W

Troubleshooting

1. Can not Power on the e-book reader

- a. Please charge the device till the power indicator bar is full.
- b. Defective device; please contact manufacturer for instruction.

2. Not able to charge the device

- a. Defective AC adaptor; please contact manufacturer for replacement.
- b. Defective USB Cable; please contact manufacturer for replacement.

2. No sound or noise when using earphone

- a. Adjust volume setting, make sure the volume not in 0 position.
- b. Try another pair of earphone.
- c. Make sure the music file compression rate is high , low quality music files may cause noisy and distortion

3. Can not download files into the reader

- a. Possible defective USB cable.
- b. E Reader's memory is full.
- c. Windows 98 may require a new USB2.0 DRIVER to detect the e-book reader as the a removable disk (Please visit www.iviewus.com to download the driver).

4. Can not play the Music files

- a. This reader has the powerful Audio processor and is able to play most of popular audio formats. However there might be some latest music formats or resolutions not working properly in this device. Please contact manufacturer tech support for assistance.