



One Year Limited Warranty

Amcor, Inc. ("Amcor") warrants the original retail purchaser ("Purchaser") purchasing in the United States that the Amcor product with which this warranty is enclosed is free from defects in materials and workmanship.

Amcor's sole obligation under this warranty is to replace, or at Amcor's discretion, to repair, free of charge, all defective parts, for a period of one (1) year from date of original purchase. ANY IMPLIED WARRANTY OF MERCHANTABILITY IS SIMILARLY LIMITED TO ONE (1) YEAR FROM DATE OF ORIGINAL PURCHASE AND NO ACTION BASED UPON ANY IMPLIED WARRANTY OF MERCHANTABILITY OR OTHERWISE MAY BE COMMENCED AFTER EXPIRATION OF ONE (1) YEAR FROM DATE OF ORIGINAL RETAIL PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

The provisions of this warranty shall not apply to any product which in Amcor's judgment has been (1) subject to misuse or neglect. (2) damaged in an accident. (3) used for a purpose for which it was not designed, or (4) repaired or altered in any way that adversely affected its performance or reliability.

To obtain warranty service, the defective product or part must be shipped or delivered to: Amcor's authorized service center. All postage, insurance and shipping charges are the responsibility of the Purchaser and are not included in this warranty.

AMCOR NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT ANY OTHER (LIABILITY IN CONNECTION WITH ITS PRODUCTS, THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. NO RESPONSIBILITY IS ASSUMED FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES THAT MAY RESULT FROM THE USE OF AN AMCOR PRODUCT, NOR FOR THE DAMAGES DUE TO ACCIDENT, ABUSE, LACK OF RESPONSIBLE CARE, THE AFFIXING OF ANY UNAUTHORIZED ATTACHMENT, LOSS OF PARTS, OR USE AT A VOLTAGE OTHER THAN SPECIFIED. Some states do not allow the exclusion of limitation of incidental or consequential damages, so these limitations may not apply to you.

Amcor disclaims all liabilities for defects or damages caused by use of replacement parts obtained from or by service at any service center other than Amcor's authorized service center.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Product: **AMCOR Mini Dehumidifier**

Model: MD 250

Date Purchased: _____

Production Code: _____

QUESTIONS? Call 866-361-2233 · www.amcorgroupusa.com

Dear Customer: Please keep this warranty for your record. **DO NOT** return it.



Owner's Manual

Mini Dehumidifier

Model MD 250



It is important that you read these instructions before using your new purchase and we strongly recommend that you keep them in a safe place for future reference.

Table of Contents

THANK YOU.....	1
<i>Energy Saving Tips</i>	1
SPECIFICATIONS.....	2
SAFETY	3
BEFORE USE.....	4
FEATURES AND BENEFITS	5
OPERATION	6-7
MAINTENANCE	8
TROUBLESHOOTING	9
WARRANTY	10

Troubleshooting

Problem	Cause	Solution
Never try to repair or dismantle the air conditioner yourself. Tampering with the unit may result in the loss of warranty and can endanger the user and property.		
The Unit Does Nothing	No power supply.	Make sure outlet works and the transformer is pushed completely into the outlet.
	Breaker was tripped.	Reset Breaker.
	Bucket is full.	Unit shuts off when bucket is full. Empty the bucket.
	Ambient temperature is above 122° or below 32°F.	Unit will restart after shutting off for 3 minutes.
	Normal operation in initial stage of operation.	Frost will usually disappear within 60 minutes unless temperature is below 60°F
Poor Airflow	Airflow is restricted	Make sure there are no curtains, blinds or furniture blocking the front or back of unit.
	Dirty Air Filter	Clean the filter.

If this product is defective or not working properly,
please DO NOT return to your retail store.
Please contact Amcor for service or technical assistance.

www.amcorgroupusa.com

Maintenance

Cleaning

Turn the dehumidifier off and remove the plug from the wall outlet before cleaning. Use water and mild detergent to clean the inlet and outlet grilles. Do not use bleach or abrasives.

Filter

The air filter is on the front of the dehumidifier. It should be checked and cleaned when needed (at least every 2 to 3 weeks).

- Remove the filter from the unit
- Clean in lukewarm water
- Dry thoroughly.

Never operate the MD 250 without filter.

Thank You!

Thank you for purchasing an AMCOR Mini Dehumidifier. AMCOR is a leading brand in indoor air treatment. We would like you to enjoy the many benefits this unit offers, so please read this manual carefully and take full advantage of the many advanced features that your AMCOR Dehumidifier offers you.

AMCOR has specialized in complete indoor environment control, manufacturing world-class air conditioners, dehumidifiers and air purifiers with innovative technology. In designing these advanced products, we have listened carefully to our customers and have passed their views on to our research and development laboratories. We wish you many years of enjoyable use.

After reading this manual, please keep it in a safe place for future reference.

Energy Saving Tips

- Do not locate the dehumidifier where furniture or other objects can obstruct the airflow.
- Keep the filters clean.

Specifications

Model Number	MD 250
Voltage (VDC)	12V
Power Input (W)	40W
Water Tank Capacity	1 pint
Moisture Removal (ounces/24 hr @ 80°F 60% RH)	5.4 oz.
Weight	2.2 lbs.
Dimensions	10"H x 7"W x 6"D

Operation

1. Ensure unit is "OFF" when connecting the power cord.
2. Ensure that the filter and front vents are clean and not obstructed so air can circulate freely through the unit.
3. The "GREEN" LED is on when in operation. The unit will switch off automatically and the "RED" LED illuminate when the water tank is full.
4. To remove the water tank, first turn off the Mini Dehumidifier. Hold the top of the unit, then remove the water tank and empty. Replace the water tank back into the unit. To continue dehumidifying, press the "ON/OFF" button to "ON" position again.

If the "BUCKET FULL" light comes on when using the unit for the first time, take the bucket out and put it in again. The light will go off.

Emptying the Water Tank

- First, turn the MD 250 OFF (switch should be in the "O" position)
- Hold the top of the unit firmly and remove the water tank
- Turn the plug and empty the water tank
- Put the plug back in and place the water tank back into the unit
- To continue dehumidifying, press the button to ON ("I" position)

DANGER

Do not use this unit in a bathroom or shower.
Do not drip water onto the adaptor or dehumidifier.

Before Use

Read this manual carefully. It contains instructions to help you use, maintain and enjoy your mini dehumidifier.

ELECTRICAL SAFETY

Grounding

This dehumidifier must be grounded. Grounding reduces the risk of electric shock by providing an escape wire for the electric current. The transformer has a grounding wire with a grounding plug. Plug it into an outlet that is properly installed and grounded.

WARNING: Improper use of the grounding plug can result in a risk of electric shock. Call a qualified electrician if you don't understand the grounding instructions or if you are not sure if the dehumidifier is properly grounded. If the wall outlet is not grounded, please contact an electrician to have it replaced with a properly grounded outlet.

Do not, under any circumstances, cut or remove the third (ground) prong from the power cord.

Adapter Plug

Because most 2-prong outlets are not grounded, we strongly advise against using an adapter plug. However, a temporary connection may be made where local codes permit and if the 2-prong wall outlet is properly grounded. Make sure the larger prong of the adapter goes into the large slot to provide proper polarity.

For Proper Grounding

1. Ground the adapter to the outlet by using the outlet cover screw to secure the ground terminal to the outlet box.
2. Please confirm the outlet is grounded through the house wiring. If the grounding connector breaks. **DO NOT USE** the dehumidifier until a proper ground has again been made.

Extension Cord

If an extension cord is required to reach the nearest wall receptacle, use only a UL-listed, 3-wire, grounding type, 16 AWG, 15A, 125V appliance extension cord.

Features and Benefits

This Dehumidifier uses PELTIER technology, which offers these features:

- Almost silent operation
- No compressor
- No refrigerant
- No noise or vibration

This Dehumidifier is ideal for:

- Closets
- Wardrobes
- Small bedrooms
- Shoe cupboards
- Under sinks
- Wherever you want to remove dampness

The Water Tank features:

- One pint capacity
- Easy to remove
- Full tank warning light
- Auto cut-off


This Dehumidifier also features:

- Moisture removal rate of 5.4 ounces per 24 hours @ 80°F, 60%RH
- 12V DC Adaptor included
- Long life brushless motor
- Easy to remove washable air filter
- Compact design: Just 7"W x 6"D x 10"H and weighs 2.2 lbs

Operation

LED Indicators

Green: "On"
Red: "Tank Full"

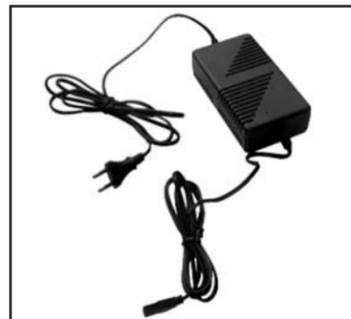

12V DC Adaptor



Water Tank



Sensor



Plug, Water Outlet



Filter Removal

Safety

Read Instructions Before Using

When using the mini dehumidifier, always follow basic precautions, including the following:

- This dehumidifier must be properly installed and grounded as described in this manual.
- Never operate this dehumidifier in an area that is likely to accumulate standing water. If this condition develops, disconnect the power supply before stepping into the water.
- Repair or replace immediately all electric service cords that have become frayed or otherwise damaged. Do not use a power cord that shows signs of damage along its length or either the plug or where it is connected to the appliance.
- Always unplug dehumidifier before servicing or moving the unit.

DANGER

Do not use this unit in a bathroom or shower.
Do not drip water onto the adaptor or dehumidifier.

CAUTION

For indoor use only.