

MONOPRICE®

PRO AUDIO SERIES



1200-Watt Fog Machine

612312

SAFETY WARNINGS AND GUIDELINES

- This device should only be operated by qualified adults.
- This device is not waterproof. Do not expose it to rain, splashing water, or any liquid other than the smoke liquid contained in the tank. Do not use in extremely dusty environments. Do not touch the device with wet hands.
- This device is intended for indoor use only.
- If this device is exposed to water or other liquids, other than in the tank, unplug the unit immediately and do not use again until the device has been thoroughly dried.
- Use only the appropriate liquid smoke with this unit. Use of flammable liquids, such as oil, gasoline, or perfume, can cause an explosion.
- Keep this device within 15° of horizontal. Do not place it on an incline greater than 15° or mount it upside down.
- Unplug this device from the power source when it is not in use.
- Orient the output of this device so that it will not spray directly at or on people.
- Do not add liquid smoke to the tank while the unit is plugged into a power source.
- Prior to operation, check the unit and power cord for physical damage. Do not use if physical damage has occurred.
- Before plugging the unit into a power outlet, ensure that the outlet provides the same type and level of power required by the device.
- This device uses a grounded power cord and requires a ground connection for safe operation. Ensure that the power source has a proper ground connection. Do not modify the plug or use a "cheater" plug to bypass the ground connection.
- The output spray of this device can be very hot, with temperatures reaching as high as +104 ~ +176°F (+40 ~ +80°C). Ensure that the spray does not project onto people, animals, or anything flammable.
- Keep at least 8 inches of space between this device and anything else. Keep a distance of at least 10 feet between this device and anything flammable.
- Use only in a well-ventilated area. Do not use in close, confined spaces.
- This device has no user serviceable parts. Do not attempt to open, service, or modify this device.
- Regularly check the device for the presence of liquid smoke. Operating the device with an empty tank can cause damage to the machine.
- Keep the original packaging material for use when transporting the device.
- Fog is liquid vapor and can cause moisture buildup in its operating area.

MANUAL OPERATION

1. Ensure the device is powered off and is not connected to a power source.
2. Check the smoke liquid tank and replenish as necessary to ensure sufficient smoke liquid for operation.
3. Connect wired controller and also the wireless receiver plugs into rear inputs of this device.
4. Plug the unit into a power source and turn on the power switch.
5. Once the unit has warmed-up, the red LED will illuminate. While the red LED is illuminated, the machine is capable of projecting smoke/fog.
6. Press the red button on the wired controller (or any of the 4 buttons on the wireless controller) to produce smoke/fog. You can hold the button for continuous smoke/fog projection.

CLEANING

After about 40 hours of use, clean the internal heating mechanism by removing the fog juice and replacing with a mixture of 80% distilled water and 20% vinegar in the reservoir tank. Use as normal until the tank is mostly empty. When finished, remove cleaning solution.

| SPECIFICATIONS | |
|---------------------------|----------------------------|
| Input Power | 110 ~ 220 VAC, 50/60 Hz |
| Power Consumption | 1200 watts |
| Control Type | Wired and remote wireless |
| Warm-up Time | About 8 minutes |
| Reservoir Capacity | 0.66 gallons (2.5 liters) |