

Streamer RX, Streamer RTX

Audio networking system

User Guide

Rel 1.5 English (international)



Headquarter BOLOGNA: Via Caduti Di Sabbiuno 6/F
40011 Anzola Emilia - Bologna - Italy
Tel. +39 051 736555 - Fax. +39 051 736170

Regional BERGAMO: Via Italia 1
24030 Medolago (Bg) – Italy
Tel. +39 051 736555 - Fax. +39 051 736170

e-mail: info@axeltechnology.com - web site: www.axeltechnology.com

This manual is for use with the following product :

Streamer RX and Streamer RTX

Axel Technology SRL

All Rights Reserved

Via Caduti Di Sabbiuno 6/F - 40011 Anzola Emilia - Bologna - Italy
Tel. +39 051 736555 – + 39 051 736154
Fax. +39 051 736170
e-mail: info@axeltechnology.com - web site: www.axeltechnology.com

Information in this document is subject to change without notice and does not represent a commitment on the part of the vendor. This manual images could differ a bit from the equipment actual design. Axel Technology SRL shall not be liable for any loss or damage whatsoever arising from the use of information or any error contained in this manual.

No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, information storage and retrieval systems, for any purpose other than the purchaser's personal use, without the express written permission of Axel Technology SRL.

TABLE OF CONTENTS


1 Streamer Control Software installation5
2 Installation of STREAMER RX8
2 How To Decode Audio Streaming With “Streamer RX”14
3 How To Encode Audio Streaming With “Streamer RTX”17

1 Streamer Control Software installation

Inside the official Axel Technology Box is available the CD with lot of information, DOC and firmware upgrade or reinstallaer. The software that must be installed to control the Streamer is "Streamer Control"




- 1- Select Streamer Control.exe and press Return
- 2- Select the language and press **NEXT**

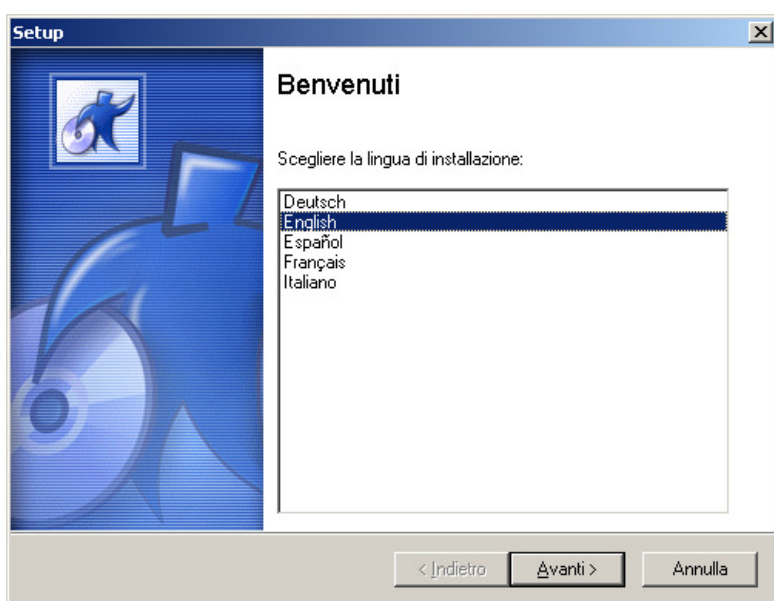


- 3- This is the Welcome screen (press **NEXT**)




4- Select the destination folder

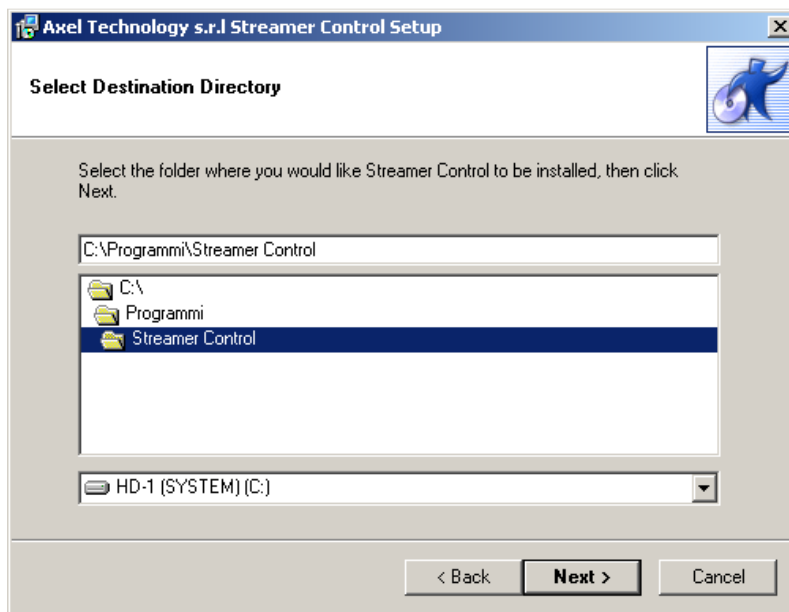

5- Select the Programm destination folder

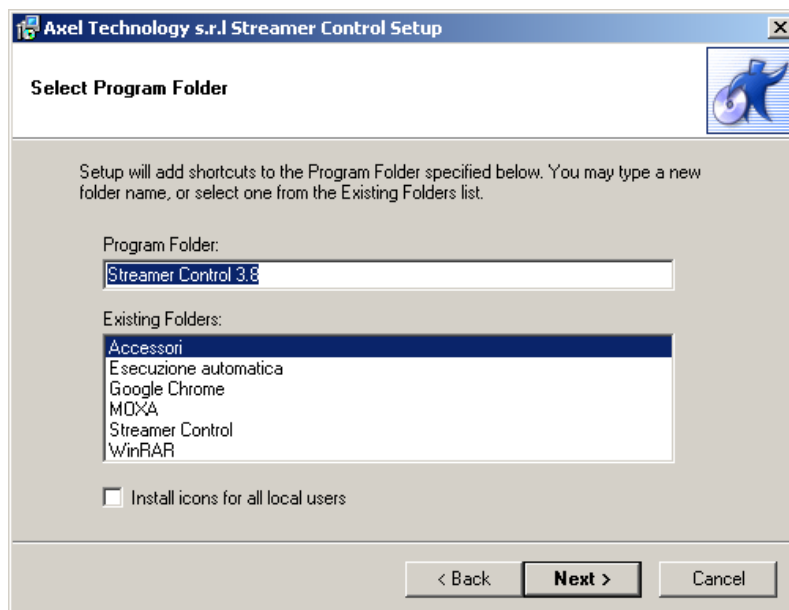

- 6- The software will install all the driver, dll and all the things necessary for the installation. A reboot is necessary after the installation (and suggested)


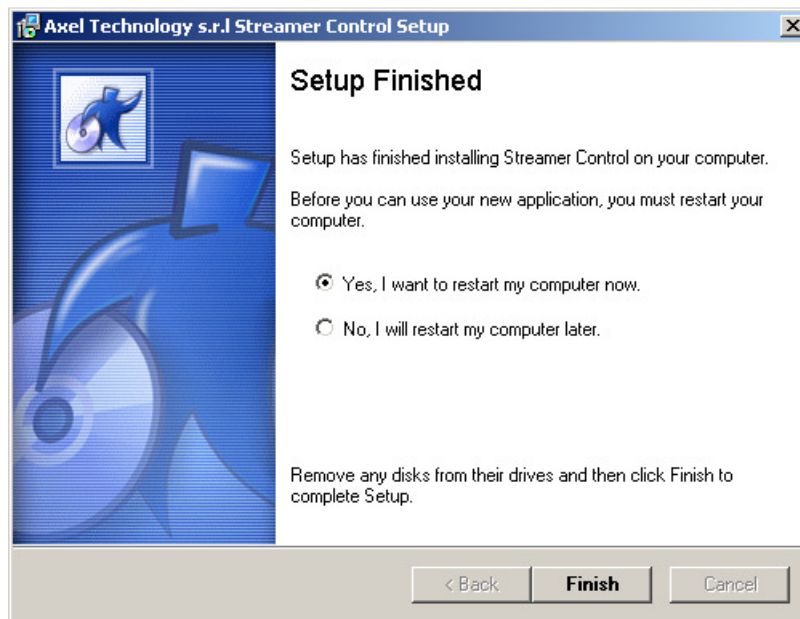




"Streamer RX" device



"Streamer RTX" device

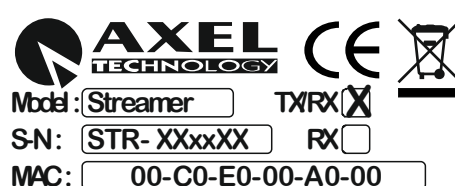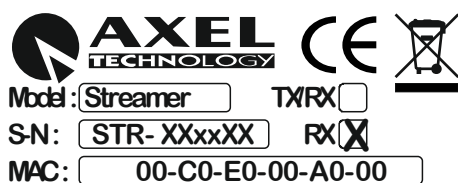


Warning! The installation procedure must be done with only ONE "Streamer" at the time

2 Installation of STREAMER RX


1. Plug the network cable into the network port of the "Streamer RX" device and the other end into your hub or switch.
2. Plug the jack of your earphone into the headphone output.
3. Plug the power supply into the power jack of the device and the other end into the power outlet of the wall.
4. After few seconds, will play a typical sound if a network is founded.
5. To verify the IP address assignement and manage the other parameters of "Streamer" you can use *Streamer Control* software. Install and running *Streamer Control*. **Verify that no firewall is active into your PC.**

6. Pushing **Get List !** button, you will see as follows:

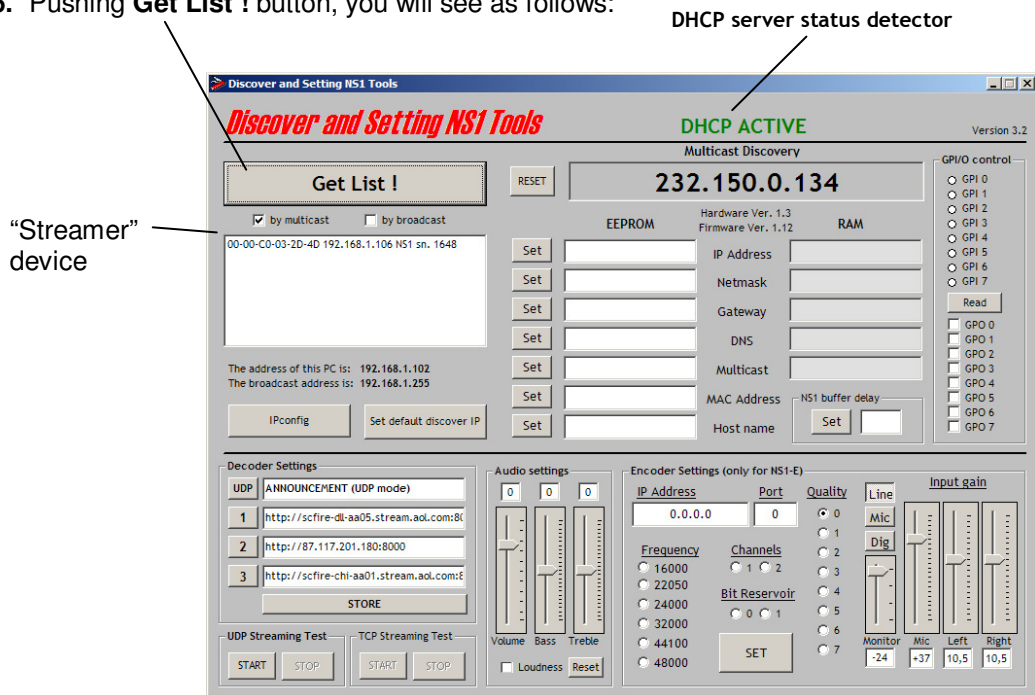

To configure the “Streamer” you have to pay attention to *DHCP server status detector*. If **DHCP ACTIVE** is displayed you can proceed from step 7. If the *DHCP server status detector* shows **DHCP NOT PRESENT** proceed from step 9.


7. By clicking on device inside the list box you will have all the parameters of the item selected.

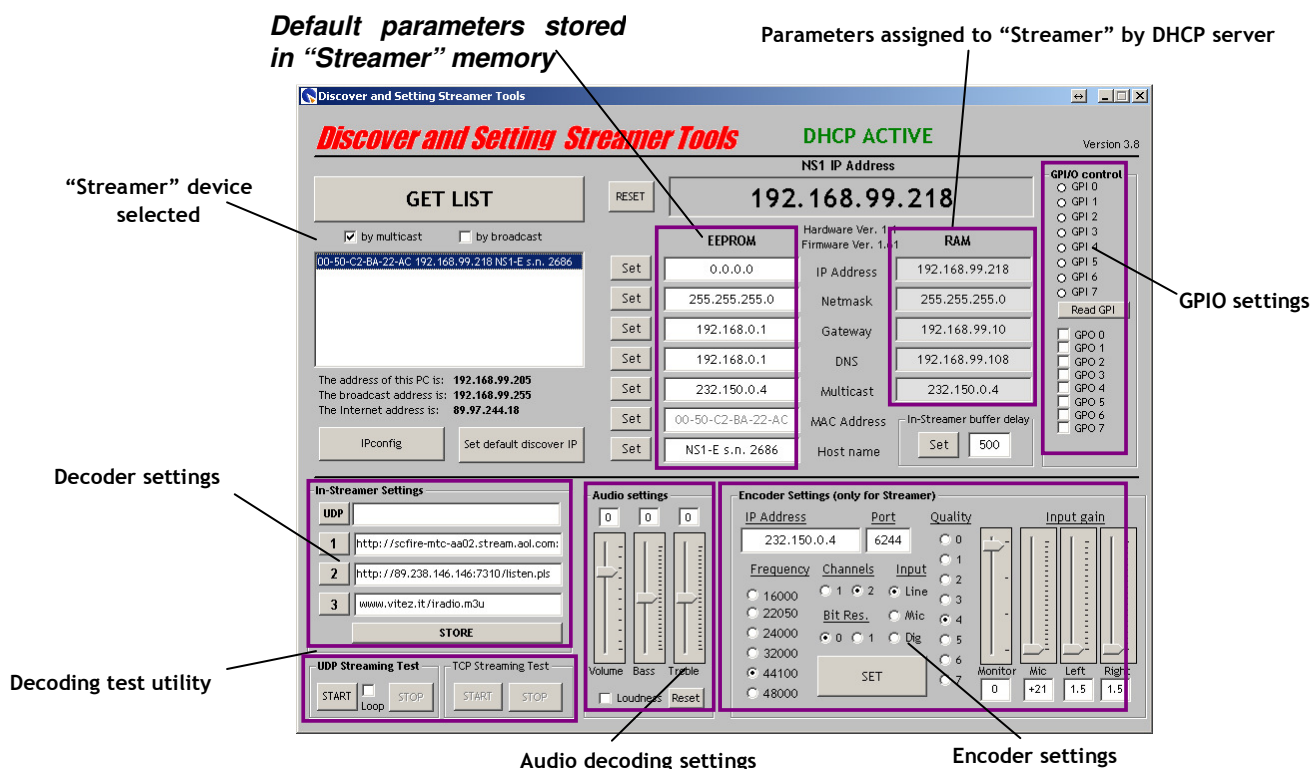

8. The active parameters of the “Streamer” that you selected, will be showed into EEPROM and RAM column. Now you can test the decoder audio function using *UDP Streaming Test* utility. By clicking on the START button of *UDP Streaming Test* there will be the streaming of an audio MP3 file to the IP address of “Streamer” selected. The sound will be played through the headphone and the RCA pin (“Streamer” only, not “In-Streamer”). The audio parameters, like volume, bass, treble and loudness can be changed via the *Audio setting*. The streaming will stop at the end automatically but you can stop it in any moment by pressing the STOP button.


END OF INSTALLATION OF “STREAMER RX”

9. If **DHCP NOT FOUND** message will appear on the top of *NS1 Tools* form this means that any DHCP server is present in your network and that any IP address has been assigned to “**Streamer**”. Therefore, IP values of “**Streamer**” have to be assigned manually. We suggest to chose carefully your IP address or to contact you network administrator to avoid any conflict with other network devices.

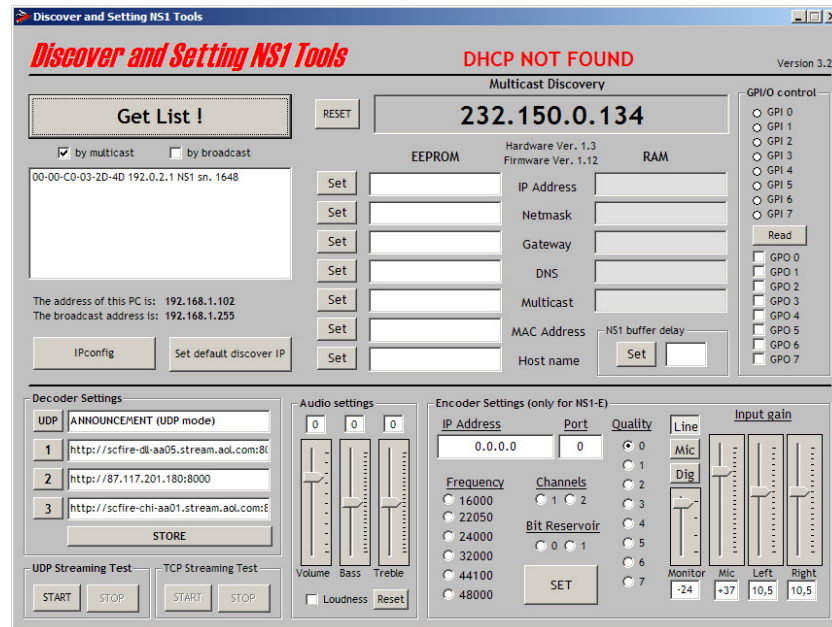


10. To set manually the parameters of “**Streamer**” you have to select the device in the list box. After the Warning messages you will be ready to assign the network values to “**Streamer**”.

“**Streamer**” device

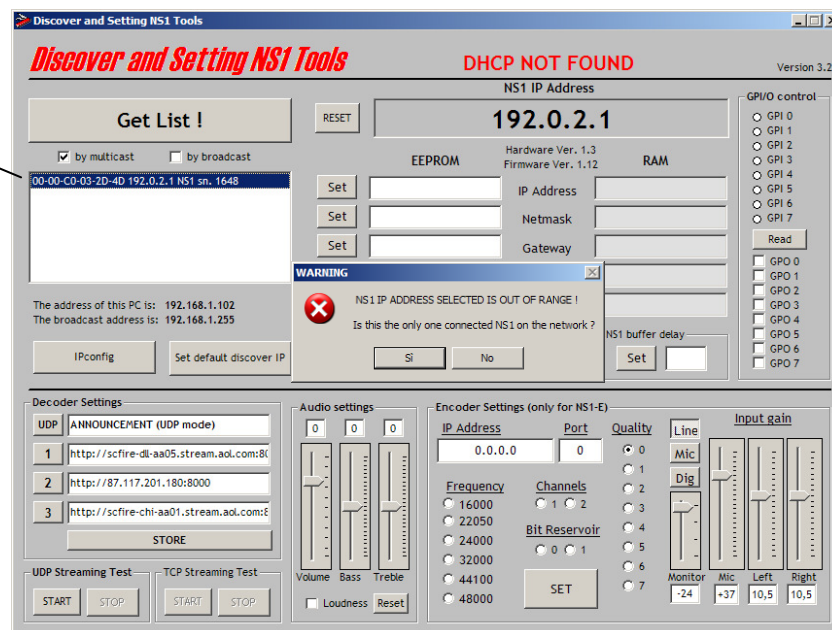


Default Parameters stored to Streamer memory

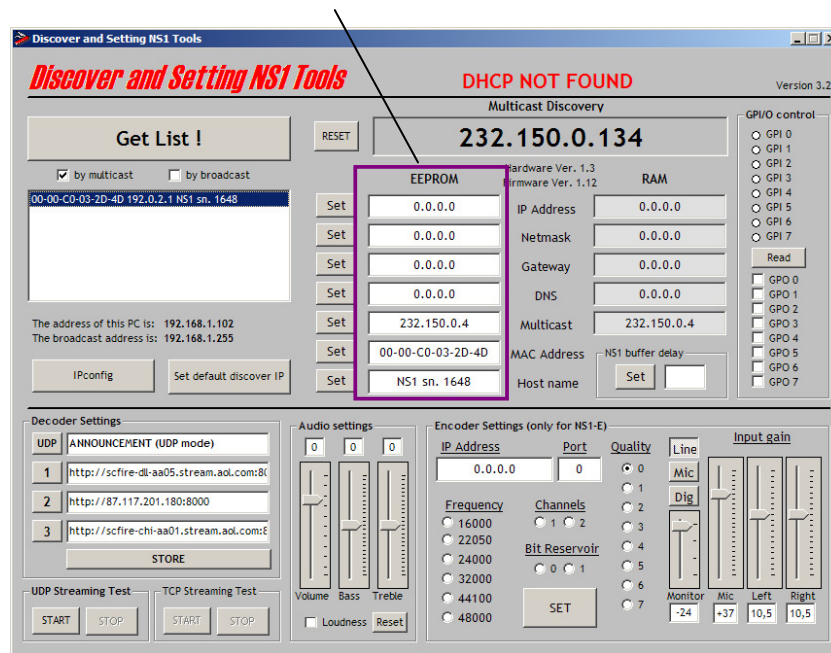


- Set the network parameters starting from IP address to DNS address into the **EEPROM** column. Click each **Set** button to store the relative value.


Parameters assigned manually in "Streamer" memory

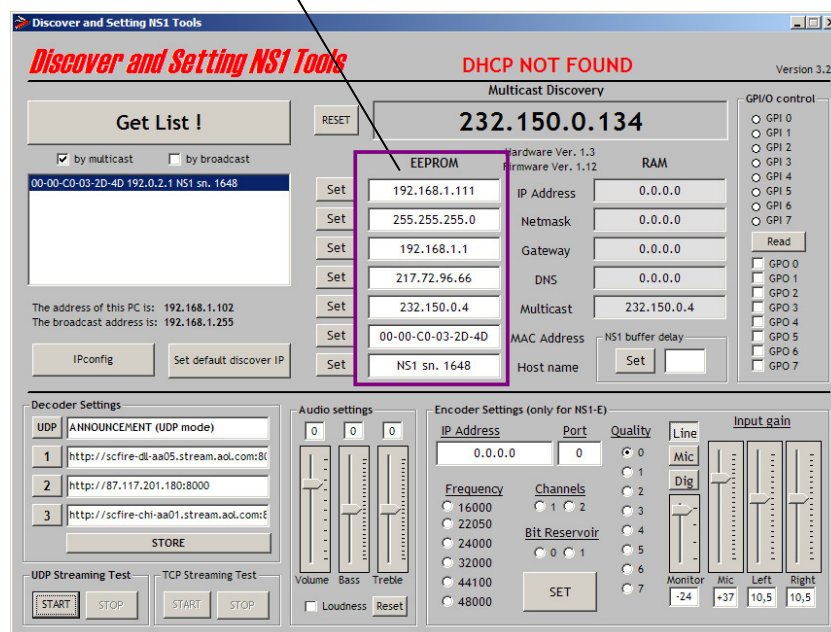

12. Press **Get List !** button to refresh the display of “Streamer” selection.

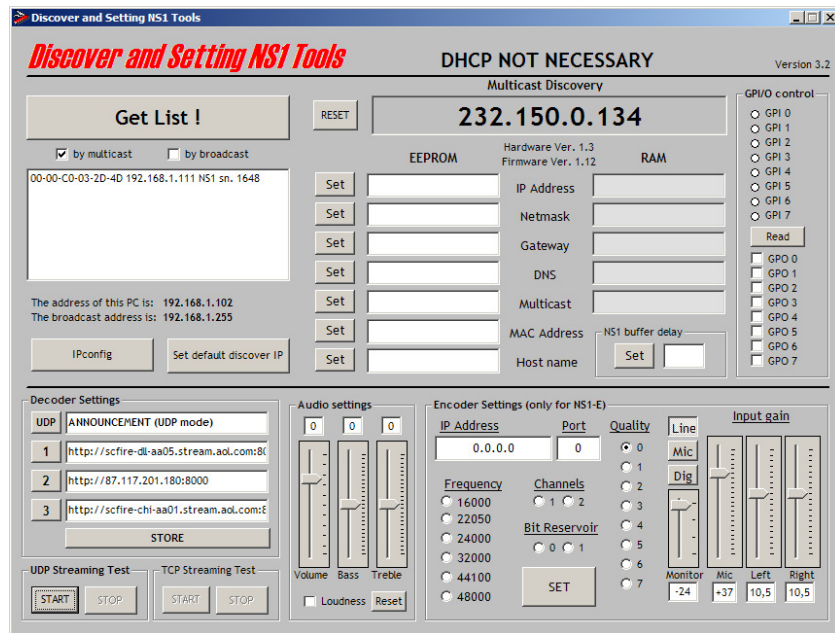

13. Selecting the “Streamer” device will show you the new network parameters. As you will see the EEPROM parameters will be transferred to RAM column. This means that your “Streamer” can be reached on the network through the new IP value stored.

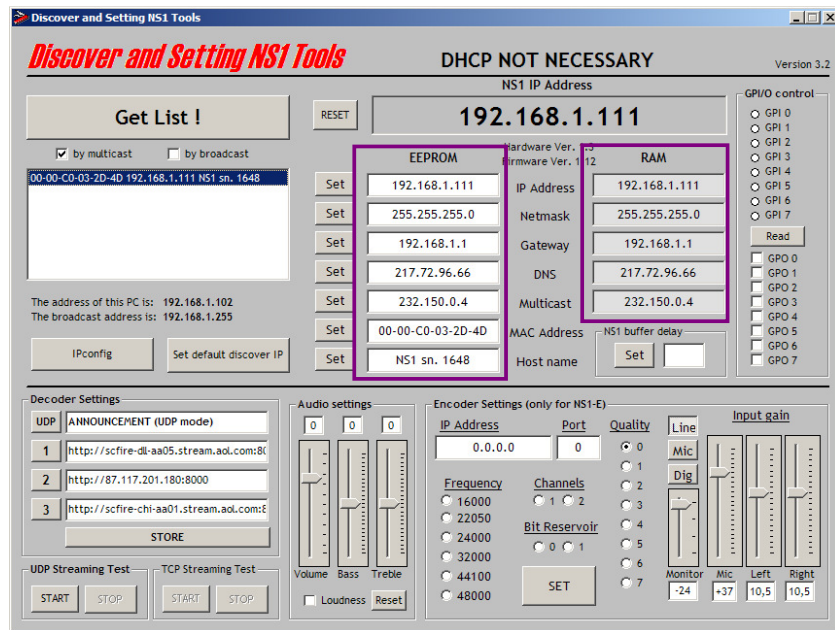

14. Now you can test the decoder audio function using *UDP Streaming Test* utility. By clicking on the **START** button of *UDP Streaming Test* there will be the streaming of an audio MP3 file to the IP address of “Streamer” selected. The sound will be played through the headphone and the RCA pin (Streamer only, not In-Streamer). The audio parameters, like volume, bass, treble and loudness can be changed via the *Audio setting*. The streaming will stop at the end automatically but you can stop it in any moment by pressing the **STOP** button.

END OF INSTALLATION OF “STREAMER”


2 How To Decode Audio Streaming With “Streamer RX”




For installation and configuration refer to Chapter 1

1. To manage the decoding parameters of “Streamer” you can use *Streamer Control*. Verify that no firewall is active into your PC.
2. Pushing **Get List !** button, you will see as follows

“Streamer”
device

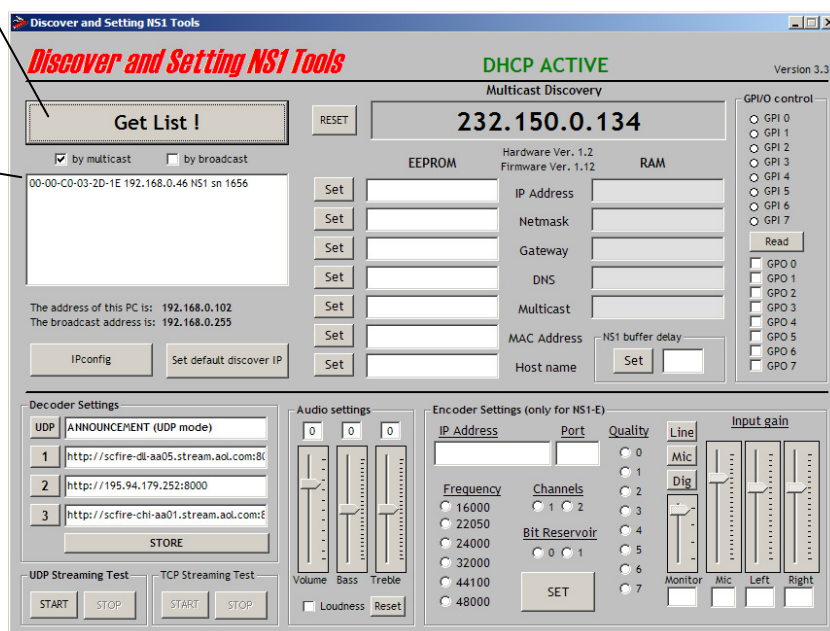

- By clicking on device inside the list box all the parameters of the item selected will appear. Now you can set the decoding parameters.

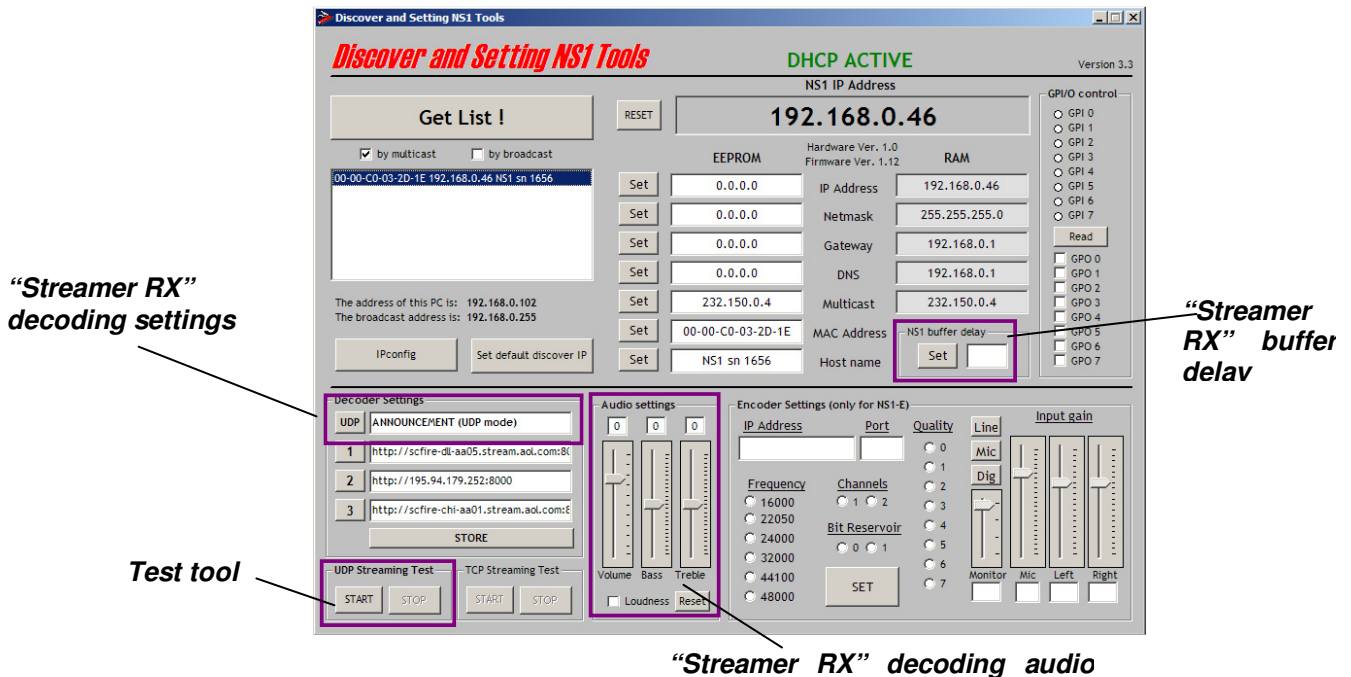

- Streamer RX can decode only UDP streamings. To decode an UDP audio streaming you have to press the *UDP* button into “Streamer RX” decoding setting section. Then *“ANNOUNCEMENT (UDP mode)”* message will be displayed in the right window. If a streaming is addressed to the multicast or unicast IP address of “Streamer RX” this will decode it immediately. Depending on the network traffic, it could be necessary to set the “Streamer RX” buffer delay (values admitted from 0 to 500 ms).
If you want to decode a TCP streaming you have to mount the memory option on the “Streamer RX” board by upgrading it into Streamer RX version.
- You can check the “Streamer RX” proper decoding by the *UDP Streaming Test*. By pressing the *START* button a short mp3 file will be sent to the “Streamer RX” selected. You can also check the right audio decoding of all the “Streamer RX” devices on the network simply by pressing *Get List !* followed by *START* button: the same short mp3 file will be sent to the default “Streamer” IP multicast address.
- During playback you can set volume, bass and treble level and choose either to activate or not the loudness of the “Streamer RX selected”. All the values will be stored in the “Streamer RX” EEPROM. You can also reset to default values the audio parameters by pressing *Reset* button.


3 How To Encode Audio Streaming With “Streamer RTX”




For installation and configuration refer to Chapter 1

1. To manage the encoding parameters of “Streamer” you can use *NS1 Tools* software. **Verify that no firewall is active into your PC.**
2. Pushing **Get List !** button, you will see as follows

“Streamer
XX” device

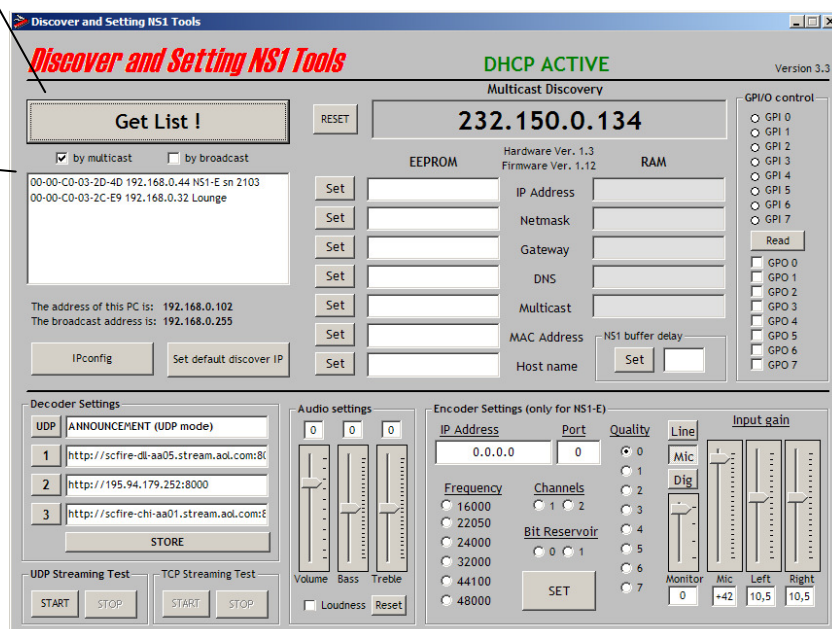

3. By clicking on device inside the list box you will have all the parameters of the item selected. Now you can set the encoding parameters.

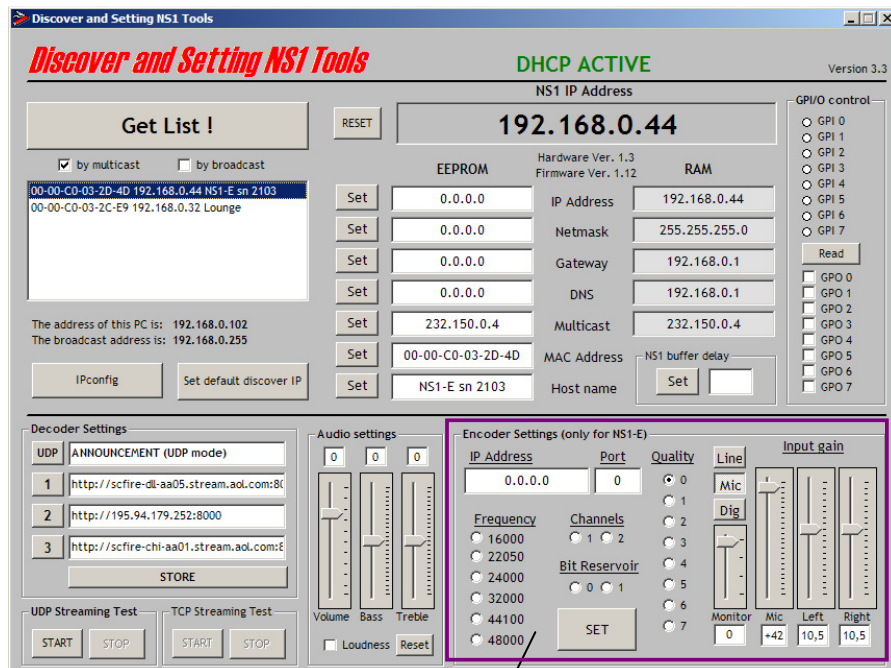

"Streamer" encoding

4. The parameters neededs to start to encoding are:

IP Address: unicast or multicast IP address of "Streamer" player/s targets

Port: destination port of "Streamer" player/s targets. All the "Streamer" models are ready to receive the streaming throught 6244 port.

Frequency: audio sampling frequency.

Channels: mono or stereo mode. If you choose to use the microphone input remember to use the 1 channel option.

Bit Reservoir: to improve the streaming audio quality it have to set on 0

Quality: The encoder uses Variable Bitrate Encoding (VBR) to realize optimal compression of the audio data. The setting of a fixed bitrate is replaced with setting a quality level that preserves audio quality in critical sections and enhances compression otherwise. The minimum bitrate (in case of digital zero samples) is 32 kbit/s for MPEG 1 and 8 kbit/s for MPEG 2. The maximum bitrate is 192 kbit/s for MPEG 1 and 160 kbit/s for MPEG 2. The following table gives an overview on the average encoding bitrate that can be expected for common audio signals at different quality settings and sample rates.

Quality settings	Average bitrate in kbit/s for fs/kHz			
	44.1 stereo	22.05 stereo	44.1 mono	22.05 mono
0	75	39	65	35
1	80	41	68	38
2	90	45	63	40
3	100	50	80	45
4	120	60	90	50
5	140	80	105	60
6	160	110	125	75
7	170	130	140	90

Line: Line input selector. The line input signal can be connected to the PIN jacks (unbalanced)

Mic: Microphone input selector.


Dig: Digital SPDIF audio input. The digital input and output are available only for the "Streamer" equipped with the optional service board

Monitor: Monitor level of the audio input after the compression process. The monitor out is available from the 3,5 mm jack.



Mic input gain: Microphone level input gain.

Left & Right input gain: Line level input gain.


SET: This button sets the encoding parameters into the "Streamer" and start automatically the encoding session.

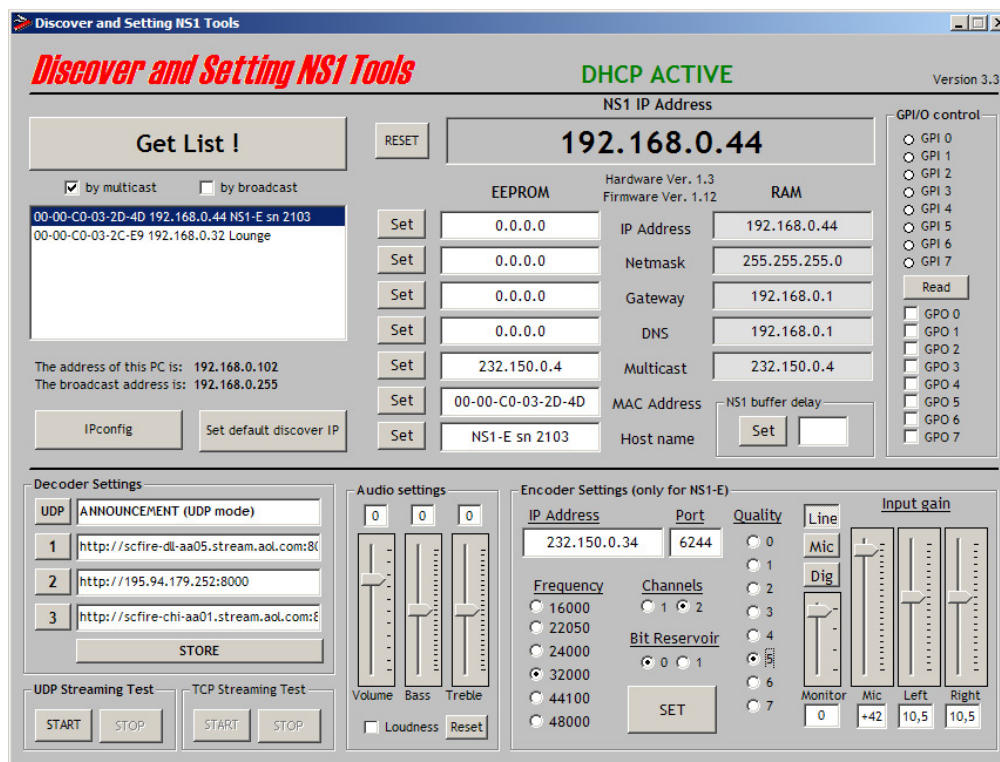



«OBB - IBB» Option for Streamer RX and Streamer RTX

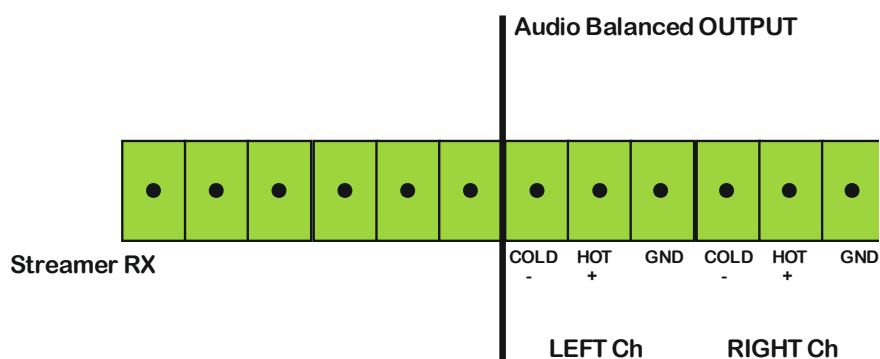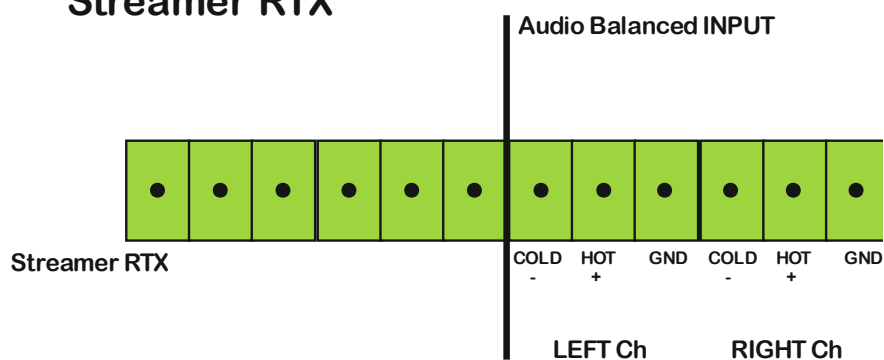

«GP» Option for Streamer RX and Streamer RTX

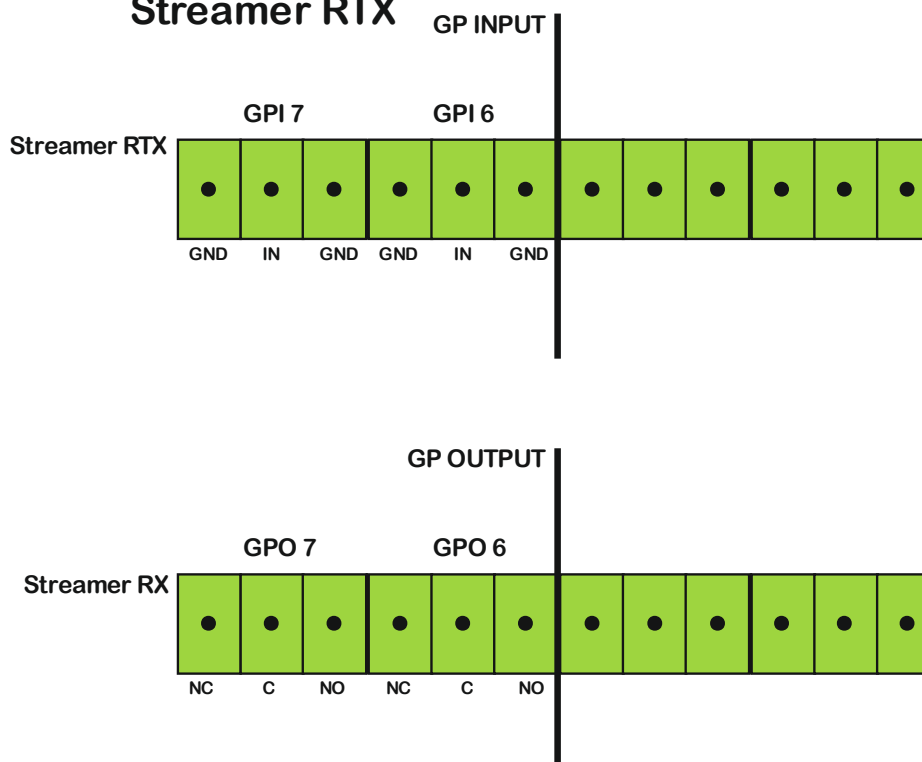


DETAILS for «IBB - OBB» Option for Streamer RX and Streamer RTX

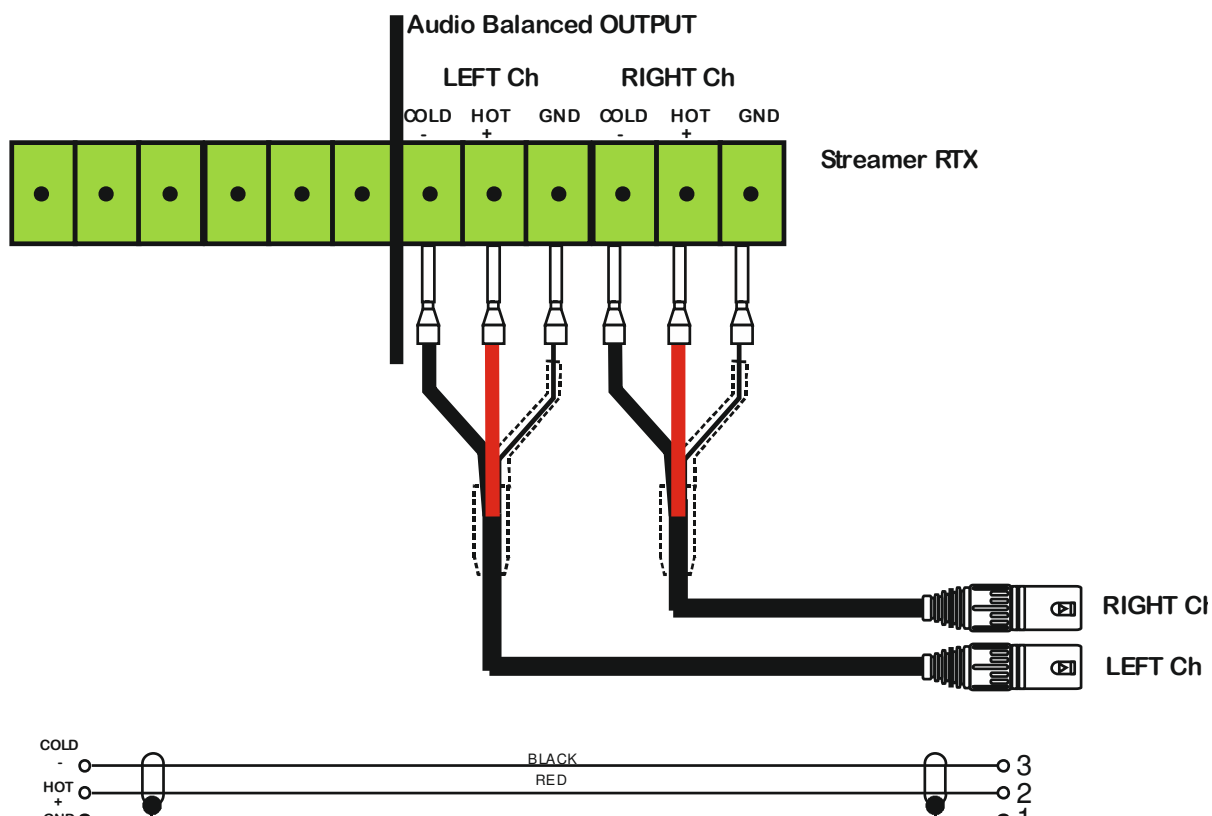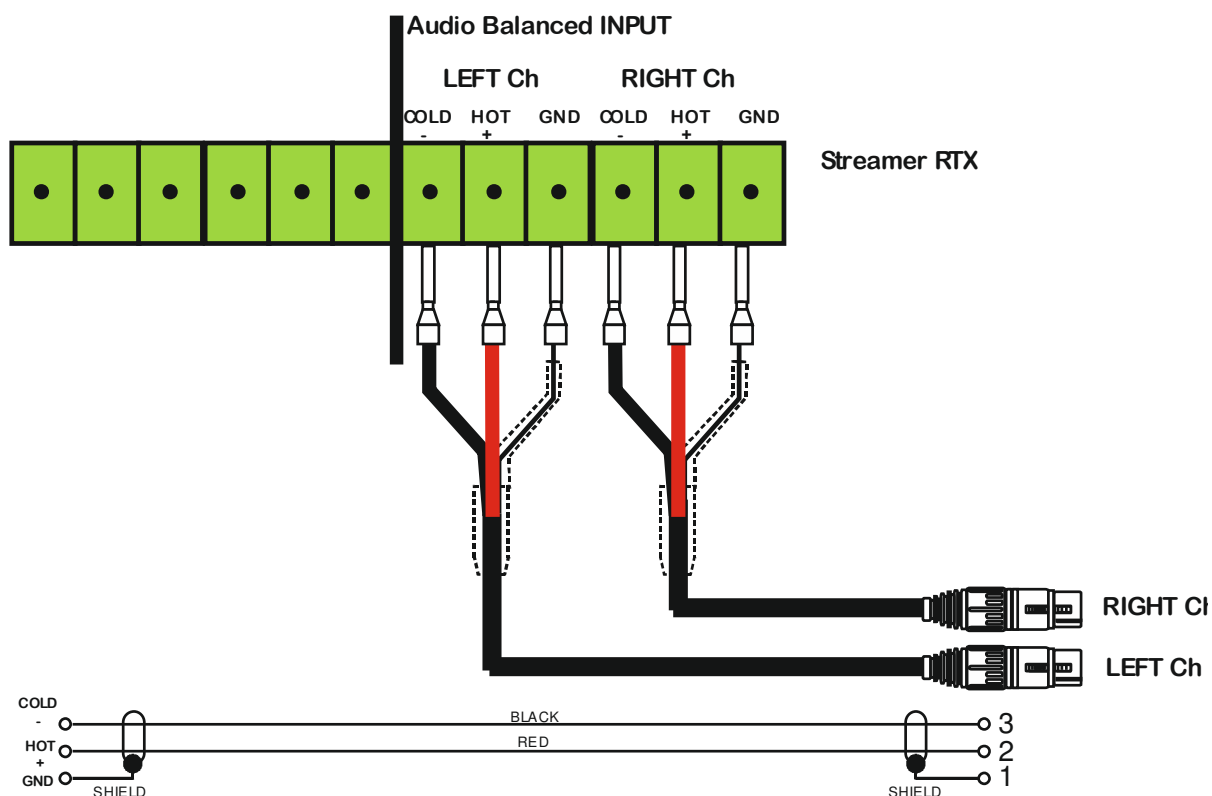

Balanced Connection (IBB-OBB option)

Streamer and InStreamer mount onboard (optional by request) an electronically balanced input and output connector board (IOB Option)

The standard configuration allows three connectors as standard EIA RS-297-A recommendations.
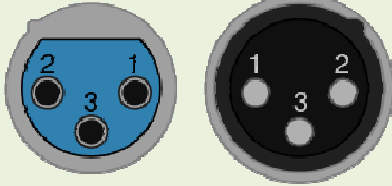
<div><div>Female</div><div>Male</div></div>	
	
Pin	Function
1	Chassis ground (cable shield)
2	positive polarity terminal ("hot")
3	return terminal ^[2] ("cold")

The maximum input signal is 0.775 Vpp (0 dBu)

The maximum output signal is 3.781 Vpp (6 dBu)

General Purpose Input Output (GP Option)

The Streamer and InStreamer equipment allows 2 General Purpose (GP) Input and Output. The GP name are GPI6 and GPI7 for the inputs and GPO6 and GPO7 for the output

GPInput

In order to activate GP6 and GP7 inside Streamer, place directly on ground the "In" signal (IN to GND) as shown in picture.

It is already possible employs both connectrs GND. Please remember that IN and GND are directly connected to μ Processor (μ P) equipment.

Pay attention to don't connect external voltage to this connectors.

These connectors can be directly applied to Axel Technology equipments as BOBCAT and BoxRelè, already made in order to manage all kind of signals coming from CD player, MD Player, tape recorder, ISDN tunneling or Automation System.

GPOut

Inside InStreamer are presents two BiStable Relay, in order to employ the GPOut. These Relays allows TWO condition: NC and NO.

NC = Normally Close
NO = Normally Open
C = Common Contact

Details:

When there are no activation in GPI the Relay contact stay on NC. When GPI become activated, the output relay change the contact closure versus NO, as showed in picture.

In the example figure, a cc generator is connected in the common contact and the same point directly to LAMP1 and LAMP2.


In GPI non-activation position, LAMP1 is ON, and LAMP2 is OFF

In GPI Activation position, LAMP1 is OFF, and LAMP2 is ON

Working votage = 5 Vcc


Maximum Voltage (breakdown) = 100 Vcc

DETAILS for «GP» Option for Streamer and InStreamer

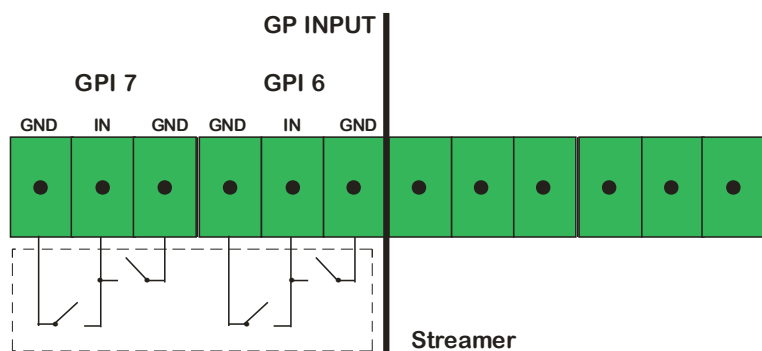

To Activate GPI 6 and GPI 7 close IN versus GND as showed below

When GPO 6 and/or GPI 7 are Activated
Relay6 and Relay7 change from NC to NO

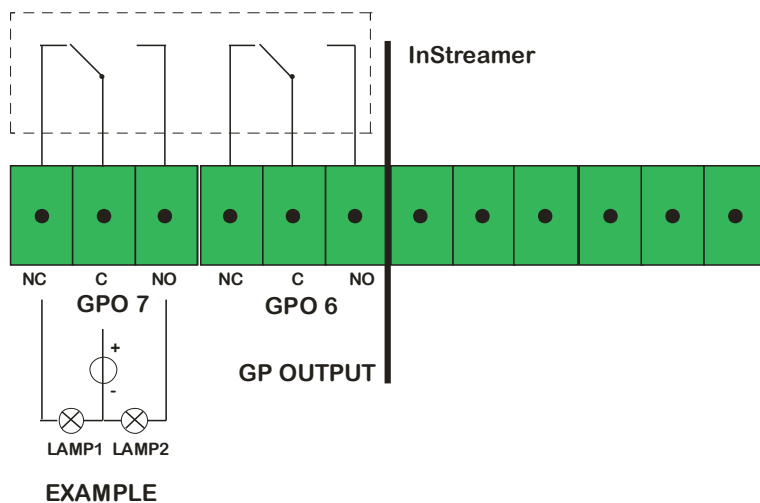

Nominal Value:
Vn= 12V
In= 500mA

Maximum Value
(breakdown)
Vm= 100V
Im= 1A

6 Warranty

The manufacturer offers a 1-year ex works warranty.

Do not open the equipment. The warranty shall be voided if any of the warranty seals are broken.

The manufacturer shall not be liable for damage of any kind deriving from or in relation to incorrect use of the product.