

**3/23/2012**

**Home screen**

On the Home screen, you can place app shortcuts and widgets.

**Home screen (left)**

- Bookmarks widget
- Calendar widget
- Google search

**Home screen (center)**

- Photo gallery widget
- Music widget

**Home screen (right)**

- Weather & widgets center
- Podcast widget
- Utility bar

**Access apps & widgets screen**

Press **⌘** to access the Apps & widgets screens.

**Placing apps & widgets on the Home screen**

Press & hold an app or widget to place it on one of the Home screens.

**Removing shortcuts or widgets**

Press and hold the app or widget and slide it as shown below.

**Status Bar**  
The Status Bar is available on all screens and apps of the tablet.

**Multi-tasking**  
Tap the Home button to return to the Home screen.

**Browser**  
Tap the Home button to return to the Home screen.

**Email**  
Tap the Home button to return to the Home screen.

**Wallpaper**  
Tap the Home button to return to the Home screen.

**Manage apps**  
Tap the Home button to return to the Home screen.

**System settings**  
Tap the Home button to return to the Home screen.

**USB connected**  
Select copy files to form your computer.

**Click & Notifications**  
Tap the Click & Notifications (Notifications & Settings shortcuts).

**Wi-Fi**  
Tap the Wi-Fi icon to access the Wi-Fi Setup screen.

**Battery**  
Tap the Battery icon to access the Battery screen.

**Polaroid widget**  
Tap the Polaroid widget to access the Polaroid widget.

**Online Help**  
Tap the Online Help icon to access the Online Help screen.

**Wi-Fi Setup**  
Tap the Wi-Fi Setup icon to access the Wi-Fi Setup screen.

**Download Appstore**  
Tap the Download Appstore icon to access the Download Appstore screen.

**1. Tap the Home screen to the left to access the Polaroid widget.**

**2. Select "Wi-Fi Setup" on the Polaroid widget.**

**3. Select a network.**

**4. If required, enter the correct password and select "Connect".**

**5. When the tablet is connected to a network, the Wi-Fi icon will appear on the Status Bar and "Connected" will appear under the selected network.**

**1. Downloading the Amazon Appstore**  
To access a large library of free-to-play apps and games, we recommend downloading the Amazon Appstore from the Amazon Appstore. Follow the instructions below to download it directly to the Apps screen of the tablet.

**2. Select "Download now"** to download the Amazon Appstore Installer to the tablet.

**3. Select "Install"** to install the app.

**4. The Amazon Appstore appears on the Apps screen.**

**5. Downloading and installing the app**  
To download the Amazon Appstore, it is possible to select the Amazon Appstore app icon on the tablet. This will appear on the Apps screen.

**6. Select "Appstore"** on the Apps screen and create an Amazon account (setting up the account is free). Once an account is created, it is easy to purchase, download and install apps directly to the tablet.

**7. Games**  
Sometimes, while playing games, the game on the tablet may not function correctly. This may be due to the game not being compatible. To correct this problem, follow the steps below:

1. Go to "Settings".
2. Select "Display".
3. Select "Accelerometer Coordinate System".
4. The default setting is "Default Coordinate System." This setting should work for most games.
5. If the game is not functioning properly, select "Standard coordinate system to support some other games".

**8. Recommended Apps**  
There are thousands of apps available on the Amazon Appstore. Below are some of the apps we recommend to download and install to the tablet.

**9. Amazon MP3**  
Purchase and wireless download music directly to the tablet.

**10. Netflix**  
Stream movies and TV shows. Subscription charges may apply.

**11. Skype**  
Video chat, VOIP calls and more.

### Camera and video chat

#### Searching for Apps

Type the name of the app you are looking for in the search box, and select the search icon.

Type "Amazon MP3"

Search

#### Front facing camera

Select **MP3** on the app screen to go to camera mode. It is possible to take pictures or videos with the built-in front facing camera.

Camera app

Camera

#### Video chat

Use the built-in front-facing camera to video chat with friends and family.

There are many different services that offer video chat however we recommend downloading the Skype app from the Amazon Appstore.

**Note:** Amazon and the manufacturer of this tablet are not affiliated with, connected to, or sponsored by Amazon, Amazon appstore, Amazon MP3 or Skype or either.

We recommend the Amazon Appstore over the other available options because of the wide selection of available apps, user experience, and customer service.

**Transferring and managing files**

It is possible to manage and transfer media files to the tablet by connecting it to your computer.

**Conserve Internal Memory!**

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

**Inserting Micro SD card**

The tablet supports Micro SD cards up to 32GB (not included).

**To install a Micro SD card into the tablet:**

1. Insert the card face up into the slot until it clicks and locks into place.
2. Once the card is mounted, the card icon appears on the Status Bar.
3. To access the Micro SD card, select "File Manager" from the Apps screen.

**Unmount & remove the Micro SD card:**

1. Open "Settings".
2. Select "Storage".
3. Select "Unmount Micro SD card".
4. To remove the card, gently push it in until it pops out.

**Connecting the tablet to a PC or Mac:**

1. Connect the included USB cable to the USB port of the tablet and USB port of the computer.
2. The "USB connected" screen appears, select "Turn on USB storage", then select "OK".
3. The "Autoplay" window appears in your computer's display - select "INTERNAL" to view and manage files on the tablet, or a Micro SD card is selected, select "Removable Disk" to manage files on the card.

**Transferring files:**

After the tablet is connected to the computer, you can also access the "USB connected" screen from the Status Bar as shown below.

**Managing files:**

Windows Explorer (PC) and Mac Finder (Mac) can be used to manage files on the tablet. The "Removable Disk" window appears if a Micro SD card is inserted.

4. Copy media files from your computer to the Micro SD card.

5. Select "Turn off USB storage" on the tablet to disconnect it from the computer.

**File Manager:** To view, open, copy or delete files on the internal memory of the tablet, insert Micro SD card or USB stick, select "File Manager" on the Apps screen.

Press to open "Press to Add to Favorites"

**Copy, move or delete a file or folder:**

1. Press and hold a file or folder until the options window appears, then select an option from the options window.

Press to open "Press to Add to Favorites"

If you tap "Copy" or "Move", press and hold on a folder and select "Paste into folder" to copy the file there.

Press to hold a song file to open the "Share" menu.

Press to hold a song file to open the "Share" menu.

Press to hold a song file to open the "Share" menu.

Settings app

Customer and select options to increase battery performance, Wi-Fi settings, manage apps and more.

Online help

?

Select "Online Help" on the App Store to access:

- App updates and updates for current apps
- Firmware updates
- Troubleshooting
- Product registration

Resetting

In the event that the tablet loses or does not function properly, try restoring the product by pressing the RESET button located on the back of the device below.

Use a paper clip or the tip of a stylus to press the RESET button. Data stored on the tablet will not be affected by using the RESET button.

Restore

Note:

If the product persists to may be necessary to restore the tablet to the factory default settings:

- 1) Select "Factory Reset" from the App Store
- 2) Select "No" to the factory default settings
- 3) Select "Yes" to restore the tablet
- 4) Select "Yes" to back up the data on the device as more time is built up on the device prior to this step.

Legal Information

FCP Part 15

This equipment has been tested and found to comply with the requirements for Class B digital devices under Part 15 of the Federal Communications Commission (FCC) Rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment. Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and

Limited Warranty

This product as supplied and distributed may vary. All IAT, Inc. ("IAT") is to the original consumer purchaser is the sole and exclusive agent against defects in material and workmanship for a period of one year from your date of purchase. This warranty does not extend to the unit. In the unlikely event that this product is defective, or does not perform properly, you may return this product from your original date of purchase return to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Shipped At) date.
- Prepare all shipping costs to return the service center and forward to insure your return.
- A 48-hour turnaround time is guaranteed.
- Telephone contact number, and the defective unit.
- A return shipping label will be provided.
- Describe the defect or reason you are returning the product.

Customer Support:

Monday - Friday: 9AM - 5PM (EST)

1-877-333-3333

info@polibatteriesolutions.com

polibatteriesolutions@batteriesolutions.com

Settings app

Online help

Resetting

Restore

Legal Information

Limited Warranty

Settings screen

Online Help screen

Reset

A wide banner advertisement for the Polaroid internet tablet. The background is a high-contrast, blue-toned image of the Earth from space, showing the curvature of the planet and swirling cloud patterns. In the top left corner, the Polaroid logo is displayed, consisting of a small, multi-colored square icon followed by the word "Polaroid" in a white, sans-serif font. In the top right corner, the text "internet" is in white and "tablet" is in a bold, yellow, sans-serif font, both in a clean, modern typeface.

Polaroid

internet**tablet**

# FRONT

**BACK**