



AC Hair Clipper

SY-HC32

Instructions Manual


WELCOME

Thank you for purchasing the new hair clipper SY-HC32. In order to benefit fully from this product please read the following instructions carefully. Store the instructions manual in a safe place for future reference.

IMPORTANT SAFEGUARDS

- Before the first use of the appliance check that the voltage indicated on the rating label corresponds to the mains voltage in your home.
- For home use only. Do not use for industrial purposes. Do not use the appliance for any other purposes than described in this instruction manual.
- Do not use outdoors.
- Always unplug the appliance from the power supply before cleaning and when not in use.
- To prevent risk of electric shock and fire, do not immerse the appliance in water or any other liquids. However if this does occur DO NOT TOUCH the appliance, unplug it immediately and contact your near service center.
- Do not take this product to a bathroom or use near water.
- Do not immerse the recharging stand or adaptor in water.
- Never charge the unit near water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave the appliance switched on when not in use.
- Do not use other attachments than those supplied.
- Do not operate after any malfunction, cord damage, battery leak, charging stand damage or adaptor damage.
- Do not attempt to repair, adjust or replace any parts of the appliance. Check and repair any damages by contacting Sytech Service Center.
- Keep the cord away from sharp edges and hot surfaces.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Do not pull, twist, or wrap the power cord around the appliance.
- Never insert any objects into the openings of the appliance.
- Before use, make sure that blades are adjusted properly.
- Do not place the appliance while it is operating on any surface, it may cause injury or damage.
- Do not use the appliance with a damaged comb, or with teeth missing from the blades as injury may occur. *NOTE: KEEP THE BLADES OILED*
- Do not use the hair clipper when the skin is infected.
- Do not use the hair clipper on animals.
- The manufacturer reserves the right to introduce minor changes into the product design without prior notice, unless such changes influence significantly the product safety, performance, and functions.

PARTS OF THE SY-HC32

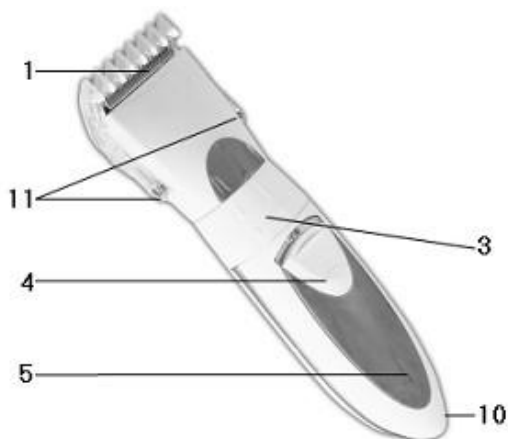

1. Cutting head
2. Adjustable comb
3. Cutting length Control wheel
4. On/off switch
5. Light indicator
6. Charging stand
7. Adaptor
8. Oil bottle
9. Cleaning brush
10. Socket
11. Adjustable comb lever

ADJUSTABLE COMBS

- This hair clipper has a detachable comb with various measurements. Hair cut length varies between 4-16mm of hair length. (amount of hair that will be cut)
- To attach the comb, hold it with its teeth upward and slide it along the sides of the hair clipper until the comb firmly adjusts onto the sides and you hear the “click” sound.
- To remove the comb, simply pull the comb upward and away from the clipper.

OIL

- To maintain your clipper in peak condition the blades should be oiled every few haircuts. Do not use hair oil, grease, oil mixed with kerosene or any solvent

CUTTING LENGTH & CONTROL WHEEL

- The control wheel allows you to gradually change the closeness of your haircut by changing the position of the comb.
- 4 levels exist on the control wheel. Each level is a different hair cut level that range between 4-16mm.

Control Wheel Level	Hair Cut Length (mm)
1	4
2	7
3	10
4	16

CHARGING THE BATTERY

Before using the SY-HC32 for the first time, it must be fully discharged and then fully charged.

1. Ensure the on/off switch is downwards.
2. Insert the plug of the mains adaptor into the power jack of the hair clipper
3. Plug the mains adaptor into a power socket.

NOTE: The indicator light will not go out when the battery is fully charged.

- It takes approximately 8 hours to charge the battery. After this time the clipper must be detached from the adaptor to avoid battery degradation and over heating.
- The usage time with a completely charged battery is approx. 50 mins.

USING THE CLIPPER WHILE CHARGING

To use the SY-HC32 without the battery being charged is also possible. Connect the adaptor to a wall outlet and to the hair clipper.

1. Connect the hair trimmer as described in the section "Charging the battery".
2. Unplug the adaptor after use.

INSTRUCTIONS FOR HAIR CUTTING

BEFORE STARTING THE HAIR CUT

- Check the clipper, making sure that there is no oil between the cutting blade teeth. Turn the unit on to distribute the oil and to make sure it is running smoothly before using. Wipe off any excess oil. This should be done before each use.
- Seat the person so the head is approximately at the eye level. This allows ease of visibility while cutting and a better control of the clipper.

- Place a towel around the neck and shoulders of the person getting the haircut.
- Before cutting always comb the hair so it is tangle free.

REMINDERS

- Cut the hair in an even and slow manner. Use short strokes only and work gradually over the entire head.
- Always take off a little hair at a time; you can always trim off additional hair later.
- As you work, comb the hair frequently back into the style to which you are cutting.
- When cutting with this hair clipper it is better to leave the hair dry, not wet. With dry hair, it is much easier to control the amount of the hair being cut.
- Cutting hair requires practice so it is always better to leave the hair longer for the first few haircuts until you become used to the hair clipper levels and how much hair does each level cut.

BLADES CLEANING AND MAINTENANCE

Before cleaning and maintaining this hair clipper, please ensure that the switch is disconnected and that no water is present around the area where you are cleaning the unit.

- Remove the adjustable comb by simply pulling it upwards.
- Pull the shaving head towards the back and remove it (1).
- Using the brush, brush out all the extra hairs from the shaving head insert(the area behind the shaving head when it has been removed) (2)
- Put 2-3 drops of oil on the blades.
- Reinsert the shaving head by inserting the latch of shaving head into the casing and press it until you hear a 'click' sound(3)



BLADE LIFE

- This hair clipper is equipped with stainless steel blades. It provides high sharpness and a longer life span of the blades.
- If your clipper stops cutting, your cutting blades have worn out. Replace them with new blades.
- Blade life will vary according to the frequency and length of use.

STORAGE

- Keep the appliance in a dry place.
- The blades must be oiled during storage period.

SPECIFICATIONS

Rechargeable Hair clipper

Stainless Steel blades

Water resistant IPX6

5 haircut settings (4, 7, 10, 13,16mm.)

“Direct Drive” - Use your trimmer through AC current or internal rechargeable battery

Charger stand included

Powerful and silent motor.

LED indicator pilot

50 minutes usage when fully charged

Complete charge in 8 Hours.

Accessories included:

Charger stand, comb, scissors, brush, oil bottle,

Power source: AC 239V~50Hz. DC 3.8V, 300mA.

DECLARATION OF CONFORMITY

Manufacturer Name: Satyatrade S. L.

Address: Pol. Ind. La Raya. C/ Guadalquivir, 2.

Camarma de Esteruelas, 28816 Madrid

Tel: 902 430 967

Fax: 91 8864285

NIF: B83254763

Manufacturing country: China

Sytech® SY-HC32 complies with the following directives:

EMC Standard: Directive 2004/108/EC

EN 55014-1:2003

EN 55014-2 :1997+A1:2001

EN 61000-3-2:2006

EN 31000-3-3:1995+A1:2001+A2:2005

ROHS standard: 2002/95/EC Restriction of Hazardous Substance

Signed: Ajeet Nebhwani Utamchandani

Sole Administrator

