

- | | | | | |
|-------------------|----------------------|-------------------|----------------------|------------------------|
| ① Door knob strap | ⑥ Battery | ⑪ Plug socket | ⑬ Burglar alarm kit | ⑲ Soft sleeve |
| ② Snap hook | ⑦ Top cover | ⑫ Insulation plug | ⑱ Burglar alarm plug | ⑳ Plastic handle |
| ③ Connecting link | ⑧ Alarm test button | ⑬ Raised notch | ⑲ Retaining holder | ㉓ Opening end |
| ④ Bottom cover | ⑨ Handy light button | ⑭ Loop strap | ⑲ Retaining socket | ㉔ Open spring blades |
| ⑤ Recessed notch | ⑩ Battery holder | ⑮ Panic button | ⑳ Screwdriver | ㉕ Closed spring blades |

ASSEMBLY INSTRUCTIONS

1. Use the screwdriver ⑳ to unscrew and open the bottom cover ④, insert the insulation plug ⑫ (the side with a red line must be facing up and the opposite side with the two raised notches must be facing down) into the plug socket ⑪ on the top cover ⑦ before installing the battery, otherwise the alarm will be immediately triggered. Insertion of the insulation plug ⑫ is directional (one side with a red line and the other with two raised notches), please ensure that it is inserted correctly. Fig. 1

NOTE : Do not insert the burglar alarm plug ⑱ into the plug socket ⑪, otherwise the bottom cover ④ and top cover ⑦ cannot be disassembled or reassembled. Fig. 3

2. Install the battery ⑥ into the battery holder ⑩ (Make sure the polarity is correct).

3. Test the basic functions: Fig. 1

(1). Alarm Siren : Test 1 : Press the red button ⑧ (The alarm and handy light will be activated at the same time).
Test 2 : Remove the insulation plug ⑫ from the plug socket ⑪ and reinsert it.

(2). Handy Light: Press button ⑨.

 
4. Place the connecting link ③ of the snap hook ② into the recessed notch ⑤ inside the bottom cover ④.

5. Once reassembled and the alarm device is upside down, the side marked with a red line of the insulation plug should be facing up. Fig. 5

NOTE : The insulation plug can be pulled completely out of the plug socket by tugging on the loop strap and can be reinserted by pushing it back in.

PERSONAL ALARM FUNCTION

When in threat, press the panic button ⑮ or pull the insulation plug, on the bottom of the alarm, out of the plug socket to instantly activate the high decibel alarm siren and strobe light to effectively scare off the assailant. Fig. 2


ANTI-SNATCH ALARM FUNCTION

1. When going out, attach the snap hook to the handle of your handbag and hold the loop strap ⑭ or slip it around your wrist. Fig. 6 Fig. 2

2. If your bag is snatched while you are holding on to it, the insulation plug will be pulled out of the plug socket (or you can also pull on the loop strap) to instantly activate the alarm siren and strobe light to effectively startle the snatcher. This can also attract others' attention and alert for help.


BURGLAR ALARM

1. Replace the insulation plug ⑫ with the burglar alarm kit ⑬ by using the burglar alarm plug ⑱. Fig. 3

2. When the burglar alarm kit v-shaped spring blades open ㉔, the alarm siren and strobe light will activate immediately. Fig. 4
And when you close the v-shaped spring blades ㉕ with your fingers, the alarm siren and strobe light stops immediately. Fig. 7

 
NOTE : When the burglar alarm kit is not in use, insert the closed v-shaped spring blades ㉕ into the retaining socket ⑲ of the retaining holder ⑱ for storage (The same for the soft sleeve ㉑). Fig. 4 Fig. 3

3. Attach the door knob strap ① to the snap hook. Fig. 3 Fig. 6

4. Select INSTANT or DELAY alarm mode on the burglar alarm plug ⑱.

INSTANT MODE : (switch flipped to the right for INSTANT)
When the door, window or drawer is opened, the alarm siren and strobe light will be activated instantly.

DELAY MODE : (switch flipped to the left for DELAY)
When the door, window or drawer is opened, the alarm delay procedure is as follows (for 80 seconds):



NOTE : If you want to change the alarm mode (Instant/Delay) while the alarm is triggered, you need to close the v-shaped spring blades first and then flip the switch to the other alarm mode; otherwise the current alarm mode will continue to be active.

FUNCTION 1: Home Burglar Alarm (Door or Window) Indoor Setup

1. Hang the door knob strap (attached to the snap hook) around the door handle (for window alarm setup, an appropriate hook next to the window may be needed to hang the door knob strap or snap hook).

2. Insert the closed v-shaped spring blades into the gap between the door and its frame (or window and its frame) to complete the burglar alarm setup.

3. When the door/window is opened by an intruder, the v-shaped spring blades will snap open and instantly activate the alarm siren and strobe light, effectively alerting the intrusion and scaring off the burglar.



FUNCTION 2: Away Burglar Alarm (Door) Setup from the Outside

1. Slip the door knob strap around the inside door handle. Insert the front tip of the closed spring blades ㉕ into the soft sleeve ㉑. Fig. 9 Fig. 7 Fig. 8

2. Stand outside the door Fig. 10 and hold the other end of the soft sleeve and make sure the opening end ㉓ of the plastic handle ㉒ Fig. 11 is against the inside edge of the door frame.

3. Pull the door towards its frame with your other hand (the door is not completely closed yet), so that the closed v-shaped spring blades ㉕ together with the soft sleeve ㉑ are clipped between the door and its frame. Before completely closing the door from the outside, pull the soft sleeve out of the gap. Fig. 12 Fig. 13

4. After the door is completely closed, the closed spring blades are clipped in between the door and its frame and the burglar alarm setup is completed. Fig. 14

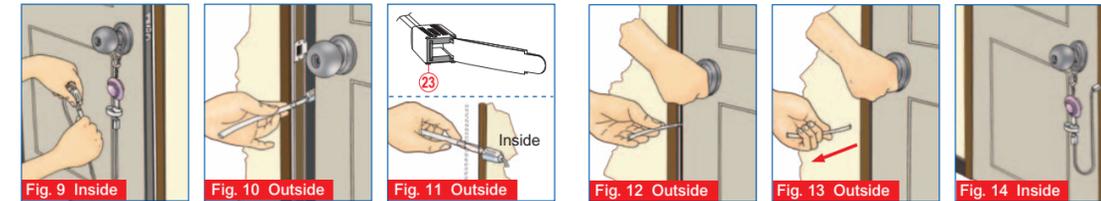
FUNCTION 3: Drawer Security


Place the alarm inside and against the front panel of the drawer and follow the procedures in the instructions above

(FUNCTION 2) to complete the burglar alarm setup.


HANDY LIGHT

1. Press button ⑨ to project a bright beam and use it as a handy flashlight. Fig. 2

2. When using the handy light in the dark, the handy light button is located next to the ☀️ mark on the bottom cover which can be felt by your finger in the form of raised printing.

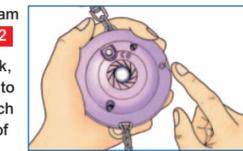
NOTES

- A. Please read the descriptions below regarding specific scenarios where the Away Burglar Alarm (FUNCTION 2) may not be setup.
 - 1. Setting up the alarm from the outside is suitable for doors that open inwards and sliding doors only. Doors that open outwards are not suitable for this setup. Fig. 15
 - 2. Doors and frames that have square edges and a smooth gap are suitable for inserting the closed v-shaped spring blades. If the door and frame has a particular design or dimension that doesn't allow the opening end of the plastic handle to be pulled firmly against it on the inside then it is not suitable for this setup.
 - 3. Certain door frames that have decorative molding outlines or doors with grooved edges on the inside, may cause the plastic handle or the spring blades to be stuck in between the door and frame and may not be suitable for setting up the Away Burglar Alarm. Fig. 16 Fig. 17
- B. On doors and frames that have a narrow gap, pull out the soft sleeve before the door is completely closed, otherwise the soft sleeve may get stuck in the gap.
- C. On doors or front drawer panels that are slim, the front part of the closed v-shaped spring blades may protrude out a bit after the alarm setup is completed. If so, push in the front tip of the spring blades.
- D. The appropriate positions to insert the closed spring blades into the gap should not be higher than the door handle otherwise the hanging weight of the harness and alarm could pull it out.
- E. When the alarm volume becomes low, drags, not continuous or abnormal, please replace the battery, even if the handy light still functions because it consumes less power.
- F. When testing the alarm, block the six holes on the top cover with the palm of your hand or a piece of cloth to muffle the sound of the siren in order not to disturb your neighbors.
- G. Displaying the UFO Burglar Alarm sticker visibly outside can have a similar effect as having a "Beware of the Dog" sign.
- H. This device is not water-proof; please prevent any fluids from contacting the interior of this device and causing possible damage.
- I. Limited Warranty Period: One Year, with the exception of the battery. (Does not apply to damage caused by the user)

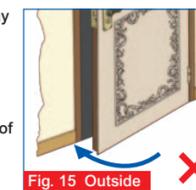


Fig. 15 Outside ❌

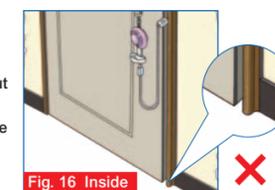


Fig. 16 Inside ❌

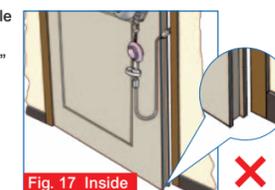


Fig. 17 Inside ❌

For demonstrations of the various functions of this product, please visit our website at www.ufoalarm.com

