

UNISMART II QUICK GUIDE



Professional Chip Resetter

This user's quick guide provides information for your basic understanding of the machine as well as detailed steps to explain machine usage.

Copyright©Apex Microelectronics Co., Ltd. All Rights Reserved.



Table of contents

I List of material

1.	Standard	.P3
2.	Optional	P3

II Functions

1.	Scan		P4
2.	Unismart (Apex check/ Apex	Program/ OEM Reset/ OEM Check)	P4
3.	Chip analysis		P5
4.	Additional functions		P6

III Installation guide

1. Downloading update package	P7
2. Disabling driver signature enforcement and installing the driver	P7
3. Client end update software online installation	P8

V Upgrade guide

1. Packing up the update data	P9
2. Unismart box data update	P10

I. List of Materials

1. Standard



①Unismart Box ×1 ②USB cable ×1 ③Anti-static pad ×1 ④Package box ×1 ⑤Inside package ×1 ⑥Flatwriter×1 ⑦Power adapter ×1 ⑧Jig connecting wires ×2 ⑨Unismart Jig ×22 (standard): AE0, AE1, C, D/G, E2-B, H, I/J, K, L, M, O, P1, P14, P3L, P3S, EP1/EP2, EP3/EP4, Q1, Q2, R, W, S/T

Note: The standard set of materials might be different from the actual delivery list according to your choice.

No.	Photo	Item	Quantity	Remarks
1		UNISMART II -WBU Wireless Box	1	For wireless chip
2	Search 1923	UNISMART II -TZ-PR1/PR2	1	For Samsung 1640
3		UNISMART II -JZ-PR1	1	laser series different size chip
4		UNISMART II -JZ-PR2	1	
5	Kinimat	UNISMART-Z	1	For Canon inkjet series
6		UNISMART-LJXWX	1	Length can be customized according to your requirement

2. Optional

Note: The above materials must be purchased additionally if needed, and ordered in advance

II. Functions

Connect the device and parts as indicated in the following image, and then press the black OK button (hereinafter referred to as "OK") to enter the Unismart Box main menu:



1 SCAN

Scan: Detect the model of new chips and chips that have been reset. Select in the menu "Scan" with the cursor. Press "OK" to enter the operation interface. Example: the operation of Canon K type ALC-3018-1.5K chip



Note:

Press "F1" to switch to other functions concerning the scanned chip model;

Press "OK" to scan other chips;

Press "C" to return to the main menu.

2 UNISMART Apex Check/Apex Program/OEM Reset/OEM Check

Apex Check: Check whether an Apex Unismart chip has been successfully programed.

Apex Program: Program Apex Unismart chips. Doing this consumes some credits (Eg.if programming this models needs to consume 5 credit, it will show "APEX PROGRAM 05" on the screen)

OEM Reset: Reset OEM chips. Doing this consumes some credits (Eg.If resetting this models needs to consume 5 credits, it will show "OEM reset 05" on the screen)

OEM Check: Check whether an OEM chip has been successfully reset.

Select in the main menu "Unismart" with the cursor. Press "OK" to enter.

Example: the operation of Canon K type ALC-3018-1.5K chip

Copyright © 2014 Apex Microelectronics Co., Ltd. All Rights Reserved.



Note: For error codes in using this function, please refer to the Unismart FAQ.

3 CHIP ANALYSIS

Chip Analysis: Analyze the model, print status, ink level and manufacture date of chips. In the main menu, select "Help" then "Chip Analysis" to enter this function.

Example: the operation of Epson/HP series chips



Note: the Unismart cannot analyze models outside its resettable list.

4 ADDITIONAL FUNCTIONS

- Credit: check the Unismart ID number and the credits left
- Setup:

Firmware: look up the information of the Unismart's Boadload, firmware, and jigs;Battery Life: see how long the battery lastsDisplay Time: check the time and data of the Unismart;Setup Time: set up time and date of the Unismart.

- Update: update the device
- Help:

Chip Analysis: analyze the model, print status, ink level and manufacture date of chipsPrinter refer: check relating printer informationPast records: the history of your creditsContact us: the ways to contact Apex

III. Installation Guide

1. Downloading update package

Step 1: Go to the Apex official website <u>www.apexmic.com</u>. Select "English" as the language.

Step 2: Click into "Unismart"

Step 3: Click into "Download Center"

Step 4: Login.

Step 5: Download the (1) and (2) packages indicated by this image:

①Unismart_Update_software_4.2.rar

2 Unismart_II_driver.rar

2. Disabling driver signature enforcement and installing the driver

1 WINDOWS XP

1) Connecting devices: Power the Unismart II Box and connect it to the USB of your PC. Turn on the Unismart II Box and it enters the main menu.

Select "Update". Press OK to start the update.

2) Installing driver

The PC hints that it has discovered new hardware, and a "Found New Hardware Wizard" window appears.

Choose "Yes, this time only".

Click "Next", choose "Install from a list or specific location(Advanced)"

Click "Next", choose "Don't search. I will choose the driver to install"

Click "Next" and "Next". Click "Have Disk.."

Click "Browse..", find the package ②. Open the "x64" folder (Folder "x86" if it is 32-bit system). Load driver. Click "OK" and "Next".

Choose "Continue Anyway" in the popped out "Hardware Installation" dialog box.

Click "Finish" and the driver installation is complete.

2 WINDOWS 7 32 bit

1) Connecting devices: Power the Unismart II Box and connect it to the USB of your PC. Turn on the Unismart II Box and it enters the main menu.

Select "Update". Press "OK" to start the update.

2) Installing driver

On the PC desktop, right click "Computer".

Choose "Manage", click "Device Manager"

Find the icon "Unknown device" with yellow exclamation mark.

Right click this "Unknown device" icon and choose "Properties".

Click "Update Driver", then "Browse my computer for driver software". Choose "Let me pick from a list of device drivers on my computer".

Click "Next" and choose "Have Disk..". Click "Browse.." to load driver file.

Find the package 2 and open folder "x86". Load driver.

Click "OK" and "Next".

In the popped out "Windows Security" dialog box, choose "Install this driver software anyway".

Click "Close" to finish the driver installation.

3 WINDOWS 7 64 bit

1) Disabling driver signature enforcement: Turn on your PC and press F8 to enter advanced options. Then choose "Disable Driver signature Enforcement".

2) Connecting devices: Power the Unismart II Box and connect it to the USB of your PC. Turn on the Unismart II Box and it enters the main menu.

3) Installing driver:

On the PC desktop, right click "Computer".

Choose "Manage", click "Device Manager"

Find the icon "Unknown device" with yellow exclamation mark.

Right click this "Unknown device" icon and choose "Properties".

Click "Update Driver", then "Browse my computer for driver software". Choose "Let me pick from a list of device drivers on my computer".

Click "Next" and then "Next". Choose "Have Disk ...". Click "Browse ..." to load driver file.

Find the package (2) and open folder "x64". Load driver.

Click "OK" and "Next".

In the popped out "Windows Security" dialog box, choose "Install this driver software anyway".

Click "Close" to finish the driver installation.

4 WINDOWS 8

1) Disabling driver signature enforcement:

Enter the PC desktop. Move your mouse to the lower right corner of the screen.

Click "Setting" then click "Change PC settings". Choose "General".

Click "Restart now". Choose "Troubleshoot" and then "Advanced options".

Click "Startup Setting" and then "Restart".

Find "Disable driver signature enforcement". Enter number 7 to finish the disabling process.

You can install the driver after restarting the PC.

2) Connecting devices: Power the Unismart ${\rm II}$ Box and connect it to the USB of your PC. Turn on the Unismart ${\rm II}$

Box and it enters the main menu.

3) Installing driver:

On the PC desktop, right click "Computer".

Choose "Manage", click "Device Manager"

Find the icon "Unknown device" with yellow exclamation mark.

Right click this "Unknown device" icon and choose "Properties".

Click "Update Driver", then "Browse my computer for driver software". Choose "Let me pick from a list of device drivers on my computer".

Click "Next" and then "Next". Choose "Have Disk..". Click "Browse.." to load driver file.

Find the package (2) and open folder "x64". Load driver.

Click "OK" and "Next".

In the popped out "Windows Security" dialog box, choose "Install this driver software anyway".

Click "Close" to finish the driver installation.

After finishing the driver installation, you can enter "Computer" then "Manage", and "Device Manager"; finally in the drop-down list of "Universal Serial Bus controllers" you will see the installed USB driver port named "Apex_Unismart".

3. Client end update software online installation

1) Extract and open the downloaded package **Unismart_Update_software_4.2.rar**.

2) Double click "Setup", select "Accept" and click "Next". Choose "Everyone", click "Next" and then "Close" to finish the installation. On the PC desktop, you will see the following A and B shortcut icons.

miamart

Unismart U

date_software



III. Upgrade Guide

1. Packing up update data

		Login				
	Double click	R		G		
pexClient.		UserID kehu				
979		PassWord				
		Language English	•			
		Log in	C	ancel		
	🔷 Unismart Netw	ork System	•			
	Change Password Sec	condary customer Distributing Credits	III. Update package	evice list	Help	Exit
	Welcome	to Unismart Network System	Custon	ner:kehul	Date:2013-11-8	11

Copyright © 2014 Apex Microelectronics Co., Ltd. All Rights Reserved.



10 / 12



Categories of Data Package				
Category Content		Times of update	Functions	
	System	Unlimited	Update firmware version	
Non Crodito	System + jigs (K/L/O/)	Unlimited	Update firmware version and jig functions	
Non-Creaits Dackage	System + product list	Unlimited	Update firmware version and product list	
rackage	System + jigs + product list	Unlimited	Update firmware version, jig functions, and product list	
	System + credits	Once	Update firmware version and credits	
Crodite	System + credits + jigs	Once	Update firmware version, credits, and jig functions	
Package	System + credits + product list	Once	Update firmware version, credits, and product list	
	System + credits + jigs + product list	Once	Update firmware version, credits, product list, and jig functions	

2. Unismart box data update

Step 1: Power the Unismart. Select "Update" to enter update mode. Connect the Box with the PC by the USB.

Step 2: Double click shortcut icon "Unismart_Update_software" and open data update software. At the upper right corner of the interface, click "Seek the upgrade file". Load in the package downloaded in the Step 5 above.

Step 3: In the interface, click "Device connection" to make sure the box has been connected to the PC.

Step 4: Click "File sending" to write the update package into the Unismart Box.

Copyright © 2014 Apex Microelectronics Co., Ltd. All Rights Reserved.



Note:

1. For more detailed information about the Unismart operation, you could visit <u>www.apexmic.com</u>, and download the **User Manual**, or the **Unismart II Operation Video** there.

2. If you encounter any problem during your using, refer to the **Unismart FAQ** we offer. You could also consult your account manager, or send it to the customer service mailbox, to which we will reply as soon as possible.

3. The information contained herein is subject to change without notice. Apex shall not be liable for technical or editorial errors or omissions contained herein. Photographed products may not always match the description. And other brand or product names mentioned are intended to show compatibility only.