


English


1 Package Contents




Device x 1

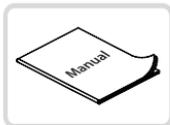

User Manual x 1

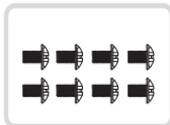


M3*6 screws x 8

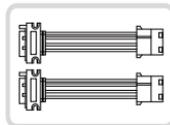


4 Pin to 15 pin
Power Connector
x 2

2 Front Panel Information

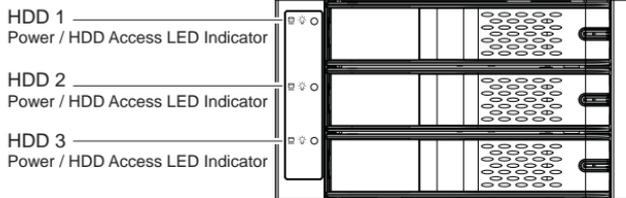

- The LED indicator illuminates blue after the hard drive is inserted into the drive bay. The LED will remain off if the drive bay is empty.
- The LED indicator will flash blue during drive access.
- The fan will be activated after the hard drive is inserted.


3 Rear Panel Information

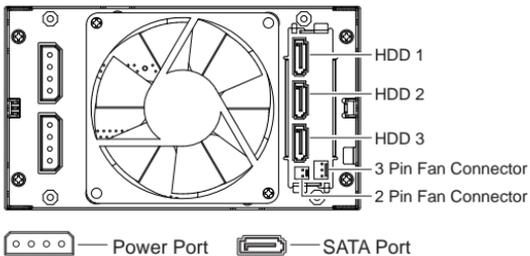


- The device is equipped with a 2Pin and a 3Pin connector for the fan power. please select the compatible one for the fan replacement.
- Both power connections must be used for proper operation of the enclosure.

4 Instructions


<A> Press the release button and then pull the handle to open the front panel.

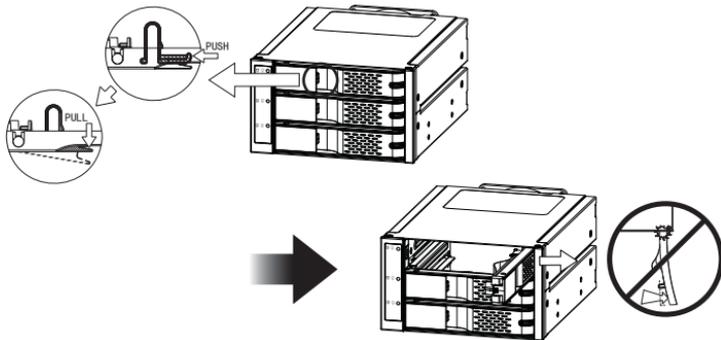

 Insert the hard drive with the SATA connectors facing towards the correct direction. Then close the door to complete the drive installation.

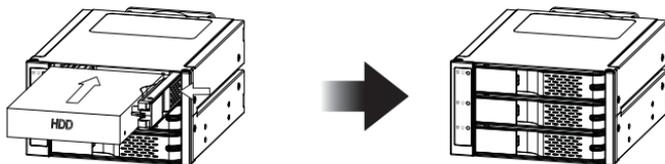


<C>

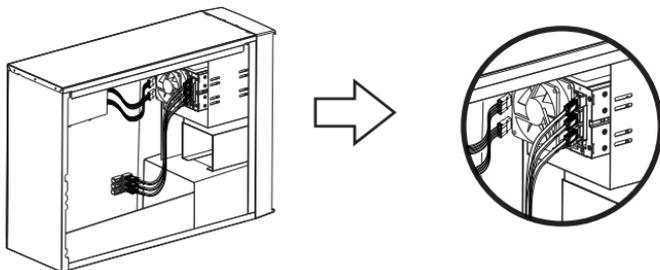


5 Fan Replacement Information

- To replace the fan, please make sure the fan connector is compatible to the 2-PIN or 3-PIN connections of the device.

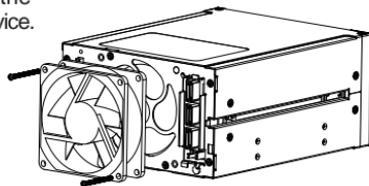

Fan cable routing

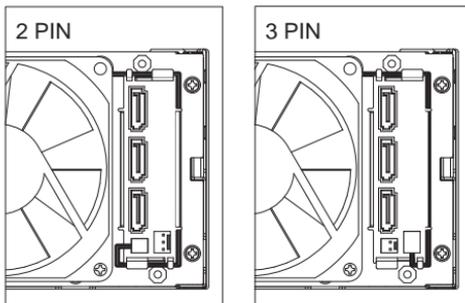

Notes:

1. ICY DOCK reserves the right to change unrelated technical specifications and is subject to change without prior notice.
2. ICY DOCK will not be liable for any software, hardware, or data stored within or interfacing with ICY DOCK products which results in damage or malfunction. ICY DOCK will only be responsible for repairs and services of ICY DOCK products.
3. Due to different drive specifications for the drive access signal, some drives may not support the access LED. If the LED does not function, but the user can read and write to the drive, it falls under this category. If the LED does not function, and the drive cannot be read or written to, please contact us for troubleshooting.
4. To utilize the hot swap function, the host must also support hot swap. To check if your host supports hot swap, please refer to the motherboard or controller card specifications and user manual.
5. For further questions or concerns about ICY DOCK products, please visit us at www.icydock.com
6. For any aftermarket fan replacements, please use 80 x 80 x 25 mm measured cooling fan.